



# Procedure to Upgrade the F/W of DPF-102K

Please note that all photos stored in DPF-102K may be cleaned after you upgrade the F/W.

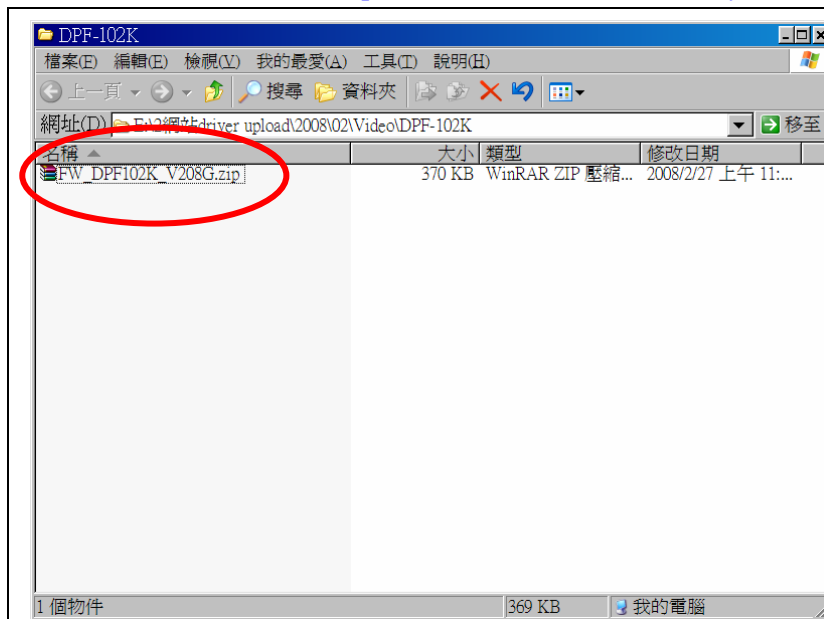


## Step 1:

Please save the file named FW\_DPF102K\_V208G.zip to your HDD.

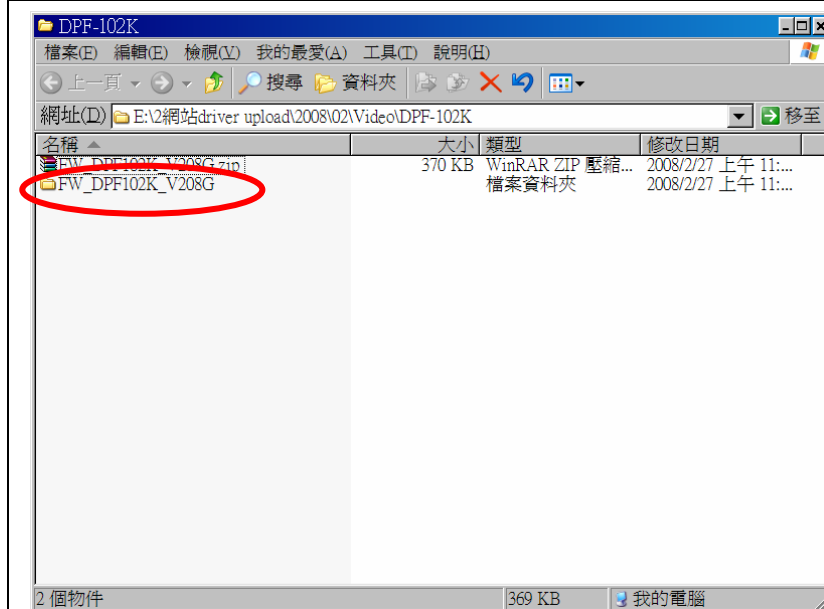

## Step 2:

Run the file first to unpack it. Then, you should get a folder like the image shown in left.

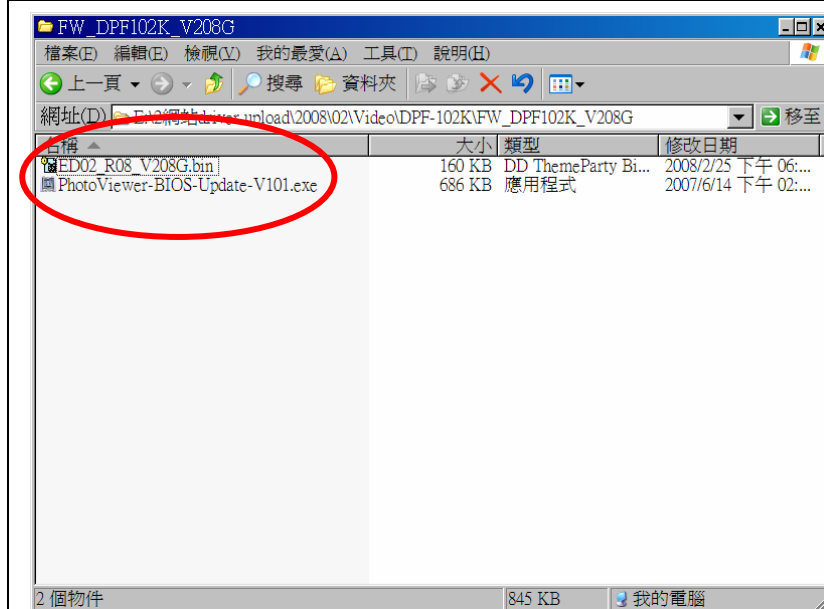


## Step 3:

There are 2 files in the folder you get in step 2.




**Step 4:**

Please connect the DPF-102K to one USB port of your pc directly. Then, you will see 2 choices on the LCD of DPF-102K. Please choose “USB Update” and confirm your choice.

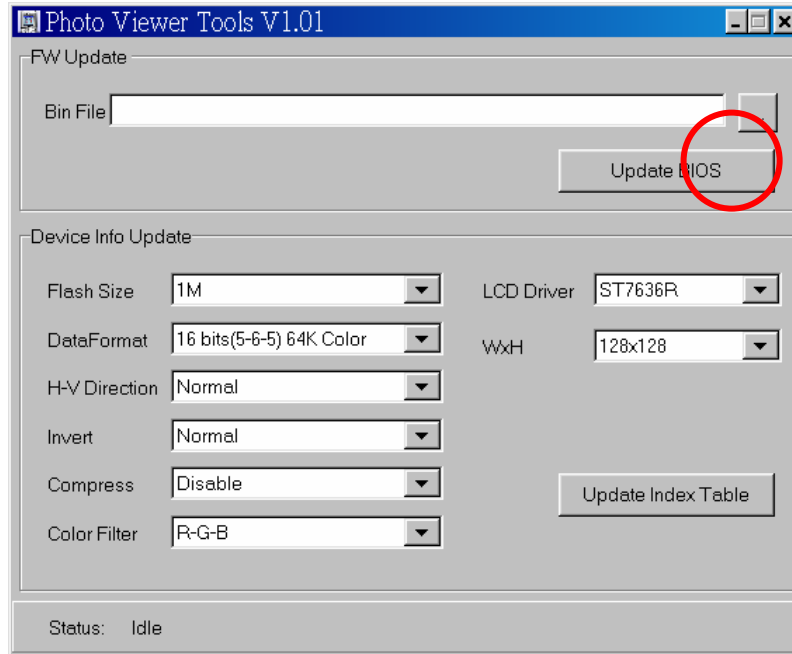


**Step 5:**

Run the file named PhotoViewer-BIOS-Update-V101.exe in the Step 3. Then, you will see the F/W update program as shown in left. Please click on this button to load the F/W of DPF-102K.

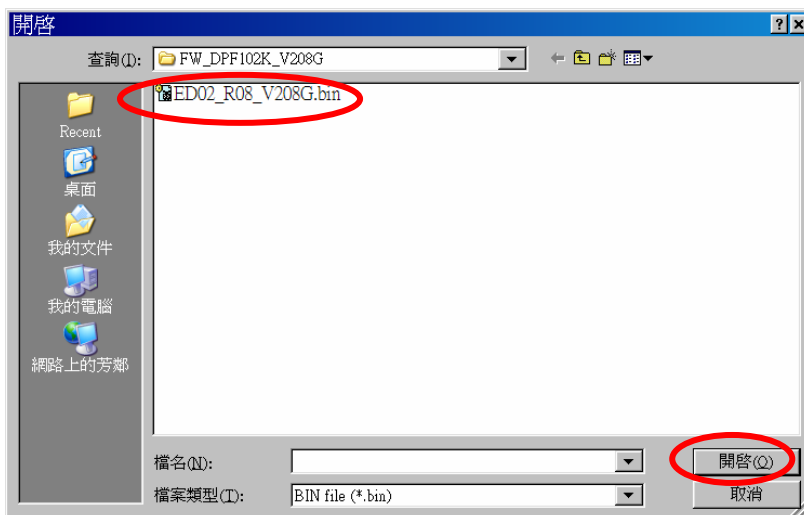


**Step 6:**

A new window will open and ask you the path where you store the F/W file. Please click on the bin file and press the “Open” button.

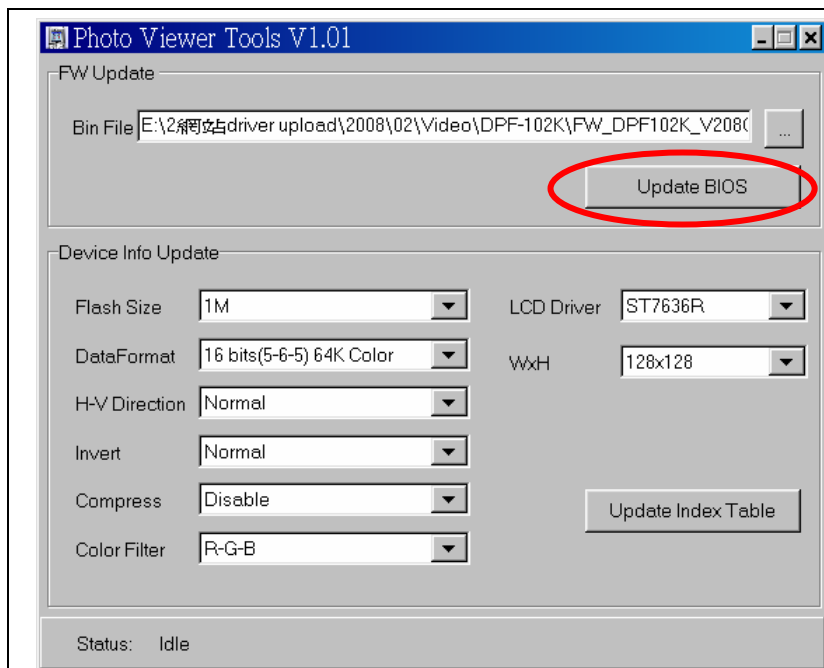


**Step 7:**

Please click on “Update BIOS” button.

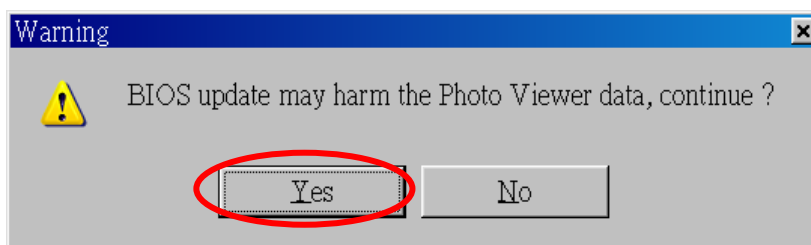

**Step 8:**

You will get a warning message, please click on “Yes” button if you do want to upgrade the F/W of DPF-102K.

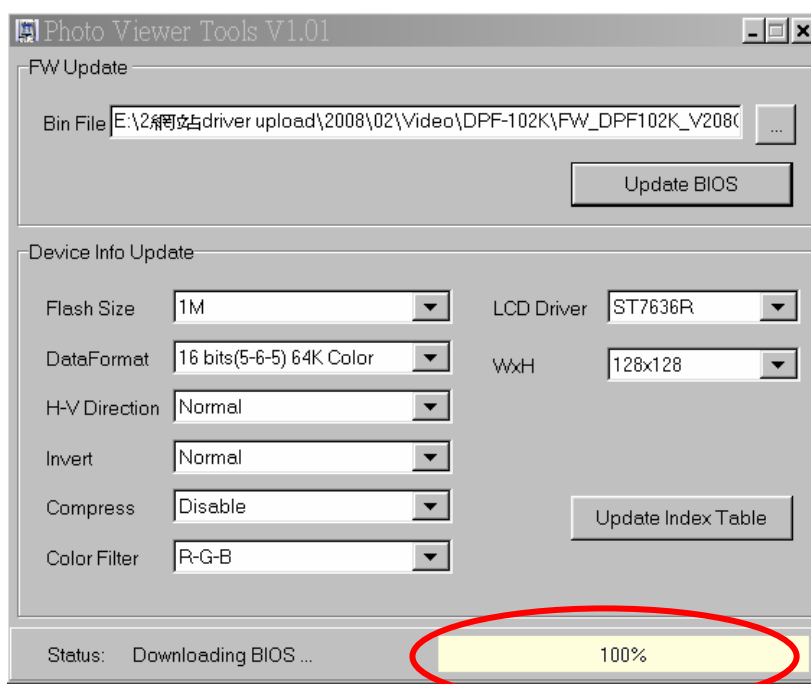

**Step 9:**


Here is the F/W updating status.



**Step 10:**

When you see the information, please click on “Sure” button.

Then, you can disconnect the DPF-102K from USB port.

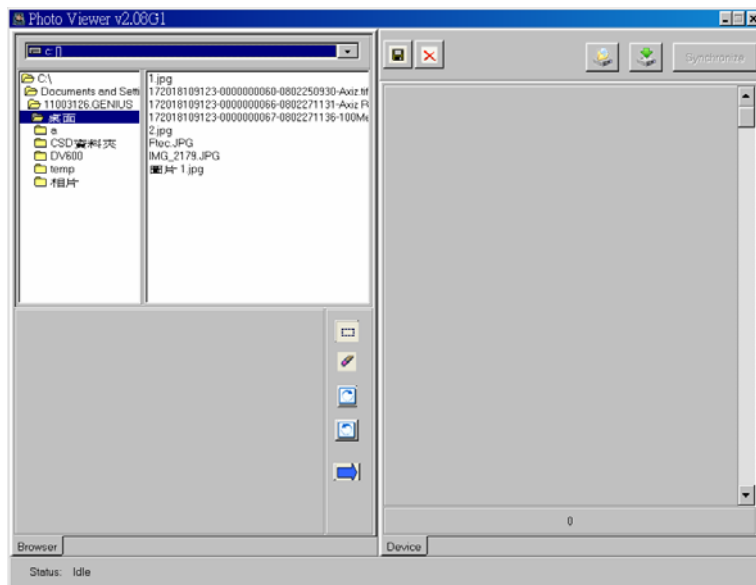

**Step 11:**

If you want to transfer images to DPF-102K, please reconnect the product to one USB port of your pc.

Run PhotoViewer\_E and transfer images to DPF-102K.