

# TOSHIBA

## OWNER'S MANUAL

25 CH AUTO SCANNING CORDLESS TELEPHONE

# FT-7007

# FT-7007BK



**TOLL FREE CUSTOMER SERVICE**  
**1-800-631-3811**

Should your unit require service, please refer to the  
"Toshiba service procedure" in your owner's manual.

# **IMPORTANT SAFETY INSTRUCTIONS**

---

**When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:**

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect the phone from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

---

12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following condition:

- A. When the power supply cord plug is damaged or frayed.
- B. If liquid has been spilled into the product.
- C. If the product has been exposed to rain or water.
- D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- E. If the product has been dropped or the cabinet has been damaged.
- F. If the product exhibits a distinct change in performance.

13. Do not use the telephone to report a gas leak in the vicinity of the leak.

**CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.**

- 1. Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
- 2. Do not dispose of the battery pack in a fire. The cell may explode. Check with state and local codes for possible special disposal instructions.
- 3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4. Exercise care in handling battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
- 5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
- 6. Observe proper polarity orientation between the battery pack and battery charger.


**ATTENTION:** THE PRODUCT THAT YOU HAVE PURCHASED CONTAINS A RECHARGEABLE BATTERY. UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THIS BATTERY INTO THE MUNICIPAL WASTE STREAM. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT FOR DETAILS IN YOUR AREA FOR RECYCLING OPTIONS OR PROPER DISPOSAL.

## **SAVE THESE INSTRUCTIONS**

# IMPORTANT SAFETY INSTRUCTIONS

---

## The RBRC™ Seal

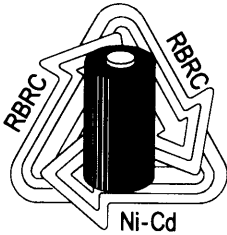

The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which is illegal in some areas.

TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Detach the battery compartment cover on the handset and remove the nickel-cadmium battery pack.

RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

## SERVICE REQUIREMENTS


---

If the cordless telephone should malfunction, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered with the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to a unit both in and out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.


It is the responsibility of users requiring service to report the need for service to their Toshiba dealer.

# LOCATION OF CONTROLS

## HANDSET CONTROLS AND FUNCTIONS

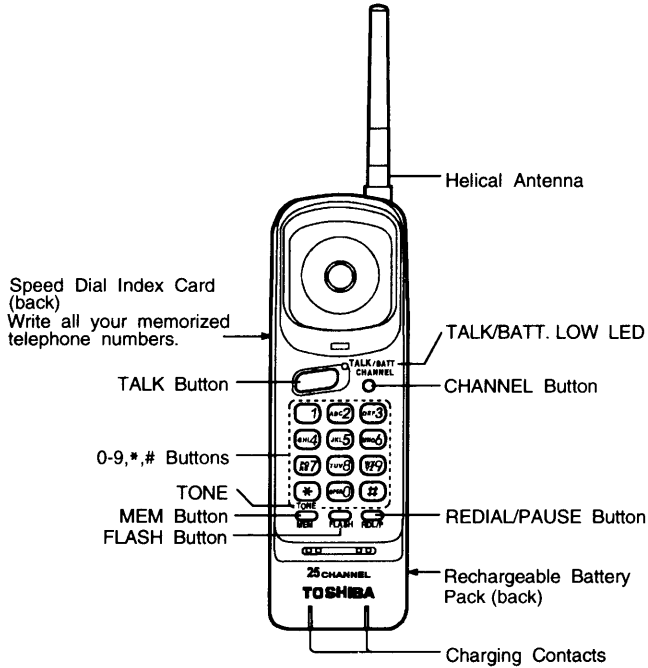

## BASE UNIT CONTROLS AND FUNCTIONS

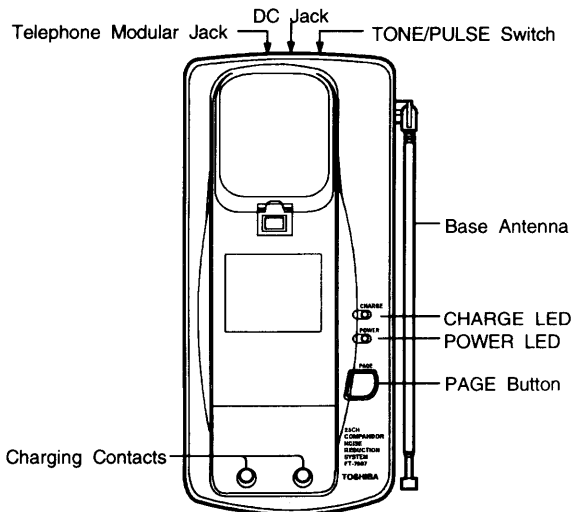

# INTRODUCTION

---

Toshiba America Consumer Products, Inc. takes pride in presenting the FT-7007, one of the finest telephones available. Intelligent design, superb craftsmanship, and the latest technological advances have been combined to provide you with a telephone that is easy to operate and will provide you with years of dependable service.

Please take the time now to read your Owner's Manual carefully, so that you may enjoy the many convenient features of your FT-7007 telephone.

## FEATURES

- Remote channel scan (25 channels) avoids interference.
- Compandor noise reduction circuit minimizes any noise from radio or other appliances as much as possible.
- Digital Security Codes (65,536) prevent unauthorized calls.
- 2 weeks long life battery.
- Page sounds a tone from the base unit to the handset.
- Multi-key answer.
- Up to 10 telephone numbers can be stored in memory, each with a maximum length of 16 digits.
- Telephone numbers can be dialed using tones, rotary dial type pulses, or a combination of both.
- Automatic Redial button for access to last dialed telephone number (up to 32 digits).
- Designed for use as a wall phone or desk phone.
- Hearing Aid Compatibility lets you use your cordless telephone if you wear a hearing aid equipped with a T (telephone) switch.
- Pauses may be programmed, where needed, in the middle of an automatic dialing sequence.
- Memory locations can be accessed individually or successively, in any order or combination, all in one dialing sequence.
- Combination storage is available for simplified memory programming and expanded number range.
- Compatibility with alternate long distance services.
- Flash function for convenient hook-switch control.
- Battery low indicator.
- Automatic and manual dialing can be combined within the same dialing sequence.

# INSTALLATION

## 1. CONNECTING THE TELEPHONE WIRE




- ① Plug one end of the telephone line cord into the base modular jack on the rear of the base unit.
- ② Plug the other end of the telephone line cord into the modular wall jack.

### Notes

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- If you experience an excessive amount of noise or static, try relocating the base away from the interference source i.e. TV, radio, appliances.

## 2. CONNECTING THE AC POWER

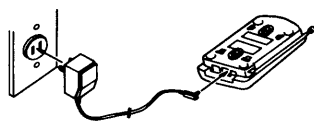


Connect the plug at the end of the AC adaptor to a standard 120V AC outlet and the other end to the rear of the base unit. Make sure to route the AC adaptor cord where it will not create a trip hazard, or where it could become chafed and create fire or other electrical hazards.

### Note

Do not attach the AC power supply cord to building surfaces using metal fittings. Use only with Toshiba TAC-5000 or TAC-5000BK.

## 3. INSTALLING THE BATTERY PACK

Installing the battery pack in your FT-7007 is quick and easy. For trouble-free operation, please be sure to follow the instruction on page 8 "CHARGE THE BATTERY PACK".

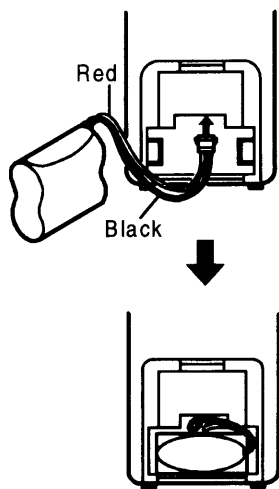

First, remove the battery compartment cover on the back of the handset by sliding it down.

- ① Plug the battery pack's connector into the connector in the battery compartment.

### Notes

- Do not force the connectors together. They fit only one way.
- With the handset held upright, the black wire should be to the right side of the battery connection terminal, and the red wire should be to the left side of the battery connection terminal.

- ② Place the battery pack in the battery compartment.
- ③ Replace the battery compartment cover by sliding it on. Make sure not to get the wires from the battery pack caught in the cover.


Should the need arise to purchase Parts or Accessories, please call **1-800-631-3811** for the location of the nearest parts distributor.

- \* If replacing the battery, please check with State and local agencies for disposal of the old battery.

## 4. WALL-MOUNTING THE BASE


You can mount your cordless telephone's base unit on a wall using two provided screws.

- ① Cut out the template (see page 8) and use it as a guide for placement on the mount screws. (3-15/16 inch apart).

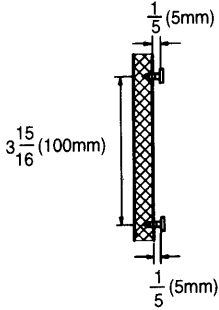


- ② Thread the screws into the wall, letting the heads extend about 1/5 inch.


- ④ Place the base's keyhole slots over the two screws and gently push down on the base unit to lock it into place.

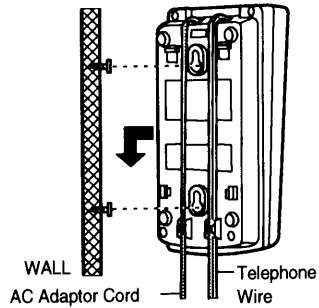

- ③ Route the telephone wire and AC adaptor cord through the guides on the back of the base unit.

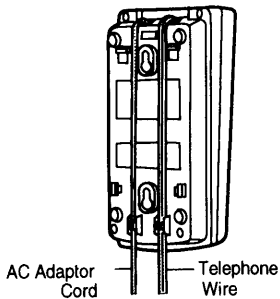

- ⑤ When you mount the Base Unit on a wall, reverse the Handset Retainer to keep the Handset hung up on the Base Unit.

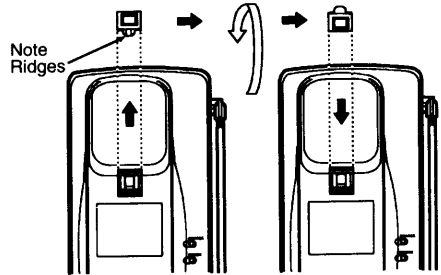

### Reversing the Handset Retainer


1. Remove the Handset Retainer from the Base Unit by sliding it upward.
2. Flip the Retainer over so the tab is facing up.
3. Slide the Retainer back into Base Unit.

**NOTE:** If you put the Retainer back into the Base Unit incorrectly, it will jam, and you'll need to pry it up with a screwdriver.



## 5. USING THE OPTIONAL WALL MOUNTING BRACKET

This bracket is designed to be used with the standard bell type wall mounting system. Align the installation hooks with the slots on the wall mounting bracket. Insert telephone in the bracket and push down. Then, hook the wall mounting bracket with the base unit to the modular wall jack.

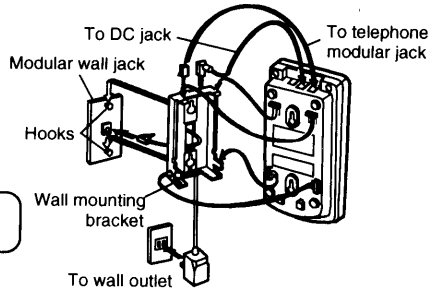

### Note

To order this bracket please call **1-800-631-3811**.

## 6. CHARGE THE BATTERY PACK


The supplied Ni-Cd battery pack is not charged. It is important that this battery is charged for 12 to 16 hours continuously without any interruption before you use the handset for the first time.

**During this initial charging of the supplied battery pack or a new battery pack for replacement, locate the telephone where it can remain completely undisturbed and untouched. Do not hook the base up to a telephone line for the initial charging sequence.**

**After installing the battery pack, place the handset on the base unit.** The CHARGE LED lights during charging. If the CHARGE LED does not light, make sure that the AC adaptor is plugged in and the handset is correctly placed on the base unit.

### Notes

- The battery pack is not charged properly if the charging contacts are dirty or tarnished. Clean the contacts occasionally with a dry cloth.
- The supplied rechargeable battery pack should last for several years. It, however, eventually it will deteriorate and last only for a short time even if it is charged. If this happens, you need to replace it with a new one. You can order a rechargeable battery pack at your local Toshiba dealer or authorized parts distributor. Call **1-800-631-3811**.

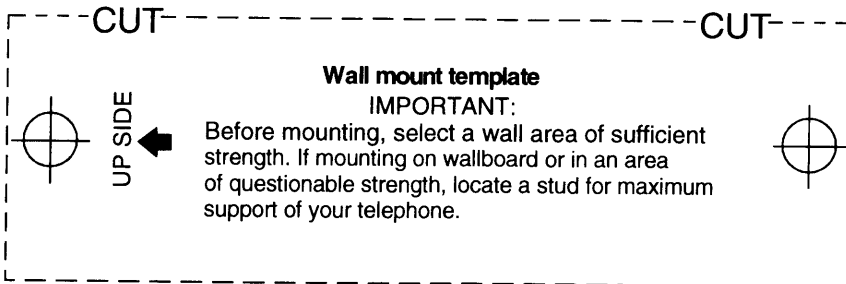

# THE BASICS

\* Please see page 4 LOCATION OF CONTROLS for the location of each button mentioned in this section.


## 1. TONE-PULSE SELECTION

Set the TONE/PULSE switch located rear of the base unit for the type of service you have (tone or pulse).

If you are not sure which type of service you have, do this simple test.

- ① Set TONE/PULSE switch to T position.
- ② Press the TALK button on the handset and listen for a dial tone.
- ③ Press any number other than 0. If the dial tone stops, you have Tone service. If the dial tone continues, you have Pulse service.
- ④ If you have Pulse service, set TONE/PULSE switch to P position.

## 2. PLACING A CALL

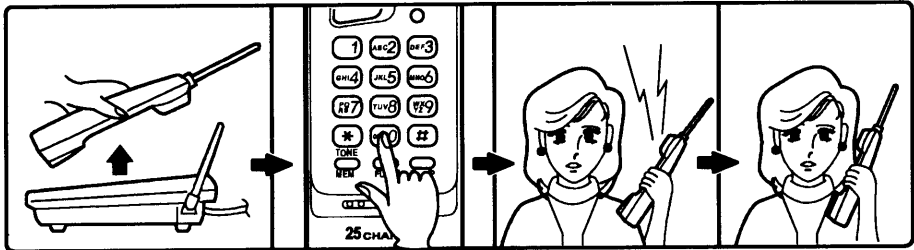

Lift the handset from the base unit, and press the TALK button. The TALK/BATT. LOW LED lights.

Dial the desired phone number by pressing the numbered buttons.

Wait for the phone you have called to begin ringing.

When the other party answers, you may begin speaking. To disconnect the call, return the handset to the base unit or press the TALK button.

### Note

The telephone call is cut off when the AC power supply fails during a conversation, so immediately return the handset to the base unit.

- ① After talking on the handset during noisy circumstances, it may occur that the handset is not turned off even if you pressed the talk key, and it will sound the error tone. In this case, relocate the handset on the battery charger or press the talk key again close to the base unit.
- ② During a call, do not pull out the battery in the handset. If you do so, the base unit is left to hold the line. But in case that the handset can not turn the line off due to the electric failure, make the standby mode by once pulling out the battery and then setting it in.

## 3. ANSWERING A CALL BY USING THE INSTANT TALK FUNCTION




Your phone will ring when someone is calling your number. Simply lift the handset from the base unit to answer the call; there is no need to press the TALK button. To disconnect the call. Return the handset to the base unit or press the TALK button.

---

## 4. MULTI-KEY ANSWER

If the handset is already out of the base unit when the phone rings, Press the TALK button or any dialing key including \* and # to answer you call.

## 5. USING THE CHANNEL SELECTOR BUTTON

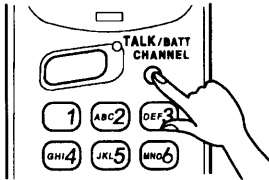

Basically your FT-7007 selects a clear channel automatically, but press the CHANNEL button when interference noise is heard. TALK/BATT. LED keeps lighting while Talk mode.

### Note

While your FT-7007 selects the channel, the TALK/BATT. LOW indicator blinks. If failed, error beep sounds and the channel is not changed.

## 6. USING THE INSTANT STANDBY FUNCTION

When you have finished with a call, placing the handset back on the base unit automatically causes the handset to go into Standby mode, and hangs up the phone. There's no need to press the TALK button to hang up.

### Note

If you don't place the handset back on the base unit, you will need to press the TALK button again to hang up the phone.

## 7. USING THE REDIAL/PAUSE BUTTON

The REDIAL/PAUSE (RDL/P) button dials the last number (up to 32 digits) that you called. This feature is extremely useful when the number you called is busy.

To use this feature, simply press the RDL/P button **immediately** after selecting the talk mode. The last number called will then be dialed again.

### Note

If any key is pressed before the RDL/P button, it will not redial. The RDL/P button must be pressed **immediately** after selecting the mode.

To use this button as a pause function please see page 13, "USING PAUSE FUNCTION".

---

## 8. USING THE FLASH BUTTON

The FLASH button is used to send a timed hookflash on the telephone line for accessing services such as call waiting, etc. (Call Waiting is a telephone company service).

To use this feature, simply press the FLASH button while in the talk mode.

FLASH may also be used to obtain a new dial tone. Be careful not to press "FLASH" during normal conversation as this will cause your party to be cut off.

## 9. USING THE TONE BUTTON

If you have rotary (Pulse) telephone service, the TONE button allows you to access a computer or computer-based services such as Sprint, MCI, etc., that respond to Tone signals only.

- ① Dial the local number to the computer or calling service with the TONE/PULSE switch in the P (pulse) position.
- ② After you have reached the number, press the TONE button and continue to dial your access code or any other numbers required.

## 10. SETTING THE DIGITAL SECURITY CODE

The digital security code is automatically set when you place the Handset on the Base Unit. If you wish to change the security code: Place the Handset on the Base Unit. Press PAGE button on the Base Unit, then remove the Handset from the Base Unit. Place the Handset back to the Base Unit to complete the code change.

## 11. THE BATTERY LOW LED

When the battery pack in the handset is very low and needs to be recharged, the TALK/BATT. LOW LED will blink on and off, and in addition the handset will sound a short beep every 3 seconds when in the talk mode. When this occurs, complete the call that you are making as rapidly as possible, and return the handset to the base unit for charging.

### Note

You must recharge the handset for more than at least one minute to cancel the low battery condition warning tone.

## 12. USING THE PAGE BUTTON

The Page function sends a signal from the base unit to the handset. To use this feature, simply press the PAGE button on the base unit.

### Note

The handset keeps beeping while pressing the PAGE button.

# MEMORY DIALING

You can store up to 10 of your most frequently-called telephone numbers in memory by using the MEM button.

## 1. STORING NUMBERS

- ① Pick up the handset from the base unit. (**DO not press the TALK button.**)
- ② Press the MEM button.
- ③ Dial the desired telephone number.
- ④ Press the MEM button.
- ⑤ Select and press the numbers 0 to 9 for whichever number memory you wish to use.

If you have more telephone numbers to store in memory, repeat the steps from ② to ⑤.

- ⑥ Return the handset to the base unit.
- ⑦ Record the telephone numbers on the SPEED DIAL INDEX CARD which is located at the back of the handset.

**EXAMPLE:** MEM → 9 0 1 2 3 4 5 → MEM 3

### Notes

- Phone numbers of up to 16 digits (including a digit for a pause or a tone) can be stored.
- Be sure to listen for the tone or pulsing sound as you press each number. This will ensure that the number pressed has been properly entered into storage.
- When the number you have entered has been successfully stored, a long beep will be heard.
- If you make any mistakes, then start from step ②.
- If you enter a number that exceeds 16 digits, warning tone will be heard.

## 2. STORING MIXED TONE/PULSE NUMBERS

Your FT-7007 can also store mixed mode numbers to make it easy to access long distance services. To store a mixed mode number.

- ① Make sure the TONE/PULSE switch on the rear of the base unit is in the PULSE mode.
- ② Press the MEM button (a short beep will be heard), and enter the numbers to be dialed in the PULSE mode.
- ③ Press the TONE button on the handset and enter the numbers to be dialed in the TONE mode.
- ④ When done entering numbers, press the MEM button, and the number of the memory to save the number in.

You will then hear a long beep when the number has been successfully stored. If you wish to enter a pause between any of the numbers in the dialing sequence (such as for switchboard delay etc.), press the RDL/P button at the point you wish to pause in the number sequence. Pressing the RDL/P button more than once will increase the amount of the delay.

### EXAMPLE:

pulse mode



MEM → ① ② ③ ④ ⑤ ⑥ ⑦ → \* → ⑧ ⑨ ⑩ ① ② ③ ④

→ MEM → ①

---

### 3. ERASING A STORED NUMBER

- ① Pick up the handset (**Do not press the TALK button.**)
- ② Press the MEM button twice.
- ③ Press the desired memory location 0 to 9.

**EXAMPLE:**  →  → ⑤

The telephone number stored in ⑤ will be erased.

### 4. REPLACING A TELEPHONE NUMBER

Just store the new number following the same steps as in STORING. The new number will take the place of the old one.

### 5. DIALING A STORED NUMBER

To dial a number previously stored in memory,




- ① Pick up the handset and press the TALK button.
- ② Press the MEM button.
- ③ Press the memory number 0 to 9.

your FT-7007 will then dial the previously stored number.

### 6. USING PAUSE FUNCTION

This RDL/P (REDIAL/PAUSE) button is very useful when making an outgoing call through a PBX and using long-distance services. Each time the RDL/P button is pressed, a pause of about three seconds will be inserted during the dialing sequence. If more than three seconds are needed, press the RDL/P button twice.

**Example:** To store the number "0-1234567" in memory for a call through a PBX, follow these steps.

 → ① →  ① ② ③ ④ ⑤ ⑥ ⑦ →  → ①




Pressing the RDL/P button or resetting the dial mode once is counted as one digit of the number.

### 7. USING CHAIN DIALING

This function is useful in dialing numbers longer than 16 digits.




For example a long distance number and a credit card number could be in 2 memory locations.

- Press the TALK button, MEM (MEMORY) button and a desired memory location (0 to 9) and then press MEM button and a desired memory location (0 to 9).

**Example 1:**  →  → ① and then press  → ②

- MIXED DIAL OUT  
Mixing memory dial and manual dialing are possible.

 **Example 2:**  →  →  and then press ① ② ③ ④ ⑤ ⑥ ⑦

**Example 3:**  → ① ② ③ ④ ⑤ ⑥ ⑦ and then press  → 

If necessary for further operating instruction, call **1-800-631-3811**.

# **IMPORTANT INSTRUCTIONS TO USERS**

---

Your FT-7007 has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number".

It is most unlikely, but ... If your FT-7007 should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your FT-7007 (or require changes in the FT-7007 or its connection), the phone company will notify you in writing, so you will have the chance to take whatever action is necessary to ensure uninterrupted phone service.

## **FCC REQUIREMENTS**

---

You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your FT-7007 to coin telephone services. Check with your local telephone company if you wish to connect your FT-7007 to a party line service. Some party line services require a special adaptor or modification to your telephone.

# TELEPHONE/TELEPHONE ANSWER MACHINE LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and not to any other purchaser or transferee.

## Limited One (1) Year Warranty of Parts and Labor

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one year after the date of original retail purchase.

During this period, TACP/THI will repair a defective product or part, without charge to you. You must deliver the entire unit to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station.

If you live in the Continental U.S.A. you may, at your option, forward your product for exchange to:

Toshiba America Consumer Products Inc.

Return Center  
1420C Toshiba Dr.  
Lebanon, TN37087

You are responsible for all transportation and insurance charges for the product to the Return Center. Products shipped to the Return Center must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

Upon receipt we will, at our option, exchange the unit with a new or refurbished unit.

## Owner's Manual

You should read the owner's manual thoroughly before operating this product.

## Your Responsibility

The above warranties are subject to the following conditions.

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated within the U.S.A. or Puerto Rico.
- (3) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us, or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.
- (4) After the warranty period has expired in the U.S.A. Call 1-800-631-3811 to receive information concerning the closest Authorized Service Station in your area or to receive information on an exchange price. Payment must be enclosed with product in the form of a certified check or money order and forward your product to:  
Toshiba America Consumer Products Inc.  
Return Center  
1420C Toshiba Dr.  
Lebanon, TN370871
- (5) Physically damaged product are not acceptable for repair or exchange within or after the warranty period expires and will be returned as received.

## How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows:

(1) Arrange for the delivery of the product to the TACP/THI Authorized Service Station. Products shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton. A letter explaining the defect and a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charges must be prepaid by you.

### In The Continental United States contact:



### In Hawaii contact:

Toshiba Hawaii  
327 Kamakee Street.  
Honolulu, HA 96814  
(808)-521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. With the exception of any warranties implied by state law as hereby limited, the foregoing express warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any product or parts.

In no event shall TACP or THI be liable for consequential or incidental damages. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## IMPORTANT: PACKING AND SHIPPING INSTRUCTIONS

When you send the product to a service center, you should use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.



# SPECIFICATIONS

---

## HANDSET

Power Source	Customer Replaceable Ni-Cd Battery 300 mAh 2.4 V DC
Battery Life	2 weeks at Standby Mode, after proper initial charging cycle
Dimensions (H/W/D)	Approx. 7-13/16" x 2-1/4" x 2" (198 x 56.5 x 51 mm) Antenna Length 4-3/8" (112 mm)
Weight	Approx. 8.1 oz (230 g)

## BASE UNIT

Power Source	AC 120 V 60 Hz/DC 9 V
Dimensions (H/W/D)	Approx. 1-15/16" x 3-3/4" x 8-3/8" (49 x 95 x 212 mm)
Weight	Approx. 10.1 oz (285 g)

## SUPPLIED

Rechargeable Battery (1) TRB-5000 Part #. RC004288

## ACCESSORIES

- AC Adaptor (1) TAC-5000 (Part #. RC005335) for FT-7007 or  
TAC-5000 BK (Part #. RC005336) for FT-7007 BK
- Telephone Cord (1) Part #. RC001861
- Owner's Manual (1) Part #. RC005154
- Speed Dial Index (1) Part #. RC005153
- Wall Mount Screw (2) Part #. RC000936

## OPTIONAL

Wall Mounting Bracket (1) WMA-3000 (Part #. RC003561) for FT-7007 or  
WMA-3000BK (Part #. RC003562) for FT-7007 BK

## ACCESSORY

For the purchase of Rechargeable Battery and Wall Mounting Bracket, please call **1-800-631-3811**.

# TROUBLESHOOTING GUIDE

---

Should any problem occur with the set, make the following simple tests to determine whether or not servicing is required. If the problem persists after you have made these tests, call **1-800-631-3811** for Customer Service.

Problem	Cause
No dial tone	<ol style="list-style-type: none"> <li>1. AC adaptor of the base unit not plugged into 120 volt AC outlet.</li> <li>2. Battery is low in power – place the handset in the base unit and recharge.</li> <li>3. Telephone line cord detached – check wall jack.</li> <li>4. TALK button in standby – switch to talk position.</li> <li>5. Telephone line trouble – check line with a conventional phone.</li> </ol>
No calls coming in	<ol style="list-style-type: none"> <li>1. All of the above except 4.</li> <li>2. TALK button is in the talk position – switch to standby position.</li> </ol>
Static noise on conversation	<ol style="list-style-type: none"> <li>1. Approaching maximum range of the base unit – make sure that the base antenna is fully extended.</li> <li>2. Outside range of the base unit.</li> <li>3. Battery is low – place the handset in the base unit and charge.</li> <li>4. Base located in an area with high interference – relocate the base unit.</li> <li>5. General Interference from TV, appliances, etc. – move away from interference source.</li> </ol>
Battery goes low too quickly.	Battery not fully charged on initial charge cycle. Battery must be charged for 12 to 16 hours without any interruption.