
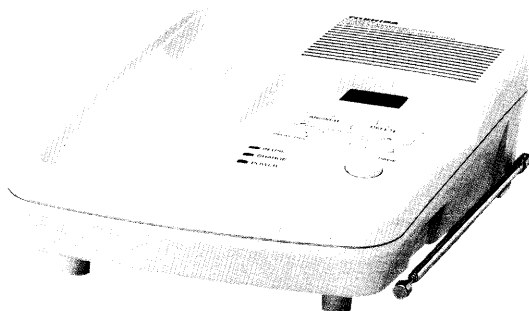


TOSHIBA

OWNER'S MANUAL

CORDLESS ANSWERING SYSTEM

FT-9007

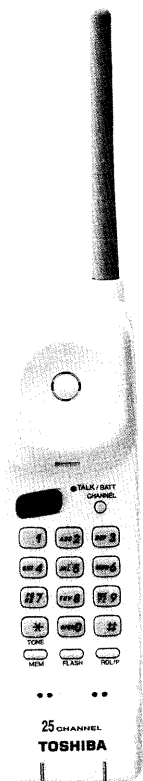

The **FIRST** thing to do after unpacking your new cordless telephone is:

CHARGE THE BATTERY !

Please read and follow the few instructions on

PAGE 1

BEFORE YOU DO ANYTHING ELSE.



GETTING STARTED: DO THIS FIRST!

FIRST, After unpacking your new cordless phone, the **first** thing to do is

CHARGE THE HANDSET BATTERY!

- Set your new phone in an out-of-the-way place near a power outlet but where it will not be disturbed. Do **not** connect it to the telephone line.
- Plug the AC adaptor into the wall power outlet.
- Plug the AC adaptor cord into the power jack on the base unit. The "POWER" LED should light. If not, see "**TROUBLESHOOTING**," page 37.
- Take the cover off the handset battery compartment; plug the battery connector into the receptacle inside the battery compartment and replace the cover. The connector only goes in one way.
- Place the handset into the base unit's charging cradle. The "CHARGE" LED should light.
- The battery charging period has now started. From now until the 12 hour period is complete, do not let anything cause the handset to be removed from electrical contact with the base unit's charging pins or power to be removed from the base unit.

SECOND, after completing the 12 hour charge period, connect the base unit to the telephone line modular jack, using the six foot long modular line cord. If the unit is to be wall mounted, use the six inch cord.

Now, set the Tone-Pulse switch for your type of service according to the instructions on Page 18 and your telephone is ready for normal use. Information on the use of other features follows page 18.


IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 4 Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5 Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect the phone from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 7 Do not allow anything to rest on the power cord. Do not locate this product where the cord can be stepped on or tripped over.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10 Do not disassemble this product. Opening or removing covers puts you at risk of electrical shock, and incorrect reassembly can cause shocks, sparks or other damage during subsequent use.
- 11 Take this product to a qualified service technician under any of the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally according to the operating instructions. Adjust only those controls covered by this manual. Improper adjustment of other controls may result in serious damage to the unit or your home.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
- 12 Do not use the telephone to report a gas leak in the vicinity of a gas leak.

IMPORTANT SAFETY INSTRUCTIONS

The RBRC™ Seal

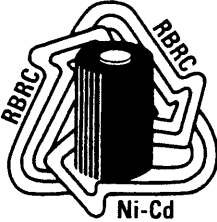

The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which is illegal in some areas.

TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Detach the battery compartment cover on the handset and remove the nickel-cadmium battery pack.

RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.

BATTERIES

- 1 Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
- 2 Do not dispose of the battery pack in a fire. The cell may explode. Check with State and local codes for possible special disposal instructions.
- 3 Do not open or mutilate the battery pack. Released electrolytes are corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4 Exercise care in handling the batteries. Contact with conductive materials such as rings, bracelets and keys may cause the battery to short out, resulting in overheating which could burn.
- 5 Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
- 6 Observe proper polarity orientation between the battery pack and battery charger.

ATTENTION: THE PRODUCT THAT YOU HAVE PURCHASED CONTAINS A RECHARGEABLE BATTERY. UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THIS BATTERY INTO THE MUNICIPAL WASTE STREAM. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT FOR DETAILS IN YOUR AREA REGARDING RECYCLING OPTIONS OR PROPER DISPOSAL.

SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

GETTING STARTED: DO THIS FIRST!	1
IMPORTANT SAFETY INSTRUCTIONS	2
FEATURES	7
Parts identification	8
INSTALLATION	10
Installing the handset battery pack	10
Setting up the base unit	11
AC adaptor specifications	11
Wall mounting	12
Charging the handset	13
LOCATION OF CONTROLS	14
BASICS	18
Tone/Pulse selection	18
Making a call	18
Interference or static	19
Setting the ringer volume	19
Answering a call	20
Last number redial	20
Call waiting	21
Banking and telephone services	21
Paging the handset	22
Changing the security code	22
SPEED DIALING	23
Storing numbers	23
Dialing a stored number	24
Erasing a stored number	24
Chain dialing	24
Using the memory dialing or PBX	25
USING THE ANSWERING MACHINE	26
Setting the clock	26
Recording the outgoing message (OGM)	27
Turning the answering machine on & off	28
To change the outgoing message (OGM)	28
Setting the number of rings	29

TABLE OF CONTENTS

Setting maximum recording time for incoming messages29
Setting Announce Only29
Playing recorded messages30
Deleting recorded messages31
Screening incoming calls31
Leaving a memo message32
Recording a phone conversation33
REMOTE OPERATION34
Setting the PIN number34
Calling in from a remote location35
Table of commands36
TROUBLESHOOTING37
SPECIFICATIONS40
WARRANTY/SERVICE42
REMOTE OPERATION CARDS45

FEATURES


Toshiba America Consumer Products takes pride in presenting the FT-9007 cordless telephone and digital message system. An all digital answering device provides many new conveniences not available on tape machines, such as repeat, skip and individual message delete.

Cordless Phone Features

- 25 Channel Auto-scanning
- Helical Antenna Provides Excellent Reception and Durability
- 10 Number Speed Dial
- Handset Locator/Page
- 2 weeks Standby Battery Life
- Compandor Sound Clarity
- Low Battery Indicator
- Wall Mountable
- Hearing Aid Compatible


Answering Machine Features

- 15 Minutes Record Time
- Flash Memory IC
- Time & Day Stamp
- Base Call Screening
- Remote Access
- Play/Skip/Repeat/Delete
- Conversation Record/Memo
- Prerecorded OGM Option

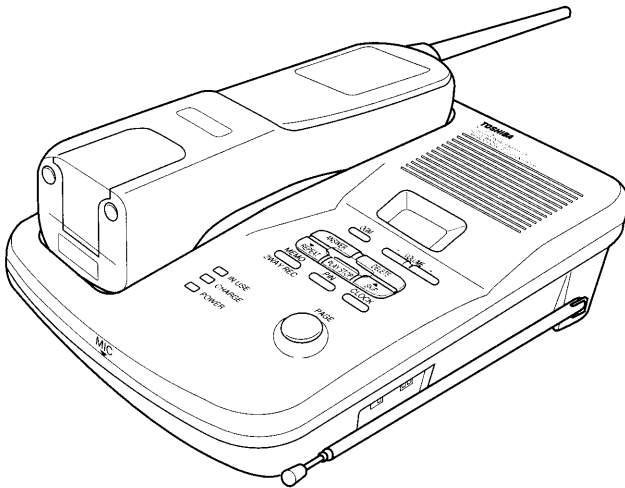


FEATURES


PARTS IDENTIFICATION

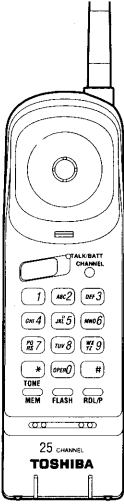


Handset

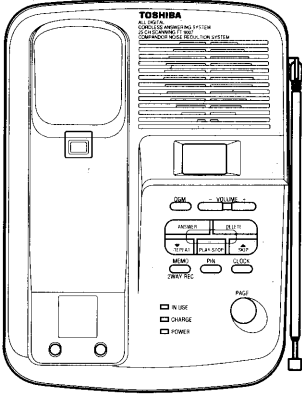

Base Unit

 


 **6' Modular Line Cord
Part #.RC001861**



**6" Modular Line Cord
Part #.RC001872**


FEATURES

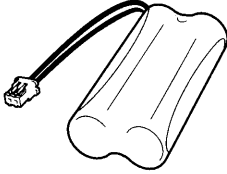


**Rechargeable Battery Pack
TRB-5000
Part #.RC004288**

SPEED DIAL INDEX	
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	

**Directory Card
Part #.RC005153**

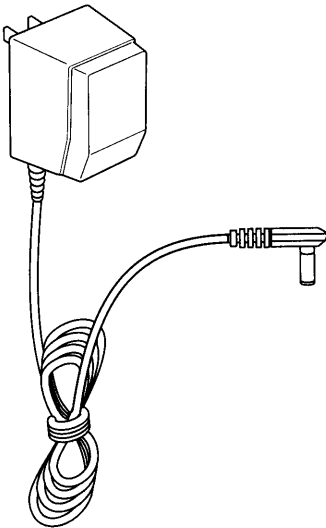

**AC Adaptor TAC-6700
Part #.RC003528**

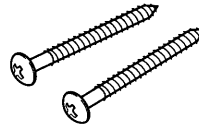

**Screws (for the wall mount)
Part #.RC000936**

**Owner's manual
Part #.RC005396**


**Quick Reference Guide
Part #.RC005397**

INSTALLATION


INSTALLING THE HANDSET BATTERY PACK

NOTE: Be sure to charge the handset 12-16 hours before use.
See "Getting Started: Do this first" page 1.


- 1** Remove the battery compartment cover on the back of the handset by sliding it down.

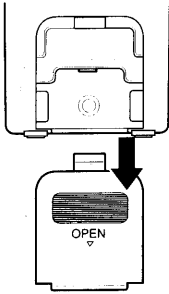

- 2** Plug the battery pack cord into the connector in the battery compartment. With the handset held upright, the black wire should go to the right side of the connector terminal, and the red wire should go to the left side.

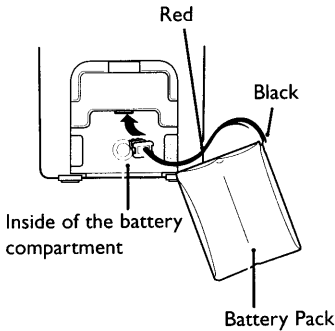

- 3** Place the battery pack in the battery compartment.
- 4** Replace the battery compartment cover by sliding it up until it clicks shut. Make sure not to get the wires of the battery pack caught in the cover.

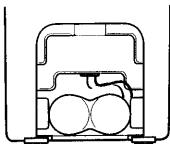


NOTE: When replacing the battery pack, please check with State and local agencies for proper disposal of the old battery.


INSTALLATION

SETTING UP THE BASE UNIT

For use on a desk or counter top follow the instructions below. For Wall Mounting directions, proceed to the next page.

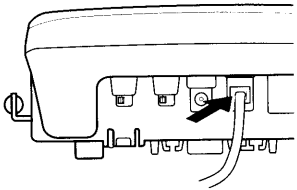


- 1 Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is farther away, you may need an extension cord.

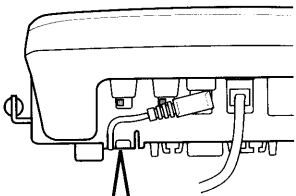


- 2 After the battery has been fully charged, plug one end of the telephone line cord into the back of the base in the slot labeled TEL LINE, and plug the other end into the telephone jack.

- 3 Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base, and plug the other end into the electrical outlet.

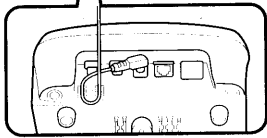

AC ADAPTOR SPECIFICATIONS

Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly.



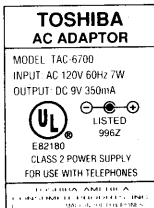


INSTALLATION

WALL MOUNTING

This wall mounting system is designed to work with a standard wall jack plate with two protruding nail-like heads on either side of the jack opening. They are available at most phone or electronics retailers.

To mount the base on the wall using a baseboard jack, cut out the template on page 40 to position screws.

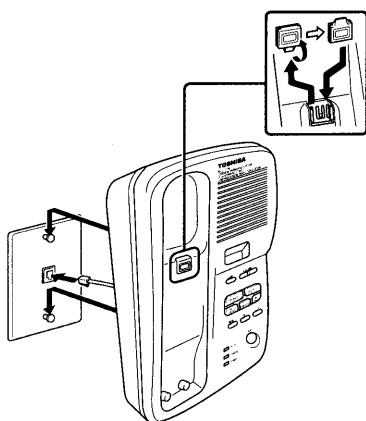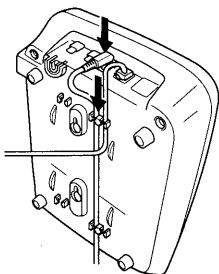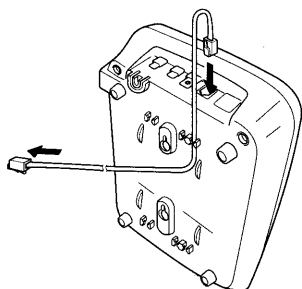


- 1** Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is farther away, you may need an extension cord.
- 2** Plug one end of the telephone line cord into the back of the base in the slot labeled TEL LINE.
- 3** Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base.
- 4** Position the AC adaptor cord through the channel on the back of the base.
- 5** Position the base over the wall plate "screws". Plug the line cord into the jack. Press the unit towards the wall and then down to secure it properly.
- 6** Remove the switch hook tab and flip it over as shown, then plug the AC adaptor into the electrical outlet.

NOTE: Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly. See page 11 for specifications.


INSTALLATION

CHARGING THE HANDSET

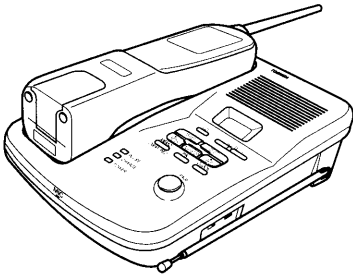


1 After installing the battery pack and setting up the base, place the handset on the base unit.

2 The CHARGE LED lights to show that the handset is charging.

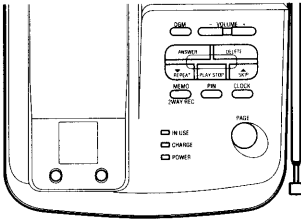

3 If the LED does not light, make sure the AC adaptor is plugged in securely and that the electrical outlet is working and not controlled by a light switch.

4 If the LED still does not light, verify that the charging contacts are clean and untarnished. Clean the contacts occasionally with a dry cloth.

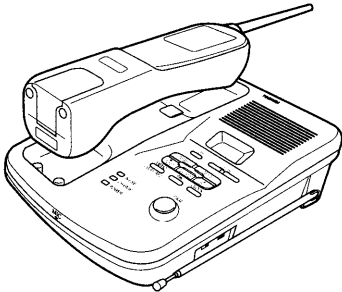

5 The supplied Ni-Cd battery pack is not charged. It is important that this battery is charged for 12 to 16 hours continuously without any interruption before you use the handset for the first time. See "Getting Started: Do this first" page 1.

LOCATION OF CONTROLS

HANDSET

TALK/BATT/CHANNEL LED

Steady Red = phone is in use.
Blinking Red = low battery status/the handset is connecting to the base for receiving or making a call, or the channel is being changed.

TALK button

Press to make a call, receive a call or hang up after a call (page 18). (For Call Waiting press the FLASH button).

TONE button


If you have Rotary/Pulse service, press this button and you can have temporary tones for use with bank and other telephone services (page 21).

MEM button

Used for programming speed dial numbers into the phone (page 23, 24, 25).

FLASH button

Used in conjunction with Telephone Company services, such as Call Waiting (page 21).

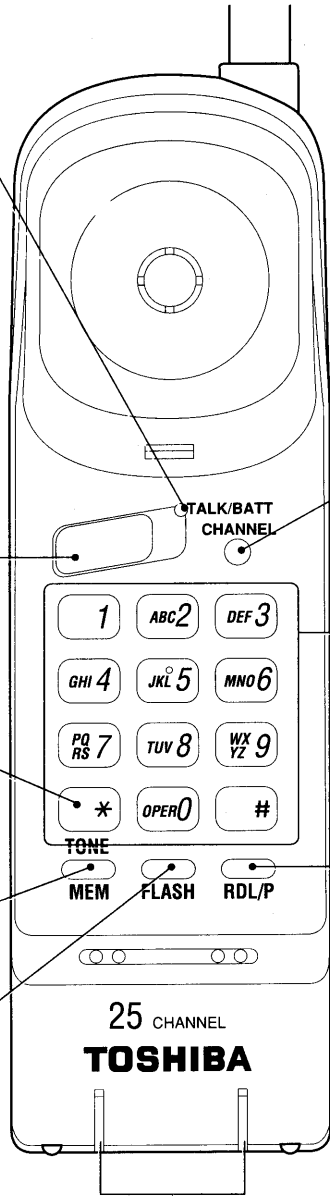

Charging Contacts

LOCATION OF CONTROLS

Speed Dial Directory Card— Used to record the numbers stored in the speed dial memory. Should be attached to the handset.

CHANNEL button


To change to a clearer frequency (page 19).

Dialpad

Used to dial phone numbers.

RDL/P button

Press to redial the last number dialed (page 20) or to insert a pause into speed dial numbers (page 23 and 25).

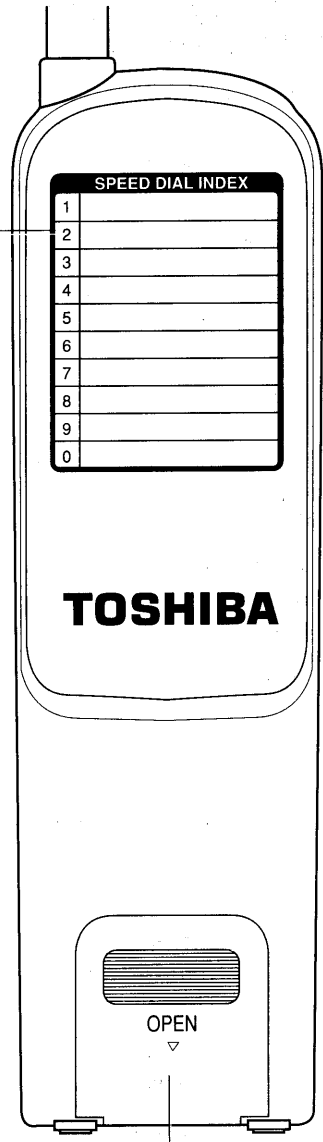

Battery Compartment— Install the rechargeable battery pack here. Charge for at least 12 hours whenever installing or replacing the battery (page 10).

LOCATION OF CONTROLS

BASE

RINGER ON/OFF switch

sets the ringer volume (page 19).

T-P (TONE-PULSE) switch sets the phone for tone or pulse dialing (page 18).

DC JACK for AC Adaptor connection (page 11)

LINE MODULAR JACK

for Telephone line cord connection (page 11)

OGM button

Used to record a personalized outgoing message (page 28).

ANSWER button

Press to turn the answering machine on and off (page 27).

REPEAT button

Press during playback to play the incoming message again. Press and hold the button to repeat the messages (page 30). This button will also function as ▼ to select a PIN number (page 34), or to set the clock (page 26).

MEMO 2WAY REC button


Press to leave a memo message (page 32, 33).

LEDs


IN USE— Steady on means the line is engaged.

CHARGE— On shows that the handset is charging.

POWER— On indicates that electricity is on.

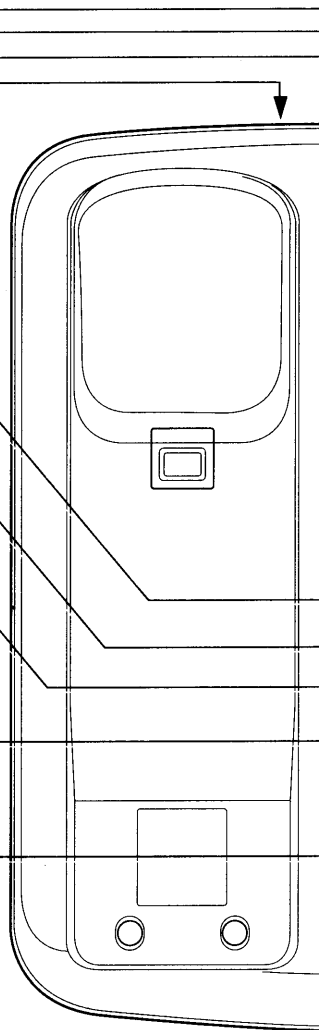


LOCATION OF CONTROLS

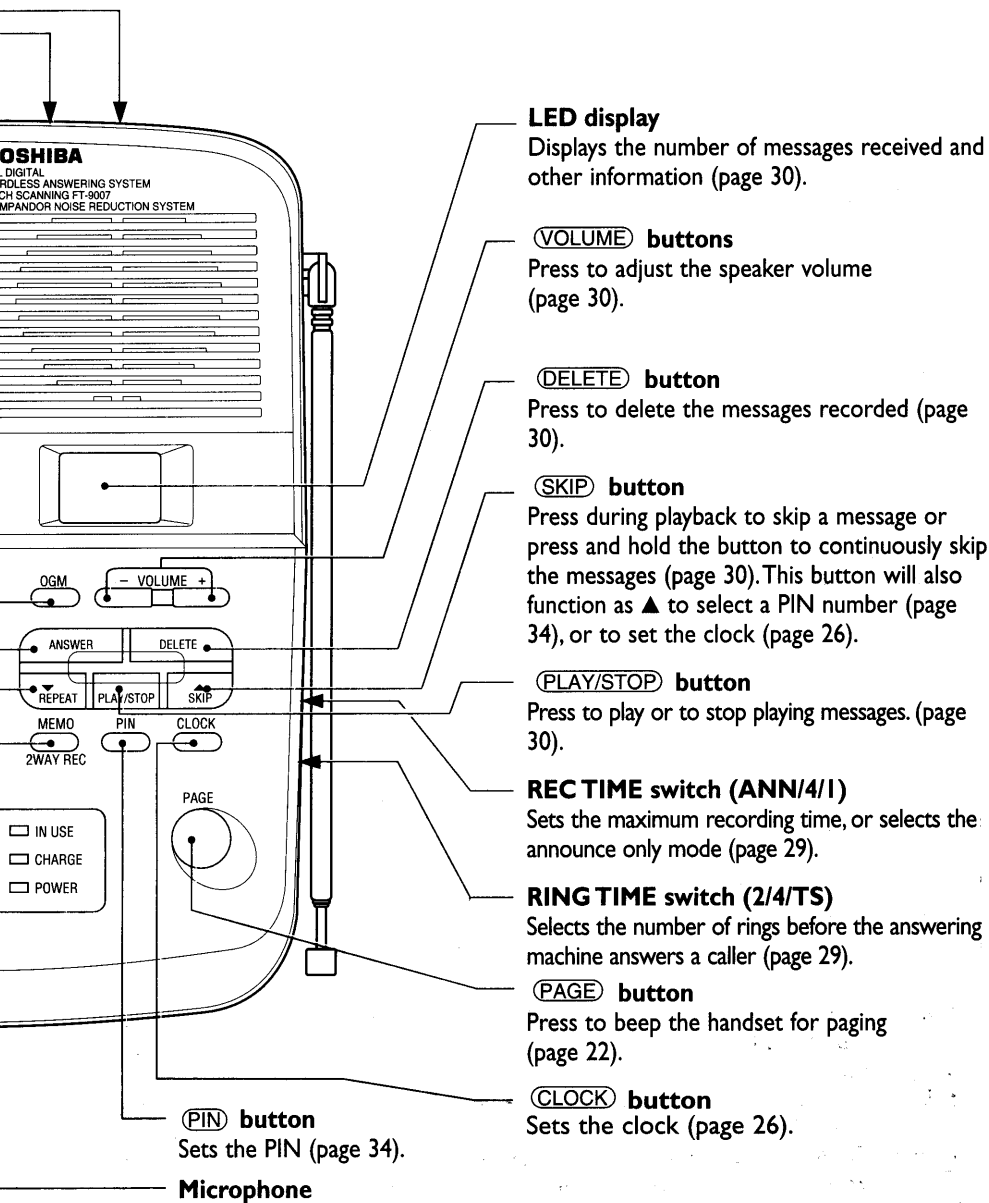

BASICS

TONE/PULSE SELECTION

Set the Tone-Pulse switch for the type of service you have, tone or pulse. If you are not sure which type of service you have:

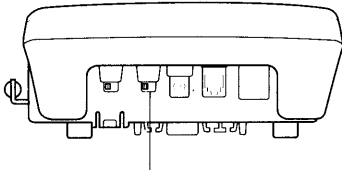


T-P (TONE-PULSE) switch

- 1 Set the T-P switch to T.
- 2 Press the **TALK** button on the handset and listen for a dial tone.
- 3 Press any number other than 0. If the dial tone stops, you have Tone service. If the dial tone continues, you have Pulse service.
- 4 If you have Pulse service, set the T-P switch to P.

See also "BANKING AND TELEPHONE SERVICES" page 21.

MAKING A CALL

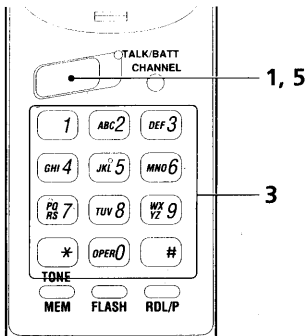


- 1 Press the **TALK** button.
- 2 Listen for a dial tone. The TALK/BATT LED will come on in red.
- 3 Key in the phone number you are calling.
- 4 It may take a second for transmission and for ringing to start.
- 5 To hang up, press the **TALK** button again.

NOTES:

- If the handset battery becomes weak during conversation, warning beeps will sound every 3 seconds. Finish the call as soon as possible and return the handset to the base unit for recharging.
- If the handset is too far away from the base unit, the line may not disconnect even if you press the **TALK** button. In such a case, you will hear a beep sound indicating an error. To disconnect the line, bring the handset near the base unit and press the **TALK** button again, or return the handset to the base unit.
- If a power interruption occurs, press the **TALK** button. The handset returns to standby mode.

INTERFERENCE OR STATIC

Static interference can be caused by many different things, such as: cordless phones in neighbouring homes or apartments, baby monitors, microwave ovens, certain kinds of lighting, etc. To reduce static on the line:

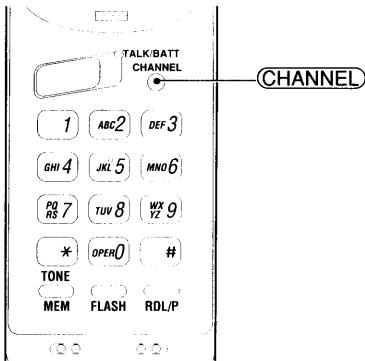

- 1** Try moving to another location in the room or closer to the base unit.
- 2** Press the **CHANNEL** button on the handset to change to a clearer channel.
- 3** Lower the antenna slightly on the base unit.
- 4** If none of the above solutions works, refer to the Troubleshooting on page 37.


NOTE:

When the channel is changed, the TALK/BATT/CHANNEL LED blinks. If it fails, error beeps sound.

For service information, call 1-800-631-3811.

SETTING THE RINGER VOLUME

RINGER ON/OFF Switch

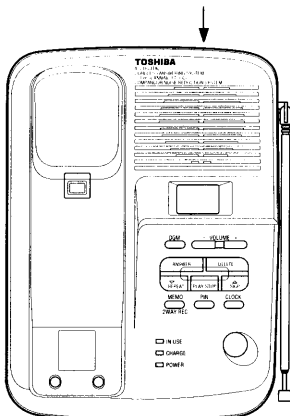

You can turn the ringer sound on or off by sliding the RINGER ON/OFF switch on the base unit.

To turn the ringer on:

Slide the switch to ON position.

To turn the ringer off:

Slide the switch to OFF position.

NOTE:

When the handset is placed in the base unit, only the ringer on the handset will sound.

BASICS


ANSWERING A CALL

If the handset is on the base unit, simply pick it up and it will connect automatically.

If the handset is off the base unit, press the **TALK** button or any dialing keys including * and # to answer your call. To hang up, press the **TALK** button again.

LAST NUMBER REDIAL

To redial the last number that you called on the handset:

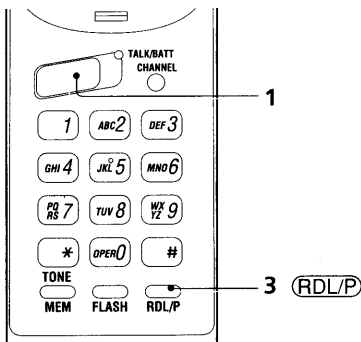


- 1 Press the **TALK** button.
- 2 Wait for dialtone.
- 3 Press the **RDL/P** button.

NOTES:

- You cannot redial numbers with more than 32 digits.
- RDL/P stands for REDIAL/PAUSE. If any button is pressed between the **TALK** and **RDL/P** the unit will think you want PAUSE and will not REDIAL.

CALL WAITING

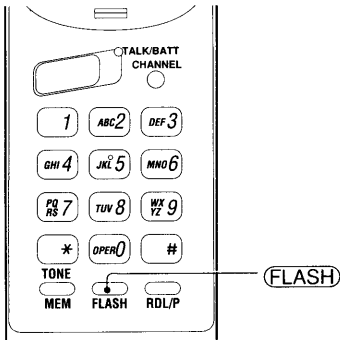


- 1 To answer a Call Waiting call, press the **FLASH** button.
- 2 Press the **FLASH** button again to switch between calls.

NOTES:

- Pressing the **TALK** button will not access Call Waiting; it will disconnect the current caller.
- Pressing the **FLASH** button without having received a Call Waiting signal may disconnect the current caller.

BANKING AND TELEPHONE SERVICES


Even if you have PULSE dialing, you can use this phone with banking and other phone services requiring touch tone signals.

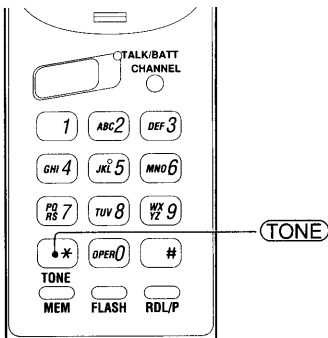

- 1 Dial the service number and wait for the connection.
- 2 Press the **TONE** button and then enter the numbers required.
- 3 You will hear the tones on the line.

BASICS

PAGING THE HANDSET

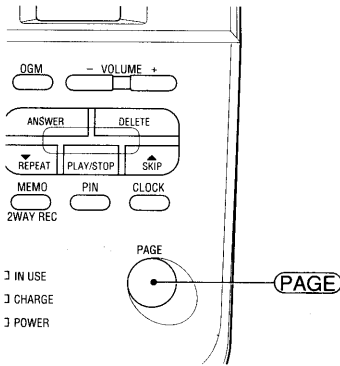


Press the **(PAGE)** button to beep the handset.

NOTE:

If a call comes in during paging, you will hear the ring.

CHANGING THE SECURITY CODE


The digital security code is automatically set when you place the handset on the base unit. The following instructions for changing the security code are provided for your use in the rare event that such a change becomes necessary. Such a change should only be made when you are not making a call.

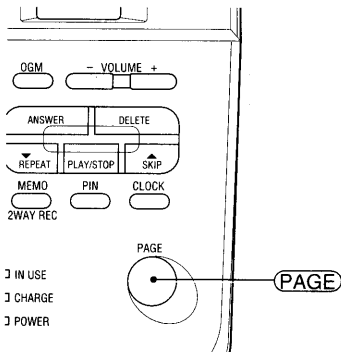

- 1** With the handset placed on the base, press the **(PAGE)** button of the base. The handset beeps.
- 2** Pick up the handset from the base.
- 3** Keep the handset away from the base for about 12 seconds.
- 4** Replace the handset on the base and wait at least 3 seconds. The new security code is set automatically.

SPEED DIALING

DIALING A STORED NUMBER

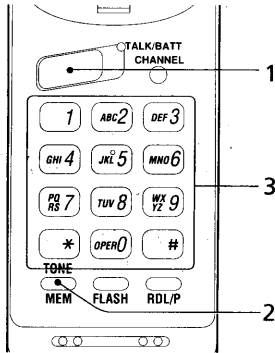

- 1 Press **TALK** and wait for dial tone.
- 2 Press the **MEM** button.
- 3 Press the memory location number (**MEM**-**9**).

ERASING A STORED NUMBER

You can erase a number or simply store another one in its place. When you store a new phone number, the one previously stored in that memory is erased automatically. To erase a stored number:

- 1 Press the **MEM** button twice.
- 2 Press the memory location button (**MEM**-**9**).

CHAIN DIALING

There are several ways of dialing telephone numbers longer than 16 digits.

You can:

- (A) Store up to 16 digits of a long number in separate memory addresses and access them the same way as dialing numbers stored in memory;
- (B) Store up to 16 digits of a long number in a memory address and access it at the beginning of a dialing sequence, then dial the remaining digits manually;
- (C) Store up to 16 digits of a long number in a memory address and access it at the end of a dialing sequence, after having first manually dialed all the digits over 16.

SPEED DIALING

EXAMPLE: to store 9-RDL/P-012345678-TONE-90123456:

(A) To store two parts of this number in memory addresses 1 and 2:

First, (MEM) ⇒ (PF 9) (RDL/P) (OPER 0) (1) (ACC 2) (OPF 3) (ON 4) (JL 5) (MR 6) (PF 7) (TR 8) (TONE) (PF 9) (OPER 0)
(1) ⇒ (MEM) ⇒ (1)

Then, (MEM) ⇒ (ACC 2) (OPF 3) (ON 4) (JL 5) (MR 6) ⇒ (MEM) ⇒ (ACC 2)

To dial the above number

(TALK) ⇒ (MEM) ⇒ (1) ⇒ (MEM) ⇒ (ACC 2)

(B) To store some digits at the beginning, and dial the rest of the number manually: Store from 9 to TONE in memory address 1 for example:

To dial the above number

(TALK) ⇒ (MEM) ⇒ (1) ⇒ and then press (PF 9) (OPER 0) (1) (ACC 2) (OPF 3) (ON 4) (JL 5) (MR 6)

(C) To store some digits at the end, and dial the first numbers manually: Store from TONE to 6 in memory address 1 for example:

To dial the above number

(TALK) ⇒ (PF 9) (RDL/P) (OPER 0) (1) (ACC 2) (OPF 3) (ON 4) (JL 5) (MR 6) (PF 7) (TR 8) ⇒ (MEM) ⇒ (1)

USING THE MEMORY DIALING OR PBX

The (RDL/P) (redial/pause) button allows you to insert a pause of about 3 seconds in the memory dialing to make an outgoing call through a PBX or a long distance service.

EXAMPLE: to store 0-1234567 to call through a PBX in memory number 1

(MEM) ⇒ (OPER 0) ⇒ (RDL/P) ⇒ (1) (ACC 2) (OPF 3) (ON 4) (JL 5) (MR 6) (PF 7) ⇒ (MEM) ⇒ (1)

If more than 3 seconds are needed, press (RDL/P) twice.

To dial the above number

(TALK) ⇒ (MEM) ⇒ (1)


If you require further operating instructions about memory dialing, call

1-800-631-3811

USING THE ANSWERING MACHINE

SETTING THE CLOCK

The answering machine's clock starts when the AC adaptor cord is plugged in. However, it does not start with the actual time. The right time must be programmed in on the base unit.

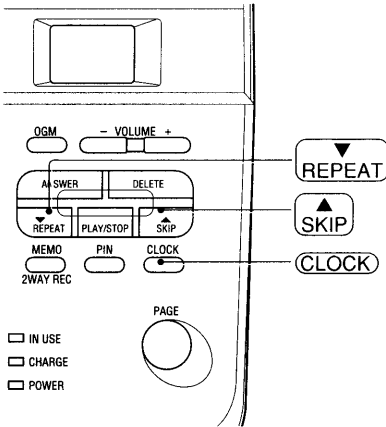

- 1** Press the **CLOCK** button for more than 2 seconds. You will hear the beep sound to indicate that the unit is currently placed in the clock setting mode.
- 2** First select the day of a week by pressing the ▼ or ▲ button. When the number (corresponding to the day of a week you want to select) appears on the LED display, press the **CLOCK** button.

The day of a week currently selected will also be announced.

- 3** Next specify the Hour by pressing ▼ or ▲ button. If the numbers (01 - 12) you want appear in the LED display, press the **CLOCK** button.
- 4** Then specify the Minute by pressing ▼ or ▲ button. When the numbers (00 to 59) you want appear in the LED display, press the **CLOCK** button.
- 5** Lastly, specify AM/PM by pressing ▼ or ▲ button. The LED display will show AM and PM in turn. At the display you want, press the **CLOCK** button. You will hear a long beep.

Then you will hear the new day and time.


NOTES:

- You can hear the time currently set by pressing the **CLOCK** key.
- If a call comes in during clock setting, start over after the call.
- In case of power interruption, the clock stops, and you will need to reprogram the time once power is restored.

USING THE ANSWERING MACHINE

RECORDING THE OUTGOING MESSAGE (OGM)

You can record a personalized outgoing message or use the prerecorded electronic message. When a call is received, the answering machine answers the call and plays the OGM.

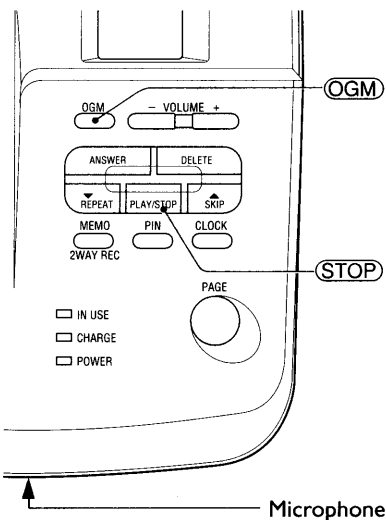

1 Press and hold the **OGM** button on the base unit for approximately 1 second.

After a long beep is heard, begin speaking over the microphone.

2 When you finish speaking, press the **OGM** or **PLAY/STOP** button.


The **OGM** just recorded will automatically be played back.

NOTES:

- If the OGM is shorter than 2 seconds, it will not be recorded.
- The maximum recording time for OGM is 30 seconds.

USING THE ANSWERING MACHINE


TURNING THE ANSWERING MACHINE ON & OFF

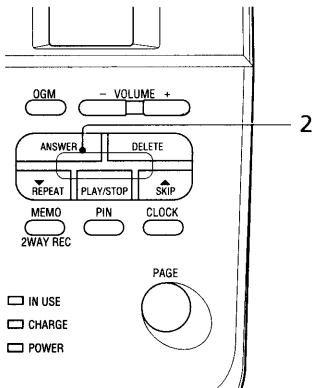

- 1** Check the LED display to see if the answering machine is on or off. If the LED display is on, the unit is on and ready to take messages. If the LED display is off, it will not take messages. (The unit will not take messages even with the LED on when the ICM (Incoming message) mode has been set to Announce Only. For more information, see page 29.)
- 2** Simply press the **ANSWER** button to change the status from on to off or off to on. The LED display will indicate the change.
- 3** When the unit is turned on, it initializes by playing the outgoing message. If you want to stop playing, press the **PLAY/STOP** button.

TO CHANGE THE OUTGOING MESSAGE (OGM)


You can change from the pre-recorded OGM to your own recorded OGM or vice versa.

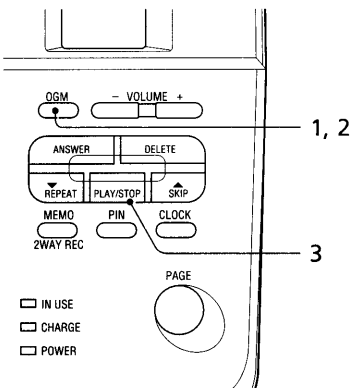

- 1** Press the **OGM** button on the base unit. You will hear the currently selected outgoing message.
- 2** Press the **OGM** button while the unit is playing the OGM.
- 3** Wait until the OGM is fully played back, or press the **STOP** button. The OGM is then changed to another.

USING THE ANSWERING MACHINE

SETTING THE NUMBER OF RINGS

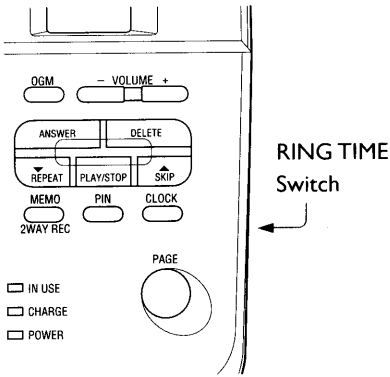

Choose one of three settings by sliding the RING TIME switch on the base unit to one of the following positions:


2: 2 times

4: 4 times

TS (TOLL SAVER MODE):

2 times when there are new messages, or 4 times there are no new messages.

SETTING MAXIMUM RECORDING TIME FOR INCOMING MESSAGES

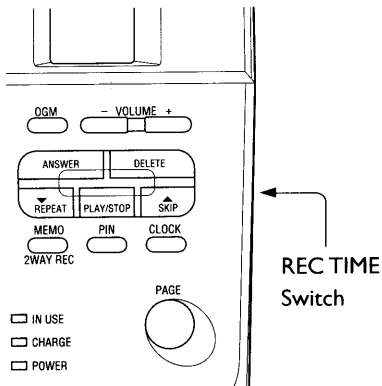

You can select the maximum recording time by sliding the REC TIME switch on the base unit to one of the following positions:

1: 1 minute

4: 4 minutes

ANN: Announce Only


NOTE:

If you set the switch to ANN, only the answer message will be announced and no message will be accepted.

USING THE ANSWERING MACHINE

PLAYING RECORDED MESSAGES

You can listen to messages at the base unit.

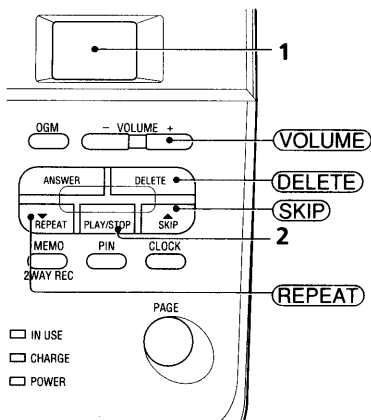

1 The number on the display will blink to indicate that new messages have been received.

2 Press the **PLAY/STOP** button to hear the messages. They will be played in the order they were received.

To stop playback, press the **PLAY/STOP** button again.

To delete individual messages, press the **DELETE** button for no longer than 1 second during playback, immediately after, or before the next message begins. You will hear a confirmation tone when the deletion is complete.

To delete all messages, press and hold the **DELETE** button at the BASE for more than 2 seconds. There will be one long beep to indicate successful deletion after playback is over.

To repeat the message, press the **REPEAT** button. To repeat the previous message, press **REPEAT** within 4 seconds after the current message has started. If you press after 4 seconds, the current message is repeated from the beginning.

To go backward and repeat a message you choose, press and hold the **REPEAT** button until your desired message number appears on the display.

To skip to the next message, press the **SKIP** button.

To go forward, press and hold the **SKIP** button until your desired message number appears on the display.

To adjust the speaker volume, press the **VOLUME** -/+ buttons. The volume level is displayed by a figure from 1 to 10.

USING THE ANSWERING MACHINE

DELETING RECORDED MESSAGES

You can delete messages one at a time or all at once on the base unit.

NOTES:

- *If there are messages that you have not listened to when you are deleting all messages, you will hear several short beeps and the messages will not be deleted. This is to protect you from accidentally erasing messages you have not yet listened to.*
- *To maintain maximum available record time, it is a good idea to delete the old messages.*

SCREENING INCOMING CALLS

You can screen calls using the base unit.

- 1** After the answering machine answers, the base speaker lets you hear the caller as the machine records the message.
- 2** To answer the call immediately, press the **TALK** button on the handset. The answering machine will disconnect automatically.


NOTE:

If the message portion was 2 seconds or less, it will not be retained as a message.

USING THE ANSWERING MACHINE

LEAVING A MEMO MESSAGE

You can record a memo by using the base unit, as a reminder to yourself or as a message for someone else in the household. A memo is stored and played back like any other incoming message, and the LED display will light to indicate that a message has been received. A memo can be recorded endlessly.

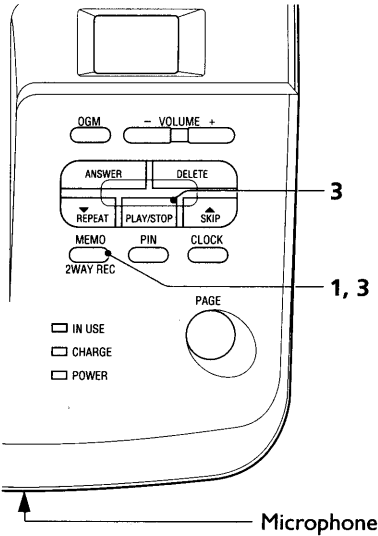

- 1** Press and hold the **MEMO** button approximately for 1 second.
- 2** After a long beep, turn to the microphone and begin speaking. Be sure to keep 11 to 20 inches away from the microphone while recording.
- 3** When you have finished the memo, press the **MEMO** button again, or the **PLAY/STOP** button.


NOTE:

If a call comes in during the memo recording, the unit will stop recording automatically and the ringer will sound. You will need to start over after the call. If the memo recording so far was more than 2 seconds, it will be retained as a message.

USING THE ANSWERING MACHINE

RECORDING A PHONE CONVERSATION

You can record a telephone conversation that is already in progress. Remember, the total maximum record time of the unit is 15 minutes and the maximum record time of one phone conversation is 15 minutes. The conversation is stored and played back like an incoming message.

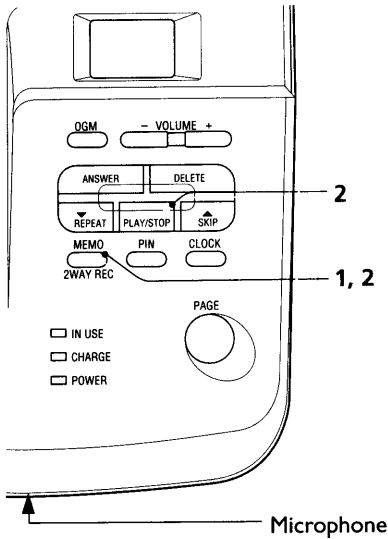

- 1** During the conversation via the handset, press the **2WAY REC** button on the base unit. Recording starts automatically.
- 2** To stop recording, press the **2WAY REC** or **PLAY/STOP** button on the base unit.


NOTES:

- **During recording, all the buttons on the handset and only the MEMO button on the base unit will operate.**
- **If the recorded conversation is less than 2 seconds, it will be automatically deleted.**
- **The telephone beeps intermittently to alert the parties that the conversation is being recorded.**

REMOTE OPERATION

SETTING THE PIN NUMBER

In order to gain access to your answering machine when you are away from home, you need to identify yourself through the use of a Personal Identification Number (PIN). The PIN is preset to 80. You can select any two digit number between 00 and 99 as your PIN. To change your PIN, use the base unit.

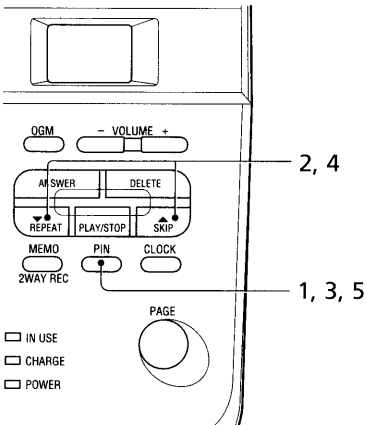

- 1** Press the **(PIN)** button for more than 2 seconds.
You will hear the beep sound to indicate that the unit is currently placed in the PIN setting mode.
- 2** Press the **▼** or **▲** button on the base unit to select the left digit of the PIN number.
- 3** If your desired number appears on the LED display, press the **(PIN)** button.
- 4** Press the **▼** or **▲** button to next select the right digit of the PIN number.
- 5** If your desired number appears on the LED display, press the **(PIN)** button.

NOTE:

In the event of a long power failure, the PIN will revert to the 80 setting.

REMOTE OPERATION

CALLING IN FROM A REMOTE LOCATION

You can retrieve messages or change answering machine settings by calling the unit from a touch-tone phone. Even if the unit has been left off, you can still access it by turning it on first.

1 IF THE UNIT IS OFF:

Let the phone ring at least 10 times. The line will connect and you will hear several short beeps. Press the **#** button and enter your PIN.

IF THE UNIT IS ON:

After the unit begins playing your outgoing message, press the **#** button and enter your PIN.

2 The answering machine will announce the day and time and number of new and old messages. The unit will automatically start playing the new messages after announcing which messages it is going to play.

3 Press the **#** and **2** buttons to play old messages.

4 Press the **#** button and the appropriate number button that corresponds to the operation you want (see TABLE OF COMMANDS on next page).

5 When finished, press **#**, ***5**, and hang up.

NOTES:

- *When entering your PIN number, the second digit must be entered within 2 seconds after the first one.*
- *If you enter a wrong PIN number 3 times, the line will be disconnected.*
- *Enter the command within 15 seconds or while you hear intermittent beeps. If you fail to enter a command in time, the line is disconnected.*

REMOTE OPERATION

TABLE OF COMMANDS

OPERATION	KEYS
REPEAT	PRESS (#) (1)
PLAY	PRESS (#) (2)
SKIP	PRESS (#) (3)
INDIVIDUAL DELETE	PRESS (#) (4)
STOP	PRESS (#) (5)
ANSWER ON	PRESS (#) (6)
MEMO REC	PRESS (#) (7)
OGM REC	PRESS (#) (8)
ANSWER OFF	PRESS (#) (9)
ROOM MONITOR	PRESS (#) (*) *

* **Note:** This lasts for 15 seconds. (If you need another 15 seconds to monitor, press (#) (*) again.)

TROUBLESHOOTING

Should any problem occur with the set, make the following simple tests to determine whether or not servicing is required.

If the problem persists after you have made these tests, **call 1-800-631-3811 for Customer Service.**

PROBLEM	Cause and Countermeasure
No dial tone. No calls come in.	<ul style="list-style-type: none">• AC adaptor of the base unit is not plugged into the AC 120V outlet.• Battery is low. → Place the handset on the base unit to recharge.• Telephone line cord is disconnected. → Check the wall telephone jack.• The previous call is not disconnected. → Press the TALK button to disconnect the line.• Trouble with the telephone line. → Check with another telephone. Outlet used is controlled by a wall switch in its OFF position. Relocate it to another outlet.
The line is noisy.	<ul style="list-style-type: none">• The handset is too far from the base unit. → Bring the handset near the base unit.• The battery is low. → Place the handset on the base unit to recharge.• The base unit is located in a place with high interference. → Relocate the base unit.• Interference from TV, appliances, etc. → Move away from the interference source.• May be line noise. → Check with another phone.
Battery pack goes low quickly.	<ul style="list-style-type: none">• The battery pack was not fully charged at the initial charging. First, disconnect the phone from the telephone line and press the handset TALK button. Set the handset aside for about 8 hours to discharge the battery. Charge the battery pack for 12 to 16 hours without any interruption.• To avoid Ni-Cd battery memory effect, be sure to charge only as needed.• Battery needs to be replaced.

TROUBLESHOOTING

PROBLEM	Cause and Countermeasure
The message is incomplete.	<ul style="list-style-type: none">• The incoming message was longer than the recording time (1 or 4 minutes), or shorter than 2 seconds.• The memo message was longer than 4 minutes, or shorter than 2 seconds.• The recording capacity became full during recording.• The phone was answered during recording.
The answering machine does not respond to remote operation.	<ul style="list-style-type: none">• You are not calling from a touch tone phone.• The PIN number you entered was wrong. (See page 34.) There was a power interruption and PIN has reset to 80.
The answering machine does not answer callers.	The recording capacity is full. In this case, the line will be connected after 10 rings. However, the answering machine will not answer with the OGM. You will hear intermittent beeps prompting you to enter your PIN number.
The clock is incorrect.	<ul style="list-style-type: none">• There was a power interruption. → Reset the time. (See page 26.)
The unit operates abnormally.	Try in this order. <ol style="list-style-type: none">1 Disconnect the AC adaptor.2 After a few seconds, connect the AC adaptor again.
"E" flashes in the LED display.	Disconnect the AC power cord and connect again. If the trouble persists, call 1-800-631-3811 for Customer Service.

TROUBLESHOOTING

If you want to reset the unit to the factory settings

You can cancel the OGM, PIN, and the clock settings by the following process.

- 1 Disconnect the AC adaptor and telephone line cord from the base. Keep the AC adaptor connected to the wall outlet. Make sure that the telephone line cord remains disconnected during this procedure.
- 2 While pressing the **DELETE** button, plug the AC power adaptor into the base. Keep pressing the **DELETE** button for more than 4 seconds.
A beep sounds and "88" blinks in the LED display.

To resume using the unit, connect the telephone line cord and place the handset on the base.

Note:

If you turn on the unit again, "88" may flash.


SPECIFICATIONS

HANDSET

Receive Frequency	43.72 ~ 46.97 MHz
Transmit Frequency	48.76 ~ 49.99 MHz
Power Source	Customer Replaceable Ni-Cd Battery 300 mAH 2.4V DC
Battery Life	2 weeks at Standby Mode, after proper initial charging cycle
Dimensions (H/W/D)	Approx. 7-13/16" × 2-1/4" × 2" (198 × 56.5 × 51 mm) Antenna Length 4-3/8" (112 mm)
Weight	Approx. 8.1 oz (230 g)

BASE UNIT

Receive Frequency	48.76 ~ 49.99 MHz
Transmit Frequency	43.72 ~ 46.97 MHz
Power Source	AC 120V 60 Hz/DC 9V
Dimensions (H/W/D)	Approx. 8-7/8" × 6-3/8" × 2-5/8" (224.4 × 161.8 × 66.1 mm)
Weight	Approx. 1 lb 5 oz (585 g)

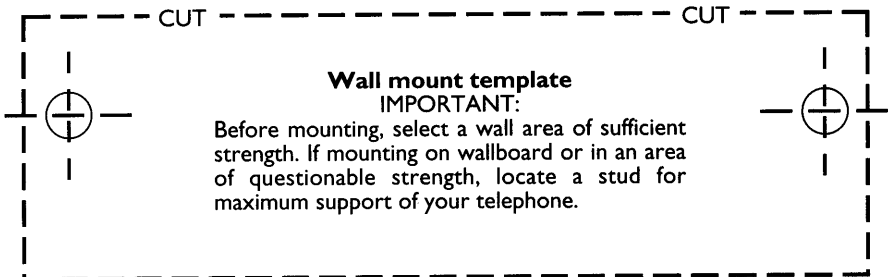

SPECIFICATIONS

SUPPLIED ACCESSORIES

Rechargeable Battery	(1)	TRB-5000	Part #. RC004288
AC Adaptor	(1)	TAC-6700	Part #. RC003528
Short Telephone Cord	(1)		Part #. RC001872
Long Telephone Cord	(1)		Part #. RC001861
Owner's manual	(1)		Part #. RC005396
Speed Dial Index Card	(1)		Part #. RC005153
Wall Mount Screw	(2)		Part #. RC000936
Quick Reference Guide	(1)		Part #. RC005397

For the purchase of accessories, please call **1-800-631-3811**.

WARRANTY/SERVICE

SERVICE REQUIREMENTS

If the cordless telephone should malfunction, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered with the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to a unit both in and out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.

It is the responsibility of users requiring service to report the need for service to the Toshiba dealer.

IMPORTANT INSTRUCTIONS TO USERS

Your FT-9007 has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number."

It is most unlikely, but...If your FT-9007 should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your FT-9007 (or require changes in the FT-9007 or its

connection), the phone company will notify you in writing, so you will have the chance to take whatever action is necessary to ensure uninterrupted phone service.

FCC REQUIREMENTS

You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your FT-9007 to coin telephone services. Check with your local telephone company if you wish to connect your FT-9007 to a party line service. Some party line services require a special adaptor or modification to your telephone.

WARRANTY/SERVICE

TELEPHONE/TELEPHONE ANSWER MACHINE LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii, Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty of Parts and Labor

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one year after the date of original retail purchase. During this period, TACP/THI will repair a defective product or part without charge to you. You must deliver the entire unit to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station. If you live in the Continental U.S.A. you may, at your option, forward your product for exchange to:

Toshiba America Consumer Products, Inc.

Returns Center

1420C Toshiba Dr.

Lebanon, TN 37087

You are responsible for all transportation and insurance charges for the product to the Returns Center. Products shipped to the Return Center must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

Upon receipt we will, at our option, exchange the unit with a new or refurbished unit.

Owner's Manual

You should read the owner's manual thoroughly before operating this product.

Your Responsibility

The above warranties are subject to the following conditions.

- (1) You must provide a copy of your bill of sale or other proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated within the U.S.A or Puerto Rico.
- (3) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.
- (4) At your option, after the warranty period has expired in the U.S.A., call (800)-631-3811 to receive information concerning an exchange price. Payment must be enclosed with the product in the form of a certified check or money order and forward with your product to:
Toshiba America Consumer Products, Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087
- (5) Upon receipt we will, at our option, replace your unit with a new or refurbished unit of equal value. Features may not be identical to your original product.
- (6) Physically damaged product are not acceptable for repair or exchange within or after the warranty period expires and will be returned as received.
- (7) Any missing accessory components, (i.e., AC adaptor, line cord(s), battery, etc.), will be removed from the replacement unit being sent to you and packed with the defective unit you are returning.

WARRANTY/SERVICE

How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows:

(1) Arrange for the delivery of the product to the TACP/THI Authorized Service Station. Products Shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton, and a letter of explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charges must be prepaid by you.

In The Continental United States contact: **In Hawaii contact:**



Toshiba Hawaii, Inc.
327 Kamakee Street,
Honolulu, HI 96814
(808)-521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. With the exception of any warranties implied by state law as hereby limited, the foregoing express warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any product or parts.

In no event shall TACP or THI be liable for consequential or incidental damages. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

IMPORTANT: PACKING AND SHIPPING INSTRUCTION

When you send the product to a service center, you should use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.

REMOTE OPERATION CARDS

CUT

TOSHIBA

REMOTE OPERATION OF FT-9007

- A** Call your machine from touch tone phone. After your machine answers, enter # and PIN (Access Code) pressing each digit for at least 1 second. If you enter # and PIN correctly, your machine sounds invitation tone after the announcement of the time and others. Now enter the command (# and number) by pressing the keypad.
- B** To playback incoming and memo messages, press #2. To skip, press #3 during playback. To repeat, press #1 during playback. To delete, press #4 during playback.
- C** To record MEMO message, press #7. To record OGM, press #8. To stop recording, press #5. To turn on the answer mode, press #6. To turn off the answer mode, press #9.
- D** To stop operation, press #5.

CORTE

TOSHIBA

OPERACIONES POR CONTROL REMOTO FT-9007

- A** Llame a su teléfono desde un teléfono de teclado. Después que su teléfono conteste, introduzca # y el código de acceso (PIN) presionando cada dígito durante 1 segundo como mínimo. Si introduce correctamente # y el PIN, su teléfono emitirá un tono de invitación después del anuncio de la hora y demás. Luego introduzca el mandato (# y un número) presionando las teclas.
- B** Para reproducir los mensajes recibidos y los memorandos presione #2. Para saltar presione #3 durante la reproducción. Para repetir presione #1 durante la reproducción. Para borrar presione #4 durante la reproducción.
- C** Para grabar mensajes de memorando presione #7. Para grabar un mensaje de contestación presione #8. Para detener la grabación presione #5. Para activar o desactivar el modo de contestación presione #6. Para desactivar el modo de contestación presione #9.
- D** Para detener la operación presione #5.

REMOTE OPERATION CARDS

CUT

TOLL FREE CUSTOMER SERVICE 1-800-631-3811

MESSAGE REPEAT # + 1	MESSAGE PLAYBACK # + 2	MESSAGE SKIP # + 3 (during playback)
MESSAGE DELETE # + 4 (during playback)	RECORD STOP/ OPERATION STOP # + 5	ANSWER ON # + 6
MEMO RECORD # + 7	OGM RECORD # + 8	ANSWER OFF # + 9
ROOM MONITOR # + *	0	REMOTE ACCESS # + PIN

CORTE

REPETICIÓN DE MENSAJE # + 1	REPRODUCCIÓN DE MENSAJE # + 2	SALTO DE MENSAJE # + 3 (durante la reproducción)
BORRADO DE MENSAJE # + 4 (durante la reproducción)	DETENCIÓN DE GRABACIÓN/OPERACIÓN # + 5	ACTIVACIÓN DE CONTESTACIÓN # + 6
GRABACIÓN DE MENSAJE DE MEMORANDO # + 7	GRABACIÓN DE MENSAJE DE CONTESTACIÓN # + 8	DESACTIVACIÓN DE CONTESTACIÓN # + 9
MONITOR DE SALA # + *	0	ACCESO AL CONTROL REMOTO # + PIN

MEMO

For technical assistance, purchase of accessories or service, please call 1-800-631-3811.

IMPORTANT

We suggest you record the following information and retain for your records along with your bill of sale or equipment document.

Model no. _____ **Serial no.** _____
Purchase date _____ **Dealer** _____
Dealer address _____

© 1997 TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

QUICK REFERENCE GUIDE

TOSHIBA

CORDLESS ANSWERING SYSTEM FT-9007

Read the Owner's Manual for details.


For technical assistance, purchase of accessories or service, please call
1-800-631-3811.

SETTING UP

BASE UNIT


Insert the tip of the AC adaptor into the slot labeled DC IN 9V, and plug the other end into the electrical outlet.

Do not connect the telephone line until the battery has been completely charged. Then, plug one end of the telephone line cord into the slot labeled TEL LINE, plug the other end into the telephone line jack.

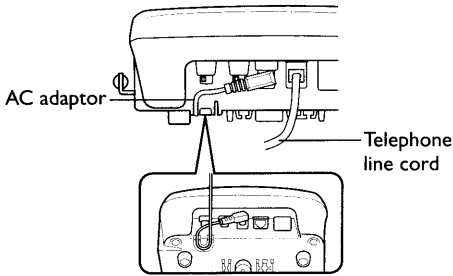


HANDSET

Install the battery pack.

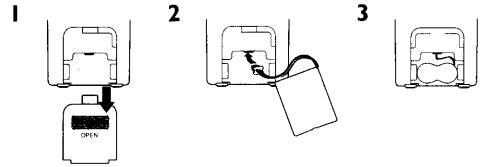


IMPORTANT

Leave the handset on the base cradle telephone without interruption for 12 ~ 16 hours to achieve maximum battery charge.

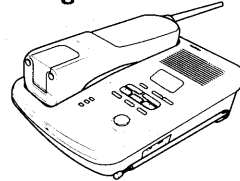

SETTING THE CLOCK

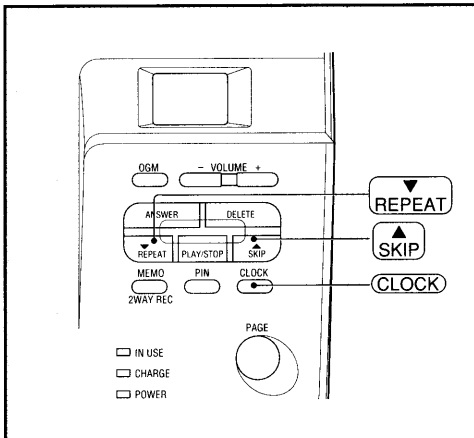


- 1 Press the **(CLOCK)** button for more than 2 seconds.
- 2 First select the day of a week by pressing the **▼** or **▲** button. When the number you want appears on the LED display, press the **(CLOCK)** button.
- 3 Next specify the Hour by pressing **▼** or **▲** button. When the numbers (01 - 12) you want appear in the LED display, press the **(CLOCK)** button.
- 4 Then specify the Minute by pressing **▼** or **▲** button. When the numbers (00 to 59) you want appear in the LED display, press the **(CLOCK)** button.
- 5 Lastly, specify AM/PM by pressing **▼** or **▲** button. The LED display will show AM and PM in turn. At the display you want, press the **(CLOCK)** button. You will hear a long beep.

ANSWERING MACHINE

RECORDING THE OUTGOING MESSAGE

To record an outgoing message:

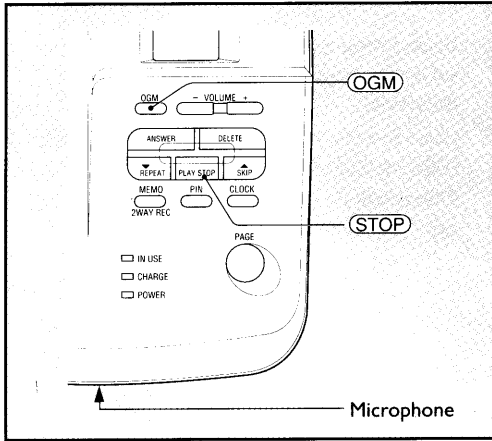


- 1 Press and hold the **OGM** button on the base unit for approximately 1 second. After a long beep is heard, begin speaking over the microphone.
- 2 When you finish speaking, press the **OGM** or **PLAY/STOP** button. The OGM just recorded will automatically be played back.

TURNING THE ANSWERING MACHINE ON & OFF

Press the **ANSWER** button. The LED display is steady on when the answering machine is on.

To turn off, press the **ANSWER** button again.

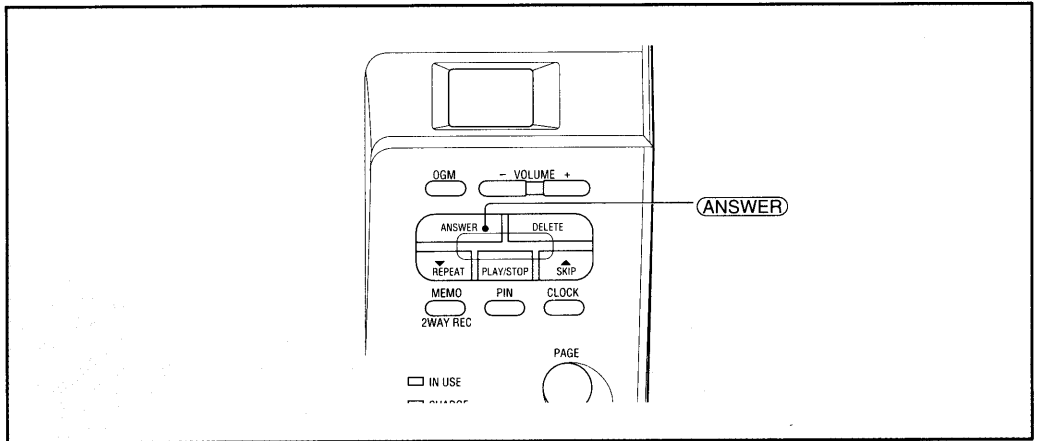


SWITCHING THE OGM

Press the **OGM** button while the OGM is being played back.

You can use the prerecorded electronic message or record a personalized outgoing message.

PLAYING INCOMING MESSAGES

To play the messages, press the **(PLAY/STOP)** button.

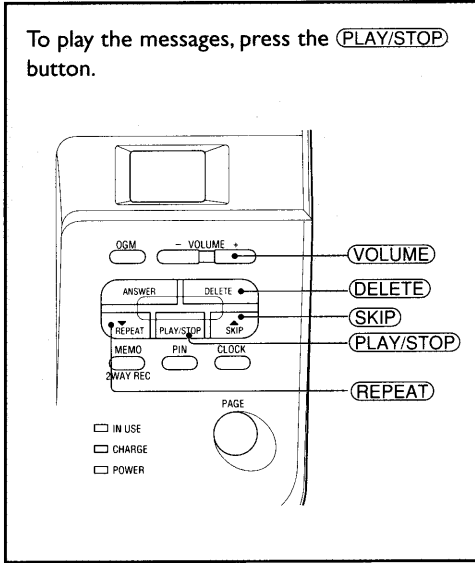

To start playback, press the **(PLAY/STOP)** button.

To skip to the next message, press the **(SKIP)** button.


To repeat the message, press the **(REPEAT)** button within 4 seconds of the end of the message.

To delete the messages, press and hold the **(DELETE)** button before the next message starts playing.

To adjust the speaker volume, press the **(VOLUME +/-)** buttons.

To stop playback, press the **(PLAY/STOP)** button.

SPEED DIALING

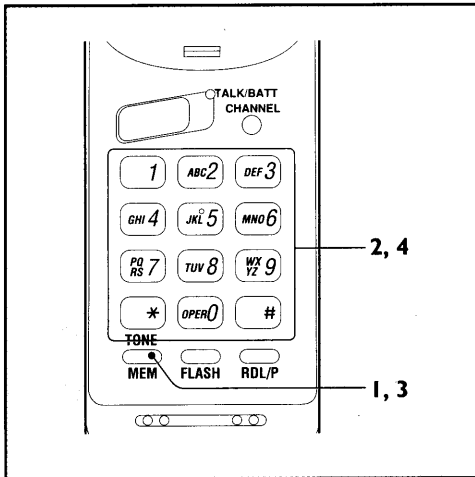

STORING NUMBERS

- 1 Press the **(MEM)** button.
- 2 Dial the phone number (16 digits max).
- 3 Press the **(MEM)** button.
- 4 Press the memory location number (0-9) to which you want the phone number assigned.

DIALING A STORED NUMBER

- 1 Press the **(TALK)** button.
- 2 Press the **(MEM)** button.
- 3 Press the memory location number (0-9).

For more detailed instructions and examples, please refer to the owner's manual.