

TOSHIBA

OWNER'S MANUAL

Video Cassette Recorder



M-463

SPECIALIZED
OPERATIONS 37

RECORDING 29

PLAYBACK 26

VIDEO CASSETTES 25

OPERATING
CONTROLS 17

FIRST-TIME
OPERATION 11

INSTALLATION 6

IMPORTANT
SAFEGUARDS 3

BY634013

Using This Manual

Congratulations on your choice of a TOSHIBA M-463. You have selected a high-quality, precision-engineered instrument designed to give you years of video and audio enjoyment.

To get the best performance from your new VCR, it is important that you carefully read and follow the operating instructions in this manual in the sequence in which they are presented.

Should you experience a problem, please follow the "Trouble Checks" on page 39. The warranty describes what will be done for you should your new VCR need service during the warranty period. It also tells you how and from whom you should request service.

Table of Contents

Safety Precautions.....	1
Accessories.....	1

IMPORTANT SAFEGUARDS..... 3-5

GENERAL INSTALLATION INFORMATION

Choosing a Location for Your VCR	6
--	---

INSTALLATION

TV Antenna and VCR Connections.....	7
VCR and TV Connections	8
CATV	9-10

FIRST-TIME OPERATION

Unpack the VCR and Accessories	11
Install the Batteries in the Remote Control.....	11
Connect an Antenna or Cable-TV System to the VCR.....	11
Set the CH3/CH4 Switch on the Back of the VCR to Select the "VCR Channel"	11
Turn on the VCR and Select an Active Channel.....	12
Set the CATV	12
Learn How to Use the TV/VCR Button.....	12
Test the VCR Connections	12
Set the Clock and Language	13
Automatic Channel Program.....	14-15
Make a Recording and Play It Back	16

VCR OPERATING CONTROLS

VCR Jack Panels.....	17
VCR Operating Controls.....	18
VCR Display Panel	19
Remote Control Buttons that Control the VCR.....	20-21
Remote Control Buttons that Control a TV	22-23

VCR FEATURES

Quick-Play Feature	24
VCR Function Set Up Menu	24
Two Language Menus	24

VIDEO CASSETTES

Tape Speed.....	25
Record Protect Tab	25
Inserting and Removing Cassettes	25
Cassette Care and Storage	25

PLAYBACK

Playback Guide.....	26
Picture Search.....	27
Accel Search	27
Slow-Motion Playback	27
Still for Stop-Action Playback	27
Frame Advance.....	27
Tracking (Automatic and Manual)	27
On-Screen Displays.....	28
Time Counter with Memory-Stop Feature	28

RECORDING

Recording Guides	29
Tape Recording Speeds	29
Recording with TV Turned Off	29
Recording and Viewing the Same Program.....	30
Recording and Viewing Different Programs.....	30
One Touch Recording (OTR).....	31
Programming the Timer.....	32-33
Timer Recording.....	34
Recording from a Camcorder	35
Recording from another VCR.....	36

SPECIALIZED OPERATIONS

Remaining Tape Display Function.....	37
Copying VCR Recording Function	38

TROUBLE CHECKS..... 39

CLEANING THE VCR..... 40




DESIGN SPECIFICATIONS..... 40

IMPORTANT SAFEGUARDS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.


This set has been designed and manufactured to assure personal safety. However, improper use can result in electrical shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and service. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGES. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

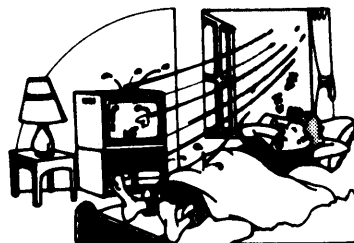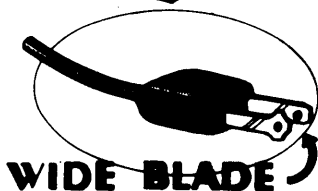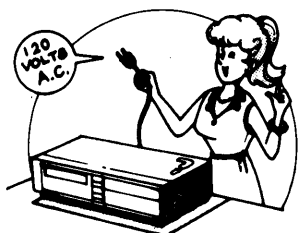


1. After unpacking this video product, read the owner's manual carefully and follow all the operating and other instruction.
2. This video product should be operated only from the type of power source indicated on the marking labels. If you are not sure of the type of power supply to your home, consult your sales person or your local power company. For video products intended to operate from battery power or other sources, refer to the operating instructions.
3. This video product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
4. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
5. Do not expose this video product to rain or use near water. For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
6. Unplug the video product from wall outlet before cleaning. Use only a soft damp cloth and never use benzene, thinner or other solvents for cleaning.

IMPORTANT SAFEGUARDS (continued)

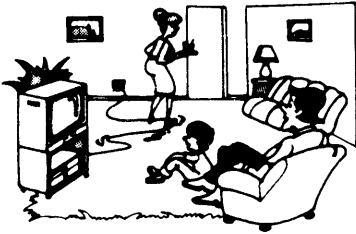


7. Do not allow anything to rest on the power cord. Do not locate this video product where the cord will be walked on.

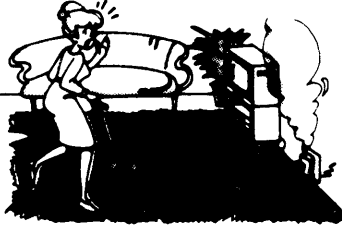


8. Do not overload wall outlets and extension cords because this can result in fire or electrical shock.

9. If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANS/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, ground of the lead-in wire to an antenna discharge unit, size of grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- Use No. 10 AWG (5.3 mm²) copper, No. 8 AWG (8.4 mm²) aluminum, No. 17 AWG (1.0 mm²) copper-clad steel or bronze wire, or larger, as a ground wire.
 - Secure antenna lead-in and ground wires to house with stand-off insulators spaced 4.6 feet (1.22-1.83 m) apart.
 - Mount antenna discharge unit as close as possible to where lead-in enters house.
 - Use jumper wire not smaller than No. 6 AWG (13.3 mm²) copper, or the equivalent, when a separate antenna-grounding electrode is used. See NEC section 810-21 (j).

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

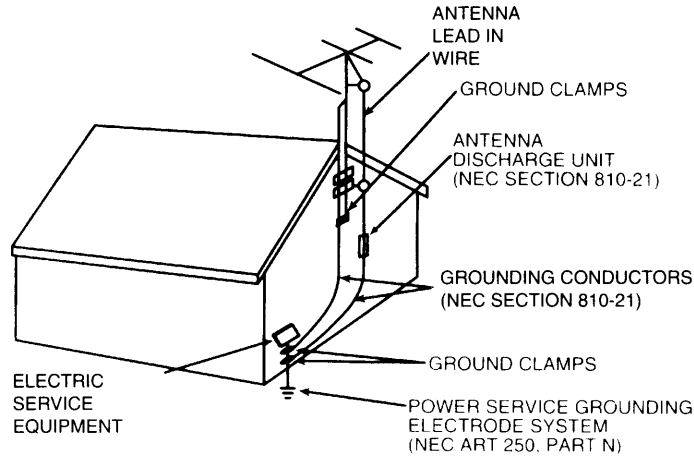

10. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuit, or where it can fall on such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits since contact with them might be fatal.

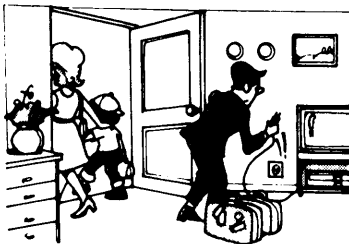

11. For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

IMPORTANT SAFEGUARDS (continued)




12. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



13. Never push objects of any kind into this video product through openings since they may touch dangerous voltage points or short-out parts that could result in a fire or electrical shock. Never spill liquid of any kind on the video product.

14. Do not use attachments not recommended by the video product manufacturer since they may cause hazards.

15. Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury or damage to the appliance. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the video product.

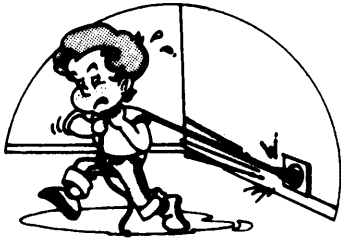

16. Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions :

A. When the power-supply cord or plug is damaged.

B. If liquid has been spilled or objects have fallen into the video product.


C. If the video product has been exposed to rain or water.

D. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

E. If the video product has been dropped or the cabinet has been damaged.

F. When the video product exhibits a distinct change in performance.

Do not attempt to service this video product yourself because opening or removing cover may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

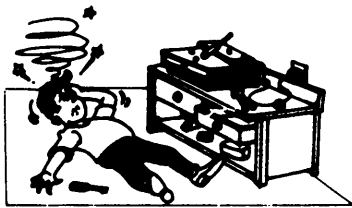

17. Upon completion of any service or repairs, request the service technicians assurance that only Factory Authorized Replacement Parts that have the same characteristics as the original parts were used, and that routine safety checks have been performed to determine that the video product is in safe operating condition. Unauthorized parts may result in fire, electrical shock, or other hazards.



GENERAL INSTALLATION INFORMATION

Choosing a Location for your VCR

- Choose a location that is convenient, but away from sources of heat such as direct sunlight and heating units.
- If the VCR is to be installed in an equipment rack or cabinet with other components, be sure there is adequate ventilation at the back and around the sides of the components. The VCR should not be placed on or directly above a stereo amplifier because of the heat that rises from the amplifier.
- Choose a flat surface at least as large as the VCR so that it rests on its mounting feet. It is important that air can pass through the ventilation holes in the bottom of the unit to prevent it from overheating. Do not operate the VCR on a rug or carpet because the pile will obstruct these holes.


Some TV sets may cause interference in home VCRs. To avoid interference and get the best performance from your VCR, follow these guidelines :

- When placing the VCR under a TV, keep at least 18 inches between the bottom of the TV and the top of the VCR.
- If interference is present when the VCR is used on top of the TV or at the 18-inch distance below the TV set, move the VCR to a position beside the TV.
- If moving the VCR does not solve the interference problem, try plugging the VCR into a different wall socket.
- If interference continues after all of the above, call your dealer or service representative.

What Are VHF and UHF?

When television broadcasting began, twelve channels were called VHF (*very high frequency*) channels and numbered 2 through 13.

Later, as television broadcasting expanded channel 14 and higher we called UHF (*ultra high frequency*) channels.

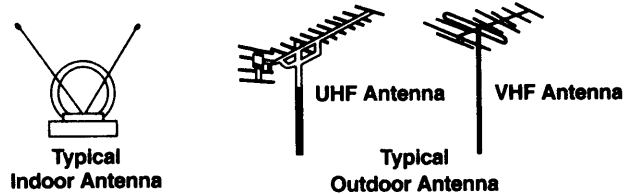


Your home antenna is a "signal receiver" that picks up TV broadcasts out of the air. There are several different types of antennas :

- Some receive only VHF channels.
- Some receive only UHF channels.
- Some receive both VHF and UHF channels.

Depending on the type of antenna, signals from the antenna can be conducted through either flat "twin-lead" cable or round "coaxial" cable as shown below.

Types of Antenna Cables

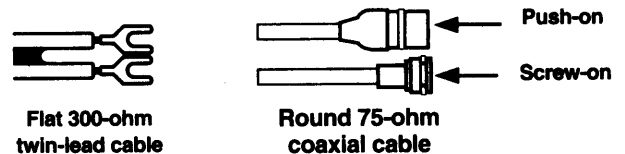

Cable-TV (CATV) supplies television signals directly by round cable without the need for a home antenna.

Cable-TV can deliver both VHF and UHF channels and programs not available from a home antenna. You will usually get better picture quality (for recording TV programs) if you connect an outdoor antenna or cable-TV system to your VCR. If this is not possible (or if you are in an area with good signal reception), use a good quality indoor antenna.

INSTALLATION

TV Antenna and VCR Connections

To connect the VCR to an antenna (Fig. 1) or to a combination VHF/UHF antenna (Fig.2), take the following steps:

Remove the VHF and/or UHF cable from your TV terminals and reconnect them to the VCR terminal as shown in the diagrams below.

Note: For VHF and UHF connections, follow procedure ① if you have a 75 Ω (ohm) coaxial cable, and follow procedure ② if you have a 300 Ω (ohm) twin lead connector.

Figure 1. VHF or UHF Reception Areas


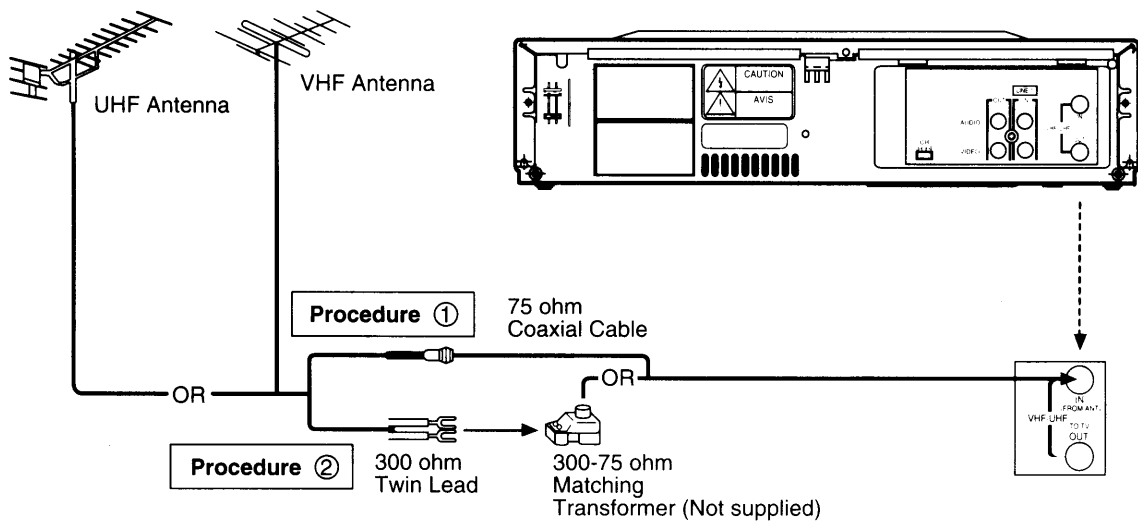


Figure 2. Combined VHF/UHF Reception Areas

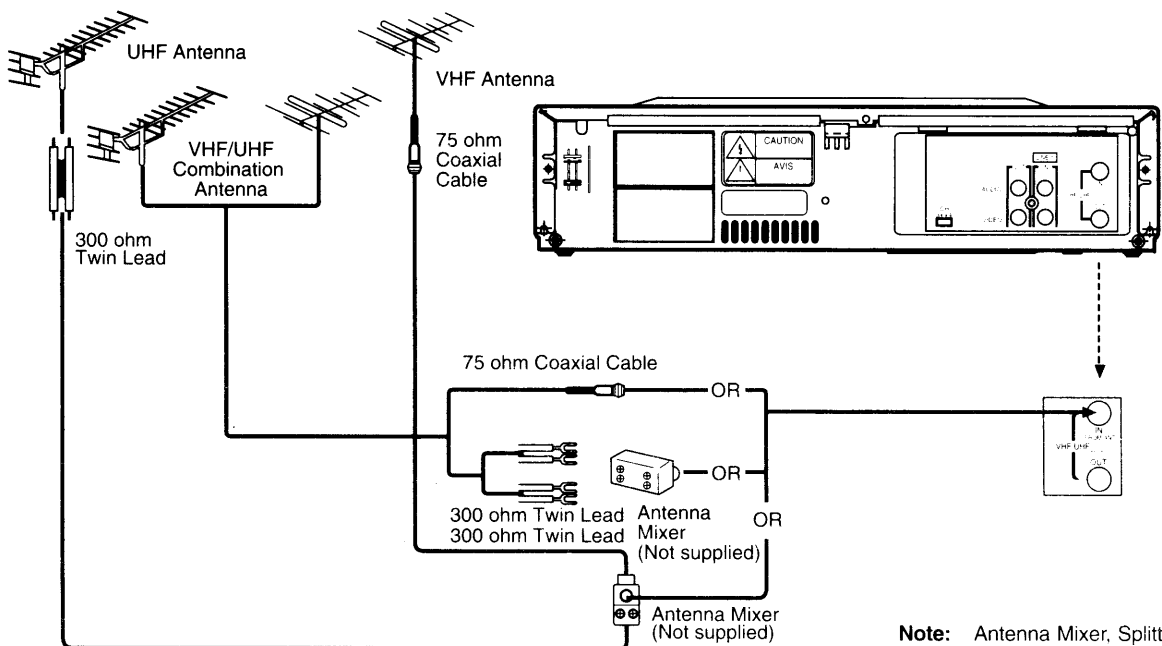

Note: Antenna Mixer, Splitter and Matching Transformer (75 Ω \rightarrow 300 Ω , 300 Ω \rightarrow 75 Ω) are available from your local electronics store.

INSTALLATION(continued)

VCR and TV Connections

Connection to TV Antenna Terminals

Fig. 1 VHF (75 ohm/300 ohm) or VHF (75 ohm) terminal connection



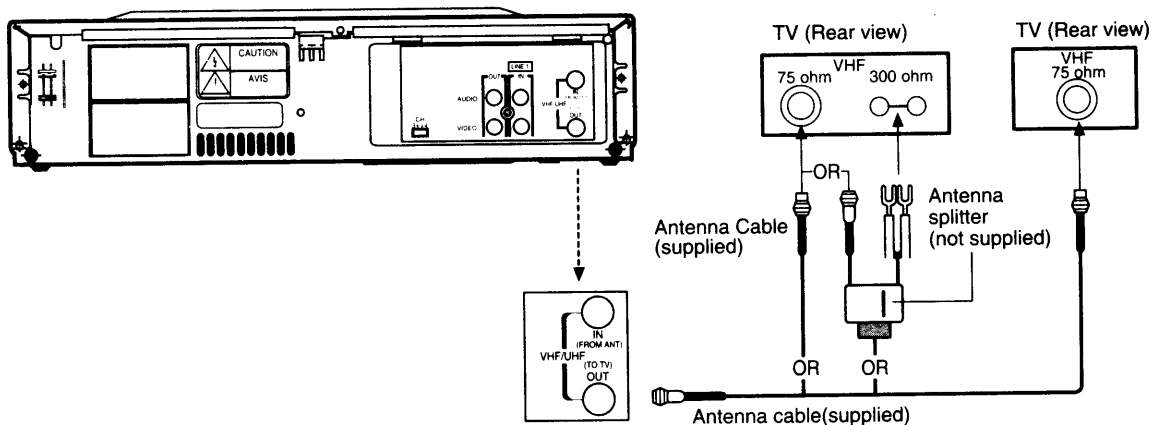


Fig. 2 VHF/UHF (75 ohm/300 ohm) or VHF/UHF (75 ohm) terminal connection

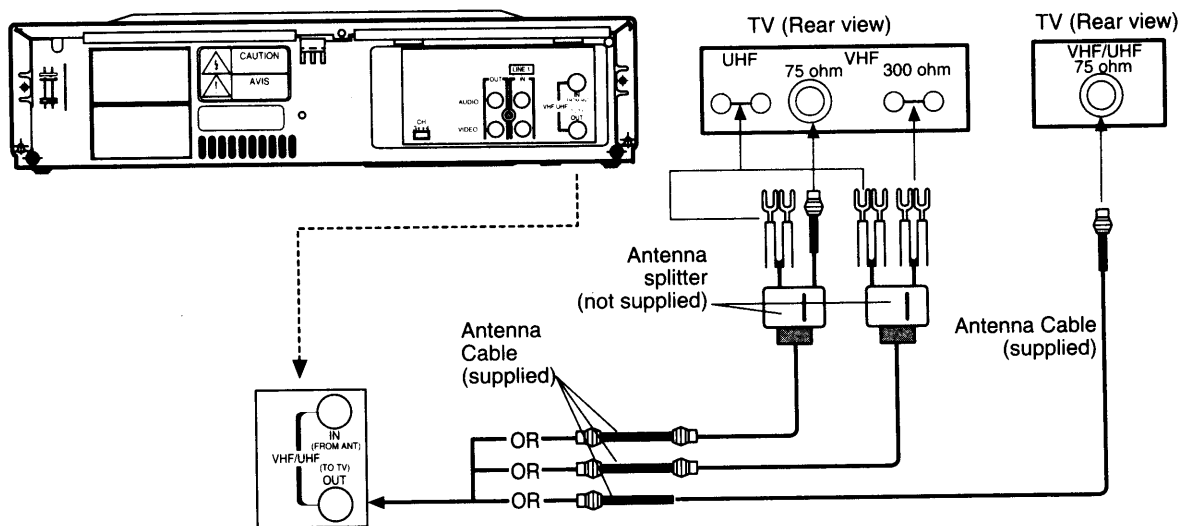

Connection to the TV with "VIDEO IN" and "AUDIO IN" connections

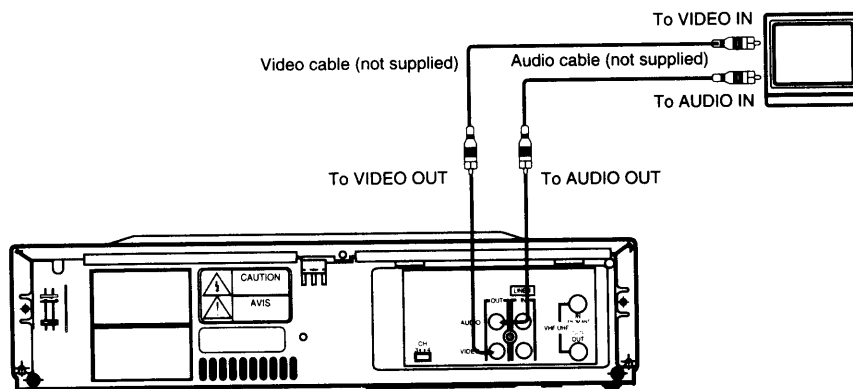


INSTALLATION (continued)

CATV Connections

There are several different cable television systems. There may be times when you use this VCR with one of these cable TV services.

We recommend that you consult your cable TV company to make sure that the cable is connected properly to match the cable TV system you want to watch.


Fig. 1 To record and watch unscrambled channels

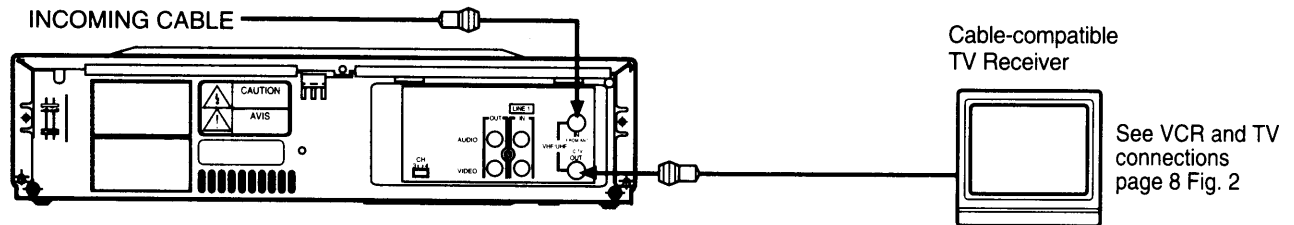

This set-up will enable you to do the following :

- Record unscrambled channels (limited by the capabilities of VCR tuner, for example 122 channel or 181 channel tuning).
- Record one channel and watch another.
- Use the programmable timer.

Fig. 2 To record and watch the same channel (unscrambled / scrambled)

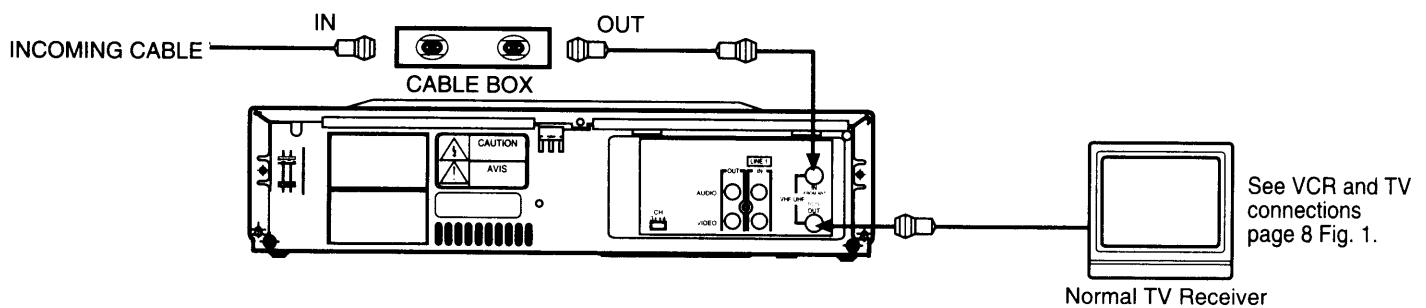

This set-up will enable you to do the following :


- Record all available cable channels through the cable box.
- Use the programmable timer or record only the channel selected at the cable box.

- Notes:**
- Set VCR to the output channel of the cable box.
 - This set-up will not allow you to record one channel and watch another.

INSTALLATION (continued)

Fig. 3 To record and watch the same channel (unscrambled or scrambled) when the A/B switch is in the B position.

Fig. 4 To record one unscrambled or scrambled channel and watch another unscrambled channel when the A/B switch is in the A position.

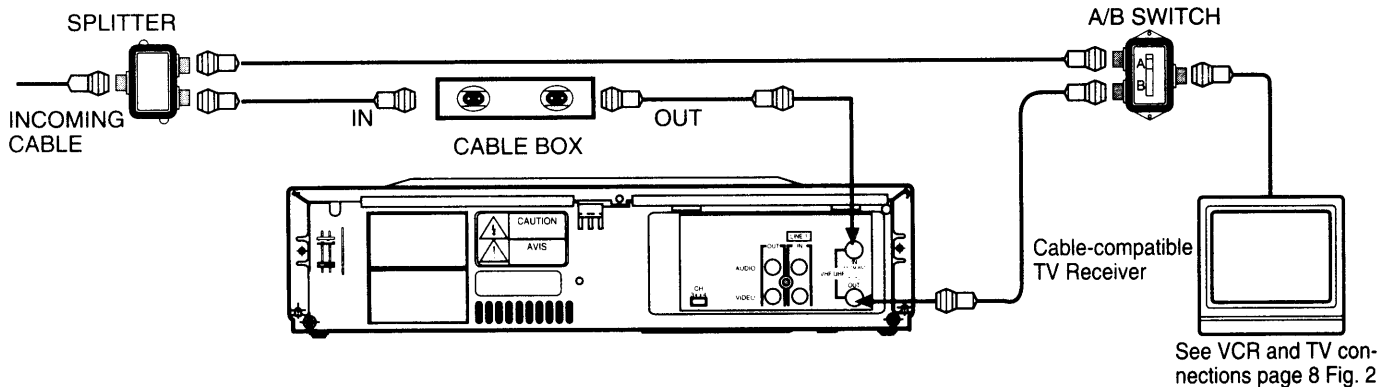

This set-up will enable you to do the following.

- Record all cable channels from the cable box.
- Record one scrambled channel and watch another unscrambled channel.
- Use the TV remote control when the A/B switch is in the "A" position.
- Use the programmable timer to record only the channel selected on the cable box. (cable box power must be ON).

Notes:

- Set the VCR channel selector to output channel of the cable box.
- Select the channel to be recorded on the cable box.
- Set the TV channel selector to output channel of VCR (3 or 4).

"Unscrambled" Cable Channels

Cable companies usually include "Unscrambled" channels in their basic subscription price. Depending on the tuning capability of your TV (how many cable channels your TV is capable of tuning to) you may not need a cable box (supplied by the cable company) to view "unscrambled" cable channels on your TV set.

"Scrambled" Channels

Extra (optional) pay cable channels, like HBO and Cinemax in some localities, are often "scrambled" by the cable company. To view these channels on your TV, you must use the cable (decoder) box supplied by the cable company.

Cable Box (supplied by Cable Company)

Until recently, all television and VCR receivers were equipped with 69 channel tuners capable of tuning the 12 standard VHF channels (2-13) and the 56 UHF channels (14-69). Since cable television systems do not use the UHF band, once they began expanding beyond 12 channel capacity (some cable companies transmit up to 100 channels)

some form of cable box became necessary to enable their subscribers to tune in the additional channels. This "cable box" rebroadcasts the programs to your TV set or VCR on one designated channel, usually channel 2, 3, or 4. When you use a cable box, you will normally change channels using the channel selector on the box. Some cable boxes have built-in decoders that translate "scrambled" pay TV channels (i.e. HBO) so they can be used by your TV set.

Frequency Conversion—simply means the ability to change one frequency to another (i.e. when channel 7 is selected—the cable box takes the channel 7 information and outputs the channel 7 information on channel 3 frequency). The cable box and the VCR use this principle of frequency conversion.


FIRST-TIME OPERATION

Even if you have never used a VCR before, you can get your VCR connected and working quickly by following the simplified steps below. The page numbers on which you can find detailed instructions for each of these steps are also listed for your convenience.


1. Unpack the VCR and Accessories

Make sure you remove all the accessories and information sheets that came packed with your VCR.


- Save the packing materials and box in case you ever need to ship or store your VCR.
- The items shown below came packed with your VCR. If any are missing or appear damaged, contact your TOSHIBA VCR dealer immediately.

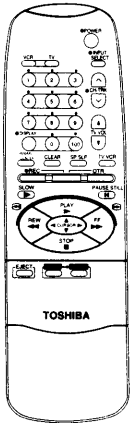

Remote Control

 

Remote Control Batteries
(Size "AAA" 1.5 Volts)

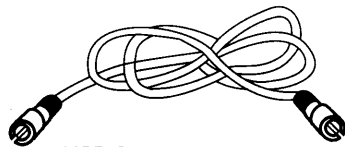


VCR Coaxial RF Cable

Caution: Avoid operating your VCR right after you have moved it from a cold location directly to a warm location. Moisture may have condensed on the head drum inside the VCR that may cause the tape to stick and damage the head wheel or tape. Let the VCR warm up for about 1-1/2 to 2 hours before inserting a video cassette.

2. Install the Batteries in the Remote Control

Turn the remote control over, and remove the cover of the battery compartment. Insert the batteries in the battery compartment so that their positive (+) ends contact the positive terminals. Replace the cover.

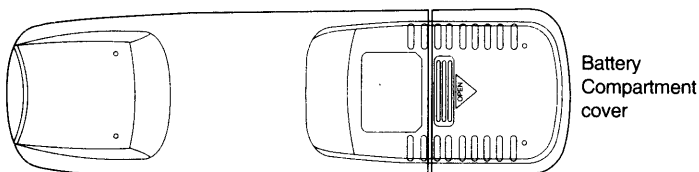

Battery
Compartment
cover


Note: Never place anything heavy on top of the remote control or lay it upside-down. This may accidentally depress the buttons for a long time and discharge the batteries.

Replace the batteries when the VCR fails to respond to the remote control.

Remove the batteries from the remote control if it will not be used for a month or more. This will help prevent possible damage from battery leakage.


3. Connect an Antenna or Cable-TV System to VCR

Your VCR is quite easy to install. To connect an antenna or cable-TV system, you will first be attaching the antenna to the VCR, and then connecting the VCR to the TV as shown below. *Detailed instructions for connecting more complicated types of systems are on page 7-10.*

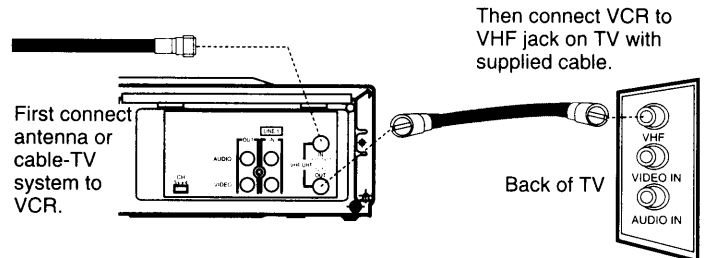

Remember: When you connect the *OUT TO TV* jack on the VCR to the TV as shown above, you will be tuning your TV to channel 3 or 4 to see the signals from the VCR.

Optional for TV Monitors: If your TV is a monitor that has *AUDIO* and *VIDEO IN* jacks, you can use optional audio/video cables to connect your VCR to the TV as shown below. This connection may produce a slightly better picture during playback.

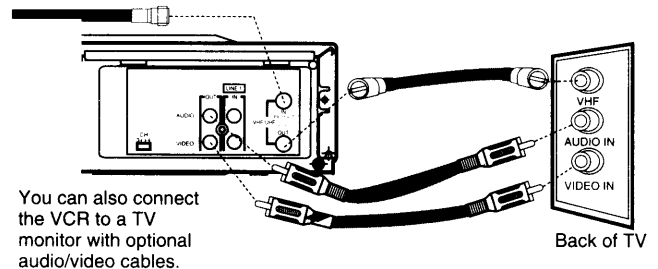



Remember: When you connect the *AUDIO* and *VIDEO OUT* jacks on the VCR to a TV monitor as shown above, you will be tuning your monitor to its video input channel (varies with TV models) to see the signal coming from the VCR. You will also be able to see the VCR's signal on channel 3 or 4.

4. Set the CH3/CH4 Switch on the Back of the VCR to Select the "VCR Channel"

First set the *CH3/CH4* switch on the back of the VCR to either channel 3 or 4, and then tune your TV to the same channel. This is called the "VCR Channel".

Remember that your TV must always be turned on and tuned to this channel (3 or 4) for you to see what the VCR is doing (unless you have a TV monitor). If you have connected your VCR to a TV monitor with audio/video cables as shown above, set your TV to its proper video input channel (such as L1, etc.) to see what the VCR is doing.

FIRST-TIME OPERATION (continued)

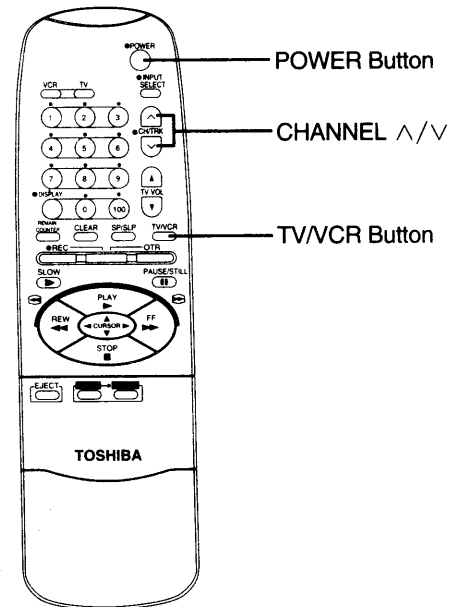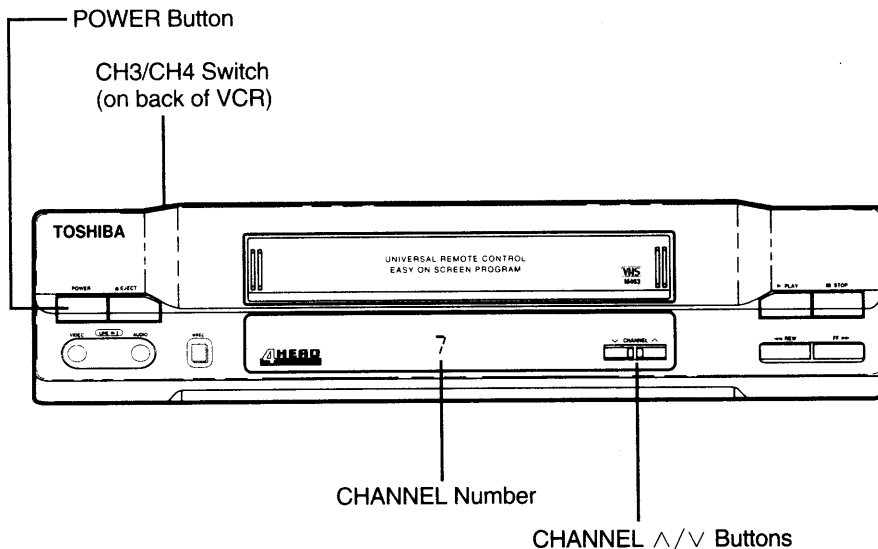

5. Turn on the VCR and Select an Active Channel

- Plug in the VCR's power cord and press the *POWER* button on the VCR (or the *POWER* button on the remote control) to turn it on.
- Press the *CHANNEL* button up or down to select an active channel in your area. The channel number will appear in the VCR's display panel.

Note for TV Monitor: Whenever the VCR is turned on, you will be able to see what it is doing on the video input channel if you have connected a TV monitor using the *AUDIO* and *VIDEO* jacks. The signal from the VCR on the video input channel will not be affected by turning off the VCR indicator. However, be sure to turn off the VCR indicator when you are recording one channel on the VCR and want to watch a different channel on the TV.

6. Set the CATV

- See page 14 for "Automatic Channel Program".

7. Learn How to Use the TV/VCR Button

Pressing the *TV/VCR* button turns the VCR indicator in the display panel on or off. The VCR indicator turns on automatically each time you press the *PLAY* button or insert a cassette tape with the safety tab removed.

- When the VCR indicator is on, your TV must be tuned to the "VCR Channel" (3 or 4) so that you can see what the VCR is doing (unless you have a TV monitor as explained below). The TV then receives the picture from the VCR, and you can select channels with the *CHANNEL* buttons on the VCR (or its remote control).
- When the VCR is turned off (or the VCR indicator is off), your TV receives the picture from your home antenna or cable-TV system as it did before you connected the VCR. You can then use the *CHANNEL* buttons on your TV to select channels.
- The *TV/VCR* button lets you record one channel with the VCR while you watch another channel on the TV. *Details are on page 30.*

8. Test the VCR Connections

1. Turn on the TV and tune it to the "VCR Channel" (3,4, or video input).
2. Turn on the VCR and select an active channel using the *CHANNEL* buttons on the VCR (or VCR's remote control).
3. If your "VCR Channel" is 3 or 4, make sure the VCR indicator is on in the VCR's display panel. Press the *TV/VCR* button to turn it on.

Note: If you have connected your VCR to a TV monitor using the *AUDIO* and *VIDEO* jacks, tune your TV to the video input channel. The VCR indicator does not have to be on for this connection.

Test 1: Make sure the TV's picture and sound are from the channel you have selected on the VCR and of the same quality they were before you connected the VCR. Change channels on the VCR with the *CHANNEL* buttons on the VCR (or the VCR's remote control). If the picture on the TV does not change to the channel you select with the VCR, go back and carefully check the connections and previous steps.

Test 2: Turn off the VCR, and change channels on the TV with the TV's *CHANNEL* buttons. Make sure the picture and sound you see on the TV and from the channel you selected on the TV are of the same quality they were before you connected the VCR. If the TV does not operate as it did before you connected the VCR, go back and carefully check the connections.

FIRST-TIME OPERATION (continued)

9. Initial Settings Using On-Screen Display

The VCR needs to be made the language selection and clock setting when first plugged in or encountered a power failure.

Setting the Language

Preparation

- Turn on the TV, and select the video channel (3 or 4), or the video input mode if you made the Audio/Video connection (page 7-8).
- Set the TV/VCR selector to "VCR".


1. Press the POWER button to turn on the VCR.

● POWER





2. Press the PROG. button.

The following screen appears on the TV.

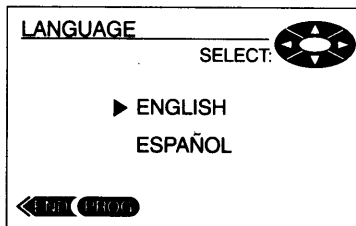

3. Select the language using the PLAY or STOP button, and press the PROG. button.

 The screen turns to the MENU screen.

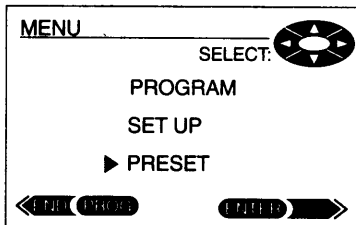

How to move around on the screen

The four buttons control a cursor (a value) on the screen in the respective directions.



PLAY, STOP:

To move up and down.



FF, REW:

To move right and left.

Press the PROG. button to return to the normal TV screen.

 
Setting the Clock

Example


To set the clock to 2:30 p.m. on August 25 (summer time) 1997.

1. Press the PROG. button.
The MENU screen appears on the TV.

2. Move down to "PRESET" using the STOP button, and press the ENTER button




ENTER

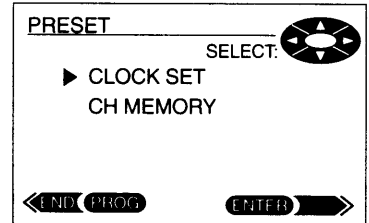

3. Press the ENTER button to select "CLOCK SET".


ENTER

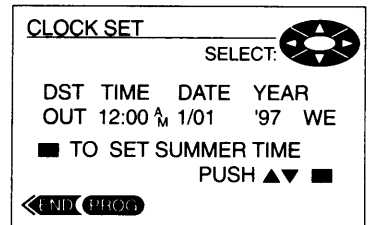

4. Set to "IN" or "OUT" for the summer (daylight saving) time using the PLAY or STOP button.

5. Move to the next using the FF button.
(To move back, press the REW button.)

 
6. Vary the digits to set the hour.



PLAY: To increase.

STOP: To decrease.

7. Repeat steps 5 and 6 to set the minutes, month, day, and the year
(by the last two digits).

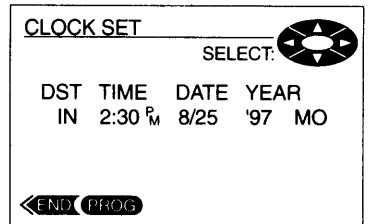

8. Press the PROG. button.
Now the clock starts.

9. Press the PROG. button two times to exit.

FIRST-TIME OPERATION (continued)

10. Automatic Channel Program

Automatic TV/CATV Channel Memory


The VCR scans through all receivable TV and CATV channels and stores only the active ones in your area into the memory. Once the storing is finished, you can select a desired channel by using the CH/TRK buttons.

Preparation


- Turn on the TV, and select the video channel (3 or 4), or the video input mode if you made the Audio/Video connection (pages 7-8).
- Set the TV/VCR selector to "VCR".
- Turn on the VCR.

Automatic TV Channel Memory


1. Press the PROG. button to display the MENU screen.
2. Move down to "PRESET" using the STOP button, and press the ENTER button.
3. Select "CH MEMORY" using the STOP button, and press the ENTER button.

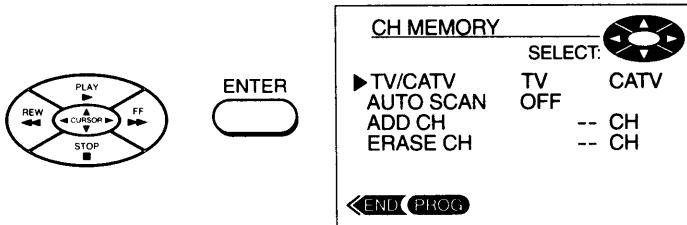

4. Make sure "TV/CATV" is set to "TV".
(If it does not, set to "TV" with the REW button.)

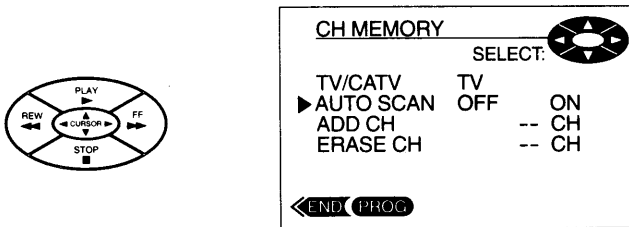

5. Select "AUTO SCAN" using the STOP button, and press the FF button to set to "ON".

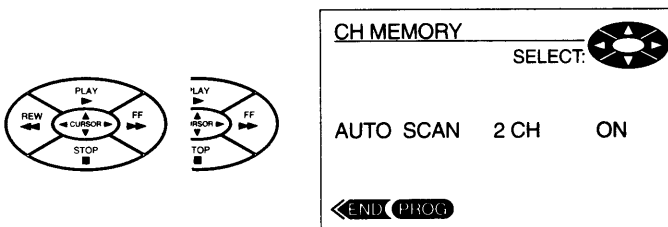


The VCR starts scanning and the channels are stored in the VCR in ascending order. When the scanning is finished, the screen automatically returns.


6. Press the PROG. button three times to exit.

Automatic CATV Channel Memory


1. Press the PROG. button to display the MENU screen.
2. Move down to "PRESET" using the STOP button, and press the ENTER button.
3. Select "CH MEMORY" using the STOP button, and press the ENTER button.

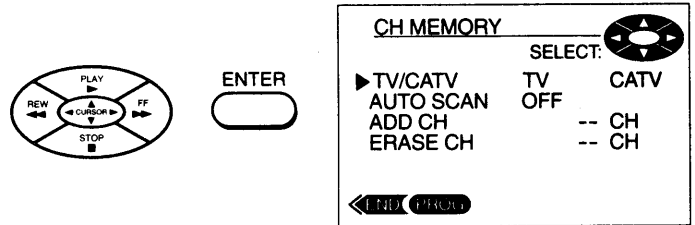

4. Set "TV/CATV" to "CATV" using the FF button.

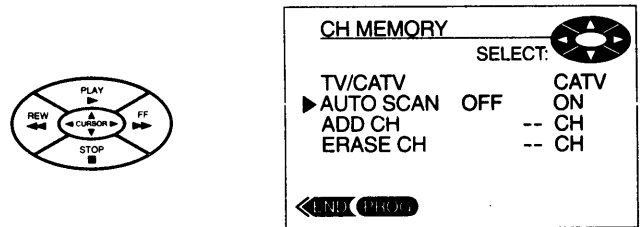

5. Select "AUTO SCAN" using the STOP button, and press the FF button to set to "ON".

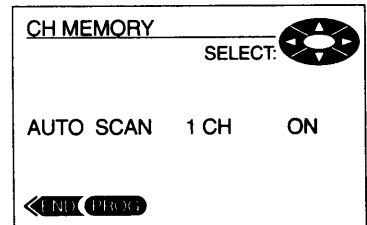

The VCR starts scanning and the channels are stored in the VCR in ascending order. When the scanning is finished, the screen automatically returns.

6. Press the PROG. button three times to exit.

FIRST-TIME OPERATION (continued)

Selecting Stored Channels

Once the active channels have been stored, you can select the channels in two ways below.

Number buttons: To enter digits of the channel number.

- For one-digit number, enter 0 before.
- For more than 100 number, first press the 100 button.
- Each number button needs to be pressed within 2 seconds.

CH/TRK buttons: To shift up or down the stored channel numbers.

Adding or Erasing Channels

Adding channels

If a desired channel cannot be scanned automatically because of a weak signal, it can be added to the memory.

Erasing channels



You can erase a stored channel from the memory if it is unnecessary.

1) Follow steps 1 to 3 of "Automatic TV Channel Memory" or "Automatic CATV Channel Memory".

2) Select "ADD CH" or "ERASE CH" using the STOP button.

To add channels

To erase channels

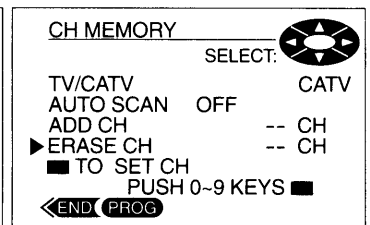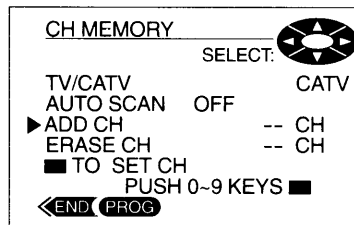

3) Enter a channel number of 1 to 125 by using number buttons. For more than 100 number, first press the 100 button.

For CATV channels, refer to the chart below. (For other orders, check with your cable company).

4) Repeat steps 2) and 3) above to add or erase channels as necessary.

5) Press the PROG. button to exit.

Channel Reference Chart

Number on the VCR	CH NUMBER	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
	TV	-	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Corresponding channel number	CATV STD (HRC/IRC)	1(A-8)	2	3	4	5(A-7)	6(A-8)	7	8	9	10	11	12	13	A	B	C	D	E
19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48																			
19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48																			
F G H I J K L M N O P Q R S T U V W AA BB CC DD EE FF GG HH II JJ KK LL																			
49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 ... 93 94 95 96 97 98																			
49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 - - ... - - - - -																			
MM NN OO PP QQ RR SS TT UU VV WW XX YY ZZ AAA BBB 65 66 67 68 69 70 71 ... 93 94 A-5 A-4 A-3 A-2																			
99 100 101 102 103 ... 121 122 123 124 125																			
- - - - - ... - - - - -																			
A-1 100 101 102 103 ... 121 122 123 124 125																			

CATV signals

- STD (standard) cable TV signals
- HRC (Harmonic Related Carriers) cable TV signals
- IRC (Incremental Related Carriers) cable TV signals
IRC is also called ICC (Incremental Coherent Carriers)

FIRST-TIME OPERATION (continued)

11. Make a Recording and Play It Back



Follow the steps below to practice making a short recording and then play it back.

Details on recording speeds, features, and recording guides are on pages 29-36.


Details on playback features and playback guides are on pages 26-28.

Several buttons on the remote control perform the same function as buttons with the same name on the VCR. You may use whichever button is more convenient at the time.

Details on the operating controls of the VCR and remote control are on pages 18, 20-21.

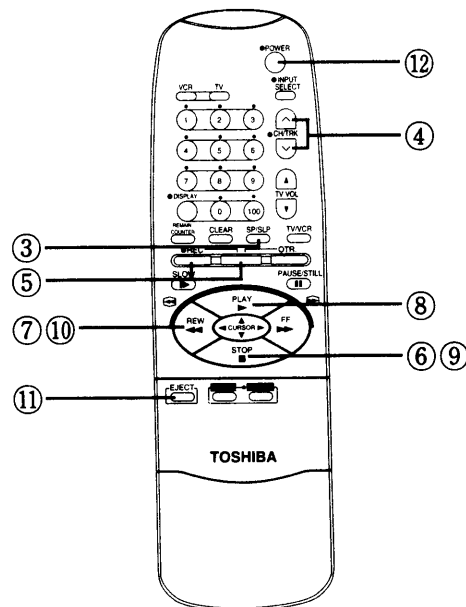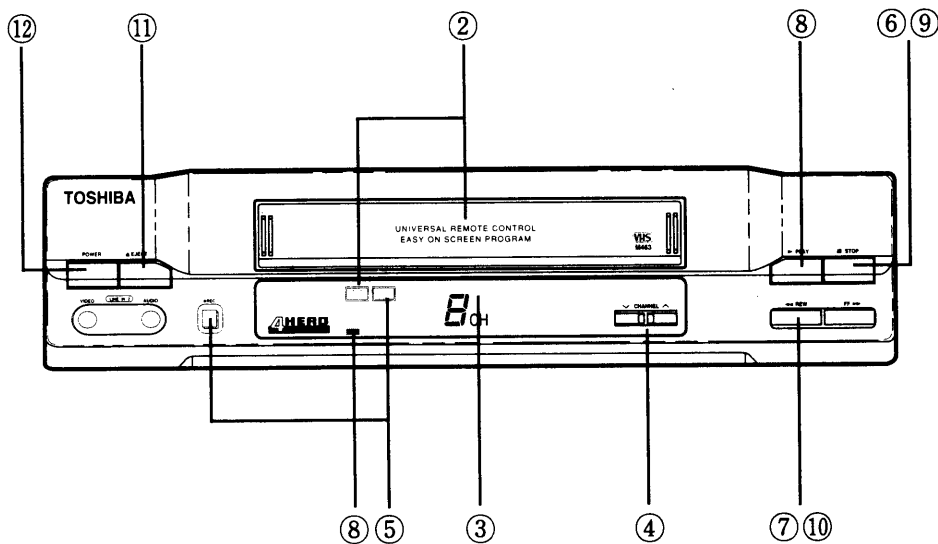


To make a recording :

 - ① Turn on the TV and tune it to your "VCR Channel" (3*, 4*, or video input).
* The TV must be tuned to the same channel you selected with the CH3/CH4 switch on the back of the VCR.
- ② Insert a cassette with the record-protect (safety) tab intact. The cassette-in indicator  will light in the VCR's display panel. *Details about inserting and removing cassettes are on page 25.*
Notes: The VCR is automatically turned on when you insert a cassette.


If you insert a cassette with its record-protect (safety) tab removed, the VCR will automatically begin playback.

If a cassette without a record-protect (safety) tab is inserted, the VCR ejects it when you press the REC button. *Details about the record-protect (safety) tab are on page 25.*

 Make sure the VCR indicator appears in the VCR's display panel. If not, press the TV/VCR button to turn it on.
- ③ Select a tape recording speed by pressing the SP/SLP button. The tape speed indicator (SP or SLP) appears in the VCR's display panel. Use SP for normal recording.
Tape recording speeds are compared on page 25.
Note: The VCR automatically selects the correct tape speed for playback.
- ④ Select the channel to be recorded by pressing the CHANNEL \wedge or \vee button. The channel number appears in the VCR's display panel and on the TV screen.


- ⑤ Start recording by pressing the REC button. The record indicator  will light in the VCR's display panel (or REC button on the remote control).
- ⑥ When you are finished recording, press the STOP button on the VCR (or the STOP button on the remote control).

 To play the recording back:

- ⑦ Rewind the tape by pressing the REW button on the VCR (or the REW button on the remote control).
- ⑧ Press the PLAY button to begin playback. The bar indicator  will advance to the right in the VCR's display panel.
- ⑨ When you are finished playing back the tape, press the STOP button on the VCR (or the STOP button on the remote control).
- ⑩ Rewind the tape by pressing the REW button on the VCR (or the REW button on the remote control).
- ⑪ To eject the cassette, press the EJECT button on the VCR (or the EJECT button on the remote control).
- ⑫ Turn off the VCR by pressing the POWER button on the VCR (or the POWER button on the remote control).
- ⑬ Turn off the TV.

VCR OPERATING CONTROLS

VCR Jack Panels

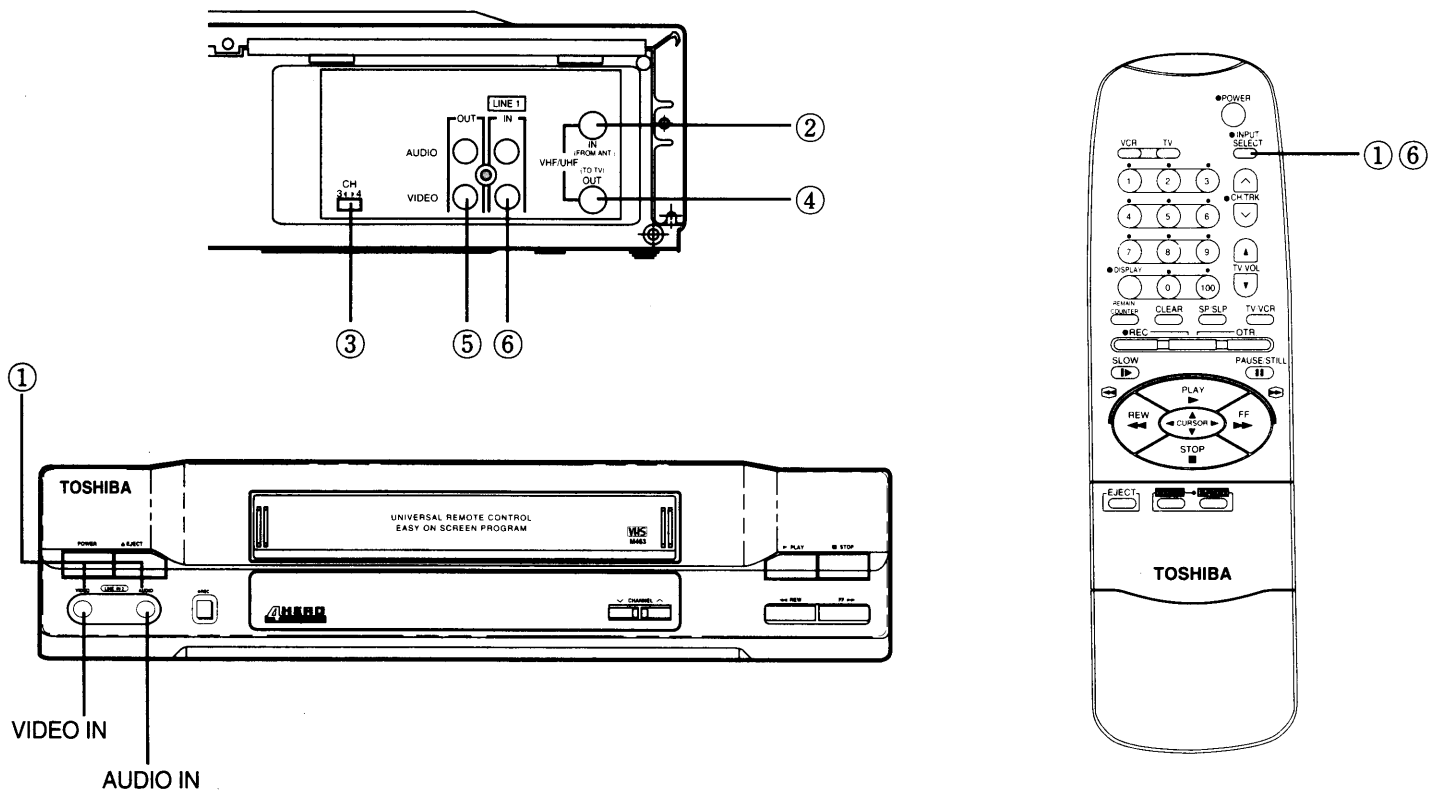

① AUDIO IN and VIDEO IN Jacks on the VCR's front panel

- These jacks are used to receive signals from another device (such as a camcorder or another VCR).
- To see the signal from these jacks, press the *INPUT SELECT* button to light the "L2" in the VCR's display panel.
- At the same time you can find the "LINE2" on the TV screen using the *INPUT SELECT* button on the remote control.
- See page 35 for "Recording From a Camcorder".
- See page 36 for "Recording From Another VCR".

② IN FROM ANT (Antenna) Connector

- Attach a home antenna or cable-TV system to this connector.
- See pages 7-8 for home antenna connections.
 - See pages 9-10 for cable-TV connections.

③ CH3/CH4 Switch

- Whatever channel you select with the CH3 or CH4 switch is the same channel to which you must tune your TV to see what the VCR is doing.
- See page 11 for details.

④ OUT TO TV Connector

Connect the supplied VCR coaxial RF cable to this connector. Then connect the cable to your TV.

- See pages 7-10 for home antenna connections.
- See pages 9-10 for cable-TV connections.

⑤ AUDIO OUT and VIDEO OUT Jacks

- These jacks are used to send signals from the VCR to another device.
- See page 36 for "Recording From Another VCR".
- See page 38 for "Copying VCR Recording."



⑥ AUDIO IN and VIDEO IN Jacks on the VCR's rear panel

- There jacks have the same function as explained in ①.

Note: To see the signal from these jacks, press the *INPUT SELECT* button to light the "L1" in the VCR's display panel.

VCR OPERATING CONTROLS (continued)

VCR Operating Controls

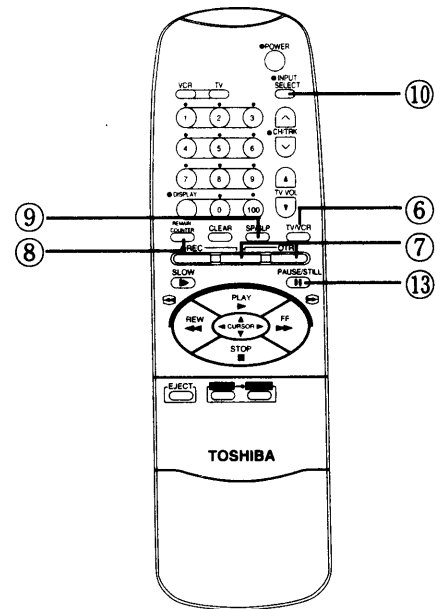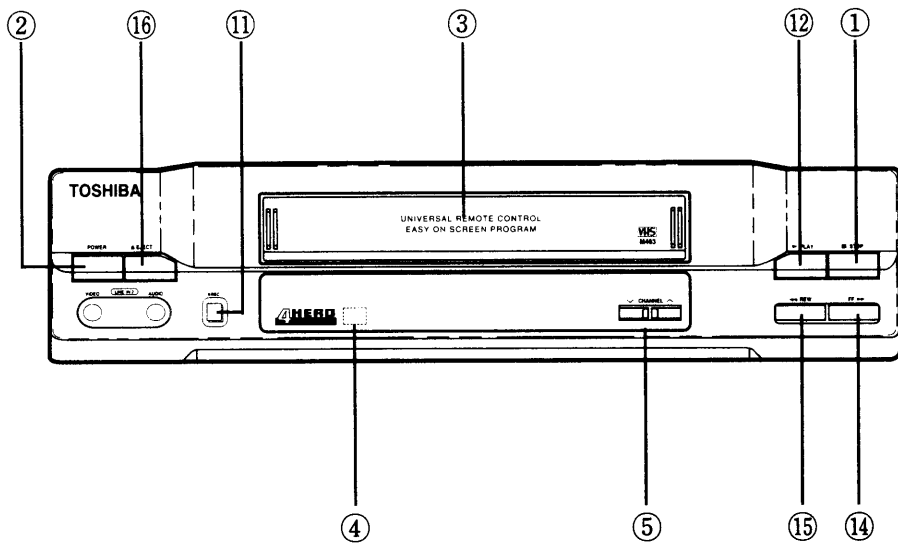

① STOP Button

- Press this button to stop the normal functions of recording, playback, rewinding, fast-forwarding, recording, pause or still.

② POWER Button

- Press the **POWER** button to turn the VCR on or off.
- The VCR will stop and turn off if you press the **POWER** button during normal recording, playback, rewind or fast-forward operation.
- If you want to stop a normal timer recording or one touch recording (OTR), press the **POWER** button.

③ Cassette Door (See page 25.)

④ Infrared Remote Sensor

This sensor receives signals from the remote control. Aim the remote control at this sensor. There can not be any obstructions between them.

⑤ CHANNEL ^/V Buttons

After channels have been autoprogrammed into the channel memory scan list, press these buttons to select the next higher or lower channel.

- Press **CHANNEL ^** to select a higher channel.
- Press **CHANNEL V** to select a lower channel.

⑥ TV/VCR Button

Press the **TV/VCR** button to turn the VCR indicator in the VCR's display panel on or off (See page 12).

⑦ OTR (One Touch Recording) Buttons (See page 31).

⑧ REMAIN/COUNTER Button

Press this button to switch between the linear time counter and the remaining amount of tape in a display mode. (See page 37.)

⑨ SP/SLP Button (See page 29).

⑩ INPUT SELECT Button

- Press one time to turn on the L1 indicator in the VCR display panel to record from **AUDIO** and **VIDEO IN** jacks on the VCR's rear panel.
- Press twice to turn on the L2 indicator in the VCR display panel to record from **AUDIO** and **VIDEO IN** jacks on the VCR's front panel.
(L1=LINE INPUT 1, L2=LINE INPUT 2)

⑪ REC Buttons

Press to begin recording. (See pages 29, 30, 35-36).

⑫ PLAY Button

Press to begin playback. (See pages 26-28.)

⑬ PAUSE/STILL Button

- Still frame (See page 27).
- Recording pause (See pages 29, 35-36.)

⑭ FF (Fast-Forward) Button

- Press to fast-forward the tape when the VCR is in the stop mode or the forward search mode.
- Press to operate the forward search in the play mode or the fast-forward mode.
- Keep pressing to operate the forward ACCEL search in the play mode or the forward search mode. (See page 27.)

⑮ REW Button


- Press to rewind the tape when the VCR is in the stop mode or the reverse search mode.
- Press to operate the reverse search in the play mode or the rewind mode.
- Keep pressing to operate the reverse ACCEL search in the play mode or the reverse search mode. (See page 27.)

⑯ EJECT Button

- Press this button to eject the cassette when the VCR is stopped. (See page 25.)

VCR OPERATING CONTROLS (continued)

VCR Display Panel

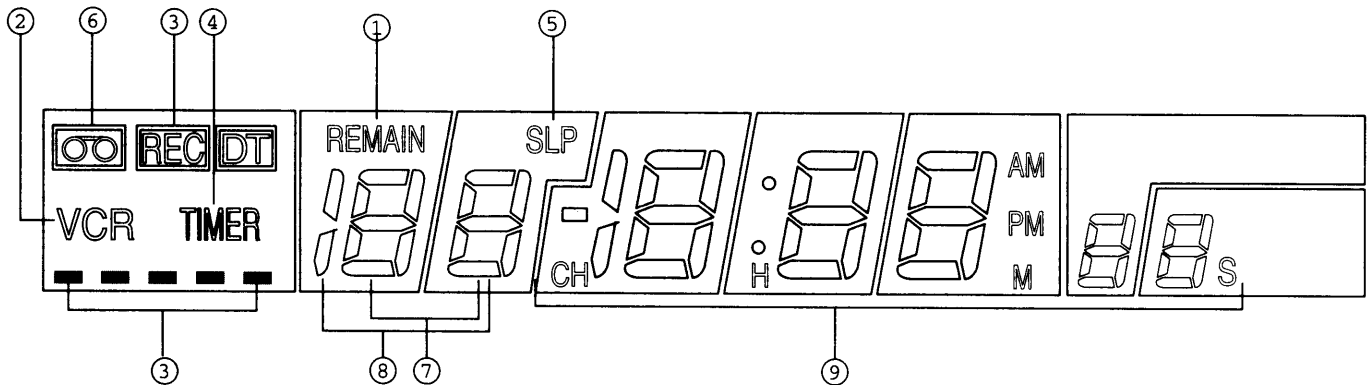

① REMAIN indicator

This indicator lights when the display function to indicate the remaining time on the tape is operating.

② VCR Indicator

(See page 12 for "Learn How to Use the TV/VCR Button".)

③ Status Indicators

This area of the display shows what the VCR is doing.

- **REC** and advancing bar (■) for record, advancing bar (■) for playback, high speed advancing bar (■) for fast forward or forward search to the right, high speed advancing bar (■) for rewind or reverse search to the left.

- This area is blank when the VCR is in the stop mode.

④ TIMER Indicator

(See pages 31-34.)

⑤ Tape Speed Indicators (SP/LP/SLP)

(See page 25.)

⑥ Cassette-in Indicator

The cassette-in indicator lights when a cassette is properly inserted into the VCR. (See page 25.)

⑦ LINE Indicator

Press the **INPUT SELECT** button to turn the "L1(L2)" indicator on or off in the display panel.

- Turn the "L1(L2)" indicator off for normal recording from the VCR's built-in tuner.
- Turn the "L1(L2)" indicator on to record from another component (such as a camcorder or another VCR) connected to the **AUDIO** and **VIDEO IN** jacks on the VCR.

⑧ Channel Number Display

The channel number selected is displayed in this area.

⑨ Time and Time Counter Display

Press the **REMAIN** button on the remote control to switch between the current time, the linear time counter and remaining time.

- See page 13 for "Setting the Clock."
- See page 28 for "Time Counter with Memory-Stop Feature".
- See page 37 for "Remaining Tape Display Function".

Notes:

- Those indicators marked multifunctional are sections of the multidisplay which serve a number of purposes. In other words, a number of different symbols appear in the same place according to the buttons you press. This will become clear as you actually begin using this VCR.

VCR OPERATING CONTROLS (continued)

Remote Control Buttons that Control the VCR

When using the remote control, always aim it directly at the front of the component you are trying to control. This remote control can control the TOSHIBA VCR and a compatible TV.


To operate the remote control, first press one of the component buttons (*TV* or *VCR*) to tell the remote control which component you want to control. The other buttons on the remote control will then

control that component. To control a different component, first press the corresponding (*TV* or *VCR*) button.

Only the buttons that control the VCR are explained here. Buttons that control a compatible TV are explained on pages 22-23.

VCR Button: If you press the VCR button, the remote control will go into the "VCR mode" and control the VCR.

The remote must be in the "VCR mode" before the other buttons will control the VCR.

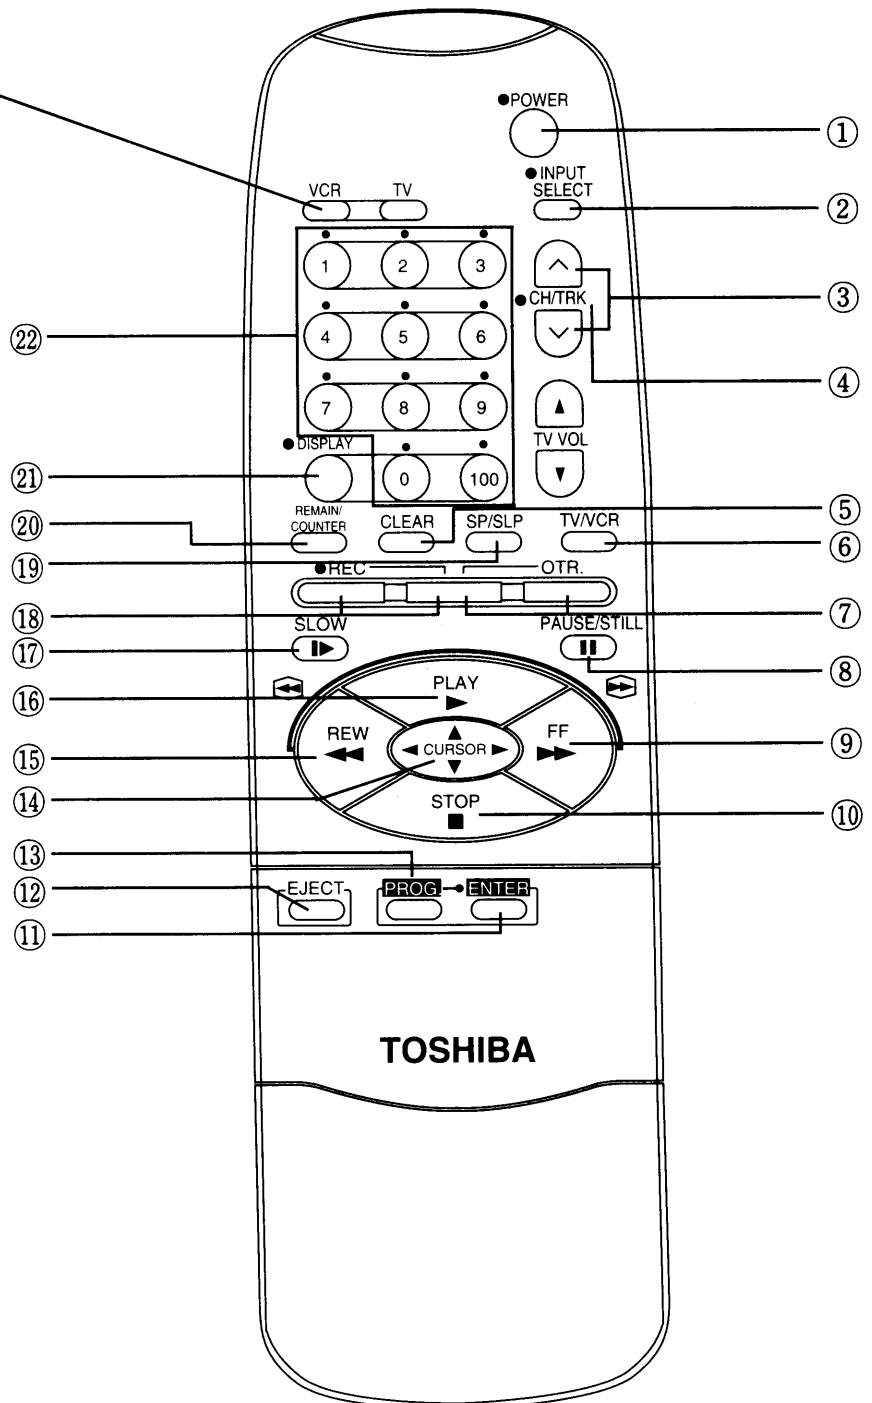

VCR OPERATING CONTROLS (continued)

Remote Control Buttons that Control the VCR (continued)

- ① **POWER Button**
Press the *POWER* button to turn the VCR on or off.
- ② **INPUT SELECT Button**
Press to turn the "L1(L2)" indicator on or off in the VCR's display panel. (See pages 18 and 19.)
- ③ **CHANNEL \wedge/\vee Buttons**
Press the *CHANNEL \wedge* button to select the next higher channel or press the *CHANNEL \vee* button to select the next lower channel in the VCR's channel memory. (See pages 18.)
- ④ **TRACKING \vee/\wedge Buttons**
(See page 27.)
- ⑤ **CLEAR Button** (See page 28.)
Press the *CLEAR* Button to return the counter to 0H00M00S M on the screen.
- ⑥ **TV/VCR Button** (See page 12.)
- ⑦ **OTR (One Touch Recording) Button**
Press these OTR and dummy buttons simultaneously to start OTR. (See page 31.)
- ⑧ **PAUSE/STILL Button**
 - Playback pause (See page 27.)
 - Recording pause (See pages 29, 35-36.)
- ⑨ **FF (Fast-Forward) Button**
 - Press to fast-forward the tape when the VCR is in the stop mode or the forward search mode.
 - Press to operate the forward search in the play mode or the fast-forward mode.
 - Keep pressing to operate the forward ACCEL search in the play mode or the forward search mode. (See page 27.)
- ⑩ **STOP Button**
Press this button to stop the normal functions of record, play-back, rewind, fast-forward, record-pause, or still frame.
- ⑪ **ENTER Button** (See pages 13, 14.)
- ⑫ **EJECT Button**
Press to eject the tape in the VCR.
- ⑬ **PROG Button**
Press the *PROG* button to display the program menu on the TV screen for setting the clock, programming the timer, channel set and setting up the VCR.
- ⑭ **CURSOR Button** (See pages 13-14.)
Press to re-enter or shift the cursor in the osp menus.
- ⑮ **REW Button**
 - Press to rewind the tape when the VCR is in the stop mode or the reverse search mode.
 - Press to operate the reverse search in the play mode or the rewind mode.
 - Keep pressing to operate the reverse ACCEL search in the play mode or the reverse search mode. (See page 27.)
- ⑯ **PLAY Button**
Press to begin playback. (See pages 26-28.)
- ⑰ **SLOW Buttons** (See page 27.)
- ⑱ **REC Button**
Press these *REC* and Dummy buttons together to start recording. (See pages 29, 30, 35-36.)
- ⑲ **SP/SLP Button** (See page 29.)
- ⑳ **REMAIN/COUNTER Button**
Press to switch between the linear time counter and the remaining amount of tape in a display mode. (See page 37.)
- ㉑ **DISPLAY Button** (See page 28.)
- ㉒ **Number Buttons ("0" through "9" and "100")**
 - To select any channel up to 99, press two number buttons (ex : To select CH 9, press 0, 9 buttons).
 - To select a cable-TV channel over 99, press the "100" button and then two number buttons (ex : To select CH 103, press 100, 0, 3 buttons).
 - The number buttons are also used with the VCR's special features.
 - If the second digit is not pressed within two seconds, channel "100" will be selected.

VCR OPERATING CONTROLS (continued)

Remote Control Buttons that Control a TV

The digital remote control that came packed with your VCR controls your VCR and some functions of a compatible TOSHIBA TV. The remote can also be programmed to control some functions of up to 30 different compatible TV brands (including GE, SONY, MAGNAVOX, SEARS, HITACHI, PANASONIC, MITSUBISHI, RCA and others). However, it will not operate all TVs made by these manufacturers. If your TV does not respond to any of the button combinations, the TV probably cannot be controlled by this remote control.

To find out if your TV is compatible, follow the instructions below. If the TV responds to one of the button combinations shown in the chart below, it is compatible.

Programming the VCR Remote to Control a Compatible TV (Other Than TOSHIBA)

Because the remote control is designed to operate 16 different types of TVs (up to 30 different brands), you must first program the remote control to match the remote system of your TV. Follow these four easy steps :

1. Turn on your TV.
2. Point the VCR's remote control toward the front of your TV.

3. Hold down the TV button while pressing one of the other buttons shown in the chart below. The TV will change channels when the correct matching button combination is pressed. Try each of the combinations until you find the right one.

4. Release both buttons when the TV start changing channels. Your remote control is now programmed to control your TV.

You may have to re-program the remote control to control a compatible TV (other than TOSHIBA) when you replace the remote control's batteries.

After the VCR's remote control is programmed, it will control certain functions of your TV depending on the type of TV. Keep these exceptions in mind :

- On a TV that has a 12-position knob-type channel selector, you will only be able to select the first ten positions (1 through 10).
- To turn on a compatible TOSHIBA TV, press the **POWER** button. To turn on a different type of compatible TV (after the remote has been programmed), press the **TV** button, then press the **POWER** button.
- Not all functions may be available on your TV. For example, previous channel may not work even though the **CHANNEL** \wedge/\vee buttons do work.

Step(continued)	Hold TV button and press these additional buttons to program remote:							
	TV and 01 (TOSHIBA)	TV and 02	TV and 03	TV and 04	TV and 05	TV and 06	TV and 07	TV and 08

After programming your VCR remote, it will control the TV functions listed below:

Remote Button	TV functions which can be controlled:							
POWER	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
0 THROUGH 9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	K, A-I
100/ENTER	100	100	ENTER	—	100	100	100	—
CHANNEL \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	L/J
VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee
INPUT SELECT	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO	—	TV/VIDEO	TV/VIDEO	—
DISPLAY	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	—

Step(continued)	Hold TV button and press these additional buttons to program remote:							
	TV and 09	TV and 10	TV and 11	TV and 12	TV and 13	TV and 14	TV and 15	TV and 16

After programming your VCR remote, it will control the TV function listed below:

Remote Button	TV functions which can be controlled:							
POWER	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
0 through 9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9
100/ENTER	100	100	100	100	—	100	100	100
CHANNEL \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee	CH \wedge/\vee
VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee	VOL \wedge/\vee
INPUT SELECT	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO	TV/VIDEO
DISPLAY	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF

VCR OPERATING CONTROLS (continued)

Controlling a TV with the Remote Control

Only the remote control buttons that are used to control compatible television are described on this page. The buttons that are used to operate the VCR are described on pages 20-21.

If you have a compatible TV (other than TOSHIBA) you must program the remote control as described on the previous page before these buttons will operate your TV.

Depending on the specific features of your TV model, some of these controls may not apply to your TV. Check the chart to see which controls apply to your type of TV.

Most of the buttons (except *VOL* Δ/∇) will not control your TV unless the remote control is in the "TV mode". If you press the *VCR* button, the remote control will go into the "VCR mode" and control the VCR. Press the *TV* button to return the remote control to the "TV mode" so it will control the TV.

Important Note: When you press the *TV* button, this remote will automatically control your TOSHIBA TV. If your TOSHIBA TV stops responding to this remote, you may have accidentally pressed the buttons to program it for a different brand. To control your TOSHIBA TV again, press the *TV* button and number button "1" together as described on the previous page.

① TV Button

- Press the *TV* button to put the remote control in the "TV mode", and then press the *POWER* button to turn on the TV, when your TV is set main switch on.

② POWER Button

- Press the *TV* button to put the remote control in the "TV mode", and then press the *POWER* button to turn on a compatible TV. The remote control must be programmed to operate a compatible TV (other than TOSHIBA).
- Press *POWER* to turn off a compatible TV (TOSHIBA or other) when remote is in "TV mode".

③ INPUT SELECT Button


This button has the same function as some compatible TV's remote control *TV/VIDEO* button when the remote control is in the "TV mode".

④ CHANNEL Δ/∇ Buttons

- The remote control must be in the "TV mode" (press *TV* button) to use the *CHANNEL* Δ/∇ buttons for your TV.
- If your TV has a channel memory scan list, press *CHANNEL* Δ to see the next higher channel in memory.
- Press *CHANNEL* ∇ to see the next lower channel in memory.

Press the TV button to put the remote control in the "TV mode".

Press the TV button and then the POWER button to turn on a TV.

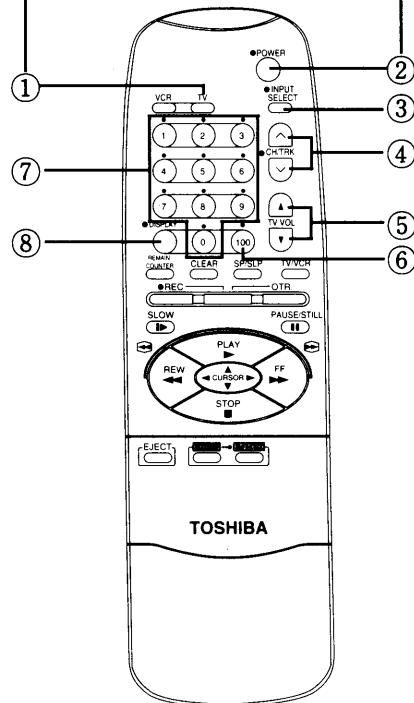

⑤ VOL Δ/∇ Buttons

- Press *VOL* Δ to increase the volume.
- Press *VOL* ∇ to decrease the volume.

⑥ 100 Button

This button has the same function as some compatible TV's remote control *100 CH* or *ENTER* button when the remote control is in the "TV mode".

⑦ Number Buttons ("0" through "9" and "100")

The remote control must be in the "TV mode" (press *TV* button) to change channels on the TV.

- Press two number buttons to select any channel (up to channel 99). For example, press "0" then "8" to select channel 8.
- Press the "100" button and then two number buttons to select any cable-TV channel over 99. For example, press "100" then "0" then "8", to select channel 108.

⑧ DISPLAY Button

The remote control must be in the "TV mode" (press *TV* button) to display on TV.

VCR FEATURES

Quick-Play Feature

The quick-play feature eliminates the "delay" when you begin recording or playing back a tape. The VCR automatically positions the tape for "action" whenever a cassette is inserted or when the VCR is turned on with a cassette already inserted.

This VCR also keeps the tape "ready" when you place the VCR in the stop mode. This VCR has a high-speed rewind feature which eliminates a long wait.


VCR Function Set Up Menu

This VCR allows remote control adjustment of several additional feature options. You can use the VCR SETUP menu to select the functions that best fit your personal needs.


Preparation

Set the TV/VCR selector to "VCR".

1. Press the PROG. button to display the MENU screen.

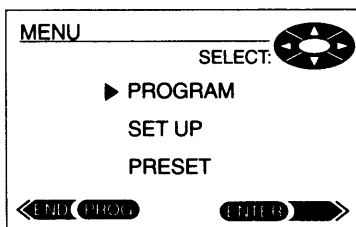

2. Select "SET UP", and press the ENTER button.

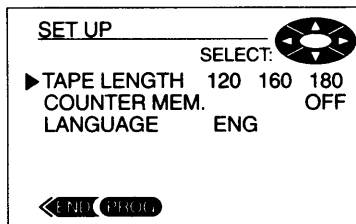


Set the following items :

1. TAPE LENGTH (See pages 25, 37.)
2. COUNTER MEM. (See page 28.)
3. LANGUAGE

Two Language Menus



This VCR gives you complete control of all functions, programs, and displays in other English, or Spanish.

1. Press the PROG. button to display the MENU screen.

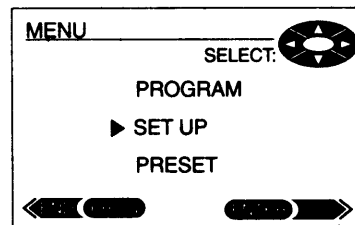

2. Select "SET UP", and press the ENTER button.

 3. Select "LANGUAGE", and set to "ENG" or "ESP".

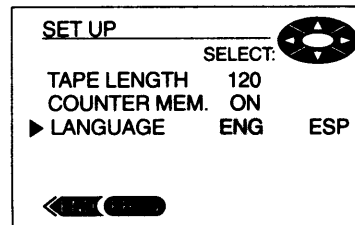

4. Press the PROG. button two times to exit.

VIDEO CASSETTES

Use of poor quality tape or tapes that have been damaged or mishandled can contaminate the VCR heads. This can cause a snowy picture or a missing picture during playback. If a snowy or missing picture condition persists, consider the use of a chemical non-abrasive head cleaning tape.

Tape Speed

Recording: Tapes can be recorded at two different speeds, SP (Standard Play: records 3.34 cm/sec.) and SLP (Super Long Play: 1.11 cm/sec.). You may select the speed using the SP/SLP button. Selected speed mode will show up on the TV screen. The basic difference between these speeds is that the SLP mode allows you to get more pictures on your tape. Although this is economical, the quality of the image is not as good as recordings made in the SP mode.

Playback: There are three possible speeds for playback; SP, LP, SLP. The appropriate speed is chosen automatically by the VCR.

Speed Mode	SLP	LP	SP
Recording	YES	NO	YES
Playback	YES	YES	YES

Erasing Tapes


You can use your video cassettes over and over again. To erase a previous recording, just record over it.

Different types of cassettes and maximum recording times


Video Cassette Record Mode	T-180	T-160	T-120	T-60
SLP	540 min	480 min	360 min	180 min
SP	180 min	160 min	120 min	60 min


Record-Protect (Safety) Tab

To prevent erasing a recording you want to keep, remove the record-protect (safety) tab from the back of the cassette as shown below. Recording is impossible when this tab is removed. To record again on a cassette that has the tab removed, simply cover the hole with vinyl tape.

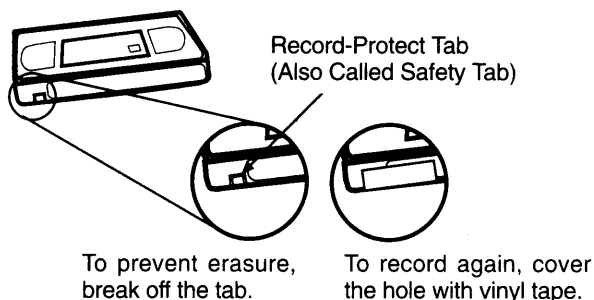


Inserting and Removing Cassettes

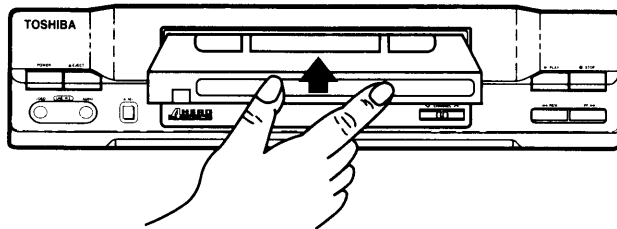

 Insert a Cassette. Push the cassette gently through the door of the cassette compartment until the VCR mechanism pulls it into the VCR. Inserting a cassette will automatically turn on the VCR's power. The cassette-in indicator () will light when a cassette is properly inserted into the VCR.

Caution: Insert a cassette only one way with the tape window facing up, and the record-protect (safety) tab facing out.

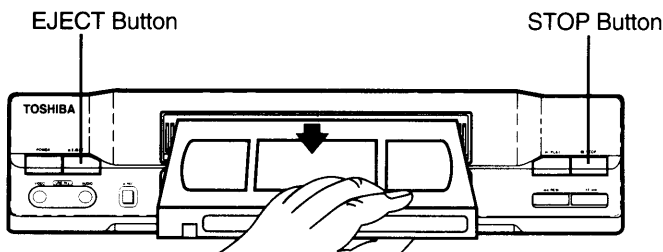

Eject and Remove a Cassette. The VCR must be in the stop mode. Press the *EJECT* button to eject the cassette. The cassette is partially ejected automatically by the VCR. Gently pull the cassette straight back out of the compartment. Place the cassette in its case and store it upright.

Cassette Care and Storage

Follow these directions for continued high-quality performance from your cassettes.


- When you are finished with a cassette, rewind it and remove it from the VCR.
- Never attempt to force open the cassette door.
- Store cassettes vertically in their protective cases at normal room temperatures. Avoid extreme heat and humidity. Extreme heat can warp the cassette or cause the tape to stretch excessively.
- Be especially careful to keep dust from entering the cassette and the VCR mechanism. All dust is abrasive and it will cause excessive wear of both the tape and the VCR's recording/playback heads.

PLAYBACK

Follow the steps below to play back a tape in the VCR. The VCR will automatically select the correct playback speed and the appropriate indicator will light in the VCR's display panel.

Some of the buttons on the VCR and remote control operate differently during playback. These special playback features are described on the following pages.

Playback Guide

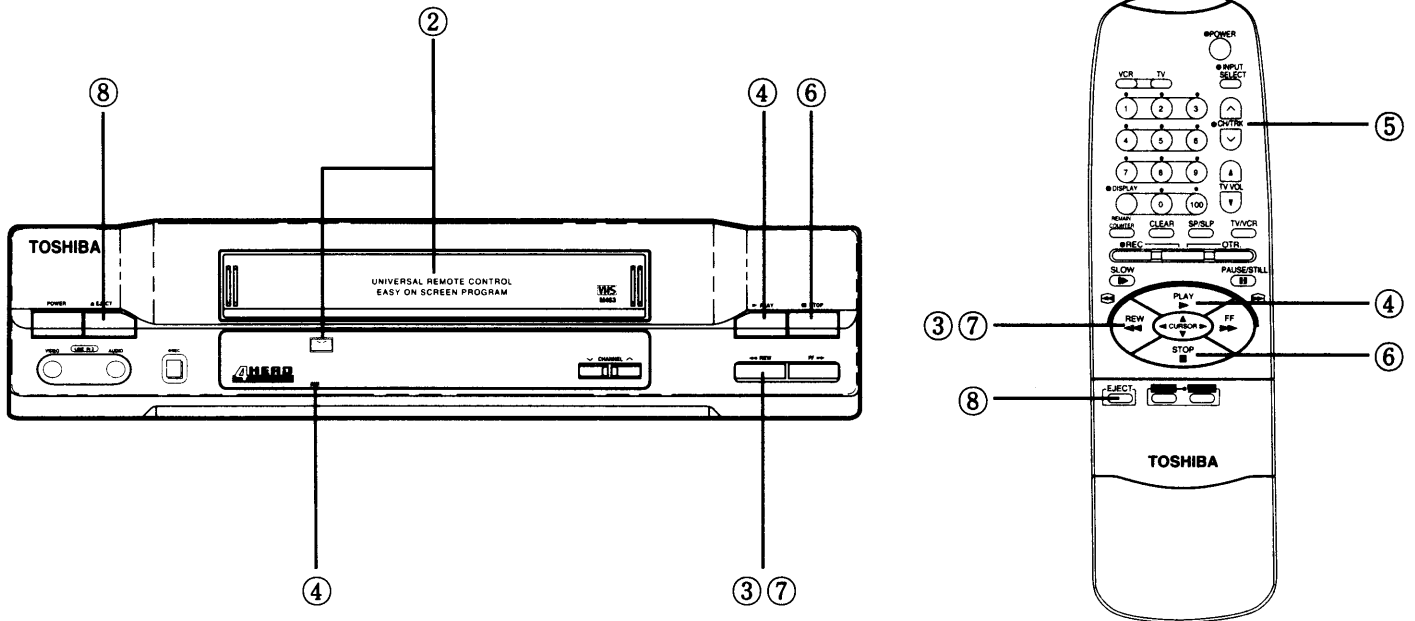

- ① Turn on the TV and tune it to the "VCR Channel" (3*, 4* or video input).
* The TV must be tuned to the same channel you selected with the CH3/CH4 switch on the back of the VCR.
- ② Insert a cassette in the VCR. (The cassette-in indicator will light.)
Note: The tape will automatically begin playback if the record protect (safety) tab on the cassette has been removed.
- ③ To rewind the tape if necessary, press the *REW* button on the VCR (or the *REW* button on the remote control).
- ④ To begin playback, press the *PLAY* button. The bar (■) indicators advance to the right in the display panel.
- ⑤ Adjust tracking if necessary. If the tape was recorded on a different VCR, streaks may appear. Press the *TRACKING* ^ or v button on the remote control to move the streaks up or down out of the picture. *Details are on page 27.*
- ⑥ When you are finished, press the *STOP* button on the VCR (or the *STOP* button on the remote control).
- ⑦ To rewind the cassette, press the *REW* button on the VCR (or the *REW* button on the remote control).
- ⑧ To eject the cassette from the VCR, press the *EJECT* button on the VCR (or the *EJECT* button on the remote control) when it is in any mode except the record mode.

PLAYBACK (continued)

Picture Search

During playback, the rewind (*REW*) and fast forward (*FF*) buttons are used for visual searching of the tape.

- During playback, press and quickly release the *FF* button to visually search forward at 5 times normal speed (SP speed only). To return to normal playback, press the *PLAY* button again.
- During playback, press and quickly release the *REW* button to visually search backward at 5 times normal speed. To return to normal playback, press the *PLAY* button again.

The sound is turned off during visual searching because it would not be understandable at such high speed.

Expect to see some horizontal lines or bars in the picture when you are using the search mode. The picture will be best for tapes recorded at SP or SLP speed, although tapes recorded at LP speed can be viewed.

Accel Search

If you keep pressing the *FF* or *REW* button during playback or picture search, the searching speed will be increased to 9 times (SP speed only) or 27 times (SLP speed only) normal speed.

Slow-Motion Playback

The tape can be viewed in slow motion during playback.

- Press the *SLOW* button on the remote control when a tape is playing to start slow-motion playback. Press the *PLAY* button to return to normal playback.
- During slow-motion playback, you can change the speed by pressing the *SLOW* button on the remote control. Press the *SLOW* button again to change the speed from 1/15 times to 1/7 times normal speed.

It is normal to see some streaks in the picture during slow motion playback. Press the *TRACKING* \wedge or \vee button on the remote control to move the streaks up or down and out of the picture.

The VCR will automatically switch from slow-motion to stop after about five minutes.

Slow-motion playback is designed to work best at the SP and SLP speeds.

Still for Stop-Action Playback

- Press the *PAUSE / STILL* button during playback to freeze the picture. This lets you examine all the details of the scene, similar to looking at a single frame of a movie film.
- When you are ready to resume normal playback, press the *PAUSE / STILL* button again.
- Still frame is designed to work best at the SP and SLP speed.
- If the picture "jitters" (bounces up and down) during still, press one of the *TRACKING* \wedge and \vee buttons located on the remote control to reduce the "jitter".

Caution: Using still frame on a single frame of the picture for a long time can wear the tape. Use *STOP* instead of *STILL* to interrupt playback for an extended time. The VCR will automatically switch from pause to stop after about five minutes.

Frame Advance

Frame advance lets you view one still frame after another.

- Press the *PAUSE/STILL* button to begin stop-action viewing. Then press the *PLAY* button on the remote control each time you want to view the next frame for the scene. Press the *PAUSE/STILL* button to resume playback at normal speed.
- Frame advance is designed for use on tape recorded in SP or SLP speed. It may be used on tapes recorded in LP but the picture quality not be as good.

Tracking (Automatic and Manual)

The VCR has a built-in digital automatic tracking feature and there are manual *TRACKING* buttons on the remote control.

Digital Auto Tracking

The VCR automatically adjusts the tracking for rental tapes or tapes recorded on other VCRs or camcorders.

- Every time you insert a tape and press the *PLAY* button, the VCR's digital auto tracking is turned on and tracking is adjusted.
- If you press one of the manual *TRACKING* buttons on the remote control, the digital auto tracking feature is turned off before the tape speed is changed (If tape speed is changed, the digital auto tracking feature is turned on again).

Manual Tracking (*TRACKING* \wedge and \vee Buttons)

Tracking can be adjusted manually by pressing the *TRACKING* \vee or \wedge button on the remote control.

- During still playback, press the *TRACKING* \wedge or \vee button to reduce picture "jitter" (bouncing up and down). A small amount of "jitter" or some "steaks" are normal during still viewing.
- During slow-motion playback, it is normal to see some streaks (noise bars) in the picture. If the streaks interfere with the time counter display on the TV screen, press the *TRACKING* \wedge or \vee button to move the streaks up or down.

Note :

- When a tape recorded with another VCR is played back at slow or still frame, noise may not be eliminated by *TRACKING* control.
-

PLAYBACK (continued)

On-Screen Displays

The VCR's on-screen displays appear automatically on the TV whenever you turn on the VCR or change the VCR's status (stop to play, play to stop, change channels, etc.). The VCR's on-screen displays or the time counter can be manually displayed by pressing the *DISPLAY* button on the remote control.

- Press the *DISPLAY* button once to display the normal displays on the TV screen.
- Press the *DISPLAY* button again to display only the time counter on the TV screen. The time counter will remain on the TV screen.

Note: Whenever the time counter with memory appears on the TV screen, the time counter's memory stop feature is automatically turned on.

- Press the *DISPLAY* button again to remove all displays from the TV screen.

- If the current time appears in the VCR's display panel, press the *REMAIN/COUNTER* button once to switch the current time display to the time-counter display.
- Then press the *REMAIN/COUNTER* button again to display the remain counter or VCR's display.
- Then press the *REMAIN/COUNTER* button again to display the current time on the VCR'S display panel.

 

Whenever the time counter with memory is displayed, press the *CLEAR* button on the remote control to set the time counter to a reading of "0H00M00S M"

Notes: The time counter is automatically reset to "0H00M00S" whenever the tape is ejected from the VCR.


If you rewind the tape farther back than a counter reading of "0H00M00S", a minus(-) will appear in front of the time.

Time Counter with Memory-Stop Feature

1. Press the *PROG.* button to display the MENU screen.
2. Select "SET UP", and press the *ENTER* button.
3. Select "COUNTER MEM." using the *STOP* button, and set "COUNTER MEM." to "ON" using the *REW* button.

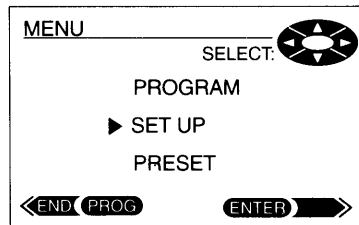

4. Press the *PROG.* button two times to exit.

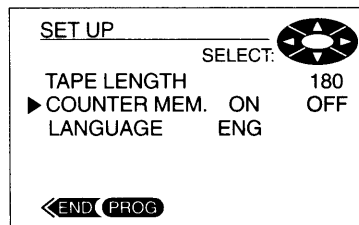

Memory-Stop Feature (Zero Return)

The memory-stop feature allows you to quickly return to a counter reading of "0H00M00S" from any point on the tape. Memory stop is automatically turned on whenever the time counter with memory is displayed on the TV screen. This is convenient when you want to watch a segment of the tape repeatedly. You may also discover other useful applications for this feature.

1. To turn on the memory-stop feature, press the *DISPLAY* button on the remote control to display the time counter with memory on the TV screen. The time counter will appear with an M on the TV screen when memory stop is turned on.
2. Whenever you are at a spot on the tape that you want to return to quickly, press the *CLEAR* button to reset the counter to "0H00M00S M" at the spot.
3. Later, after you have moved somewhere else on the tape, you can quickly return to your original spot (where you set the counter to "0H00M00S M") by pressing the *STOP* and then the *REW* or *FF* (fast-forward) button. Make sure the "M" is displayed if you want the VCR to stop at "0H00M00S".

Notes: If you are rewinding the tape and the VCR stops at "0H00M00S M", press *REW* again to continue rewinding.

If you press the *FF* (fast-forward) button and the time counter never reaches "0H00M00S M" between that point and the end of the tape, the VCR will continue to fastforward to the end of the tape.

The time-counter display shows the actual linear time it takes to record a program or play back a segment of a pre-recorded tape. It helps you quickly locate the start of programs you taped. For example, if you recorded a 30-minute program at one segment of the tape, you will be able to stop the tape, display the time counter with memory, and rewind the tape until the time counter reads "0H00M00S M" on the TV screen (in the VCR's display panel). This will be the approximate start position of your 30-minute recording.

RECORDING (continued)

Recording Guides

The guides on these two pages show you how to make recordings on the VCR.

- The guide on the bottom of this page shows you how to record on the VCR with the TV turned off.
- The first guide on the next page shows you how to record a program on the VCR and watch the same program on the TV.
- The second guide on the next page shows you how to record one program on the VCR while watching a different program on the TV.

This VCR also features One Touch Recording (OTR) and timer recording. It will turn itself on, make a recording, and turn itself off while you are away.

- Details on One Touch Recording (OTR) are on page 31.
- Details on timer recording are on pages 32-33.


PAUSE/STILL Button

Use this button to stop recording temporarily. This enables you to skip recording unnecessary parts of a program (such as commercial messages).


1. Press the *PAUSE/STILL* button during recording and recording is stopped temporarily. However, since the TV continues operating, the pictures and sound of the program can be received.
2. Press the *PAUSE/STILL* button to resume recording.

Note: If the VCR pauses for more than five minutes, it automatically enters the stop mode to protect the tape.

Recording With TV Turned Off

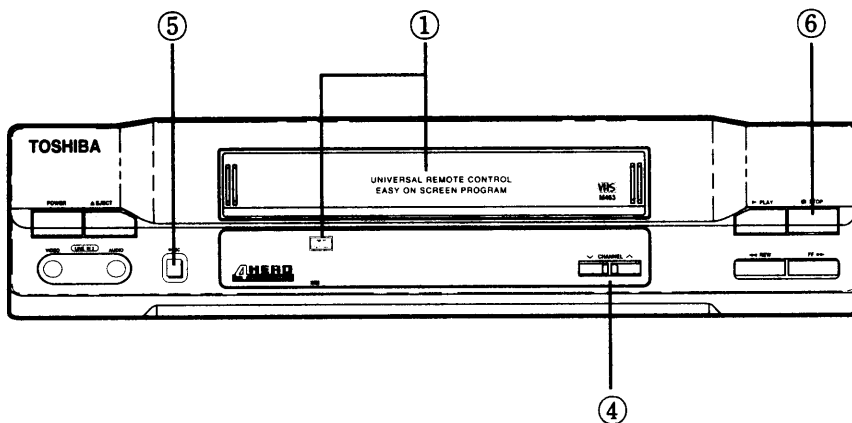

Press VCR button to put remote in "VCR" mode

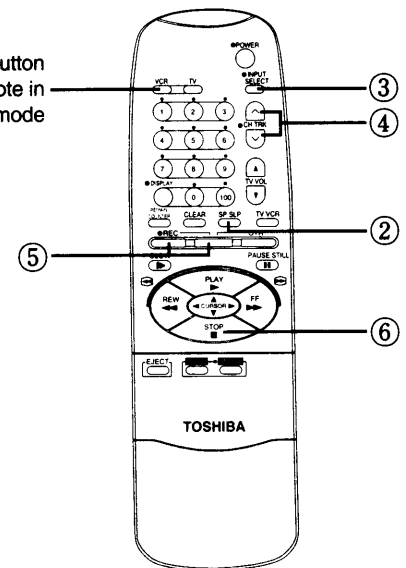

- ① Insert a cassette with the Record-Protect (safety) Tab intact. The cassette-in indicator will light.
- ② Press the *SP/SLP* button to select a recording speed. The tape speed indicator (*SP* or *SLP*) will appear.
- ③ Make sure the "L1(2)" indicator does not appear in the VCR's display panel unless you want to record from the VCR's *AUDIO* and *VIDEO IN* jacks, if "L1(2)" appears, press the *INPUT SELECT* button to turn it off.
- ④ To select the channel you want to record, press the *CHANNEL* ∇ or \wedge button until the channel number you desire appears.
- ⑤ To start recording, press the *REC* and dummy button. The record indicator appears in the VCR's display panel.
- ⑥ When you finished, press the *STOP* button on the VCR (or the *STOP* button on the remote control).

Tape Recording Speeds

To select one of the VCR's two recording speeds, press the *SP/SLP* button. The appropriate indicator (*SP* or *SLP*) will appear in the VCR's display panel. The information below will help you decide which tape speed to use when recording.

Notes: The VCR automatically selects the appropriate tape speed for playback.



Your VCR's special effects (still-frame and search) are designed for optimum performance at the *SLP* speed.

We recommend *SLP* speed for the longest recording time.

- *SP* (Standard play) provides the best picture but the shortest recording time (2 hours with a T-120 tape). Video recorded at this speed has the least picture noise (snow) in normal playback.
- *SLP* (Super Long Play) provides three times the recording time as *SP* (6 hours with a T-120 tape). *SLP* has slightly more picture noise (snow) than *SP* in normal playback. This may not be noticeable.



RECORDING (continued)

Recording and Viewing the Same Program

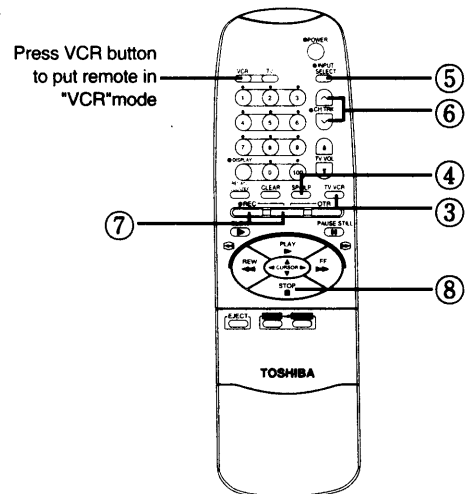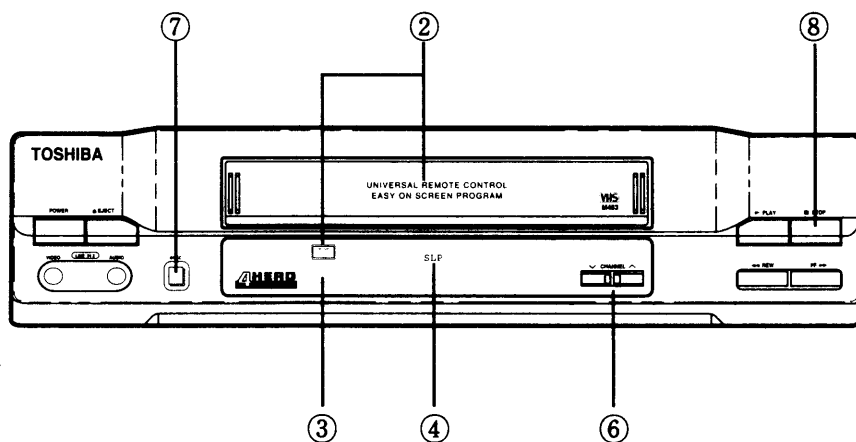

- ① Turn on the TV and tune it to the "VCR Channel" (3*, 4* or video input).
* The TV must be tuned to the same channel you selected with the CH3/CH4 switch on the back of the VCR.
- ② Insert a cassette with the record-protect (safety) tab intact. (The cassette-in indicator will light).
- ③ Make sure the VCR indicator appears in the VCR's display panel. If it does not appear, press the TV/VCR button to turn it on.
- ④ Press the SP/SLP button to select a recording speed. The tape speed indicator (SP or SLP) will appear.
- ⑤ Make sure the "L1(2)" indicator does not appear in the VCR's display panel unless you want to record from the VCR's AUDIO and VIDEO IN jacks. If "L1(2)" appears, press the INPUT SELECT button to turn it off.
- ⑥ Press the CHANNEL ∇ or \blacktriangle button to select the channel you want to record. (The channel number appears in the VCR's display panel).
- ⑦ Press the REC button to start recording. (The recording indicator appears in the VCR's display panel).
- ⑧ Press the STOP button on the VCR (or the STOP button on the remote control) when you are finished.

Recording and Viewing Different Programs

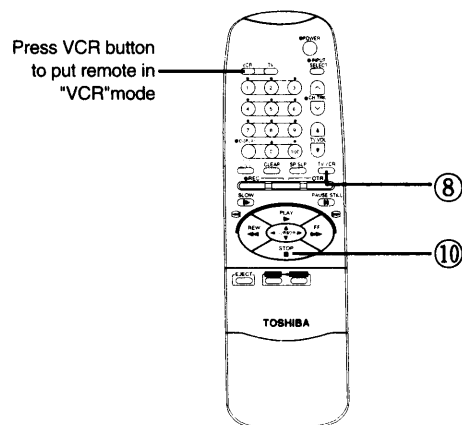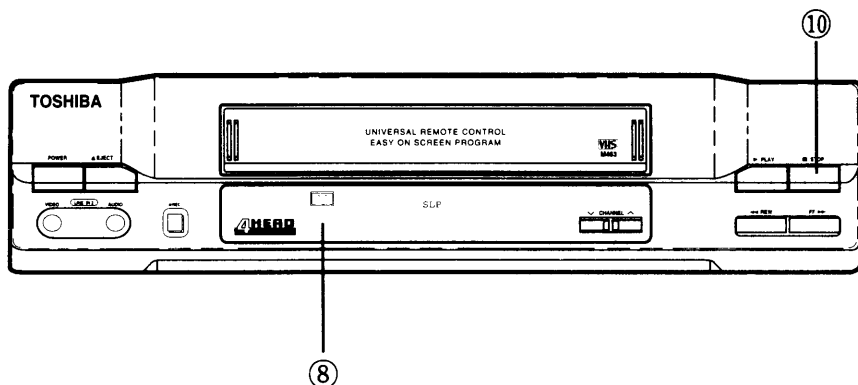

To record one program on the VCR and watch a different program on the TV, follow steps ① through ⑦ above and then :

- ⑧ Press the TV/VCR button to turn off the VCR indicator.
- ⑨ Select the other channel you want to watch with the TV's channel buttons.
- ⑩ Press the STOP button on the VCR (or the STOP button on the remote control) when you are finished.

Note: If you want to watch what the VCR is recording, press the TV/VCR button to turn on the VCR indicator. Then tune your TV to the "VCR Channel" (3,4, or video input).

Notes:

- Basic Manual Recording is possible only in the SP and SLP modes.
- The recorded pictures on the tape may be distorted around where the PAUSE/STILL button is used. This is not a malfunction.
- Since channel lock function operates during recording, TV channels cannot be changed directly. To change the channel, press the PAUSE/STILL button first. If the PAUSE/STILL button is pressed again, a TV program on a new channel can be recorded.

RECORDING (continued)

One Touch Recording (OTR)

One Touch Recording (OTR) lets you record up to four hours without programming the timer. It also allows you to start (or continue) recording immediately.

When the recording is finished, the VCR will turn off automatically.

Note: The clock doesn't have to be set before you can do One Touch Recording.

Only two buttons on the remote control are used to do One Touch Recording.

Immediate Start

- If you want the VCR to start recording immediately or to continue a recording you have already started, *follow the simplified instructions below or the detailed instructions on the right-side page.*
- Only the *OTR* buttons are used for immediate One Touch Recording. Each time you press the *OTR* buttons the recording time is extended.

1st press	30 minutes OTR
2nd press	1 hour OTR
3rd press	1-1/2 hours OTR
4th press	2 hours OTR
5th press	2-1/2 hours OTR
6th press	3 hours OTR
7th press	3-1/2 hours OTR
8th press	4 hours OTR
9th press	Return to normal recording

Simplified Instructions for Immediate-Start

1. Turn on the VCR.
2. Insert a cassette with the record-protect (safety) tab intact. (Rewind if necessary).
3. Select the channel you wish to record.
4. Press the *OTR* buttons to select desired recording time ["0:30" (30 minutes) to "4:00" (4 hours)]

To Stop OTR After Recording Starts

- Repeatedly press the *OTR* buttons until normal recording returns. Then press the *STOP* button during the normal recording.
- Press the *POWER* button on the VCR set.

RECORDING (Continued)

The programmable timer allows you to record up to 6 different programs over one year.

Timer Programming Procedure


Preparation

- Turn on the VCR.
- Select the video channel (3 or 4) or video input mode on the TV.
- Make sure that the clock is set correctly. (See page 13)
- Select TV or CATV mode. (See pages 14 and 15)
- Set the TV/VCR selector to "VCR".


Example

To record cable channel 25 in the SP tape speed from 9:30 p.m. until 10:00 p.m. on August 30. Today is August 25.


1. Load a cassette with the safety tab attached.
2. Press the PROG. button to display the MENU screen.
3. Select "PROGRAM", and press the ENTER button.

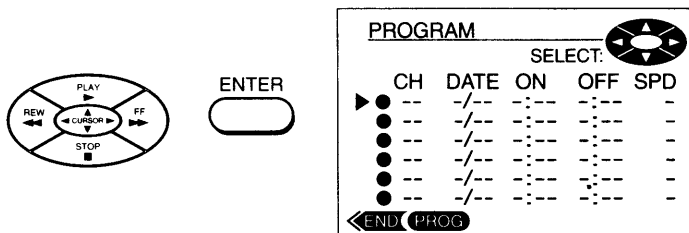

4. Move to the next using the FF button, and enter the channel number 2 and 5 by number buttons.

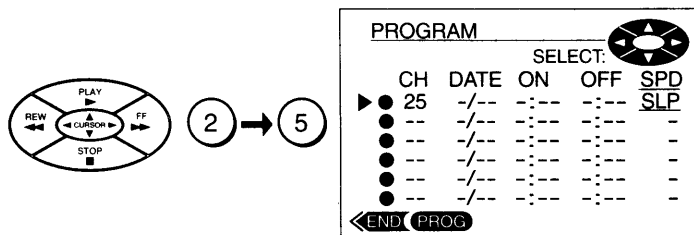

5. Move to the next using the FF button, and set the recording date using the PLAY button.

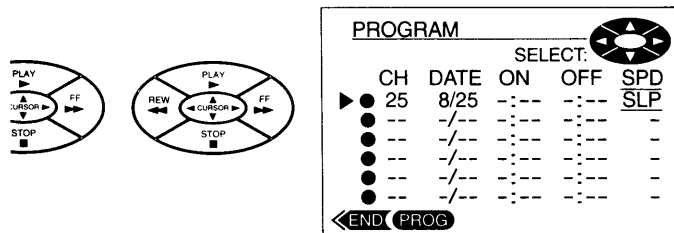

Note

The date changes as follows:

1/ → ... → 12/ → WKLYSU → ... → WKLYSA → MO~FR

↑ WKLYSU... WKLYSA:

You can record TV programs on the same channel at the same time Sunday through Saturday.


↑ MO~FR:

You can record TV programs on the same channel at the same time through Monday to Friday.


To make corrections:

Press the REW button to move back to the item, or the FF button to forward.


6. Move to the next using the FF button, and set the hour and minutes of the recording start time.

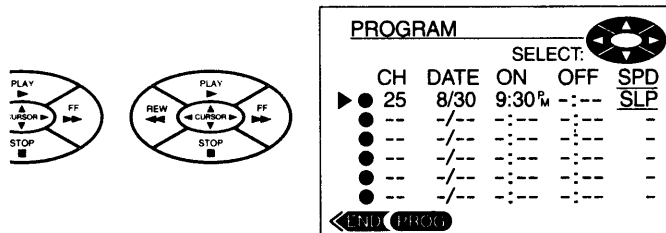

7. Move to the next, and set the recording off time.

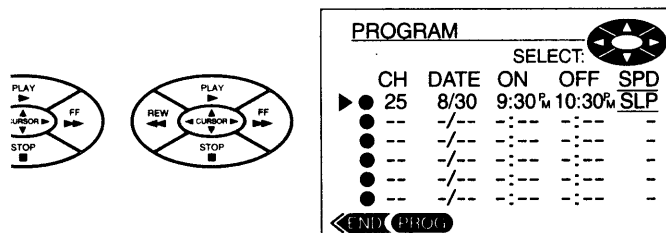

8. Move to the next, and select the tape speed (SP) using the PLAY or STOP button.

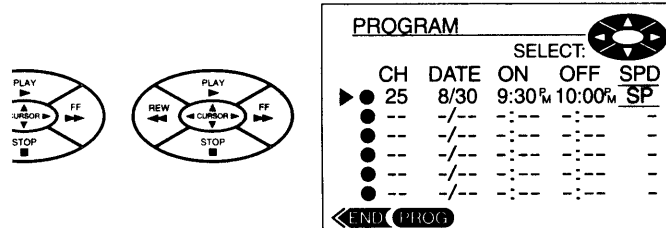


For the tape speed "AUTO (Auto Speed Select)", see next page.

To set another program, press the FF button, and select the next line pressing the STOP button. Repeat steps 4 to 8.


9. Press the PROG. button. Now programming is complete.

PROG.

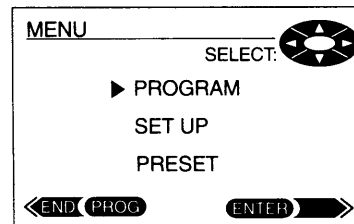

RECORDING (Continued)

 10. Press the POWER button and the VCR enters the timer standby mode.



Auto Speed Select


If you are not sure the tape is long enough for timer program recording in the SP tape speed, set the recording tape speed to "AUTO". Recording starts in the SP tape speed and the VCR automatically selects the tape speed to record the program to the end. If the tape length is not long enough, the tape speed automatically changes from SP to SLP.

Notes

- Make sure that the tape length is selected correctly according to the tape used on the SETUP screen. (See page 37)
- When the SLP tape speed is selected and the tape length is not sufficient to record the program to the end, the program cannot be recorded to the end.
- The picture will be distorted when playing the part where the recording tape speed is switched from SP to SLP with the Auto Speed Select feature.

Confirming Timer Programs

Press the PROG. button.
The screen for confirming will appear.

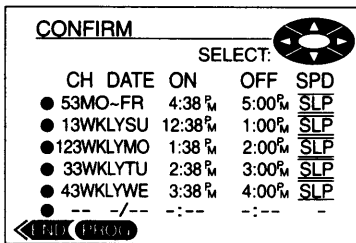

Notes

- This screen can be sure only in the Timer Recording mode.

Clearing a Timer Program

- 1) If the TIMER indicator is lit, then turn the VCR on by pressing the POWER button.
 - To cancel a program, select the program number you want to cancel after step 3, and press the CLEAR button. The line is then cleared.
- 2) With steps 2 to 9, change the items.
- 3) Press the POWER button to return to the timer standby mode.

Stopping a Timer Recording in Progress

First press the POWER button to release the Timer Recording mode, and then press the POWER button to turn on the VCR. The VCR will be available for use.

- Be sure to press the POWER button again to return the VCR to the timer standby mode after you are finished.

Error Indication


 
- The Blink "TIMER" indication appears in the VCR display if you press the POWER button when:
 - a cassette is not loaded.
 - the loaded cassette has no safety tab.
 In these cases, a recording can not be made.

If a power failure occurs during the timer program recording

- When a power failure has occurred, "12:00AM" blinks in the VCR display. Since the programmed contents have been cleared, reset the clock and timer programming.
- When power has failed for a short time, the colon of the current time display blinks. The programmed contents are not affected. Reset the clock.

Overlaps of the programs

If two timer programs overlap, the recording start time of program 2 has priority over the recording off time of program 1, and the message "CLASH" will be appear on the TV screen.

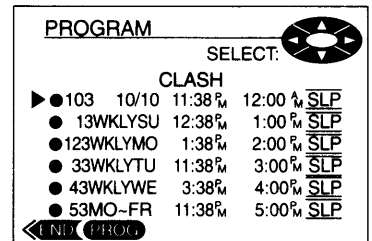

RECORDING (continued)


Timer Recording

The information on this page tells you how to set up your VCR for timer recording after you have programmed the timer.

The programming instructions for time programming are on pages 32-33.

When you have finished programming the timer, follow the steps in the drawing to prepare the VCR for timer recording. We suggest that you make one or more short timer recordings for practice.

If you have a daily or weekly program in the VCR's timer, check the steps in the drawing sometime before the recording time to be sure that your VCR is ready to record.

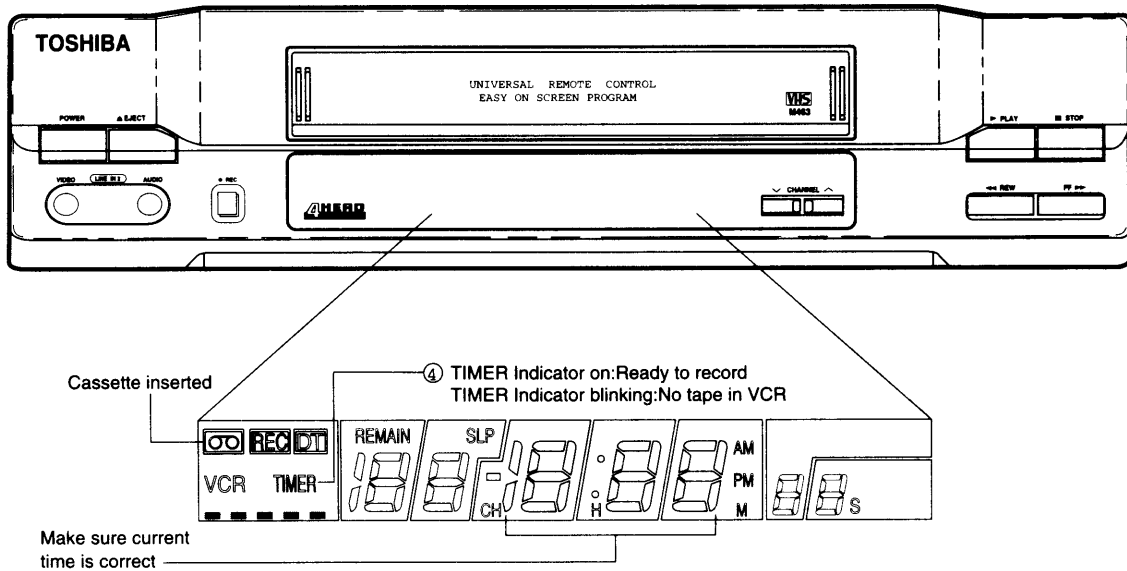

- ① Set the clock. See page 13.
- ② Insert a cassette with the record-protect(safety) tab intact. (Rewind if necessary.)
- ③ **TURN OFF VCR.** The VCR must be off to activate the timer.
- ④ Check VCR's display panel.

Timer Recording Checklist

The checklist below is provided for your use when making time recordings on the VCR.

- Cassette inserted in the VCR.
- Cassette has its record-protect (safety) tab in place. If not, the cassette is ejected. See "Erase Protection" on page 25.
- Cassette length and recording speed are adequate for program(s) to be recorded.
- Cassette rewound to beginning or to desired place on tape.
- Clock set to correct time and date.
- Timer has been programmed as described on pages 32-33.
- VCR has been turned off. The TIMER indicator appears only if the timer is programmed and the VCR is turned off.

Stopping a Timer Recording in Progress

Press the **POWER** button on the VCR to stop a Timer Recording in progress.

Timer and OTR Recording

The timer cannot begin recording if the VCR is already recording with OTR. You can OTR along with timer recording, but be careful that the programming times of the OTR and timer recordings do not overlap. If this should happen, the function selected in advance will take priority.

TV Viewing During a Timer Recording

When the VCR turns on automatically to make a timer recording, it does not disturb whatever program you may be watching at the time. If you want to monitor the recording, press the **TV/VCR** button to turn on the VCR indicator and tune your TV to the "VCR Channel" (3, 4 or video input).


RECORDING (continued)

Recording From a Camcorder

To duplicate tapes using your camcorder, connect your camcorder to the VCR as shown below. You will need an output cable (usually supplied with the camcorder).

- ① Connect the *VIDEO* plug from the output cable to the *VIDEO IN* jack on the front or the rear of the VCR.
- ② Connect the *AUDIO* plug from the output cable to the *AUDIO IN* / *MONO* jack on the front or the rear of the VCR.
- ③ Connect the other end of the output cable to the *AUDIO/VIDEO OUT* connectors on the camcorder.

Caution: The unauthorized recording of television programs and other material may infringe the rights of others.

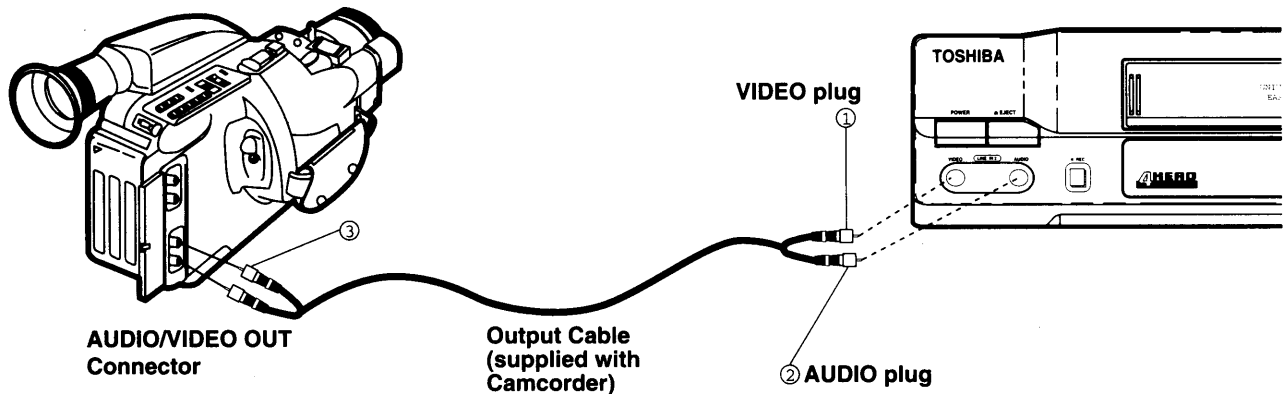

VHS CAMCORDER

Simplified Operating Instructions

1. Connect the camcorder to the VCR as shown above.
2. Turn on the TV and tune it to the "VCR Channel" (3, 4 or video input.)
3. Turn on the camcorder and VCR.
4. Insert the recorded cassette that you want to duplicate in the camcorder.
5. Insert a blank cassette with its record-protect (safety) tab intact into the VCR.
6. Make sure the VCR indicator appears in the VCR's display panel. If not, press the *TV/VCR* button to turn it on.
7. Make sure the "L2" indicator appears in the VCR's display panel. If not, press the *INPUT SELECT* button to turn it on.
8. Select the tape recording speed (*SP* or *SLP*) by pressing the *SP/SLP* button.
9. Rewind the cassettes if necessary.
10. Press the *REC* button on the VCR or on the Remote Control.
11. Place the camcorder in the playback mode and press the *PLAY* button.
12. Adjust the *TRACKING* control on the camcorder, if necessary.

Note: If the cassette tracking was not adjusted correctly on the camcorder, horizontal streaks may appear in the picture.

13. If you want to edit out any of the material, press the *PAUSE / STILL* button on the VCR's remote control. Press the *PAUSE / STILL* button again to resume recording.

Note: Use *PAUSE / STILL* only for pauses less than three or four minutes. Press the *STOP* button on the VCR (or the *STOP* button on the VCR's remote control) for longer pauses. Press the *REC* button on the VCR to resume recording.

14. Stop the camcorder and VCR when you are finished.

Note: The TV does not have to be on to copy tapes. If you want to watch another TV channel, press the *TV/VCR* button to turn off the VCR indicator. Then select the channel you want to watch with the TV's channel buttons.

Remember: Turn off the "L2" indicator for normal recording from the VCR's tuner.

RECORDING (continued)

Recording From Another VCR


To copy your home videos from one VCR to another, use one VCR as the playback VCR and another VCR as the recording VCR.

Connecting the VCRs

1. Connect a shielded Audio/Video cable from the *VIDEO OUT* jack on the playback VCR to the *VIDEO IN* jack on the recording VCR.
2. Connect another cable from the *AUDIO OUT* jack on the playback VCR to the *AUDIO IN* jack on the recording VCR.

Important Note: Be sure that the recording VCR is connected to the TV so that you can see what is being recorded. This can be done either by connecting the *VIDEO* and *AUDIO OUT* jacks of the recording VCR to the *VIDEO* and *AUDIO IN* jacks of the TV or by connecting the *OUT TO TV* jack on the recording VCR to the *VHF IN* jack on the TV.

Caution: The unauthorized recording of television programs and other material may infringe the rights of others.

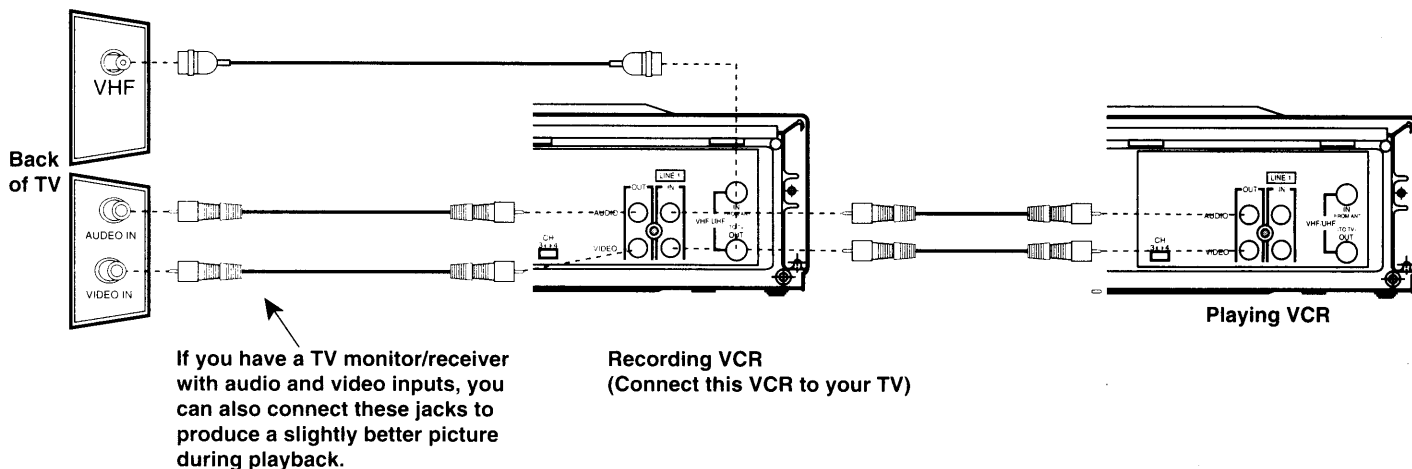

Copying Your Home Video

1. Turn on the TV and VCRs. Tune the TV to the "VCR Channel" (3,4 or video input).

Note: If you are using channel 3 or 4 on your TV to watch the VCR, be sure the VCR indicator in the recording VCR's panel is on. Press the *TV/VCR* button to turn it on.

2. Press the *INPUT SELECT* button to turn on the "L1" indicator in the recording VCR's display panel.
3. Insert the home video that you want to copy into the playback VCR. Insert a blank tape into the recording VCR.
4. Press the *PLAY* button on the playback VCR to play the tape. Press the *PAUSE/STILL* button of the playback VCR when you reach the point where you want to begin copying.

Note: If the tape tracking was not adjusted properly on the playback VCR, horizontal streaks may appear in the picture. You may need to adjust the tracking on the playback VCR.

5. Press the *REC* button on the recording VCR, and then press the *PAUSE/STILL* button to place the recording VCR in the record pause mode.
6. Press the *PAUSE/STILL* buttons on **both VCRs at the same time** to begin copying the tape.

Note: You can edit out segments that you do not want to copy by pressing the *PAUSE/STILL* button of the recording VCR at any time to stop copying the tape. Locate the next segment you want to copy on the playback VCR by using the *FF*, *REW*, and *PLAY* buttons. Then place the playback VCR in the play-pause mode by pressing its *PAUSE/STILL* button. Press the *PAUSE/STILL* buttons **at the same time on both VCRs** to resume copying.

7. Press the *STOP* buttons on both VCRs when you are finished.

Note: Remember to turn off the "L1" indicator in the VCR's display panel for normal recording from the VCR's tuner.

 


Caution: Avoid pausing for more than three or four minutes because the spinning heads that do the recording are still in contact with the tape and will eventually wear off the active material. This can cause streaks or spots in the picture when you play the worn part of the tape (called dropouts). To help prevent excessive tape wear, the VCR will automatically switch from pause to stop after about five minutes.

SPECIALIZED OPERATIONS (continued)

Remaining Tape Display Function

This function displays the remaining time on the tape and may help you to plan ahead. This function is activated from the PLAY, REC, FF or REW mode.

1. Press the PROG. button to display the MENU screen.
2. Select "SET UP", and press the ENTER button.
3. Select "TAPE LENGTH" using the FF button.

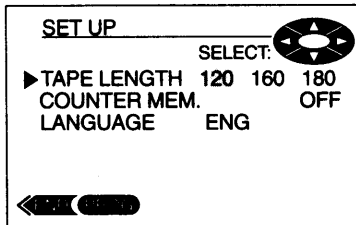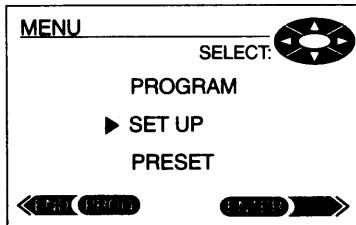


4. Press the PROG. button two times to exit.

T-180: When using tape type T-180



T-160: When using tape type T-160

T-120: When using tape type T-120 or shorter

 5. Press the *PLAY* button or the *REC* button.
6. Press the *REMAIN/COUNTER* button. The VCR starts to calculate the remaining time on the tape. Tape runs for a while during calculation. The counter enters into the calculation mode from the time counter display mode.



 7. The calculation is completed within 1 minute at the most. The remaining time on the tape is indicated. (The example shows the remaining time is 1 hour 30 minutes.)

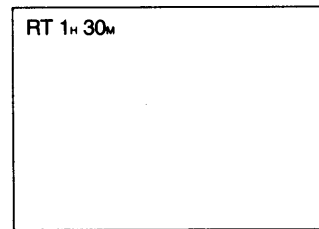

Remaining Time

Press the *REMAIN/COUNTER* button again and the counter changes from displaying the remaining time on the tape to the counter.

Notes:

- The remaining time on the tape is indicated when the *REMAIN/COUNTER* button is pressed. When the tape is removed, the counter returns to indicate the elapsed time.
- The remaining time displayed is approximate time.
- During recording, the remaining time is calculated based on the recording mode, SP or SLP, which is selected by the *SP/SLP* button.
- During playback, the remaining time is calculated based on the playback mode (SP/SLP speed).

SPECIALIZED OPERATIONS (continued)

Copying VCR Recording Function


You can dub this tape for editing by connecting this VCR to another VCR.

Using this VCR for playback (see p. 26-28)

- ① Recording VCR: Press the *REC* button, then the *PAUSE/STILL* button to enter the recording pause mode.
- ② Playback VCR: Press the *PLAY* button to activate play.
- ③ Recording VCR: Press *PAUSE/STILL* button, then cancel the pause mode to activate recording.
- ④ Both VCRs: To terminate recording, press the *STOP* button on the VCRs. Copying is completed.

Using this VCR for recording (see p. 36)

- ① Recording VCR: Press the *REC* button, then the *PAUSE/STILL* button to enter the pause mode.
- ② Playing VCR: Press the play button to activate play.
- ③ Recording VCR: Press the *PAUSE/STILL* button again to cancel the pause mode to start recording.
- ④ Both VCRs: To terminate recording, press the stop button on both VCRs. Copying is completed.

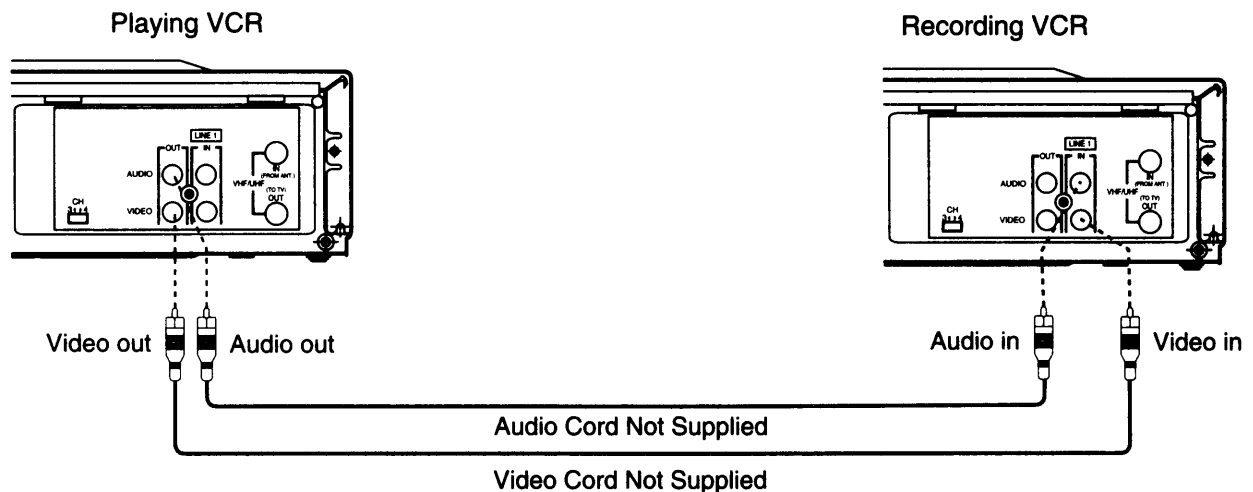

WARNING: Tapes can only be copied and used in accordance with applicable copyright laws. If the tape is covered by a copyright, it is illegal to copy it and/or charge an entrance fee to see it.

Note:

- In general, picture quality deteriorates somewhat in the dubbed tape. It is best to use the SP mode.

TROUBLE CHECKS

Sometimes problems can be easily solved by checking a few basic things. Check below before you call for help or take your VCR to an Authorized TOSHIBA VCR Service center.

It could save you time and money. If service should be necessary, Authorized TOSHIBA VCR Service centers are trained and equipped to furnish it.

Trouble	Checks and Adjustments
No Power	<ul style="list-style-type: none"> • Check to see if the VCR is plugged into an operating outlet.
VCR Does Not Respond to Remote Control	<ul style="list-style-type: none"> • Weak battery in remote control. • Remote control not aimed at the VCR or there is an obstruction between them. • Press the VCR button on the remote control for changing to the VCR mode.
Remote No Longer Controls a TOSHIBA TV	<ul style="list-style-type: none"> • Remote accidentally programmed for different brand of TV. Press TV and number buttons at the same time on the remote control to re-program. <i>Details are on page 22-23.</i>
Remote No Longer Controls a Compatible TV(Other Than TOSHIBA)	<ul style="list-style-type: none"> • Remote control may need to be re-programmed after batteries are changed. <i>See page 22-23.</i> • Check batteries in remote control.
Poor or No Picture for Normal TV Viewing	<ul style="list-style-type: none"> • VCR indicator is on. Press the TV/VCR button to turn it off. See page 12 • TV monitor/receiver set to "video input". Switch TV to an active channel. • Carefully check antenna connections.
Snowy or No Picture During Playback	<ul style="list-style-type: none"> • Press one of the TRACKING buttons on the remote control to adjust tracking. See page 27 • VCR indicator not on. Press TV/VCR button to turn it on. See page 12 • Make sure the TV channel selector matches the channel you have selected with the CH3/CH4 switch on the back of the VCR (3 or 4). See page 11 • Make sure the TV is fine tuned. • Check the video cable connections between the VCR and TV monitor/receiver. • Make sure the TV monitor/receiver is set to the "video input" channel. • Try another tape. • Dirty tape has left deposits on VCR's heads. <i>See page 25 for head cleaning.</i> • Some snow/streaks are normal during search, slow motion and stop-action playback.
Streaks in Picture During Normal Playback	<ul style="list-style-type: none"> • Press one of the TRACKING buttons on the remote control to move streaks up or down and out of the picture. • Tape stretched (poor quality or worn out). See page 27
Will Not Record or Play	<ul style="list-style-type: none"> • No cassette in VCR. • Eject and re-insert cassette. • Broken tape-try another cassette.
Will Not Record	<ul style="list-style-type: none"> • VCR is in pause mode. Press the PAUSE/STILL button. • Record-protect (safety) tab removed from cassette. See page 25 • Make sure "L1(L2)" indicator is turned off in VCR's display panel for normal recording from the VCR's tuner. Press the INPUT SELECT button to turn off "L1(L2)" indicator.
Timer Recording Not Made	<ul style="list-style-type: none"> • Program entered incorrectly (wrong channel or times). • Power interruption. (Clock on the VCR's front panel will show "12:00 AM".) See page 13(set the clock) • Clock was not set accurately (check AM/PM). • Program exceeded tape's length or tape was not rewound beforehand. • VCR was not turned off at the time recording was to start. • No tape in VCR or cassette's record-protect (safety) tab broken off. See page 25
Tape Stops Before Complete Rewind	<ul style="list-style-type: none"> • Press the REW button again. Tape rewinds only to "0H00M00S M" ("0H00M00S" in VCR's display panel) when counter memory is turned on. <i>Details are on page 28.</i>
Rewind Does Not Operate	<ul style="list-style-type: none"> • Tape already rewind.
Clock Shows Incorrect Time or Date	<ul style="list-style-type: none"> • Power interruption. (Clock on the front panel will show "12:00 AM".) See page 13. (set the clock) • Clock was not set accurately (check AM and PM). • Clock display shows recording time remaining for OTR recording.
VCR Makes Noise When Stopped	<ul style="list-style-type: none"> • VCR is removing tape from heads. This is normal. The cylinder head inside the VCR will continue to rotate for about 5 minutes after you put the VCR in the stop mode.
Will Not Auto Program Active Channels Correctly	<ul style="list-style-type: none"> • CH MEMORY is not set correctly. See page 14
Can Not Select Channels Over 69	<ul style="list-style-type: none"> • Channels over 69 can only be selected if available from your cable-TV system. See page 14
Tape Plays Back in Slow Motion	<ul style="list-style-type: none"> • Press the PLAY button for normal playback..
Poor Picture for Cable TV Viewing	<ul style="list-style-type: none"> • Change the channel on the VCR, then return the channel to 3/4. See page 11

Cleaning the VCR

Dust exposed surfaces as required, using a soft cloth or the dusting attachment of your vacuum cleaner. Occasionally use the vacuum cleaner to remove dust from the ventilation holes on the top, back, sides and bottom of the cabinet.

Some of the plastic surfaces are easily scratched, and they can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet are non-porous and the residue will accumulate more dust.

Design Specifications

Format:	VHS
Record/Playback System:	Video : 4-Head record/playback system Audio: Mono record/ playback system
Video Signal System:	EIA standard: NTSC color
Antenna:	75-ohm external VHF/UHF combined antenna terminal
Tuner:	USA: 181 channels (125 cable channels) CANADA: 178 channels (122 cable channels)
Type:	Auto-programming frequency synthesis
Power Requirement:	120AC, 60Hz
Power Consumption:	16 watts
Dimension:	93.5mm high (3.7 inches) 380mm wide (15.2 inches) 326.5mm deep (12.9 inches)
Weight:	4.0Kg (9.0lbs)
Storage Temperature Range:	-22° F to + 149 ° F
Operating Temperature Range :	+41° F to + 104 ° F

Specifications and features are subject to change without notice.

LIMITED WARRANTY

TOSHIBA VIDEO CASSETTE RECORDER

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extended to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited Ninety (90) Day Warranty

TACP/THI warrant this product against defects in materials or workmanship for a period of ninety days after the date of original retail purchase. During this period, TACP/THI will repair a defective product or part, without charge to you. You must deliver the entire product to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the set to and from the Authorized Service Station.

Limited One (1) Year Warranty

TACP/THI further warrant the parts in this product against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP/THI will replace a defective part without charge to you, except that if a defective part is replaced after ninety (90) days from the date of the original retail purchase you pay labor charges involved in the replacement. You must also deliver the entire product to one of the TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the set to and from the Authorized Service Station.

Rental Units

The warranty for rental units begin with the first rental or thirty (30) days from the date of shipment to the rental firm, whichever comes first.

Commercial Units

Products sold and used for commercial use have a limited ninety (90) day warranty for all parts and labor.

Owner's Manual and Demographic Card

You should read the owner's manual thoroughly before operating this product. You should complete and mail the enclosed Demographic card within ten (10) days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) You must notify an Authorized TACP/THI Services Station within thirty (30) days after you discover a defective product or part.
- (3) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (4) These warranties are effective only if the product is purchased and operated in the U.S.A or Puerto Rico.
- (5) Labor service charges for set installation. Set up, adjustment of customer controls and installation of repair or antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (6) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or part there of which have had the serial number removed, altered, defaced or rendered illegible.
- (7) At you option, after the warranty period has expired in the U.S.A Call (800)631-3811 to receive information concerning an exchange price. Payment must be enclosed with the product in the form of a certified check or money order and forward your product to:
Toshiba America Consumer Products Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087
- (8) Upon receipt we will, at out option, replace your unit with a new or refurbished unit of equal value. Features may not be identical to your original product.
- (9) Physically damaged units are not acceptable for repair or exchange in or out of warranty and will be returned as received.

How to Obtain Warranty Service

- (1) Refer to the troubleshooting guide in your owner's manual. This check list may solve your problem.
- (2) Call the TACP toll free number 800-631-3811 within thirty (30) days after you find a defective product or part.
- (3) Arrange for the delivery of the product to the Authorized TACP/THI Service Center. Products shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

In the Continental United States contact:



In Hawaii contact:

Toshiba Hawaii
327 Kamakee Street,
Honolulu, HA 96814
(808) 521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP/THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of TACP/THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety (90) days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

ATTENTION CANADIAN CONSUMERS:

Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty. Product must be purchased from an Authorized Canadian Dealer.

Products purchased in the U.S.A and used in Canada are not covered by these warranties.

IMPORTANT: PACKING AND SHIPPING INSTRUCTIONS

When you send the product to a service Station, you must use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

Printed in Indonesia



TOSHIBA

...In Touch with Tomorrow