

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the safety precautions listed below. Keep these operating instructions handy for future reference.

Safety

- 1. Power source**—Connect the unit to a power source of the type described in these instructions or as marked on the unit.
- 2. Polarization**—The unit is equipped with a polarized power plug where one blade is wider than the other. This safety feature ensures that the plug fits into your household AC outlet only one way. If the plug doesn't fit one way, try reversing it. If the plug still doesn't fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the plug.
- 3. Power cord protection**—Route the AC power supply cord so that it will not be walked on or pinched by items placed on or against it. Never take hold of the plug or cord with wet hands. Always grasp the plug body firmly when connecting and disconnecting it.
- 4. Overloading**—When connecting the AC power supply cord, be careful not to overload the household AC outlet, extension cord, or outlet from any other device as this can result in fire or electric shock.
- 5. Nonuse periods**—Turn the unit off when it is not in use. Unplug the unit from the household AC outlet if it is not to be used for a long time. Unplug the unit during lightning storms.
- 6. Attachments and accessories**—Use only the attachments and accessories recommended in these operating instructions.

Installation

Placement

- 1. Ventilation**—Situate the unit so that it receives proper ventilation. Do not install in a confined space such as a bookcase or cabinet. Allow at least 10 cm (4 inches) clearance from the rear of the unit. To prevent the risk of electric shock or fire due to overheating ensure curtains and other materials do not obstruct the unit's ventilation.
- 2. Foreign material**—Ensure objects and liquids do not get into the unit. Avoid exposing the unit to excessive smoke, dust, mechanical vibration, and shock.
- 3. Magnetism**—Situate the unit away from equipment and devices that generate strong magnetic fields.
- 4. Stacking**—Do not place heavy objects on top of this unit.
- 5. Surface**—Place the unit on a flat, level surface.
- 6. Carts and stands**—Use the unit only with carts and stands recommended by the manufacturer. Move carts with care. Sudden stops, excessive force, and uneven surfaces can cause carts to overturn.
- 7. Wall and ceiling mounting**—Do not mount the unit on walls or ceilings unless specified in the instructions.



Environment

- 1. Water and moisture**—Do not use the unit near water, such as near a bathtub or swimming pool. Avoid damp basements.
- 2. Heat**—Situate the unit away from heat sources, such as radiators. Do not situate where temperatures fall below 5°C (41°F) or rise above 35°C (95°F).

Maintenance

(See below for details.)

Unplug the unit from the household AC outlet before cleaning.
Clean with a damp cloth.
Do not use abrasive pads, scouring powders, or solvents.

Service

- 1. Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - (a) The AC power supply cord or the plug has been damaged; or
 - (b) Objects or liquids have gotten into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped or the cabinet damaged.
- 2. Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- 3. Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- 4. Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Maintenance

To clean this unit, wipe with a soft, damp cloth.

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using a chemically treated cloth, read the instructions that came with the cloth carefully.

Panasonic®

CD Clock Radio Operating Instructions Model No. RC-CD300



Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.



Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America

One Panasonic Way Secaucus, New Jersey 07094

<http://www.panasonic.com>

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")

Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W2T3

www.panasonic.ca


© 2003 Matsushita Electric Industrial Co., Ltd.

Printed in China

RQTT0530-1P

F0203TH1033

- The following mark and symbols are located on the bottom of the unit.

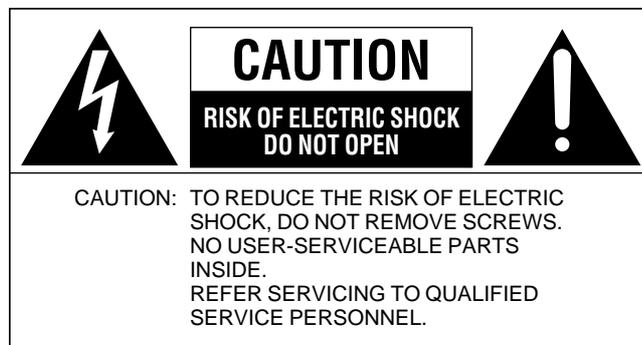

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The model number and serial number of this product can be found on either the back or the bottom of the unit.

Please note them in the space provided below and keep for future reference.

MODEL NUMBER RC-CD300

SERIAL NUMBER _____

Supplied accessories

Please check and identify the supplied accessories.

- 1 FM/AM loop antenna (RSA0031)




Use numbers in parentheses when asking for replacement parts.

(Only for U.S.A.)

To order accessories, contact 1-800-332-5368 or the website (<http://www.panasonic.com>).

Connecting the FM/AM loop antenna

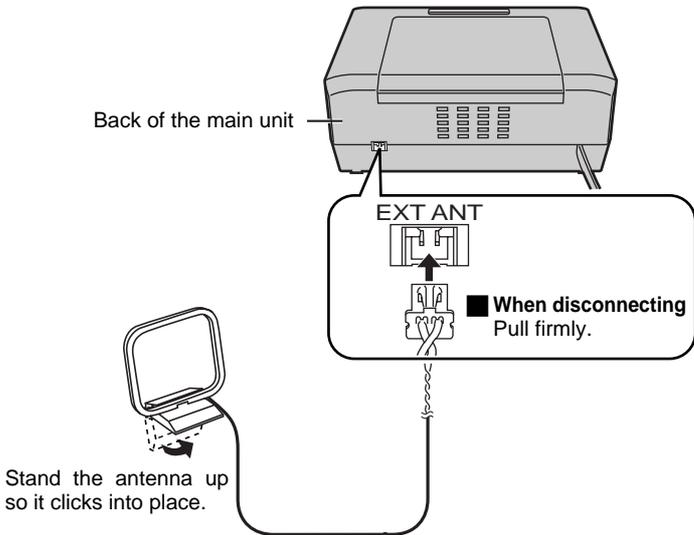

Concerning Compact Discs

Only compact discs bearing this mark can be used with this unit.

However, continued use of irregularly shaped CDs can damage the unit.



How to remove a disc from its case

How to store the disc in its case



How to hold a disc



If the surface is dirty

Wipe it with a damp cloth and then wipe dry.

Wipe from the center toward the outer circumference.



Handling precautions

- If you are taking the CD from a cold to a warm environment, moisture may form on the CD. Wipe this off with a soft, dry, lint-free cloth before using the CD.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not attach labels or stickers to CDs. (Do not use CDs with exposed adhesive from tape or left over peeled off stickers.)

- Do not use scratch-proof protectors or covers other than those specified for use with this unit.

Storage precautions

Be sure to store CDs in their cases to protect them from dust, scratches, and warping.


Do not place or store CDs in the following places

- Locations exposed to direct sunlight
- Humid or dusty locations
- Locations directly exposed to a heat vent or heating appliance
- In the glove compartment or on the rear deck of an automobile

Power sources

AC power supply cord

Connect the AC power supply cord to a household AC outlet.

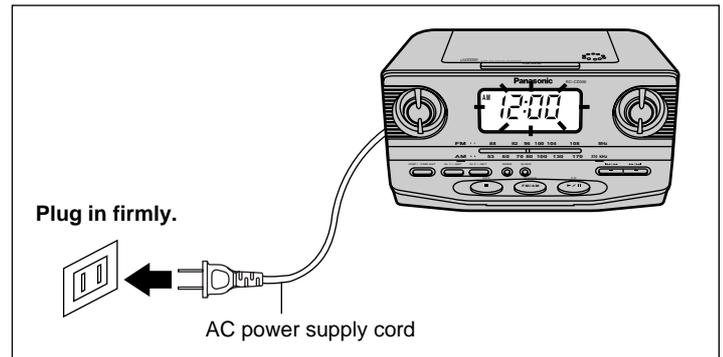


Note

These speakers do not have magnetic shielding. Do not place them near televisions, personal computers or other devices easily influenced by magnetism.

Memory back-up battery (not included)

This battery saves the clock and alarm settings if there is a power interruption.

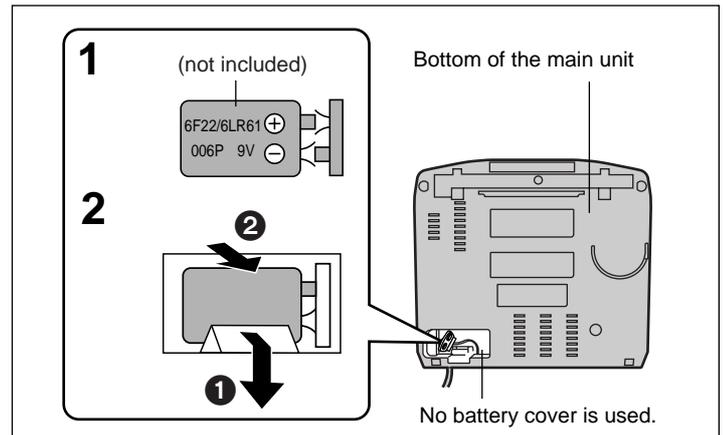

Replacing the battery

- The battery lasts about a year. The battery lasts about a month if the unit is disconnected from the household AC outlet.
- Protect the memory by connecting the AC power cord before changing the battery.

Note

- Align the poles (⊖ and ⊕) properly when inserting the battery.
- Do not heat or disassemble batteries. Do not allow them to contact flame or water.
- Remove the battery if the unit is not to be used for a long time.
- Do not use the battery if the covering has been peeled off.


Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

If electrolyte leaks from the batteries, consult your dealer.


Wash thoroughly with water if electrolyte comes in contact with any part of your body.

Controls

CD, Radio

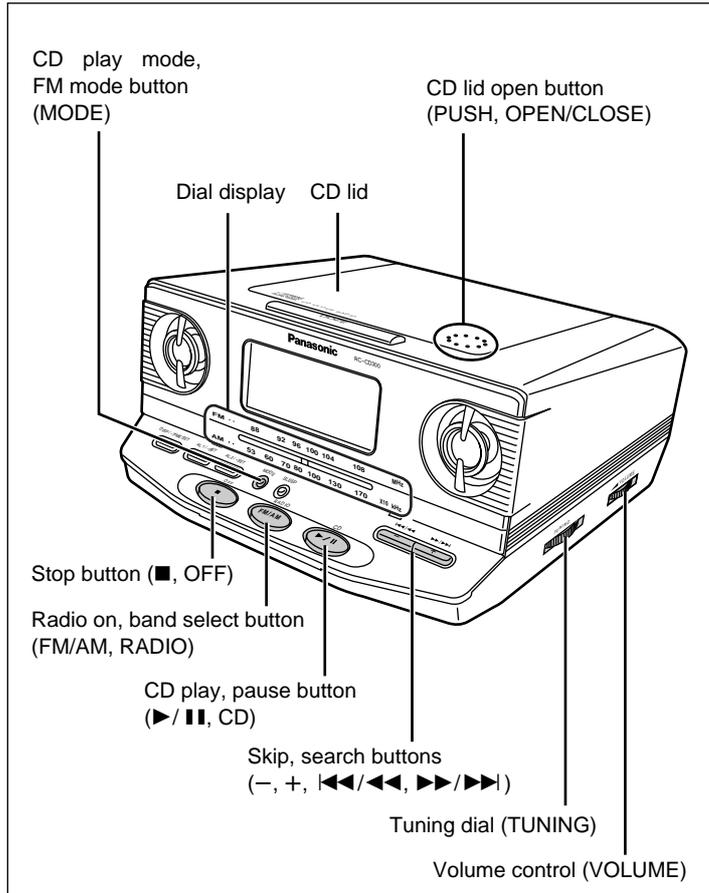

Alarm, Sleep timer and Basic operations

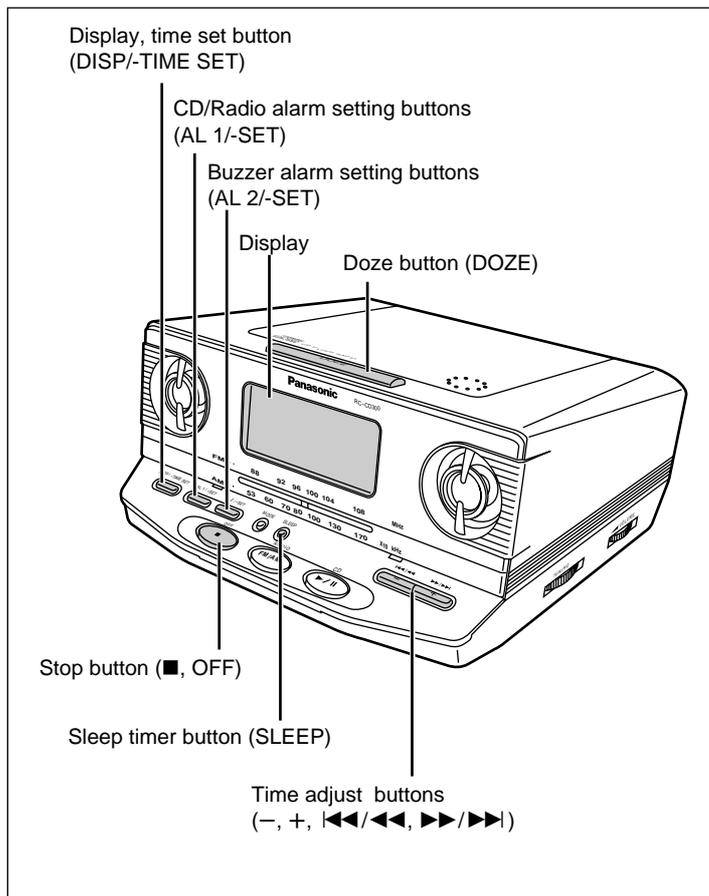


Setting the time

Reset the clock regularly to maintain accuracy. (Monthly accuracy +/-30 seconds)

This is a 12-hour clock.

This example shows how to set the clock for 10:30 A.M.

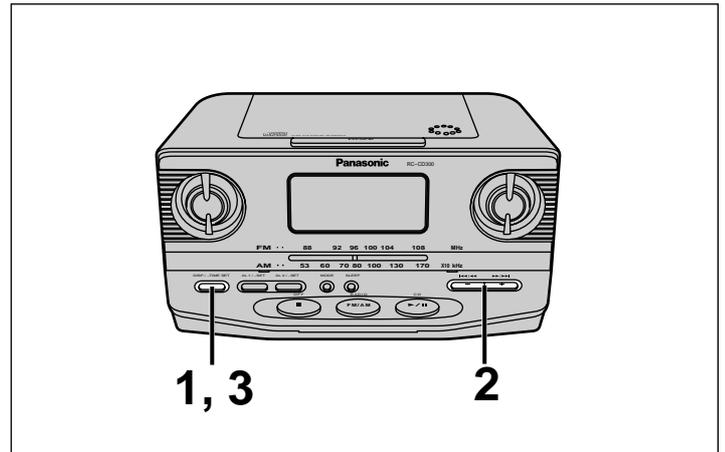

1 Press and hold [DISP/-TIME SET] until the time display flashes.



2 Press [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] to adjust the time.

[+ , ▶▶/▶▶]: Increases the time by one-minute units.
 [- , ◀◀/◀◀]: Decreases the time by one-minute units.

The time changes faster if you hold [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] down.


3 Press [DISP/-TIME SET]. The time is set.




For your reference:

- When you play a CD, the display changes but the clock is displayed again after about 10 seconds.
- The light in the main unit's display comes on for about 5 seconds when you press a button.

Listening to CDs

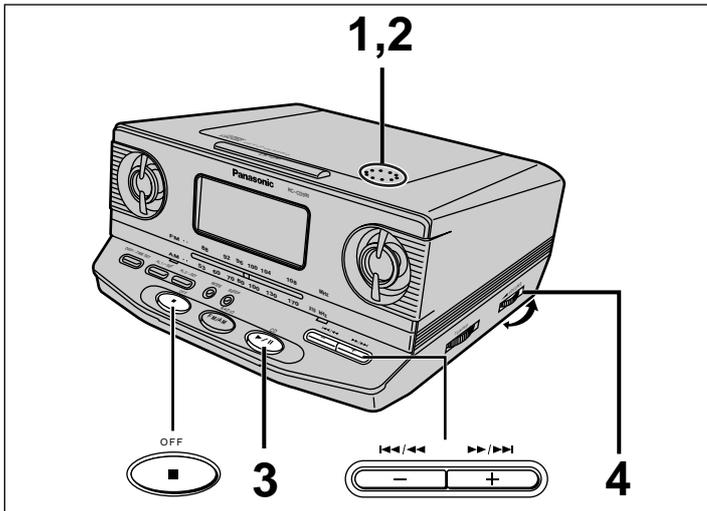

1 Press [PUSH, OPEN/CLOSE] to open the CD lid and insert the CD.

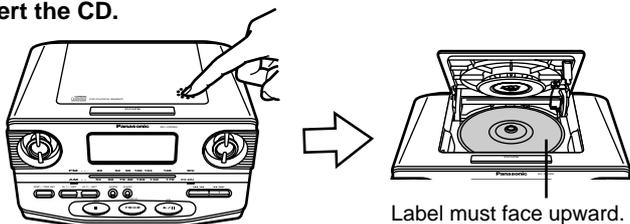

Label must face upward.

2 Press [PUSH, OPEN/CLOSE] to close the CD lid.

“- - -” is displayed if there is no disc in the unit.

Total playing time



Number of tracks

3 Press [▶/||, CD] to start play.

Play starts from the first track and continues to the last track.

Elapsed play time



Track number in play

4 Adjust the volume.

■ To stop play

Press [■, OFF].

The CD section is turned off if you press [■, OFF] again.

■ To pause play

Press [▶/||, CD] during playback.

To resume, press [▶/||, CD].

■ To search forward/backward during playback

Press and hold [+ , ▶▶/▶▶▶] (forward) or [- , ◀◀/◀◀◀] (backward).


■ To skip forward/backward

Press [+ , ▶▶/▶▶▶] (forward) or [- , ◀◀/◀◀◀] (backward).

Note

- The clock is displayed after about 10 seconds after you perform operations.
- The CD section is turned off if it is stopped for about 10 minutes.
- Do not press [PUSH, OPEN/CLOSE] during play, pause or immediately after you inserted a CD and closed the CD lid. CD may be scratched.

Other play methods

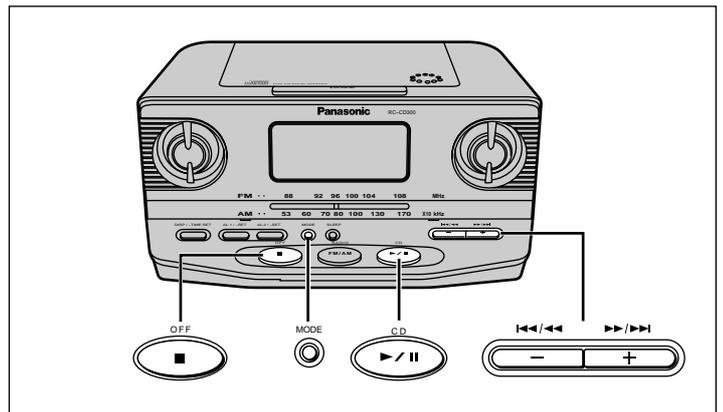

Preparation for skip play and random play

1. Press [▶/||, CD].

2. Press [■, OFF] to stop play.

“CD” must be displayed on the display for these methods to work.



Note

The CD section is turned off if it is stopped for about 10 minutes.

Skip play

While stopped

1 Press [+ , ▶▶/▶▶▶] or [- , ◀◀/◀◀◀] to select a track.

2 Press [▶/||, CD] to start play.

Play starts and continues to the last track.

You can also select a track during play.

Repeat play

Plays a track or all tracks repeatedly.

1 Press [▶/||, CD] to start play.

2 Press [MODE] to select the repeat mode.

Each time [MODE] is pressed

1 ↻ → ↻ → RANDOM

↻ Off (no indication) ↻



1 ↻ : One track repeated

↻ : All tracks repeated

■ To cancel

Press [MODE] until “1 ↻” and “↻” are cleared.

Note

The mode is also canceled if the CD lid is opened.

Random play

Plays the tracks once each in random order.

While stopped

1 Press [MODE] to select “RANDOM”.

Each time [MODE] is pressed

1 ↻ → ↻ → RANDOM

↻ Off (no indication) ↻



2 Press [▶/||, CD] to start play.

Note

- You cannot skip to tracks already played.
- Search can be done within a track only.


■ To cancel

Press [MODE] to clear “RANDOM”.

Note

- If canceled during play, play continues to the end of the disc.
- The mode is also canceled if the CD lid is opened.

Listening to the radio

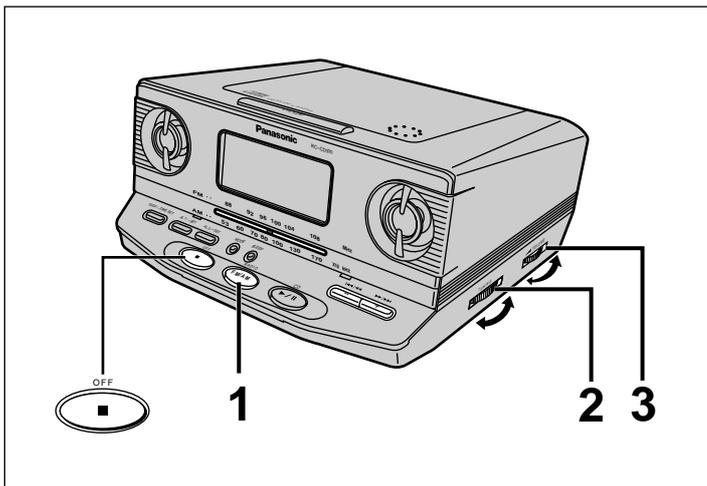

1 Press [FM/AM, RADIO] to select the band.

Each time [FM/AM, RADIO] is pressed

FM → AM



2 Turn the dial to tune to the desired station.


"7F" lights up when the station is tuned in.



3 Adjust the volume.

■ To turn off
Press [■, OFF].


To improve reception

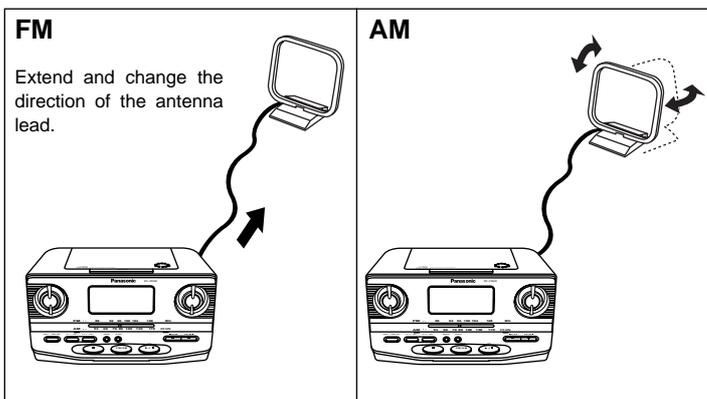

■ If noise is excessive in the FM stereo mode


Press [MODE].

"MONO" lights up.

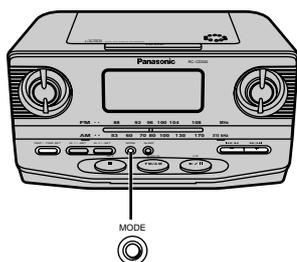

Sound will be produced in monaural, but this also reduces noise.
Press the button again to cancel. ("MONO" goes out.)

Using the sleep timer

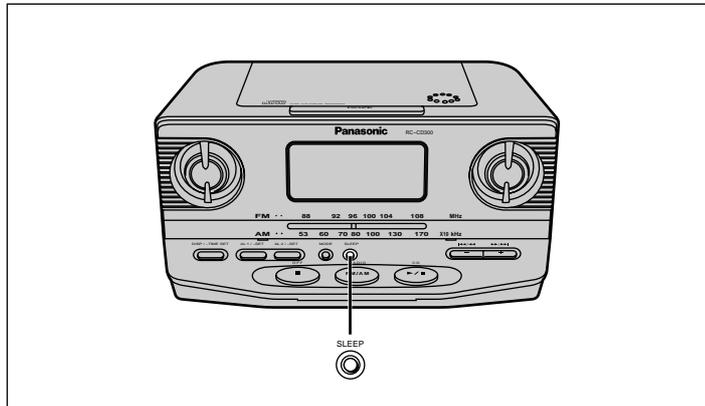

Press [SLEEP].

Each time [SLEEP] is pressed

30 (min.) → 60 → 90 → 120

↑ OFF ↓



■ To release the timer

Press [SLEEP] to select "OFF".

■ To check the remaining time

Press [SLEEP] once.

The time display is restored after the remaining time is displayed.

■ To change the remaining time

Press [SLEEP] to display the remaining time then press again to change the time.

For your reference:


You can combine the alarm and sleep timer. Be sure the volume is at an appropriate level before you turn the unit off.

Using the alarm

You can set the unit to come on at a set time and play a CD, the radio or a buzzer. The unit turns off automatically after one hour.

Preparation: Set the current time. (Refer to page 3 "Setting the time")

Setting the CD/Radio alarm (ALARM 1)

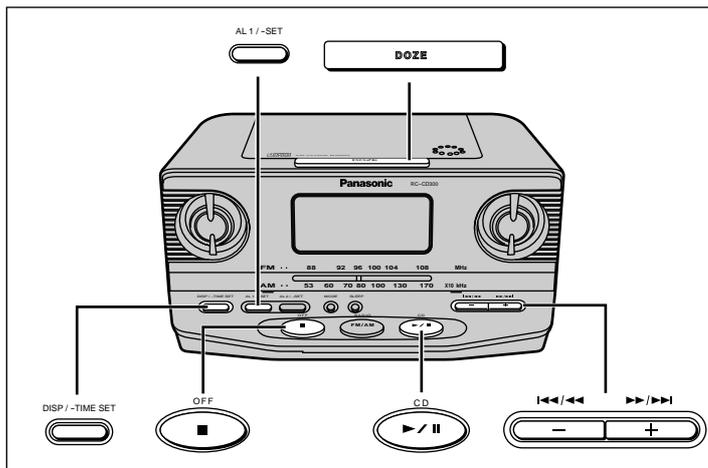

CD

- 1 Press [▶/||, CD] to start play.
- 2 Press [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] to select the desired track.
- 3 Press and hold [AL 1/-SET] until the display flashes.



- 4 Press [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] to adjust the alarm time.
 [+ , ▶▶/▶▶]: Increases the time by one-minute units.
 [- , ◀◀/◀◀]: Decreases the time by one-minute units.
 The time changes faster if you hold [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] down.



- 5 Press [AL 1/-SET].
The alarm time is set and "AL 1" is indicated on the display.



- 6 Press [■, OFF] to turn off.

RADIO

- 1 Tune to the station. (Refer to page 5 "Listening to the radio")
- 2 Press and hold [AL 1/-SET] until the display flashes.
- 3 Press [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] to adjust the alarm time.



- 4 Press [AL 1/-SET].
The alarm time is set and "AL 1" is indicated on the display.



- 5 Press [■, OFF] to turn off.


For your reference:

The unit can be used after the CD/Radio alarm has been set. Be sure the volume is at an appropriate level before you turn the unit off.

Note

If you set the CD alarm but do not insert a CD or set the radio alarm but do not receive a station, the buzzer will sound at the set time instead.

Setting the buzzer alarm (ALARM 2)

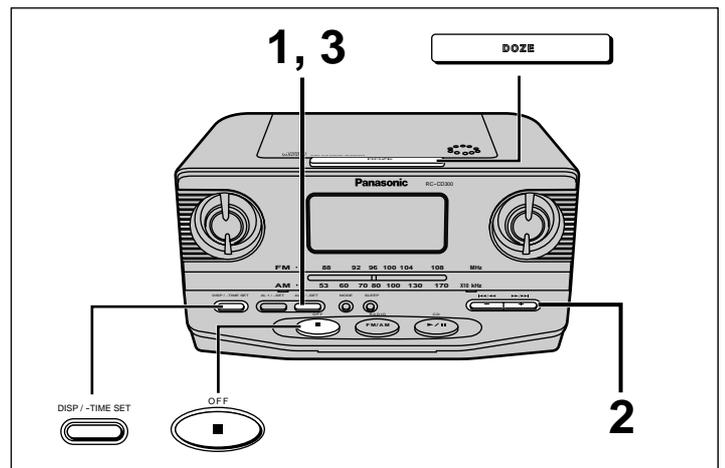

- 1 Press and hold [AL 2/-SET] until the display flashes.



- 2 Press [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] to adjust the alarm time.
Example: set the alarm time for "7:00 AM".

[+ , ▶▶/▶▶]: Increases the time by one-minute units.
 [- , ◀◀/◀◀]: Decreases the time by one-minute units.



The time changes faster if you hold [+ , ▶▶/▶▶] or [- , ◀◀/◀◀] down.

- 3 Press [AL 2/-SET].
The alarm time is set and "AL 2" is indicated on the display.



Note

You cannot adjust the volume of the buzzer alarm.

To shut off the alarm

Press [■, OFF].

The alarm is turned off but the setting remains intact so the alarm will operate as set the next day as well.

To clear the alarm setting

Press [AL 1/-SET] or [AL 2/-SET] again.

"AL 1" or "AL 2" is cleared.

To snooze a few more minutes even after the alarm has sounded

Press [DOZE].

The alarm sounds again 6 minutes later.

Press [■, OFF] to shut off the alarm.

To check the alarm time

Press [DISP/-TIME SET].

The alarm time is displayed. (ALARM 1 and then ALARM 2)

Note

This unit enables two alarms (ALARM 1, ALARM 2) to be set separately.

Troubleshooting guide

Before requesting service, make the below checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem,

In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or the website (<http://www.panasonic.com>).

In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 905-624-5505, or visit the website (www.panasonic.ca), or an authorized Servicentre closest to you.

Common problems

Problem	Check this
" " 12:00 " is displayed. " - - - - " is displayed.	<ul style="list-style-type: none"> •The clock hasn't been set. Set the current time. •A CD hasn't been inserted.
The alarm doesn't sound at the set time.	Ensure the alarm's indicator is on ("AL 1" or "AL 2").
The memory has been cleared.	<ul style="list-style-type: none"> •Reset the items into the memory. •Insert a memory back-up battery to preserve the contents of the memory.

CD

Problem	Check this
"E" is displayed.	Indicates incorrect operation. Read the instructions.
Play doesn't start or display is incorrect.	<ul style="list-style-type: none"> •Clean the CD. •Wait for an hour for condensation to dry, then try again. •Make sure the label is facing up. •Replace the CD if it is scratched, warped, or irregularly shaped.

Radio

Problem	Check this
The picture is distorted. A lot of noise.	Are you using the unit too near a TV or Tuner? Move the unit away from a TV or tuner or turn off.

ONLY FOR U.S.A.

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Audio Products Limited Warranty

Limited Warranty Coverage

If your product listed below does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product or Part Name	Parts	Labor
Radio, Clock Radio, Radio with Tape Player or Recorder, Portable CD Player, Headphone Stereo, Tape Recorder, Speaker	One (1) Year	One (1) Year
Rechargeable batteries (in exchange for defective item)	Ten (10) Days	Not Applicable
SD Memory Card (in exchange for defective item)	Ninety (90) Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

To obtain service in the USA please contact:

Panasonic Services Company, Panasonic Plus Department
20421 84th Avenue South
Kent, WA 98032
Tel: 1-800-833-9626 Fax: 1-800-237-9080

For assistance in Puerto Rico call Panasonic Sales Company
(787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

Customer Services Directory

For Product Information, Operating Assistance,
Literature Request, Dealer Locations, and all Customer
Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm;
Saturday-Sunday 9 am-7 pm, EST.

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your
nearest servicenter by visiting our Web Site.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".

THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Service in Puerto Rico
Matsushita Electric of Puerto Rico, Inc.
Panasonic Sales Company/Factory Servicenter:
Ave. 65 de Infantería, Km. 9.5,
San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday-Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Product service

- Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - The AC power supply cord or AC adaptor has been damaged; or
 - Objects or liquids have gotten into the unit; or
 - The unit has been exposed to rain; or
 - The unit does not operate normally or exhibits a marked change in performance; or
 - The unit has been dropped or the cabinet damaged.
- Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Product information

For product information or assistance with product operation: In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts @panasonic.com, or the website (<http://www.panasonic.com>).

In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 905-624-5505, or visit the website (www.panasonic.ca), or an authorized Servicentre closest to you.

User memo:

DATE OF PURCHASE _____
 DEALER NAME _____
 DEALER ADDRESS _____
 TELEPHONE NUMBER _____

Specifications

Frequency range	
FM:	87.5–108.0 MHz
AM:	525–1710 kHz
Sampling frequency	44.1 kHz
Decoding	16 bit linear
Beam source	Semiconductor laser (wavelength 780 nm)
No. of channels	2 channel, stereo
Wow and flutter	Less than possible measurement data
DA converter	MASH (1 bit DAC)
Speakers	4.5 cm (1 ³ / ₄ " 6 Ω×2
Power requirement	AC 120 V, 60 Hz Power consumption: 14 W
Memory back-up	9 V (One 6F22/6LR61, 006P battery)
Dimensions (W×H×D)	232×107×215 mm (9 ¹ / ₈ "×4 ³ / ₁₆ "×8 ⁷ / ₁₆ "
Mass	1.55 kg (3 lb 6.7 oz) without battery

Note:

Specifications are subject to change without notice. Mass and dimensions are approximate.

Power consumption in standby mode: 1.6 W


Maintaining the Lens

Open the lid and clean the lens.

Use a cotton swab to gently wipe off any finger-prints.

Recommended product:

Lens cleaner kit (SZZP1038C)

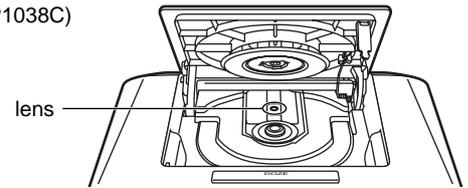

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION:

TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

CAUTION:

This device complies with Part 15 of the FCC Rules. Operation is subject to the conditions that this device does not cause harmful interference. Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

ONLY FOR CANADA

CAUTION	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM. (IEC60825-1 Class 3B)
ATTENTION	RAYONNEMENT LASER INVISIBLE DANGEREUX EN CAS D'OUVERTURE ET, LORSQUE LA SECURITE EST NEUTRALISEE, EXPOSITION DANGEREUSE AU FASCICULE.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSFORBUDENE ER LØSE AF FUNKTION, UNGØDE UDSÆTTELSE FOR STRÅLING.
VARO!	AVIATTAESSA JA SUOJALUKITUS OCHETTIAESSA OLET ALTIINA NÄKYMÄTÖNÄ LASERSÄTELYLLE, ÄLÄ KATSO SÄTEESEEN.
VARNING	OSYNLIG LASERSTRÅLING NÅR DENNÄ DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD, BETRÄKTA EJ STRÅLEN.
VORSICHT	UNGSICHTBARE LASERSTRÄHLUNG, WEIN ABDECKUNG GEÖFFNET UND SICHERHEITSVERREGELUNG ÜBERBRÜCKT, NICHT DEM STRAHL AUSSETZEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DENNEN ÅPNES OG SIKKERHEDSLÅS BRYTES, UNGØDE EKSPONERING FOR STRÅLEN. (IOLKXSD003)

Inside of product