

 
Supplementary Information for REFERENCE MANUAL

About the Functions Added
in Dock&Done 2.0 Update

Digital Camera

IR-500

OLYMPUS

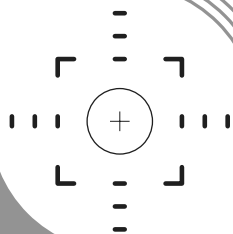

Dock&Done

About this manual

 
This manual explains the main functions added or changed when the camera is updated to the version compatible with Dock&Done 2.0, and their operation. For information about the functions other than those added or changed by updating, refer to the Reference Manual supplied with the camera.

Trademarks

Ⓜ, Dock&Done and OLYMPUS Master are trademarks of OLYMPUS CORPORATION.


Main functions added or changed in Dock&Done 2.0



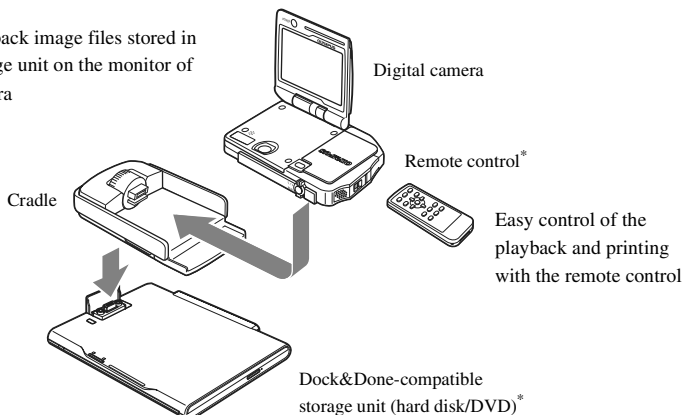


Playing back image files stored in the storage unit on the monitor of the camera




Saving the images on the camera to a CD or DVD using the DVD storage unit

* Sold separately

Print reservation Canceling all of the current print reservations and making new reservations  P.5

Dock&Done function Support for the optional Dock&Done-compatible DVD Storage  P.6
Playing back images stored on a storage unit  P.10
Saving images on the camera to a CD or DVD  P.14
Printing images played back  P.16
Resetting print reservations automatically after printing is complete  P.19

Remote control Support for the optional remote control (RM-100)  P.20



Camera setting Switching the display language  P.28
You can select the display language among from English and the language selected when updating.
Item “ERASE STORED IMAGE” in the setup menu changed to “STORE AND”
The options “ON” and “OFF” have also been changed to “ERASE” and “KEEP” respectively. For details about the function and its operation, see “Erasing the image data automatically after storing them onto the storage unit (ERASE STORED IMAGE)” (P.157) in the Reference Manual supplied with the camera.

Table of contents

About this manual	2
Main functions added or changed in Dock&Done 2.0	2

Making print reservations	5
Canceling all of the current print reservations and making new reservations	5



Using the  Dock&Done functions	6
Using the Dock&Done-compatible storage unit	6
Storing camera images	6
Playing back images on the storage unit (Storage Playback)	10
Creating a disk for storing images (CREATE SHARE DISK)	14
Printing images being played back	16
Printing images on the camera	16
Printing images on the storage unit	16
Configuring camera settings	19
Resetting the print reservation automatically after printing is complete	19

Using the remote control for playback	20
Setting up the camera	20
Operating the camera	21
Using the direct buttons on the remote control	22


Others	23
Error message list	23
If a problem arises	24
List of added or changed menu items	26

Making print reservations

● Canceling all of the current print reservations and making new reservations

 
- 1 Turn the mode dial to , then press .

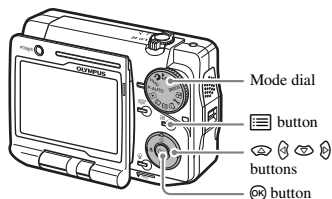


The playback menu appears.



 - 2 Press ,  to select “,” then press .

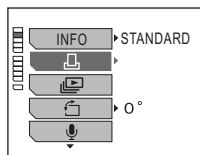When there is a print reservation(s), the screen to cancel or keep the reservation(s) appears.



- 3 Press ,  to select “RESET,” then press .

All print reservations are canceled.



4 Make new reservations.

For detailed procedure to make print reservations, see

“Making print reservations (DPOF)” (P.182) in the Reference Manual supplied with the camera.



Tips

- If you want to make additional reservations without canceling current reservations, select “KEEP” in step 3.
- If you want to cancel print reservations for specific images, select “KEEP” in step 3, and cancel reservations frame by frame. For detailed procedure to cancel print reservations frame by frame, see “Canceling print reservations” (P.189) in the Reference Manual supplied with the camera.

Using the Dock&Done functions

Using the Dock&Done-compatible storage unit


You can use the optional Dock&Done-compatible DVD Storage as well as the optional Dock&Done-compatible HD Storage. The DVD storage unit allows you to save camera images to a CD or DVD.

For detailed operations of the Dock&Done-compatible storage unit (hard disk/DVD), refer to the instruction manual of the storage unit.


Storing camera images

You can store only new images on the Dock&Done-compatible storage unit (hard disk/DVD). The “STORE” setting is set to “STORE” for newly taken images. Once an image is stored, the setting is canceled automatically to prevent storing the same image multiple times.

1 Dock the cradle on the storage unit.

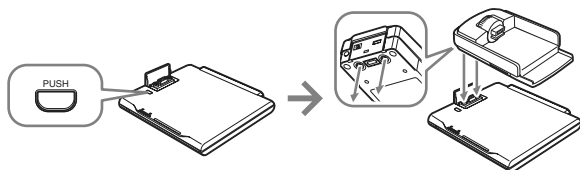

- 2 Connect the AC adapter to the storage unit and the power cord to a wall outlet.

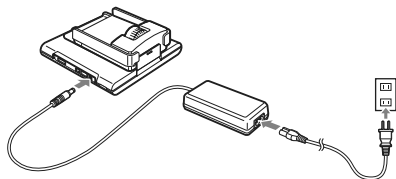



- 3 Set the Dock&Done mode/PC mode switch on the storage unit to "DOCK," and turn on the storage unit.

Wait until the ACCESS indicator on the storage unit goes off.




4 Set the camera on the cradle with the multi-swing display opened.

- The camera turns on, and the “DOCK MODE” screen appears.
- The camera is powered by the AC adapter of the storage unit.
- When an unformatted disk is inserted in the DVD storage unit, the disk format screen appears. For details, refer to the instruction manual of the DVD storage unit.

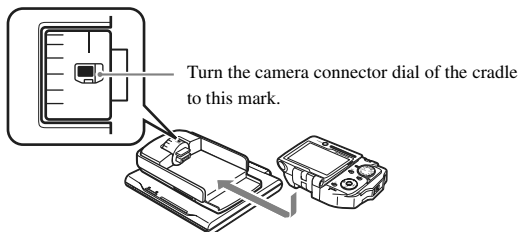**5 Press ,  to select “STORE ONLY,” then press .**

When the images have been stored, the camera turns off automatically.

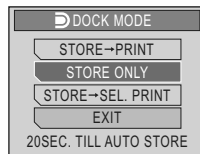

“DOCK MODE” screen menu

The available menu varies depending on the camera settings and whether print reservations have been made or not.

STORE→PRINT:	Stores new images on the storage unit, and then prints images with print reservations.
STORE ONLY:	Stores new images on the storage unit.
STORE→SEL. PRINT:	Stores new images on the storage unit, and then prints selected images.
PRINT:	Prints images with print reservations.
SEL. PRINT:	Prints selected images.
EXIT:	Exits without storing or printing.




**Tips**

- You can also individually select the images to be stored on the storage unit. “Setting images to store on a Dock&Done-compatible storage unit (STORE)” (P.129) in the Reference Manual supplied with the camera
- You can also set the camera to automatically erase images after they have been stored on the storage unit. “Erasing the image data automatically after storing them onto the storage unit (ERASE STORED IMAGE)” (P.157) in the Reference Manual supplied with the camera
- When the camera is off, the camera battery is charged by the AC adapter of the storage unit.
- Packet-writing software is required on your PC if you want to view images stored on a disk using the DVD storage unit. For details about the packet-writing software, refer to the instruction manual of the DVD storage unit.

Playing back images on the storage unit (Storage Playback)




You can use the camera's monitor to view images stored on the Dock&Done-compatible storage unit (hard disk/DVD).

Before operating the menus, make sure the camera, cradle and storage unit are set up.


- 1 If the "DOCK MODE" screen is displayed, press ,  to select "EXIT," then press .


The mode selection screen appears.



- 2 Press ,  to select "STORAGE," then press . Data on the storage unit are displayed in the multi-year display.

Turn the zoom lever to switch to the 12-month, one-month, index, or single-frame display.

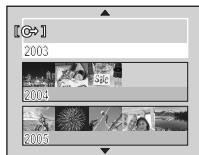

- 3 In the calendar display, select the date of the image you want to play back, then press .

The images in the selected date are displayed in the 9-frame index display.



4 Press , , , to select the image you want to play back, then press .

The image is displayed in the single-frame display. To return to the index display, turn the zoom lever to W.



— Displayed during storage playback.

To switch the display using the scroll bar

When images on the storage unit are displayed in the calendar or index display, you can switch the display using the scroll bar.

Press , to select the scroll bar. Press , to display the next or previous images in the calendar or index display.

12-month display



Scroll bar

One-month display



Scroll bar

Index display



Scroll bar







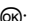

Tip

In the multi-year display, the scroll bar is not displayed.





To play back movies on the storage unit

Select the movie you want to play back in the index display, then press .

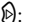Operations during movie playback


- : Volume up
- : Volume down
- : Hold down this button for double speed playback.
- : Press this button for reverse playback. Hold down to fast reverse at double speed.
- : Pause
- : Pauses playback and displays the storage playback menu.

Operations during pause

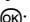



- : Displays the next frame.
- : Displays the previous frame.
- : Resumes playback from the specified frame.
- : Displays the storage playback menu.




Tips

- To cancel the playback, select "STOP" in the storage playback menu, and then press .
- When playing back movies on the storage unit, some of the functions, such as the reverse playback, reverse frame step, etc., work in a restricted mode.




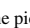


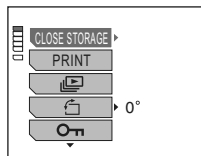

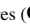

To end the storage playback

Press  to display the storage playback menu. Press ,  to select "CLOSE STORAGE," then press . Storage playback ends, and the screen shows the mode selected with the mode dial.




Tips

- In storage playback, the index display is fixed at the 9-frame display.
- The following operations are available in the storage playback menu:

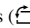PRINT:	 "Printing images on the storage unit" (P.16)
	 "Playback of the pictures as a slide show ()" (P.105) in the Reference Manual supplied with the camera
	 "Rotating pictures ()" (P.108) in the Reference Manual supplied with the camera
ON:	 "Protecting pictures ()" (P.126) in the Reference Manual supplied with the camera
ERASE (ERASE):	 "Erasing pictures (ERASE/ALL ERASE)" (P.127) in the Reference Manual supplied with the camera
ERASE (ALL ERASE):	You can erase all data in a specific day, month, or year. In the calendar display, select the day, month, or year for which you want to erase all data, and then display the storage playback menu and select "ALL ERASE."



Notes

- Data that cannot be played back on the camera is displayed blacked out in the calendar and index display. An error message appears if you try to play back the data.  "Error message list" (P.23)
- Sound data recorded to still images using the postrecording function cannot be played back in storage playback mode.
- The erased data are completely deleted from the storage unit, and cannot be restored.
- Never remove the camera from the cradle or turn the camera off until the storage playback ends.
- To use a Dock&Done-compatible HD Storage for storage playback, it is required that it supports the storage playback function. If your model does not support the function, you need to update the firmware of the storage unit. For details, see the Olympus web site.

Creating a disk for storing images (CREATE SHARE DISK)



You can use the Dock&Done-compatible DVD Storage to easily burn a CD or DVD of all images stored on the camera. The disks created using this function are readable on the CD/DVD drive of PCs, so you can use them for distribution purposes.

Before performing the operation below, prepare an unused (unformatted) CD or DVD. For details about the operation of the Dock&Done-compatible DVD Storage, refer to the instruction manual of the DVD storage unit.



- 1 Dock the cradle on the DVD storage unit, and connect the AC adapter to the DVD storage unit and the power cord to a wall outlet.**


Do not set the camera on the cradle yet.

- 2 Set the Dock&Done mode/PC mode switch on the DVD storage unit to "DOCK," and turn on the DVD storage unit.**

- 3 Turn the mode dial of the camera to , then press .**

The playback menu appears.

- 4 Press ,  to select "CREATE SHARE DISK," then press  to enter the settings.**

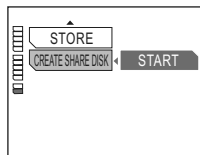

- 5 Press .**

A message appears.




6 Set an unused disk in the DVD storage unit.

Wait until the ACCESS indicator on the DVD storage unit goes off.

7 Set the camera on the cradle with the multi-swing display opened.

- The disk is formatted, images are stored, and then the disk is finalized.
- When the process is complete, the camera screen returns to the normal playback screen.

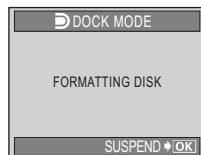**Tips**

- Finalized disks are readable on the CD/DVD drive of PCs. (They cannot be played on a set top DVD player or recorder.) Once a disk is finalized, you can no longer write or rewrite data on that disk.
- To create another disk, remove the camera from the cradle, and repeat from step 3.

**Notes**

- Never turn off the camera or DVD storage unit, or remove the camera from the cradle, until the whole process finishes.
- If you cancel formatting or storing images, that disk becomes disabled.

● Printing images being played back

You can use your camera and a Dock&Done-compatible storage unit (hard disk/DVD) with a Dock&Done-compatible printer to play and print images stored on your camera or storage unit. For details about the operation of the Dock&Done-compatible storage unit or printer, refer to the instruction manual of the storage unit or printer.


Printing images on the camera

You can play back and print images on the camera from the “PC/PRINTER” screen displayed when connecting the camera to the Dock&Done-compatible printer. To connect the camera directly to the Dock&Done-compatible printer, use the USB cable supplied with the camera. For details about printing operations, see “Printing with a PictBridge-compatible printer” (P.192) in the Reference Manual supplied with the camera.

Printing images on the storage unit

You can play back and print images on the storage unit.

- 1** Connect the AC adapter and power cord to the storage unit, and connect the printer to the storage unit using the optional Dock&Done cable, then turn the printer on.
- 2** Dock the cradle on the storage unit.

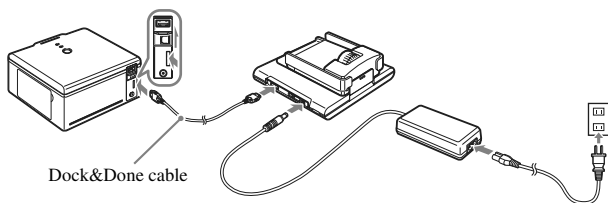


- 3** Set the Dock&Done mode/PC mode switch on the storage unit to “DOCK,” and turn on the storage unit.

Wait until the ACCESS indicator on the storage unit goes off.



- 4** Set the camera on the cradle with the multi-swing display opened.

- The camera turns on, and the “DOCK MODE” screen appears.
- The camera is powered by the AC adapter of the storage unit.

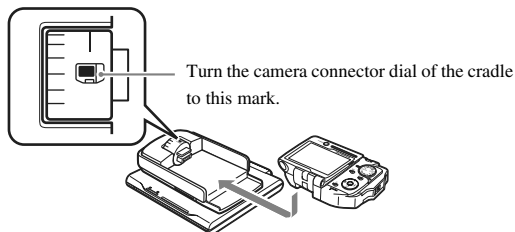






- 5** Press \triangle , ∇ to select “EXIT,” then press OK to end the “DOCK MODE” screen.

The mode selection screen appears.

- 6** Press \triangle , ∇ to select “STORAGE,” then press OK .

- 7** Select the image you want to print.

- 8 Press  to display the storage playback menu.
- 9 Press ,  to select "PRINT," then press  to enter the settings.

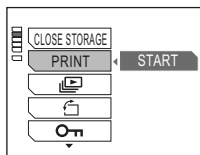

- 10 Press .



- 11 Follow the screen instructions to select the images to be printed, number of prints, and paper size, etc.

For details about the settings, see pages 196 and 197 in the Reference Manual supplied with the camera. (The order of steps may differ, but the setting items are the same.)



Tips


- You can set multiple frames to be printed, but the total number of frames that can be set at a time is limited.
- You cannot print the index of the images on the storage unit.

Configuring camera settings

Resetting the print reservation automatically after printing is complete

You can set whether to keep or cancel print reservations after printing images by selecting “PRINT,” etc., on the “DOCK MODE” screen. This prevents you from repeatedly printing the same image by mistake.

In the setup menu, set “PRINT AND” to “CANCEL” or “KEEP.” Setting this to “CANCEL” cancels all print reservations in the camera after printing.

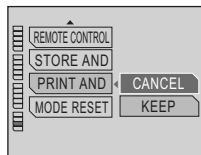

Note

When “PRINT AND” is set to “CANCEL” and “STORE AND” is set to “ERASE,” if you print images by selecting “STORE→PRINT,” print reservations are canceled and images on the camera are automatically erased after storing and printing are complete.

Using the remote control for playback

You can use the optional remote control (RM-100) to play back and print images.


For details about the remote control, refer to the instruction manual of the remote control.

Setting up the camera


Follow the procedure below to set up your camera to use the remote control.

- 1 Turn the mode dial to .**

The setup menu appears.

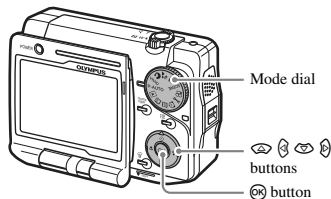


- 2 Press ,  to select "REMOTE CONTROL," then press .**

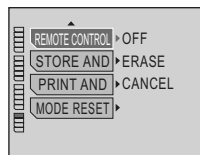

- 3 Press ,  to select "ON," then press .**

The setting is complete, and the screen returns to the menu.

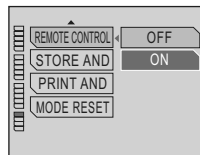


Operating the camera

You can use the remote control to play back images on the camera monitor or TV screen. The same operations (such as selecting or deleting images, etc.) can be performed in the same manner as the camera buttons.

When using the remote control, set the camera on the cradle.


1 Connect the AC adapter to the cradle, and set the camera on the cradle.

Set the camera with the multi-swing display raised and the remote control window facing forwards.

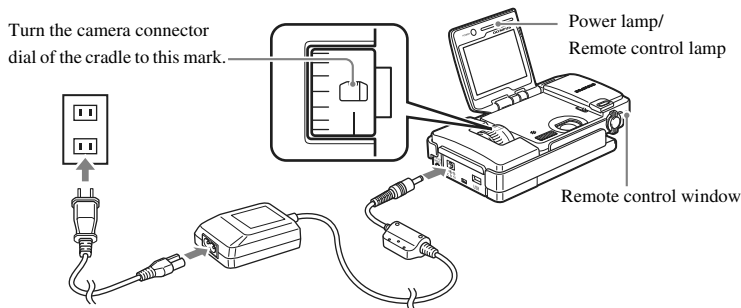

2 Make sure that the camera is turned on.

- The mode selection screen appears.
- If the camera is turned off, press the power switch on the camera or POWER button on the remote control.
- If the storage unit is connected, the “DOCK MODE” screen appears. Select “EXIT,” then press **OK** to exit the screen.

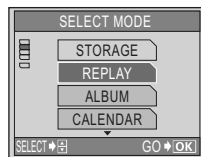

3 Press the **⏪** or **⏩** button on the remote control to select the desired mode.


- STORAGE:** Displays the data on a Dock&Done-compatible storage unit.
- REPLAY:** Displays the images on the camera.
- ALBUM:** Displays the images on the camera in the album display mode.
- CALENDAR:** Displays the images on the camera in the calendar display mode.
- CLOCK:** Displays the clock.

4 Press the button on the remote control.

- The screen of the selected mode appears. Operate the camera using the remote control buttons in the same manner as the camera buttons.
- To select any of the available modes, press the MODE button on the remote control.






Tips

- When the AC adapter is not used as the power source of the camera, you cannot turn on the camera using the POWER button on the remote control.
- The MENU button on the remote control has the same function as  on the camera.



Using the direct buttons on the remote control

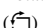Pressing the direct buttons displays various setting screens and changes the settings. For details about the procedures and settings, see the reference pages shown below.

Button	Operation		Ref. page	
	In normal playback	In storage playback	In this manual	In the Reference Manual supplied with the camera
MODE button	Displays the mode selection screen.		21	—
Print button ()	Displays the screen for resetting or making print reservations.	Displays the print settings screen.	5, 18	182
INFO (information display) button	Changes the settings each time you press the button.	Displays the setting screen.	—	110
Protect button ()			—	126
Picture rotation button ()			—	108

Others

● Error message list

Error message	Corrective action
 <p data-bbox="194 467 334 486">PICTURE ERROR</p>	<p data-bbox="394 340 875 419">The image cannot be played back on the camera because its format is not compatible with the camera or the image data is damaged.</p> <p data-bbox="394 430 864 564">This message is also displayed when sound data recorded to a still image using the postrecording function is selected in storage playback mode. Use image processing software to play back the sound data on a PC.</p>
 <p data-bbox="205 690 324 709">PRINTER FULL</p> <p data-bbox="163 733 225 752">CANCEL [OK]</p>	<p data-bbox="394 588 843 693">You are trying to set more frames than is allowed as objects to be printed. Set some of them to be printed first, and after printing is finished, set to print other frames.</p>

● If a problem arises

Dock&Done-compatible storage unit (hard disk/DVD)

Possible cause	Corrective action	Ref. page
● Storage playback function does not work.		
The HD Storage (S-HD-100) does not support Dock&Done 2.0.	Update the HD Storage to the version which supports Dock&Done 2.0.	13
The camera is not set on the cradle correctly.	Check if the camera is correctly set on the cradle.	—
● The disk cannot be ejected from the DVD storage unit.		
The storage playback is not closed.	Exit the storage playback and eject the disk again.	13



Tip

For problems other than those listed above, refer to the instruction manual of the storage unit.

Remote control







Possible cause	Corrective action	Ref. page
● The camera cannot be turned on with the remote control.		
The AC adapter is not connected.	Connect the AC adapter to the cradle.	22
The multi-swing display is closed.	Set the camera on the cradle with the multi-swing display raised.	21
● The remote control buttons do not function.		
The control frequency of the remote control does not match that of the camera.	Match the control frequency. For details, refer to the instruction manual of the remote control.	—
The camera is not set on the cradle in the correct direction.	Set the camera on the cradle with the multi-swing display raised and the remote control window facing forwards.	21
You are very far from the camera and the remote control signal does not reach.	Come closer to the camera and try again.	—
The battery of the remote control is going low.	Replace the battery with a new one. For details, refer to the instruction manual of the remote control.	—

List of added or changed menu items

The following is the list of menu items added or changed in Dock&Done 2.0. The items in boldface type are default settings.



For information about menu items other than those changed, see “Menu list” (P.236) in the Reference Manual supplied with the camera.

Playback menu (still image)

Item	Settings	Ref. page	
		In this manual	In the Reference Manual supplied with the camera
INFO	NO INFO/ STANDARD /DETAIL	—	110
 *	—	5	182
	NORMAL /SCROLL/FADER/ZOOM DOWN/ZOOM UP/CHECKERBOARD/BLINDS/SWIVEL/RANDOM	—	105
	+ 90° / 0° / - 90°	—	108
 (Postrecording)	START	—	117
EDIT	BLACK & WHITE/SEPIA/ 	—	115
	OFF /ON	—	126
ERASE	ERASE/ALL ERASE	—	127
FORMAT	YES/NO	—	172
ALBUM ENTRY	—	—	136
STORE	STORE /NOT STORE	—	129
CREATE SHARE DISK*	START	14	—


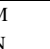





* Items added or changed

Playback menu (movie)

Item	Settings	Ref. page	
		In this manual	In the Reference Manual supplied with the camera
INFO	NO INFO/ STANDARD /DETAIL	—	110
	NORMAL /SCROLL/FADER/ZOOM DOWN/ZOOM UP/CHECKERBOARD/BLINDS/SWIVEL/RANDOM	—	105
STOP	—	—	98
INDEX PLAY	—	—	113
EDIT	—	—	119
CAPTURE	—	—	121
INDEX	—	—	123
	OFF /ON	—	126
ERASE	ERASE/ALL ERASE	—	127
FORMAT	YES/NO	—	172
ALBUM ENTRY	—	—	136
STORE	STORE /NOT STORE	—	129
CREATE SHARE DISK [*]	START	14	—

* Items added or changed

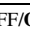


Setup menu

Item	Settings	Ref. page	
		In this manual	In the Reference Manual supplied with the camera
ALL RESET	OFF/ON	—	148
 *1	ENGLISH/Language selected when updating*2	—	151
SCREEN	OFF/1/2/CLOCK	—	152
SLEEP	30SEC/1MIN/3MIN/5MIN/10MIN	—	153
CUSTOM BUTTON	 /DIGITAL ZOOM/WB/METERING/AF MODE/FULLTIME AF/  (Sound recording with still images)/  (Sound recording with movies)/IMAGE STABILIZER	—	155
	OFF/ON (LOW/HIGH)	—	159
SHUTTER SOUND	OFF/1 (LOW/HIGH)/2 (LOW/HIGH)	—	160
BEEP	OFF/1 (LOW/HIGH)/2 (LOW/HIGH)	—	162
REC VIEW	OFF/ON	—	163
FILE NAME	RESET/AUTO	—	164
PIXEL MAPPING	START	—	166
	—	—	167
	—	—	38
VOLUME	—	—	168
VIDEO OUT	NTSC/PAL	—	170
REMOTE CONTROL*1	OFF/ON	20	—
STORE AND*1	ERASE/KEEP	—	157
PRINT AND*1	CANCEL/KEEP	19	—
MODE RESET	YES/NO	—	171

*1 Items added or changed

*2 You can switch the selected language using OLYMPUS Master. For details, see the OLYMPUS Master Help.

Storage playback menu *

Item	Settings	Ref. page	
		In this manual	In the Reference Manual supplied with the camera
CLOSE STORAGE	—	13	—
PRINT	START	18	—
	NORMAL /SCROLL/FADER/ZOOM DOWN/ZOOM UP/CHECKERBOARD/BLINDS/SWIVEL/RANDOM	—	105
STOP	—	12	—
	+ 90° / 0° / - 90°	—	108
	OFF /ON	—	126
ERASE	ERASE/ALL ERASE	13	—

* New menu

OLYMPUS®

<http://www.olympus.com/>

OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo, Japan

OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, PO Box 9058, Melville, NY 11747-9058,
U.S.A. Tel. 631-844-5000

Technical Support (USA)

24/7 online automated help: <http://www.olympusamerica.com/support>

Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm
(Monday to Friday) ET

E-Mail: distec@olympus.com

Olympus software updates can be obtained at: <http://www.olympus.com/digital>

OLYMPUS EUROPA GMBH

Premises: Wendenstrasse 14-18, 20097 Hamburg, Germany

Tel: +49 40-23 77 3-0 / Fax: +49 40-23 07 61

Goods delivery: Bredowstrasse 20, 22113 Hamburg, Germany

Letters: Postfach 10 49 08, 20034 Hamburg, Germany

European Technical Customer Support:

Please visit our homepage <http://www.olympus-europa.com>

or call our TOLL FREE NUMBER* : **00800 - 67 10 83 00**

for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg,
Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom

- Please note some (mobile) phone services/provider do not permit access or request an additional prefix to +800 numbers.

For all not listed European Countries and in case that you can't get connected to the above mentioned number please make use of the following

CHARGED NUMBERS: **+49 180 5 - 67 10 83** or **+49 40 - 237 73 899**

Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)