

SGH-D410C GPRS Telephone Quick Reference Card

Access the Menu Functions

- ① Press the **Menu** soft key.
- ② Scroll using the **Up** and **Down** keys through the list of the menus until you reach the one you want.
- ③ Press the **Select** soft key.
- ④ Scroll using the **Up** and **Down** keys through the list of the options until the one you want is selected.
- ⑤ Press the **Select** soft key.

Each of the two soft keys (**Up** and **Down**) perform the function indicated by the text above it, on the bottom line of the display.

Switch On/Off	Press and hold the Power key.
Makes a Call	<ol style="list-style-type: none"> ① Enter the number. ② Press the Call key.
End a Call	Briefly press the Power key.
View Missed Calls After Missing Them	<ol style="list-style-type: none"> ① Press the View soft key. ② Scroll using the Up and Down keys through the missed calls. ③ To return the call, press the Call key.
Answer a Call	Push the slider up or press the Call key.
Adjust the Volume	Press the Up or Down key on the left side of the phone.

<p>Choose the Alert Type</p>	<ol style="list-style-type: none"> ① Select the Alert Type menu (Menu 6.3). ② Select an option: <ul style="list-style-type: none"> • Light Only • Melody • Vibration • Vibra+Melody ③ Press the Select soft key. 	<p>Search for a Number in Phone Book</p>	<ol style="list-style-type: none"> ① Press the Name soft key. ② Select the Search option. ③ Enter the first few letters of the name. ④ Press the OK soft key. ⑤ To scroll through the names, press the ⬅ or ➡ key. ⑥ Press the View soft key. ⑦ To scroll through the numbers, press the ⬅ or ➡ key. ⑧ Press the ↶ key to dial.
<p>Store a Number in Phone Book</p>	<ol style="list-style-type: none"> ① Enter the number and press the Save soft key. ② Select an icon and press the Select soft key. ③ Select a memory. ④ Press the Select soft key. ⑤ Enter the name. ⑥ Press the OK soft key. ⑦ Press the OK soft key to confirm the name. ⑧ If necessary, change the location number. ⑨ Press the OK soft key. ⑩ Press the ↶ key to return to Idle mode. 	<p>Take a Photo</p>	<ol style="list-style-type: none"> ① Press and hold the Down key. ② Press the Take soft key. ③ Press the Save soft key. ④ Enter a photo name. ⑤ Press the OK soft key. ⑥ Press the ↶ key to return to Idle mode.