SGH-D428 GPRS Telephone Quick reference card

Search for a number in Phone book	① Tap ♠, or select Name in Idle mode and select Search. ② Enter the first few letters of the name. ③ Select OK. ④ Select the name from the list. ⑤ Press the
Choose the alert type	 Select the Alert type menu (Menu 4.3). Select an option: Light only Melody Vibration Vibra+Melody
Take a photo	 Press and hold the Down key. Select Take. Select Save. Enter a name. Select OK.

Switch on/ off	Press and hold the 16 Key.
Make a call	① Enter the number. ② Press the Key.
End a call	Briefly press the Key or close the phone.
View missed calls shortly after missing them	Open the phone and select View. Scroll through the missed calls. To return the call, press the key.
Answer a call	Open the phone or press the Key.
Adjust the volume	Press the ▲ or ▼ key on the left side of the phone.
	-

Select an item on the display	Choose one of the following options: Tap the item on the touch screen. Scroll to the item using the Navigation keys and press the Select or OK soft key. If the item is numbered, press the corresponding number key.	
Access the menu functions	Select Menu. Scroll through the list of the menus until you reach the menu you want. Select the menu. Scroll through the list of the options until the one you want is selected. Select the option.	
Each of the two soft keys perform the function indicated by the text above it, on the bottom line of the display.		

Use the tool icons below the display	
Store number in Phone book	 Enter the number and select Save. Select an icon. Select a memory. Enter a name. Select OK. If necessary, change the location number. Select OK. Press the key to return to Idle mode.