

* Some of the contents of this manual may differ from your phone, depending on the software installed or your service provider.



SAMSUNG

**PORTABLE CELLULAR
TELEPHONE
SCH-N380**

User's Manual



Please read this manual before operating your phone, and keep it for future reference.

© 2005 SAMSUNG Electronics & Mobile-8

SAMSUNG SCH N380 is locked and can be used only for valid access code or subscriber number of Mobile-8. Copyright is protected under the Copyright Law. Any action to break, eliminate, unlock and/or disable the Locking System of SAMSUNG SCH N380 is a serious Technological Control Measure infringement and consequently legal actions will be commenced against the infringer.

Contents

IMPORTANT SAFETY PRECAUTIONS	5
UNPACKING	7
YOUR PHONE.....	8
Phone Layout	8
Display	11
Backlight	12
GETTING STARTED	13
Installing a Battery	13
Charging the Battery	14
Switching On or Off the Phone	16
Using the Soft Keys.....	17
Your Phone's Modes	18
CALL FUNCTIONS	21
Making a Call	21
Answering a Call	28
Silencing the Call Ringer	28
Options During a Call	29
Using Caller ID	30
Viewing Missed Calls	30
ENTERING TEXT	31
Changing the Text Input Mode.....	32
Using T9(English) Mode	32
Using Alphabet Mode	34
Using Symbol Mode.....	36
Using Number Mode	36

USING THE MENUS	37
Accessing a Menu Function by Scrolling.....	37
Using Shortcuts	38
List of Menu Functions	39
PHONE BOOK	43
Find (<i>Menu 1-1</i>)	43
Add Entry (<i>Menu 1-2</i>)	46
Groups (<i>Menu 1-3</i>)	49
Memory Status (<i>Menu 1-4</i>)	49
MESSAGES	50
Write (<i>Menu 2-1</i>)	50
Inbox (<i>Menu 2-2</i>)	52
Outbox (<i>Menu 2-3</i>)	53
Drafts (<i>Menu 2-4</i>)	53
Templates (<i>Menu 2-5</i>)	54
Erase Messages (<i>Menu 2-6</i>)	55
Settings (<i>Menu 2-7</i>)	55
Voice Mail (<i>Menu 2-8</i>)	57
SMS Groups (<i>Menu 2-9</i>)	58
One Touch Paging (<i>Menu 2-0</i>)	58
CALL HISTORY	60
Missed (<i>Menu 3-1</i>)	60
Received (<i>Menu 3-2</i>)	62
Dialled (<i>Menu 3-3</i>)	62
Erase History (<i>Menu 3-4</i>)	62
Call Duration (<i>Menu 3-5</i>)	63
SOUND	64
Ring Tones (<i>Menu 4-1</i>)	64
Ringer Volume (<i>Menu 4-2</i>)	65
Alerts (<i>Menu 4-3</i>)	66
Key Tone (<i>Menu 4-4</i>)	66
Power On/Off Melody (<i>Menu 4-5</i>)	67

DISPLAY	68
Bahasa (Menu 5-1).....	68
Wallpaper (Menu 5-2).....	68
Banner (Menu 5-3).....	69
Backlight (Menu 5-4).....	69
LCD Contrast (Menu 5-5).....	70
Shortcut Indicator (Menu 5-6).....	70
ORGANISER	71
Scheduler (Menu 6-1).....	71
Task List (Menu 6-2).....	75
Memo Pad (Menu 6-3).....	76
Alarm (Menu 6-4).....	77
Calculator (Menu 6-5).....	78
World Time (Menu 6-6).....	79
Count Down (Menu 6-7).....	79
SETTING	81
Call (Menu 7-1).....	81
Phone/System (Menu 7-2).....	82
Security (Menu 7-3).....	84
GAMES	88
Child Monk Adventure (Menu 8-1).....	88
Black Planet (Menu 8-2).....	88
Hello Monkey (Menu 8-3).....	88
Bowling (Menu 8-4).....	88
Othello (Menu 8-5).....	88
Settings (Menu 8-6).....	89
HEALTH AND SAFETY INFORMATION	90
Exposure to Radio Frequency (RF) Signals....	90
For Body Operation.....	92
Precautions When Using Batteries.....	92
Road Safety.....	94
Operating Environment.....	94

Contents

Electronic Devices	95
Potentially Explosive Atmosphere	97
Emergency Calls	98
Other Important Safety Information	99
Care and Maintenance	99
GLOSSARY.....	102
INDEX	106
QUICK REFERENCE CARD	109

Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off near all medical equipment

Switch off your phone near medical equipment. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Meet any special regulations in force in any area and always with off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Important Safety Precautions


Water Resistance

Your phone is not water-resistant. Keep it dry.

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous. Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers.

Qualified Service

Only qualified service personnel may repair your phone. For more detailed safety information, see "Health and Safety Information" on page 90.

CAUTION

RISK OF EXPLOSION IF A BATTERY IS
REPLACED BY AN INCORRECT TYPE.
DISPOSE USED BATTERIES ACCORDING TO
THE INSTRUCTIONS.

Unpacking

Your package contains the following items. The illustrations below may look different from your phone and accessories:



Handset



Travel Adapter



Quick Guide



Battery

In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Standard Battery
- Travel Adapter
- Car Adapter
- PC Data Link Cable
- Ear Microphone

Your Phone

Phone Layout

The following illustrations shows the main elements of your phone.



Keys

Key(s) Description







(soft keys)

Performs the functions indicated by the text above them, on the bottom line of the display.



In Menu mode, scrolls through the menu options.

In Standby mode, quickly enters the following menus respectively:

-  : **Messages**
-  : **Games**
-  : **Scheduler**
-  : **Sound**



Deletes characters from the display.

In Menu mode, returns to the previous menu level.




 






Makes or answers a call.

In Standby mode, retrieves the most recent numbers dialed, received, or missed. Redials the last outgoing number when pressed and held.




Ends a call. Also switches on and off the phone when pressed and held.

In Menu mode, cancels your input and returns to Standby mode.

Key(s)	Description (continued)
  	Enters numbers, letters, and some special characters.
	Enters 1-Beep mode when pressed and held.
	In Standby mode, activates Key Guard mode when pressed and held. To unlock the keypad, press  and then  . In the text entry mode, changes the case of letters.
	In Standby mode, quickly enters or exits Vibrate mode when pressed and held. In the text entry mode, inserts a space.



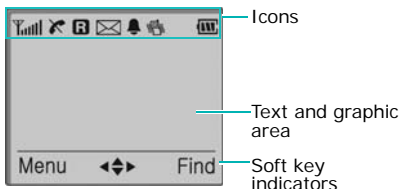

Display

The display has three areas: the top line of icons, the text and graphic area, and the bottom line of soft key indicators.



Icons

Icon Description

- 
Signal Strength: Shows the received signal strength. The greater the number of bars, the better the signal.
- 
Service: Appears when a call is in progress.
- 
No Service: Appears when you are outside a service area. When it displays, you cannot make or receive calls. Wait a little while for a better signal or move into an open area to regain service.
- 
Roaming: Appears when you are out of your home area and have logged onto a different network; for example, when travelling in other countries.

Icon Description (continued)



New Message: Indicates that there is a new message waiting to be checked. The message icon blinks when an urgent message is received. It also blinks if a message is received but the memory is full.



Alarm: Appears when you set an alarm to ring at a specified time.



Vibration: Appears when your phone is in Vibrate mode or it is set to vibrate when a call comes in the **Ringer Volume** menu.



Battery Status: Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

The backlight illuminates the display and keypad. When you press any key, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on your setting in the **Backlight** menu (**Menu 5-4**).

To specify the length of time the phone waits before the backlight turns off, set the **Backlight** menu; see page 69 for further details.

Getting Started


Installing a Battery

Your phone is powered by a rechargeable Li-ion battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 145 minutes for a standard battery.

Installing the Battery

1. Remove the battery cover by pressing down the groove and then sliding the cover out.

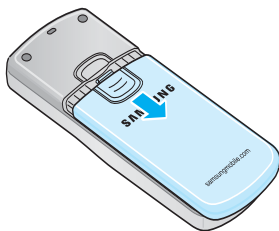


2. Place the battery into the battery slot, making sure that the metal contacts are facing down.

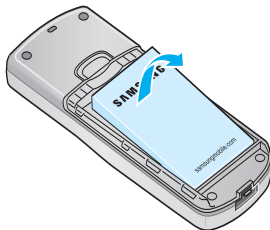

Getting Started

3. Place the battery cover, as shown, and slide it toward the top of the phone until it clicks into place.

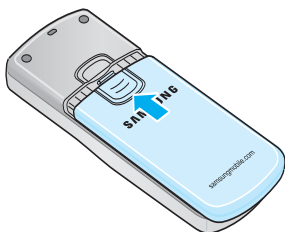


Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer.

You can use the phone while the battery is being charged, but this will cause the battery to charge more slowly.


1. With the battery in position on the phone, plug the connector of the travel adapter into the adapter jack at the bottom of the phone.

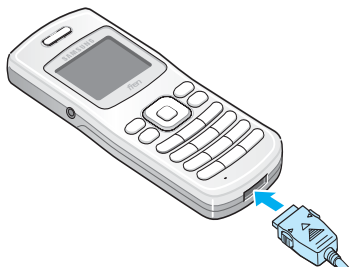

2. Plug the adapter into a standard AC wall outlet.


The Battery Strength icon on the display repeats filling and emptying itself to indicate that the battery is charging.

3. When charging is finished, unplug the adapter from both the power outlet and the phone by pressing the buttons on both sides of the connector and pulling the connector out.

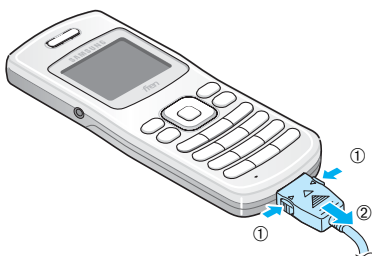


Note: Do not remove the battery from the phone without unplugging the adapter while it is charging. Otherwise, the phone may be damaged.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, the battery sensor will let you know by blinking the empty Battery Strength icon (). You will hear a warning tone and a "LOW BATTERY WARNING" message will be repeated at regular intervals on the display.

When the battery becomes too weak for the phone to operate, it switches off automatically.


Switching On or Off the Phone

1. Press and hold  for more than one second to switch on the phone.

The power-on image displays and an alert sounds. When the your phone locates services, it displays the current time and date. You can now place and receive calls.



If the phone is out of the service area, the No Service icon () appears on the display. In this case, you cannot place and receive calls. You can try again later when service is available.

Note: You can change the display language in the **Bahasa** menu (**Menu 5-1**). See page 68.


2. When you wish to switch off the phone, press and hold  for more than two seconds.

WARNING!

Do not switch on the phone when mobile phone use is prohibited or when it may cause interference or danger.

Note: If your phone is in Key Guard mode, you first need to unlock the keys by pressing  and .

Using the Soft Keys

Your phone offers a set of functions that allows you to customise it. These functions are arranged in menus and submenus, accessed using the two soft keys marked . Each menu and submenu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current function you are using; the labels on the bottom line of the display just above each key indicates its current role.

Example:







Press the left soft key to access the Menu mode.

Press the right soft key to find a name or number from Phone Book.

Your Phone's Modes

Standby Mode

Standby is the most basic state of your phone. The phone goes into Standby mode soon after you turn it on, or whenever you briefly press . When your phone is in Standby mode, you will typically see a wallpaper or banner message and the current date and time. If you enter a phone number, you can press  to dial it, or press the **Save** soft key to save it in the internal Phone Book.


Press  at any time to return to Standby mode. Be careful; if you are on a call when you press the  key, your phone disconnects the call and returns to Standby mode.




Menu mode can be accessed when you are in Standby mode.

Talk Mode

You can place and answer calls only when your phone is turned on. During a call, the phone is in the Talk mode. While you are in Talk mode, pressing the **Menu** soft key gives you a list of options. See page 29 for details on the options.

Key Guard Mode

You can lock the keypad by pressing and holding  in Standby mode. By doing this, you can prevent accidental key pressing.

To unlock the keypad, press  and then . The Lock icon () displays in the soft key indicator field.

When you have an incoming call or an alarm occurs in Key Guard mode, the mode is automatically deactivated and the phone goes to Standby mode.

Note:

- You can set the phone to automatically lock the keypad after a specified period of time, in the **Key Guard** menu (**Menu 7-2-2**). See page 82.
- In Key Guard mode, you cannot make an emergency call. You should unlock the keypad before making a call.

Lock Mode

When you lock your phone using the **Lock Mode** menu (**Menu 7-3-1**), you can receive messages and calls, but you cannot place a call until you unlock the phone.



Once the phone is locked, it is in restricted mode until the lock code is entered. Press soft key, Unlock then enter 4 digit password. The lock code password by default is 0000.


In case you have changed the password and are unable to remember the new password. Please contact Samsung authorised service center.

For further details about locking and unlocking the phone, see page 84.

Vibrate Mode


Vibrate Mode disables all sounds on the phone. This feature is best used in situations where the phone might disturb others, such as in a meeting, a library, or a theatre. You can switch your phone to Vibrate Mode with one touch of a key.


In Standby mode, press and hold down  until “Enter! Vibrate Mode” and the Vibrator icon () display.

To exit and reactivate the previous sound settings, press and hold  again until “Exit! Vibrate Mode” appears. The Vibrator icon no longer displays.

1-Beep Mode

In 1-Beep mode, your phone beeps only once when a call or SMS is incoming. You can switch your phone to the 1-Beep mode with one touch of a key.


In Standby mode, press and hold  until “Entering 1-Beep Mode” displays.

To exit and reactivate the previous sound settings, press and hold  again until “Exit 1-Beep Mode” displays.

Call Functions

Making a Call

To make a call:

1. In Standby mode, enter the area code and phone number.
2. Press . The phone places the call to the entered phone number.

Note: If you have activated the **Auto Redial** menu (**Menu 7-1-2**), the phone automatically retries to make the call up to 10 times when a connection fails. See page 81 for more information.

Using the Dialling Options

While entering a phone number, you can use the following options by pressing the **Options** soft key.

Speed Dial: allows you to use the Speed Dialling feature. For details, see page 24. This option displays only when you enter a number which can be a Phone Book memory location.

Call: places a call to the number you entered.



Save: allows you to save the number you entered in Phone Book. For details, see page 46.

Find: allows you to find a number from Phone Book. For details, see page 43.


Call Functions

Hard Pause: enters a hard pause. For details about pause-dialling, see page 25.

Correcting the Number

To clear	Press
the last digit displayed	 .
the whole display	 for more than one second.

Ending a Call

When you want to finish your call, briefly press .


The call time, or the length of the call, displays briefly and the phone returns to Standby mode.

Making a Call from Phone Book



You can store the phone numbers that you use regularly in the phone's memory, which are collectively called Phone Book. Simply select the required name to recall the associated number to dial.



For more information about the Phone Book feature, see page 43.




Redialling the Last Number

To redial the last call you made, press  twice or press and hold it down.

Your phone stores the most recent 10 numbers each you dialled received or missed. To redial any of these numbers:

1. If you have typed any characters on the display, press  to return to Standby mode.
2. Press  to display the list of the dialled numbers.

You can scroll to the other types of calls, missed and received calls, if any, by pressing  or .

3. Use  and  to scroll through the list until the required number highlights.
4. To dial the number, press .

Emergency Dialling


You can place emergency call from your emergency number list even if your phone is locked. For more information on emergency numbers, see page 85.

Speed Dialling

Once you have stored phone numbers in Phone Book, you can dial them easily whenever you want. You can assign up to 1000 numbers for Speed Dialling.

For the Memory Locations of One Digit



Press and hold the digit of the memory location containing the number to be dialled.

For example: Location no. 0009
press and hold .

The stored number and name display and then the phone dials the number.

For the Other Memory Locations

Press the first digit(s) briefly, then hold down the last digit of the memory location.

For example: Location no. 0023
Press  briefly and hold down .

The stored number and name display and then the phone dials the number.


Note: When several numbers are saved in one location, only the phone number which is specified with the Speed Dial label will be automatically dialled. For details, refer to page 47.

4-digit Dialling

You can quickly dial a phone number in Phone Book by entering its last four consecutive digits. Your phone searches Phone Book for the entire number for you.

1. Enter the last consecutive digits for the number you want to dial.
2. Press the **Options** soft key.
3. Select **4-digit Dial** and press the **Select** soft key.

The phone displays the first entry matching your input.

4. If there is more than one matching entry, scroll to the number by pressing the Navigation keys.
5. Press  or **Call** soft key.

Pause Dialling

When you call automated systems, like banking services, you are often required to enter a password or an account number. Instead of manually entering the numbers each time, you can store them in your Phone Book or enter all of them before dialling, separated by pauses.

Storing a number in your Phone Book that contains pauses

1. Enter the phone number you want to store, such as a bank's teleservice phone number.


Call Functions

2. Press the **Options** soft key and then select **Hard Pause**.

The letter "P" displays within the number, meaning that a hard pause will occur at that point in the calling sequence.

3. Enter a number to follow the pause, such as your account number or password.
4. Continue entering numbers by repeating steps 2 and 3.
5. Store the number in your Phone Book as you normally would by pressing the **Save** soft key and following the screen prompts.

Pause Dialling from a Stored Phone Book Entry

1. Dial the number from the Phone Book.
2. Wait for the appropriate prompt for the number, such as a credit card number or a bank account number.
3. When prompted, press  to send the DTMF (Dual-tone Multi-frequency) number that follows your pause.



Manual Pause Dialling

You can enter pauses manually during the dialling process.

1. Enter the phone number of the service you want to connect to, such as a bank's teleservice phone number.

2. Press the **Options** soft key and then select **Hard Pause**.


The letter "P" displays within the number, meaning that a hard pause will occur at that point in the calling sequence.


3. Enter a number to follow the pause, such as your account number or password.
4. Continue entering numbers by repeating steps 2 and 3.
5. When the number is completed, press  to make a call to the number.
6. Each time you are prompted, press  to send the DTMF number that follows your pause.


Answering a Call

When someone calls you, the phone rings and displays the incoming call image.

When the caller can be identified, the caller's phone number or name, if it is stored in your Phone Book, displays. If the caller cannot be identified, "Blocked ID." displays.

1. To answer a call, press .


If the **Answer Mode** menu (**Menu 7-1-1**) is set to **Any Key**, you can answer the call by pressing any key, except for  and the **Silence** soft key.



If the menu is set to **Call Key**, you must press  to answer the call. For further details on the **Answer Mode** menu, see page 81.

2. To end an answered call press .

Note: You can answer a call while using the Phone Book or Menu features. The current operation will be interrupted.

Silencing the Call Ringer

If you press  or the **Silence** soft key once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in.

You can still answer the call by pressing , or by pressing  twice to disconnect without answering the call.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Press the **Menu** soft key during a call to access the following options:

Phone Book: allows you to access the **Phone Book** menu. See page 43 for details.

Mute/Quit: allows you to switch your phone's microphone off or on. When you mute the microphone, the person with whom you are talking cannot hear you.

For example: You wish to say something to another person in the room but do not want the the person with whom you are talking to hear you.

Silent/Quit: allows you to switch the key tones off or on. By switching the tones off, you can press the keys without hearing annoying key tones during a call.

Call History: allows you to access the **Call History** menu. See page 60 for details.

Messages: allows you to use the **Messages** menu. See page 50 for details.

Organiser: allows you to access the **Organiser** menu. See page 71 for details.

Voice Privacy: encrypts the voice channel so that people cannot eavesdrop on your conversation. For further details, see page 86.


Using Caller ID

This feature tells you who is calling you by displaying the caller's number when the phone rings. If a caller's name and number are stored in your Phone Book, the corresponding name displays along with the number. If you call someone whose phone is available with this feature, your phone number displays on her or his phone.

Note: For further details about the Caller ID service, contact your service provider.

Viewing Missed Calls

Your phone keeps a list of calls that you do not answer when the phone is on and service is available. The phone indicates a Missed Call by displaying a text notification on the screen. Additionally, if caller information is available, the screen displays the phone number of the most recent Missed Call.

Press  to call the displayed number.

Press the **Save** soft key to save the displayed number

To view Missed Calls, access the **Missed** menu (**Menu 3-1**). For further details, see page 60.

Entering Text

When using your phone, you will need to enter text at many times; for example, when storing a name in Phone Book, creating a text message, or scheduling events in your calendar. You can enter alphanumeric characters into your phone by using your phone's keypad.


Your phone has the following text input modes:

- **T9(English)**: This mode allows you to enter words with only one keypress per letter. Each key on a keypad has more than one letter; for example, when you press once, J, K or L displays. The T9(English) mode automatically compares your key presses to an internal linguistic database to determine the correct word thus requiring far fewer keystrokes than the traditional multi-tap method, Alphabet mode.
- **Alphabet**: This mode allows you to enter letters by pressing the key labelled with the letter you want once, twice, or three times until the letter displays.
- **Symbol**: This mode allows you to enter various symbols, punctuation marks, and special characters.
- **Number**: This mode allows you to enter numbers.



Changing the Text Input Mode


When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

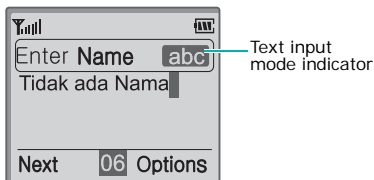Example: When you are entering a name



To change the text input mode:

1. Press the **Options** soft key.
2. Scroll to the mode you want by pressing  or .

Note: If you want to exit the menu without changing to a new mode, press .

3. Press the **Select** soft key.

You will find the indicator of the selected text input mode on the display.

Using T9(English) Mode

T9 is a predictive text input mode which allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in T9(English) mode, start entering a word by pressing keys to . Press each key only once for one letter.

Example: To enter "Hello" in T9 mode, press

, , , , and .

The word you are typing appears on the display. It may change with each key press.



2. Type to the end of the word before editing or deleting any keystrokes.
3. When the word displays correctly, skip to step 4.

If the word is not correct, press to display alternative word choices for the keys that you have pressed.

Example: both "Of" and "Me" have the sequence of and . The phone displays the most commonly used choice first.

4. Put a space between words by pressing .
 - To type words not found in T9(English) mode, change the text input mode to Alphabet mode.
 - To enter full stops, hyphens or apostrophes, press . T9(English) mode applies grammar rules to ensure that the correct punctuation is used.
 - To change the case in T9(English) mode, use . There are three cases:
 - Word:** initial letter is capitalised.
 - WORD:** all letters are capitalised.
 - word:** all letters are lower-cased.
- You can enter a space by pressing .

Entering Text



- You can move the cursor through your text by pressing the Navigation keys.
- To delete letters, press . Press and hold down  to clear the display.
- To enter a number between letters without exiting T9 input mode, press and hold the number key.

Using Alphabet Mode

When typing in Alphabet mode, you should press the keys labelled with the letter you want:

- once for the first letter
- twice for the second letter
- and so on.

This method is called Multi-tap typing.

For example, you press  three times to display the letter "C" and  two times to display the "K."

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Refer to the table below for the list of characters assigned to each key.

Key	Characters in the Order Displayed
	. @ ? ! - , & : ' 1
	A B C 2
	D E F 3
	G H I 4
	J K L 5
	M N O 6
	P Q R S 7
	T U V 8
	W X Y Z 9
	0

(Caps Lock mode)

- To change the case of the next letters that you type, press . There are three cases:
 - : initial letter is capitalised.
 - : all letters are capitalised.
 - : all letters are lower-cased.
- You can enter a space between words by pressing
- You can move the cursor through your text by pressing the Navigation keys.
- To delete letters, press . Press and hold to clear the display.
- To quickly enter a number between letters, press and hold the number key.

Using Symbol Mode

Symbol mode allows you to enter symbols.

Press  or  to display more symbols.

Press the number keys corresponding to the symbol you want. The phone automatically switches back to the text entry mode used just prior to selecting Symbol mode.

Using Number Mode



Number mode enables you enter numbers. Press the keys corresponding to the digits you want, and manually switch back to text input mode of choice; see page 32 for changing the text input mode.

Using the Menus



The phone offers a range of functions that allows you to tailor it to your needs. These functions are arranged in menus and submenus.

The menus and submenus can be accessed by scrolling or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Standby mode, press the **Menu** soft key to access Menu mode.
2. Press the Navigation keys to reach a main menu; for example, **Display**. Press the **Select** soft key to enter the **Display** menu.
3. If the menu contains any submenus; for example, **Bahasa**, find the one you want by pressing  or . Press the **Select** soft key to enter the submenu. If the selected menu contains submenus, repeat this step.
4. Press the Navigation keys to find the setting of your choice.
5. Press the **OK** soft key to confirm the chosen setting.

Notes:

- You can return to the previous menu level by pressing the Back soft key or .
- You can exit the menu without changing the menu settings by pressing .

Using Shortcuts

The menu items, such as menus, submenus and setting options, are numbered and can be accessed quickly by using their shortcut numbers.

Note: The numbers assigned to each menu function are indicated on the list on page 39.

In Standby mode, press the **Menu** soft key to access Menu mode.

1. Enter the first digit of the shortcut number. Repeat this for each digit of the shortcut number.

Example: Changing the display language

Press  and .

5 selects **Display** and **1** selects the **Bahasa** menu function.

2. Press the Navigation keys to find the setting of your choice.
3. Press the **OK** or **Select** soft key to confirm the chosen setting.

List of Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option.

1. Phone Book (see page 43)

- 1.1 Find
- 1.2 Add Entry
 - 1.2.1 Add Number
 - 1.2.2 Add Email
 - 1.2.3 Add URL
- 1.3 Groups
- 1.4 Memory Status

2. Messages (see page 50)

- 2.1 Write
- 2.2 Inbox
- 2.3 Outbox
 - 2.3.1 Sent
 - 2.3.2 Unsent
- 2.4 Drafts
- 2.5 Templates
- 2.6 Erase Messages
 - 2.6.1 Inbox
 - 2.6.2 Outbox
 - 2.6.3 Drafts
 - 2.6.4 All Messages
 - 2.6.5 Voice Mail
- 2.7 Settings
 - 2.7.1 Auto Scroll
 - 2.7.2 Msg Reminder
 - 2.7.3 New Messages
 - 2.7.3.1 Save Message
 - 2.7.3.2 Entry Method
 - 2.7.4 Alert On Call
- 2.8 Voice Mail
- 2.9 SMS Groups
- 2.0 One Touch Paging
 - 2.0.1 View Members

2.0.2 Edit MSG

2.0.3 Setting

3. Call History (see page 60)

3.1 Missed

3.2 Received

3.3 Dialed

3.4 Erase History

3.4.1 Missed

3.4.2 Received

3.4.3 Dialed

3.4.4 All

3.5 Call Duration

3.5.1 Last Call

3.5.2 Total Dialed Calls

3.5.3 Total Received Calls

3.5.4 Reset All

3.5.5 Life Time

4. Sound (see page 64)

4.1 Ring Tones

4.1.1 Calls

4.1.2 Messages

4.1.3 Schedules

4.2 Ringer Volume

4.2.1 Calls

4.2.2 Messages

4.2.3 Alarm/Schedules

4.3 Alerts

4.3.1 Call Connect

4.3.2 Call Disconnect

4.4 Key Tone

4.4.1 Tone Volume

4.4.2 Tone Length

4.5 Power On/Off Melody

5. Display (see page 68)

- 5.1 Bahasa
- 5.2 Wallpaper
- 5.3 Banner
- 5.4 Backlight
- 5.5 LCD Contrast
- 5.6 Shortcut Indicator

6. Organiser (see page 71)

- 6.1 Scheduler
 - 6.1.1 Today
 - 6.1.2 All
- 6.2 Task List
- 6.3 Memo Pad
- 6.4 Alarm
 - 6.4.1 Daily Alarm
 - 6.4.2 Weekly Alarm
- 6.5 Calculator
- 6.6 World Time
- 6.7 Count Down

7. Setting (see page 81)

- 7.1 Call
 - 7.1.1 Answer Mode
 - 7.1.2 Auto Redial
- 7.2 Phone/System
 - 7.2.1 Dial Short Cut
 - 7.2.2 Key Guard
 - 7.2.3 Set Time
 - 7.2.4 Version
- 7.3 Security
 - 7.3.1 Lock Mode
 - 7.3.2 Change Code
 - 7.3.3 Emergency Numbers
 - 7.3.4 Voice Privacy
 - 7.3.5 Clear Phone Book
 - 7.3.6 Reset Phone
 - 7.3.7 Clear SMS Groups

8. Games (see page 88)

- 8.1 Child Monk Adventure
- 8.2 Black Planet
- 8.3 Hello Monkey
- 8.4 Bowling
- 8.5 Othello
- 8.6 Settings
 - 8.6.1 Volume
 - 8.6.2 Backlight

During a Call + Menu

- 1: Phone Book
- 2: Mute/Quit
- 3: Silent/Quit
- 4: Call History
- 5: Messages
- 6: Organiser
- 7: Voice Privacy



Phone Book

The Phone Book allows you to store frequently-used phone numbers and the associated names in your personal directory to make it easy for you to make a call without remembering or entering the phone number. You can store up to 1000 entries. Each entry can contain up to 32 digits including hard pauses, with an associated name of up to 20 characters.

Find *(Menu 1-1)*

In this menu, you can search Phone Book for an entry using a name, entry number, and group name.

Note: You can quickly access this menu by pressing the **Find** soft key in Standby mode.

Press a search method by pressing  or .



By Name


This option allows you to find an entry by entering a person's name.

1. Press  or  to scroll to the name you want.

To find an entry with a name, enter the first letters of the name you want to find. The phone searches for the first entry starting with that character.

2. When the entry highlights, press the **Select** soft key to access the entry.

Note: All of the numbers stored for the entry display, including numbers stored into different categories. Press  or  to find the number you want.

3. To	Press
place a call to the number	 or the Call soft key.
use the menu options	the Options soft key. For details, see below.

When you press the **Options** soft key, the following options are available:

Edit: allows you to edit the phone number, name, location number, label category and so on.

Prepend: allows you to add digits such as area codes and network feature activation codes to the phone number before dialling it.


Erase: erases the number.

Send Msg: allows you to write and send a message to the number. For details, see page 50.

By Entry




This option allows you to find an entry by entering its entry number.

1. Enter the location by pressing the numeric keys.



2. To	Press
place a call to the number	 or the Call soft key.
use the menu options	the Options soft key. For details, see page 44.


By Group

This option allows you to find an entry by selecting its caller group.

1. Press  to highlight the group selection field.
2. Select the group containing the entry you want to find by pressing  or .

The phone displays the list of all entries in the selected group.

3. Scan through the list using  or  to find the entry you want and press the **Select** soft key.

4. To	Press
place a call to the number	 or the Call soft key.
use the menu options	the Options soft key. For details, see page 44.

Add Entry *(Menu 1-2)*

This menu allows you to store a number with a name in your Phone Book. You can save a person's numbers, such as workplace number, mobile phone number and fax number, into one entry. A Phone Book entry can contain up to six numbers, one in each category.

Add Number *(Menu 1-2-1)*





1. Enter a phone number and press the **Save** soft key.
2. Press the **Select** soft key to confirm adding a new entry.

When you are storing a number for the first time, skip to step 3.


Note: If you want to add the number to an existing entry, select it from the list.

3. Enter a name and press the **Next** soft key.

For further details about entering characters, see page 31.

4. Select an icon to label the category of the number to be stored using the Navigation keys and press the **Select** soft key.
5. To select an option, scroll to it by pressing  or . Press the **Edit** soft key to enter information or use  or  to change the setting.

The following options are available for the entry:

- **Enter Name:** allows you to edit a name of up to 20 characters.
 - **Entry:** The first available location displays. If necessary, enter the entry number using the number keys.
 - **Home/Office/Mobile/Pager/Fax/No Label:** allows you to store more numbers for each category.
 - **Speed Dial:** allows you to select one of the stored numbers to be dialled when you press  or the **Call** soft key after selecting the entry or when you use the Speed Dialling feature.
 - **E-mail:** allows you to store an e-mail address.
 - **URL:** allows you to store a URL address.
 - **Group:** allows you to assign an entry to a caller group. To remove the entry from a group, select **No Group**.
 - **Name Ringer:** allows you to select the unique ringer to be used for alerting you to an incoming call from the person.
 - **Secret:** allows you to prevent a number from being displayed when it is accessed or dialled by unauthorised users. When this option is set to **On**, only people with your phone's lock code can view the secret number.
6. When you finish setting the options, press the **Save** soft key to store the entry.

After storing, the phone displays the name that you just saved and then the total number of the Phone Book entries you have stored.

Add Email *(Menu 1-2-2)*

This menu allows you to add a new entry by entering an e-mail address.

1. Enter an e-mail address and press the **Next** soft key.

For further details about entering characters, see page 31.
2. Enter a name and press the **Next** soft key.
3. To complete storing the e-mail address, follow the procedure from step 5 in "Add Number" on page 46.

Add URL *(Menu 1-2-3)*








This menu allows you to add a new entry by entering a URL address of a web page.

1. Enter an URL address and press the **Next** soft key.
2. Enter a name. For further details about entering characters, see page 31.
3. Press the **Next** soft key.
4. To complete storing an URL address, follow from step 5 in "Add Number" on page 46.




Groups *(Menu 1-3)*

This menu allows you to change the ringers and the names for the caller groups.

To change the ringer for a caller group:

1. Scroll to the group you want to edit using  or .
2. Press the **Ringer** soft key to select a ringer melody to indicate when a call comes in from any members of the group.
3. Select the ringer category you want by pressing  or  and press .
4. Select the ringer melody you want by pressing  or .
5. Press the **Select** soft key.

To change the name of a caller group:

1. Press  or  to scroll to the group you want to edit.
2. Press the **Rename** soft key.
3. Press  to clear the current group name.
4. Enter a new name and press the **Save** soft key.

Note: The ringer and the name of **No Group** cannot be edited.

Memory Status *(Menu 1-4)*


This menu shows the total number of entries that currently stored in your Phone Book.

Messages

Your phone can send and receive text messages. It can also receive voice mail notifications.

When the phone receives a message, an alert sounds and a text notification displays along with the name and phone number of the sender, if available. The New Message icon (✉) remains on the screen until you read the new text messages or you listen to the new voice mail messages.

Messages are received even when your phone is in Lock mode. To access a message, you must unlock the phone.

Note: You can quickly access the **Message** menu by pressing  in Standby mode.

Write *(Menu 2-1)*

You can create a text message of up to 160 characters and send it to other mobile phones.


To write a new message:



1. Enter the message text.

Press the **Options** soft key and select **Templates** to add a message template. For further details about templates, see page 54.

2. When you finish entering text, press the **Next** soft key.
3. Enter a destination number using the numeric keys.

Pressing the **Options** soft key allows you to search your Phone Book or SMS Groups for a number.

Note: You can enter more numbers by entering a space between them using . You can send to 15 destinations at the same time.


4. When you finish entering, press the **Next** soft key.
5. To select an option, press  or  and press the **Edit** soft key and enter information or change the setting. The following options are available:
 - **Msg:** allows you to change the message contents you've already entered.
 - **Send To:** allows you to change the destination phone number.
 - **Settings:** allows you to change the message options in order.

After changing the first option, press the **Next** soft key. You can then set the next options. When you set the last option and press the **Save** soft key, the settings are saved and the display returns to the New Message screen.

Priority: you can select a message priority.

Save Message: you can set whether or not the phone saves the message in the Outbox. When you select **Prompt Save**, the phone asks if you want to save the message when you attempt to send it.

Note: The **Save Message** option can be preset in the **New Messages** menu (**Menu 2-7-3**); for details, see page 56.


- **Save Msg:** to store the message in the **Drafts** menu (**Menu 2-4**) for future use, press the **Save** soft key.
6. After changing the setting options, press  or the **Send** soft key to send the message.

Inbox (Menu 2-2)





Your phone can store up to 1 Voice mail and 149 text messages total in Inbox, Outbox, Drafts box. When the memory is full, a warning message displays and the phone rejects additional messages until you erase the obsolete ones. If a new message is received when the memory is full, the phone will display the blinking message icon.

When you access the **Inbox** menu option, the message list appears.

 : indicates that a message has been received.

 : displays when you have read a message.

 : indicates that the message is urgent.

To view details, press  or  to scroll to one of the messages on the list and press the **Select** soft key. You can scan through the message contents by pressing  or .

While viewing a message, press the **Reply** soft key to send a reply message to the sender.

Press the **Options** soft key to use the following options:

Erase: erases the message from the Inbox.

Forward: allows you to forward the message to another person.

Call: places a call to the callback number of the message.

Save: allows you to save the callback number of the message.

Outbox *(Menu 2-3)*

Your phone can store up to 1 Voice mail and 149 text messages total in Inbox, Outbox, Drafts box. In the **Outbox** menu option, you can review outgoing messages separately depending on their message type, **Sent** or **Unsent**.

Sent: the message was successfully delivered.

Unsent: the message was not sent.





When you select a message type, the message list appears.

To review a message, press  or  to scroll to it and press the **Select** soft key. You can scan through the message contents by pressing  or .

While reviewing a message, press the **Resend** soft key to resend the message. Press the **Erase** soft key to erases it from Outbox.

Drafts *(Menu 2-4)*

Your phone can store draft messages that are yet to be sent in the Drafts box. If you save the message content using the **Save Msg** menu option before sending it (see page 51), you can access them using this menu.

To review a stored message, press  or  to scroll to it and press the **Select** soft key. You can scan through the message contents by pressing  or .




While reviewing a message, press the **Send** soft key to send the message. Press the **Erase** soft key to erases it.

Templates *(Menu 2-5)*

Using this menu, you can preset up to eleven (including Empty message that you can make) messages that you use most frequently and send a new message using one of them.

When you access this menu, the preset message list displays.



To preset a message:

1. Scroll to a message or an empty entry by pressing  or .
2. Press the **Edit** soft key.
3. If necessary, clear the text by pressing  and enter your message.

For further details about how to enter characters, see page 31.

4. When you are finished, press the **Save** soft key.

To send a new message using a message template:

1. Scroll to the message you want by pressing  or .
2. Press the **Select** soft key to send the message.
3. Follow step 3 on page 50.

Erase Messages *(Menu 2-6)*

Using this menu, you can erase the messages in each message box; Voice Mail box, Inbox, Outbox, and Drafts box. For the Inbox, you can erase only the messages you have read or all of the messages. For the Outbox, you can erase only the message the phone sent or couldn't send, or all misusages.

You can also erase all of the messages at one time by selecting **All Messages**.



When a confirmation message appears, press the **Yes** soft key.

Settings *(Menu 2-7)*

In this menu, you can preset several options for using the messaging features.

Auto Scroll *(Menu 2-7-1)*

If an incoming message is too long for the display, the phone displays it by scrolling the screen automatically. You can set how often the phone scrolls the message to the next screen.

If you select **Off**, you need to scroll to the next screen manually by pressing  or .

Msg Reminder *(Menu 2-7-2)*

When a message is received, the phone alerts you by sounding the selected ringer. You can set how often you want to be alerted.

Off: the message alert sounds once when the message is received.

Once: the message alert sounds once when the message is received and sounds again after 2 minutes.

Every 2 min: the message alert sounds every 2 minutes until you check the message.

New Messages *(Menu 2-7-3)*

You can set up the default settings of the options for creating a new message. The following options are available:

Save Message: allows you to set whether or not you want the transmitted message to be saved in the Outbox.

Do Not Save: the phone does not save the message.

Prompt Save: the phone asks you if you want to save the message or not.

Auto Save: the phone automatically saves the message.

Entry Method: allows you to select the text input mode, either T9 Word mode or Alphabet mode.

Alert On Call *(Menu 2-7-4)*

This menu allows you to choose whether or not the phone informs you when you receive a new message during a call.

On: the phone alerts you with a beep and displays the corresponding notification.

Off: the phone doesn't actively alert you to incoming messages. It only displays the corresponding notification.


Voice Mail *(Menu 2-8)*

When multiple new voice messages are received but you haven't checked them, information of the last one displays. The information display includes the time/date stamp, the number of new voice messages and the callback number.

While reviewing the message, press the soft key to access the following options:



Listen: allows you to listen to the voice message. The phone automatically dials the number of your Voice Mail centre.

Reset: clears the New Message icon and resets the counter for a new voice message, if necessary. The phone resets the counter automatically after you listen to all of the new messages.

Note: You can quickly access the voice mail centre by pressing  in Standby mode.

SMS Groups *(Menu 2-9)*

Using this menu, you can preset up to 5 SMS groups that you send a message most frequently.

Scroll to the group you want by pressing the  or  key.

- Press the **Options** soft key to view members, clear or rename the group. You can add members to the group at View Members option. However, the information of the member that is supposed to be added should be saved in the Phone Book.
- Press the **Send** soft key to send the message to the group.

One Touch Paging *(Menu 2-0)*

In an emergency, you can send a preset message to party(ies) that you specify by pressing the **C** key four times from idle screen. In this menu, you can prepare the one-touch paging feature.

View Members *(Menu 2-0-1)*

This menu allows you to set up the group of contacts to whom you want to send an emergency message.

Adding a contact

When you access this menu for the first time, the Phonebook list automatically displays.

1. Scroll to a Phonebook entry by using the Navigation keys and press the **Select** soft key.

2. Scroll to the number you want and press the **Select** soft key.

The number is added to the list.

3. To add more contacts, press the **Add New** soft key and repeat from step 1.

Erasing a contact

1. From the contact list, select the contact you want to remove.
2. Press the **Options** soft key.
3. Select **Remove**.

To clear all contacts, select **Clear All**.

Edit MSG *(Menu 2-0-2)*

Using this menu, you can edit the pre-written message, possibly requesting a callback.


Setting *(Menu 2-0-3)*

This menu allows you to activate or deactivate the one-touch paging feature.

Call History

You can use the **Call History** menu to:



- view and dial the most recent calls you dialed, received, or missed.
- erase the numbers in the call log memory.
- view the length of calls.

Note: You can quickly access the history of all the three call types by pressing  in Standby mode.



Missed *(Menu 3-1)*

If Caller Line Identification service is available, your phone keeps a list of the most recent 10 incoming calls that you failed to answer. Contact your service provider for more information about the service.

When you access this menu, a list of the missed calls displays.

1. Press  or  to find a number or name, if it is saved in Phone Book.
2. Press the **Select** soft key to confirm the highlighted number.

The missed number or name, if it is saved in Phone Book, displays along with the time and date when the call was received.

3. To	Press
place a call to the selected number	 or the Call soft key.
use the options	the Options soft key. For details, see below.
exit the call log	 .

When you press the **Options** soft key on the call log list, the following options are available:

Save: (shows when the number is not stored in your Phone Book) allows you to save the number in Phone Book.

Show Entry: (shows when the number is stored in your Phone Book) displays the detailed information stored in the Phone Book entry, such as a name, entry number, phone numbers, speed dial number, and other settings.

Edit: allows you to change the phone number and then dial it or save it in Phone Book.

Erase: erases the selected number.

Send Msg: allows you to send a message. See page 50 for more information.

Received *(Menu 3-2)*

This option lets you view up to 10 of the most recent calls you received, if you are subscribed to the Caller Line Identification service. Contact service provider for more information about this service.

When you access this menu, a list of the incoming calls displays.

For more information about scrolling through the list and accessing the call log, see “Missed” on page 60.

Dialled *(Menu 3-3)*

The phone stores up to 10 of the most recent calls you dialled. When you access this menu, a list of the outgoing calls displays.

For more information about scrolling through the list and accessing the call log, see “Missed” on page 60.

Erase History *(Menu 3-4)*

You can erase the entries stored in each of the three call histories or all three histories at once.

When a confirmation message displays, press the **Yes** soft key.

Call Duration *(Menu 3-5)*

Your phone records the amount of air time, or talk time, used. Using this option, you can view the number of the calls to or from your phone, and the air time for all of the calls. You can easily erase the air time records at any time. This option is convenient for estimating your usage.

Note: This feature is not intended to be used for billing purposes.

The following options are available:

Last Call: shows information about the last call, such as the duration of the call, the other person's phone number and the date and time when the call was made.

Total Dialed Calls: shows the number of all calls you have made and the total duration of the calls since the time counter was last set to zero by using the **Reset All** option.

Total Received Calls: shows the number of all calls you have received and the total duration of the calls since the time counter was last set to zero by using the **Reset All** option.


Reset All: erases the last call, the "Total received/dialed calls" time measurements, and resets the air time counters.

Life Time: shows the number and total duration of all calls made to or from your phone since the phone was shipped from the factory.

Sound

You can use the **Sound** menu to customise various sound settings, such as the:

- ringer volume, type, and tone.
- key tone and alert sounds.
- sound which plays when the phone is switched on or off.

Note: You can quickly enter this menu by pressing  in the standby mode.



Ring Tones *(Menu 4-1)*

This menu allows you to set the unique ringer melodies for the following items:

Calls: allows you to set a unique ring for incoming calls.

Messages: allows you to have a distinctive ring for incoming text and voice mail messages independently.

Schedules: allows you to have a distinctive ringer for schedule alarms.

1. Select a ringer category for **Calls**, or select a message type for **Messages** by pressing  or . For **Schedules**, skip to step 2.
2. Select a ringer by using the Navigation keys.
Each time you select a ringer, the phone plays the ringer.
3. Press the **Select** soft key.

Ringer Volume *(Menu 4-2)*

This menu allows you to adjust the ringer volume.

Calls: allows you to adjust the ringer volume for incoming calls.

Messages: allows you to adjust the ringer volume for incoming messages.

Alarm/Schedules: allows you to adjust the ringer volume for alarm settings and schedule alarms.

To adjust the volume level for each item, the following options are available:

Silent: the phone does not sound a ring and does not flash the backlight.

Light: the phone does not sound a ring and only flashes the backlight.

Vibrate: an incoming call vibrates the phone.

1-Beep: the phone sounds a beep.

Level 1 ~ 5: adjust the volume level. The more bars, the louder.

Low+Vib/High+Vib: the phone rings in the lowest/highest volume level and then vibrates. This option is only shown for **Calls**.

Ascending: the phone sounds from level 1, louder and louder, to level 5.

Alerts *(Menu 4-3)*

Your phone gives audible alerts (beeps) at a specified time to inform you that certain things have happened. The alerts only occur in your earpiece so that the person with whom you are talking does not hear them.

The following alerts are available:

Call Connect: when this option is set to **On**, the phone sounds the connect tone when your call is connected to the system.

Call Disconnect: when this option is set to **On**, the phone sounds the disconnect tone when a call is disconnected.

Key Tone *(Menu 4-4)*

In this menu, you can set up the sound your phone generates when you press a key.

The following options are available:

Tone Volume: you can adjust the key tone volume using the Navigation keys.

Tone Length: you can select **Long** or **Short** DTMF (Dual-tone Multi-frequency) tones. DTMF tones are sent by your phone to access teleservices, such as a bank account. The system used by the bank or other service determines if you need short or long DTMF tones. If the service is digital, as most are, short DTMF tones will almost always work.

Power On/Off Melody *(Menu 4-5)*

You can activate or deactivate the tone that the phone sounds when it is switched on or off.

Display

The Display feature enables you to customize various settings for the display and the light.

Bahasa *(Menu 5-1)*

This menu allows you to change the display and input language.

You can choose a language either **English** or **Indonesia**.



Wallpaper *(Menu 5-2)*

You can select the background image (wallpaper) to be displayed in Standby mode.

When you set this menu to **Digital Clock1**, the phone displays the text message you entered using the **Banner** menu (**Menu 5-3**) in Standby mode.

Banner *(Menu 5-3)*

This option allows you to set a banner message to display at the bottom of the display in Standby mode. However, the banner message could be displayed, when the Wallpaper is set on Digital Clock1.

1. If necessary, press  repeatedly to delete each letter of the old greeting. Press and hold  to clear the display.
2. Enter your banner message of up to 15 characters.

For further information about how to enter characters, see page 31.

3. When you finish entering the message, press the **Save** soft key to store the new banner.

Backlight *(Menu 5-4)*

You have several options for setting how the backlight operates. Remember that backlight use drains your battery faster.

The following options are available:



Always On: the backlight is always on.

Always Off: the backlight is always off.

8/15/30 Seconds: the backlight switches on when you press a key and switches off after 8/15/30 seconds if you don't press any key.

LCD Contrast *(Menu 5-5)*

The menu allows you to adjust the brightness of the LCD screen.

Press  to make the brightness of screen letters lighter, and  to make it darker.

Each time you press the key, you will see the selected status of the brightness of letters.

Press the **Select** soft key to save what you set the value of color.

Shortcut Indicator *(Menu 5-6)*

In this menu, you can set whether or not the menu shortcut indicators are displayed on the dial screen.

While dialing numbers in Standby mode, you can press the appropriate Navigation key to access the preset menu you want.


Organiser

The Organiser feature enables you to:

- keep track of important dates and events
- create a list of things to do
- make a memo
- set an alarm to ring at a specific time
- use the phone as a calculator
- check the time in another part of the world
- use the countdown timer.

Scheduler *(Menu 6-1)*

In this menu, you can keep track of your daily or monthly schedule. You can create up to 70 events.

Note: You can quickly access this menu by pressing  in Standby mode.

Today *(Menu 6-1-1)*

You can schedule up to 9 events for the current day, indicating each event's start and end time. You can even have your phone's calendar alert you before an event starts. Events scheduled for future dates automatically appear on your Today display for that particular day.

Scheduling a New Event

1. Enter your event contents and press the **Next** soft key.

For more information about entering letters, see page 31.



Organiser

2. Enter the start time and date and press the **Next** soft key.

Notes:

- Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM.
- You can move through the input fields using the Navigation keys.

3. Enter the end time and date and press the **Next** soft key.

4. Select when an alarm will inform you of the event by pressing  or .

Selecting **No alarm** means that the phone doesn't ring the alarm.

5. Press the **Save** soft key to store your event.

Viewing Your Today's Schedule

The list of the events stored on the current day displays when you select the **Today** menu (**Menu 6-1-1**).

While viewing the schedule list:


- Press the **Options** soft key to use the following options:

Add New: allows you to add a new event.

Erase: allows you to erase the selected event.

Erase Passed: allows you to erase the passed events.

Erase All: allows you to erase all of the events.









- To view details, press the Navigation keys to scroll to an event and press the **View** soft key. The event displays along with its start time and date. To view the end time, press .

While viewing the event, press the **Edit** soft key to edit it. Press the **Erase** soft key to erase it.

All (Menu 6-1-2)

This menu allows you to view the current month, as well as past or future months, in calendar format. On the calendar, the current day is highlighted.

Scrolling Through the Calendar

- You can move to the left or right by one day by pressing  or  and  or .
- You can move up or down by one week by pressing  or  and  or .

On the calendar, press the **View** soft key to view the scheduled events of the selected day.

Press the **Options** soft key to use the following options:

Add New: allows you to add a new event for the selected day.

Erase All: allows you to erase all of the events.

List View: allows you to view all of the events.

Creating a New Schedule

You can store up to 70 events total in the scheduler, with up to 9 events for one day.

1. Select a day on the calendar, referring to "Scrolling Through the Calendar" above.

When you are storing a event for the first time, skip to step 3.

2. Press the **Options** soft key and select **Add New** option.

Organiser

3. Enter your event contents and press the **Next** soft key.



For more information about entering letters, see page 31.

4. Enter the start time and date and press the **Next** soft key.

Notes:

- Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM.
- You can move through the input fields using the Navigation keys.

5. Enter the end time and date and press the **Next** soft key.


6. Select when an alarm will inform you of the event by pressing  or .

Selecting **No alarm** means that the phone doesn't ring the alarm.

7. Press the **Save** soft key to store your event.

Viewing Your Schedule

Select a day with scheduled events on the calendar, referring to "Scrolling Through the Calendar" on page 73 and press the **View** soft key.

To view details, press the Navigation keys to scroll to an event and press the **View** soft key. The event displays along with its start time and date. To view the end time, press .

While viewing the event, press the **Edit** soft key to edit it. Press the **Erase** soft key to erase it.

Task List *(Menu 6-2)*

This menu allows you to enter up a list of tasks to be done and assign a deadline to each task. You can create up to 9 tasks.

Creating a New Task

1. Enter the first task and press the **Next** soft key.

For further details on how to enter characters, see page 31.

2. Enter the time and date by which the task needs to be done.

Notes:

- Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM.
- You can move through the input fields using the Navigation keys.

3. Press the **Save** soft key to store the task.

Viewing a Task

The list of the tasks displays when you access the **Task List** menu (**Menu 6-2**).

While viewing the task list:

- Press the **Options** soft key to use the following options:

Add new: allows you to add a new task.

Erase: allows you to erase the selected task.

Erase all: allows you to erase all of the tasks.

Organiser

- To view details, press  or  to scroll to a task and press the **View** soft key.

While viewing the task, press the **Edit** soft key to edit it. Press the **Erase** soft key to erase it

Memo Pad *(Menu 6-3)*

This menu allows you to write down memos about anything you need to remember. You can create up to 9 memos.

Writing a New Memo

1. Enter the memo.

For further details on how to enter characters, see page 31.

2. Press the **Save** soft key to store the memo.

Viewing a Memo

The list of your memos displays when you access the **Memo Pad** menu (**Menu 6-3**).

While viewing the memo list:

- Press the **Options** soft key to use the following options:

Add new: allows you to add a new memo.

Erase: allows you to erase the selected memo.

Erase all: allows you to erase all of the memos.




- To view details, press  or  to scroll to a memo and press the **View** soft key.

While viewing the memo, press the **Edit** soft key to edit the memo. Press the **Erase** soft key to erase the memo.



Alarm *(Menu 6-4)*






This menu allows you to set up to an alarm to ring at a specific time.


 

 
To set an alarm:

1. Select an alarm type, **Daily Alarm** or **Weekly Alarm**, and press the **Select** soft key.
2. Select **On** by pressing  or .
3. Press  and enter the time for the alarm to ring.

Notes:

- Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM.
 - You can move through the input fields using the Navigation keys.
4. Press the **Next** soft key.
 5. Select a Alarm option by pressing  or .

You can choose either **Daily** or **Once** for the daily alarm, or select a day of the week for the weekly alarm. In case of weekly alarm, press  to select a day and  to deselect a day.
 6. Press  and select an alarm melody by pressing  or .
 7. Press the **Save** soft key to save the alarm setting.

To stop the alarm when it rings, press the **Stop** soft key, , or . If you stop the alarm using other keys, the Snooze function is activated and the phone alerts you to the alarm after 10 minutes. To deactivate the Snooze function, press the **Stop** soft key, , or .





To deactivate an alarm setting, access it from the alarm list and select **Off**.

Calculator *(Menu 6-5)*

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.

Notes:

- To erase any mistakes or clear the display, press .
 - Use  to enter a decimal point and  to change the sign of a number to a negative (-).
2. Enter the operation for your calculation on the second line by pressing the Navigation keys, according to the graphic on the display.
 3. Enter the second number.
 4. Repeat steps 2 and 3 as many times, if necessary.
 5. To view the result, press the **Result** soft key.
 6. To perform another calculation, press  to reset the calculator and repeat from step 1.

World Time *(Menu 6-6)*

This menu allows you to check the current times for 35 major cities around the world or set DST (Daylight Savings Time).

To check the world time and set your time zone:

1. Select the city corresponding to your time zone by pressing the Navigation keys one or more times.

The local time and date display.

2. Press the **Save** soft key to set the time as the default time zone.

To turn on or off the DST setting:

1. After selecting the time zone to which you want to apply the DST, press the **DST** soft key.
2. Press the **On** soft key.

To cancel the DST setting, press the **Off** soft key.

Count Down *(Menu 6-7)*

This menu helps you know how much time it takes for you to do something, or how many months, days, hours and minutes until a specific day arrives. You can create up to 9 counters.

Creating a New Counter

1. Enter the contents for your counter and press the **Next** soft key.

For details about entering text, see page 31.

2. Enter the time and date you want to count down from.



Notes:

- Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM.
 - You can move through the input fields using the Navigation keys.
 - Enter a year between 1980 and 2099.
3. Press the **Save** soft key to store the counter.

Viewing a Counter

The list of the counters displays when you access the **Count Down** menu option (**Menu 6-7**).

While viewing the counter list:

- Press the **Options** soft key to use the following options:
 - Add New:** allows you to add a new counter.
 - Erase:** allows you to erase the selected counter.
 - Erase All:** allows you to erase all of the counters.
- To view details, press  or  to scroll to a counter and press the **View** soft key.

While viewing a counter, press the **Edit** soft key to edit it. Press the **Erase** soft key to erase it.

Setting

Many different features of your phone can be customised to suit your preferences.


Call *(Menu 7-1)*


This menu contains the suboptions for answering or redialling a call.

Answer Mode *(Menu 7-1-1)*

This menu allows you to select how to answer an incoming call.

The following options are available:

Any Key: the phone answers when you press any key except for  and the **Silence** soft key.

Call Key: the phone answers only when you press .

Auto Redial *(Menu 7-1-2)*

When this menu is activated, your phone automatically redials the call up to 10 times when a connection fails.

To activate this feature, select how often the phone automatically retries the call; **60**, **30** and **10 seconds** are available.

Select **Off** to deactivate the Auto Redial feature.

Phone/System *(Menu 7-2)*

Dial Short Cut *(Menu 7-2-1)*

You can set up a menu of your own using your favourite menu items, which can then be accessed by specific number keys. Once you have set up your favourites, you can easily and quickly access them.

To set up the favourite item access:

1. Select a location using the Navigation keys and press the **Assign** soft key.

To deactivate the assignment to the selected key, press the **Erase** soft key.

2. Scroll to the menu you want by pressing the Navigation keys.
3. Select the menu you want by pressing Navigation keys and the **Select** soft key and then press the **Assign** soft key.

To access the favourite item:



1. In Standby mode, press the number key corresponding to the item you want to access.
2. press the **Jump** soft key.

Key Guard *(Menu 7-2-2)*


You can prevent accidental key pressing by using Key Guard mode.

To activate the Key Guard feature, select the period of time your phone waits for before locking the keypad. If you do not want to use the feature, set this menu to **Off**.

When you have an incoming call or the time for an alarm comes in Key Guard mode, the mode is automatically deactivated and the phone goes to Standby mode. It will be automatically activated after the specified amount of time when you end the call or stop the alarm.

Once Key Guard mode is activated, you can temporarily unlock your keypad by pressing  and .

Note:

- You can lock the keypad manually by pressing and holding  in Standby mode.
- In Key Guard mode, you cannot make an emergency call. You should unlock the keypad before making a call.

Set Time *(Menu 7-2-3)*

To display the correct date and time on the idle screen or to use the Organiser features, such as Scheduler, Task List, Countdown, Alarm and World Time, you need to set the current time and date using this menu.

Enter the time and date using the numeric keys.

Each of the hour, minute, day, and month must be entered using 2 digits and the year requires all 4 digits. Your phone uses 12-hour format. After entering the time, press **A** to set AM or **P** to set PM. Network time is set automatically.

Version *(Menu 7-2-4)*

This option allows you to view the software and hardware versions of your phone. This feature is helpful if you need to the call customer care.

Security *(Menu 7-3)*

Your phone provides you with many security options, including a user-programmable lock code.

To access the **Security** menu, you need to enter a lock code. **The lock code is preset to "0000" at the factory.**

Lock Mode *(Menu 7-3-1)*


When the phone is locked, you cannot operate the phone until you enter the Lock code.

The following options are available:

Never: the phone remains unlocked.

On power up: the phone locks automatically the next time you turn it on.

Now: the phone locks immediately.

To place an emergency call, enter the number and then press . The phone recognises three emergency numbers stored in the **Emergency Numbers** menu (**Menu 7-3-3**).

To unlock the phone, press the **Unlock** soft keys and enter the lock code. The phone returns to Standby mode.

Change Code *(Menu 7-3-2)*

This feature allows you to change your current lock code to a new one. The lock code is preset to "0000" at the factory.

Enter a new four-digit lock code and then enter the code again to confirm.

Emergency Numbers *(Menu 7-3-3)*

Your phone provides you with the option for storing three emergency numbers. The default numbers are 110, 112, 113 and 118. All of these numbers can be manually dialed at any time even when your phone is locked.



IMPORTANT NOTICE!

Emergency calling may not be available on all wireless networks at all times. A connection cannot always be guaranteed, due to various transmission methods, network parameters and user settings used to complete a call from your wireless phone.

DO NOT depend on this phone as a primary method of dialling 110 or for any other essential or emergency communications.


Remember to always turn your phone on and check for the adequate signal strength before placing a call.

To store an emergency number:

1. Press  or  to select a location and press the **Select** soft key.
2. Enter the number you want to use.

Each emergency number can be up to 32 digits long. The number already stored in the selected location is automatically deleted when you enter a new number.

3. Press the **Save** soft key to store the number.

To make an emergency call in Lock mode, simply enter a programmed number, and then press .

Voice Privacy *(Menu 7-3-4)*

Used only in digital networks, Voice Privacy encrypts the voice channel so that people cannot eavesdrop on your conversation.

The following options are available:

Standard: The phone will use a standard line for calls.

Enhanced: The phone will make and receive calls on an encrypted high security line. When you set this option, P icon displays on the screen.

Note:

- This feature may not be available in all areas. Contact your service provider for its details and availability.
- You can use this menu during a conversation. For further details about options during a call, see page 29.

Clear Phone Book *(Menu 7-3-5)*

This menu allows you to erase all of the numbers in your Phone Book. When a confirmation message displays, press the **Yes** soft key.

Reset Phone *(Menu 7-3-6)*

Resetting the phone cancels all of your selection in the user-selectable setting options and returns them to the factory default settings.


When a confirmation message appears, press the **Yes** soft key. The phone turns itself off and back on and then returns to Standby mode.

Clear SMS Groups *(Menu 7-3-7)*

This menu allows you to erase all of the members in your SMS Groups. When a confirmation message displays, press the **Yes** soft key.

Games

You can experience the fun of playing games on your phone.

Note: You can quickly access this menu by pressing  in Standby mode.

You can enjoy five fun games on your phone:



- Child Monk Adventure **(MENU 8-1)**
- Black Planet **(MENU 8-2)**
- Hello Monkey **(MENU 8-3)**
- Bowling **(MENU 8-4)**
- Othello **(MENU 8-5)**

To start a game:

1. Select a game by pressing the Navigation keys and press the **Select** key.
2. On the startup screen, press the **Start** soft key.

The following options are available:

- **NEW GAME:** starts a new game.
 - **LOAD GAME:** loads the last game you played, if you are interrupted during a game.
 - **KEY CONTROL:** opens the screen showing the key operations for the game.
 - **GAME INFO:** opens the help screen for the game.
3. Select **NEW GAME** or **LOAD GAME** and press the **Select** soft key.

4. Follow the directions on the game screen.
5. To end the game, press . If a confirmation message appears, Press  or select **Yes** and press the left soft key.

Note: If the battery is low, the **Game** wouldn't be accessed. Charge the battery before using it.

Settings *(Menu 8-6)*

This menu allows you to change the volume for the game sound and turn on or off the backlight during a game.

Volume *(Menu 8-6-1)*

This menu allows you to adjust the volume of the game sound.

Silent: the game is played in a silent mode.

Level 1 ~ 5: adjust the volume level. The more bars you see, the louder the volume is.

Backlight *(Menu 8-6-2)*

Playing a game consumes the battery power more than using other functions of your phone. This menu allows you to activate or deactivate the backlight during the game to conserve your battery.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg^{*}.

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

For Body Operation

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung-supplied or approved accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum from the body.

The minimum distance from the body for this model phone is written in the FCC certification information.

Non compliance with the above conditions may violate FCC RF exposure guidelines.

For more Information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)
<http://www.fcc.gov/oet/rfsafety>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

U.S.Food and Drug Administration (FDA)
<http://www.fda.gov/cdrh/consumer>

World Health Organization (WHO)
<http://www.who.int/peh-emf/en>

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.

- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time, including talk time and standby time, is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, make sure that you are following the special regulations in a given area or country.

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment are shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer of the device to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on;
- should not carry the phone in a breast pocket;

Health and Safety Information

- should use the ear opposite the pacemaker to minimise potential interference.

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially Explosive Atmosphere

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press .

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and Maintenance

- Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any

Health and Safety Information

warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not touch the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



Glossary

To help you understand the main technical terms and abbreviations used in this booklet, and to take full advantage of the features of your mobile phone, here are a few definitions:

Airtime

Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.

Antenna

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Base Station

The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically called a cell or cell site)

CDMA (Code Division Multiple Access)

A spread-spectrum approach to digital transmission. With CDMA, each conversation is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.

Channel

Communications signals transmit along paths called channels.

Codec

Compression & Decompression.

Deactivation

The process of rendering a wireless phone inactive.

DTMF (Dual-tone Multi-Frequency)

You send DTMF signals when you enter numbers by pressing the digit keys.

EVRC

(Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA vocoders, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.

Frequency

A measure based on time, as one or more waves per second, in an electrical or light wave information signal. A signal's frequency is stated in cycles-per-second or Hertz (Hz).

LCD (Liquid Crystal Display)

Commonly used to refer to the screen display on the wireless phone.

LED (Light Emitting Diode)

Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.

Prepend

The addition of a prefix, such as an area code, to a phone number.

RF

Radio Frequency

Roaming

The ability to use a wireless phone to make and receive calls in places outside of the home service area.

Service Charge

The amount paid each month to receive wireless service.

Standby Time

The amount of time a fully charged wireless portable or transportable phone can be on and idle without being in use. (See Talk Time)

Talk Time

The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.

Vocoder

Voice Coder. A device used to convert speech into digital signals.

Wireless

Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.

Index

123

1-beep mode 20

A

Accessories 7
Air time 63
Alarm 77
Alert tones, set 66
Alphabet mode, text input
 34
Answer mode 81
Auto redial 81

B

Background image 68
Backlight 12, 69
Banner 69
Battery
 charging 14
 installing 13
 low battery indicator
 15
 precautions 92

C

Calculator 78
Calendar 73
Call
 answering 28
 ending 22
 from Phone Book 22
 making 21
Call duration 63
Call history
 dialled calls 62
 missed calls 60
 received calls 62
Caller group
 changing 49
 finding 45
Caller ID 30
Characters, enter 31

Charging battery 14
Connect tone 66
Contrast, display 70
Countdown 79

D

Date, set 83
Dialled calls 62
Dialling options 21
Disconnect tone 66
Display
 backlight 12
 contrast 70
 icons 11
 language 68
 layout 11
DST (Daylight Savings
 Time), set 79
DTMF tones, send 25

E

Emergency calls 23, 98
Emergency numbers 85
Erasing
 call history 61, 62
 countdown 80
 memos 76
 messages 55
 phone book 44, 86
 schedule 72, 73
 tasks 75

G

Games 88
Groups
 caller 49
 SMS 58

H

Health and safety 90

I

Icons, description • 11
 Inbox, messages 52
 Installing battery 13

K

Key guard mode 19, 82
 Key tone
 length 66
 volume 66
 Keys
 description 9
 location 8

L

Language, select 68
 Lock code, change 84
 Lock mode 19, 84
 Low battery indicator 15

M

Memo pad 76
 Menus
 accessing 37
 list 39
 shortcuts 38
 Messages
 draft 53
 inbox 52
 outbox 53
 settings 55
 templates 54
 writing 50
 Missed calls 30, 60

N

Name
 finding 43
 storing 46
 Number, phone
 finding 43
 storing 46

O

On/Off switch, phone 16
 Organiser 71
 Outbox, messages 53

P

Phone
 care and maintenance
 99
 display 11
 icons 11
 keys 9
 layout 8
 locking 84
 modes 18
 resetting 86
 switching on/off 16
 unpacking 7
 Phone book
 adding entry 46
 clearing 86
 finding entry 43
 memory status 49
 Power on/off melody 67

R

Radio frequency 90
 Received calls 62
 Received messages 52
 Redialling
 automatically 81
 manually 23
 Resetting phone 86
 Ring tones 64
 Ringer volume 65
 Road safety 94

S

Safety
 information 90
 precautions 5
 Scheduler 71
 Security 84
 Sent messages 53

Index

SMS groups 58
Soft keys 17
Sound settings 64
Speed dialling 24
Standby mode 18
Switching on/off phone 16

T

T9(English) mode, text input
 32
Talk mode 18
Task list 75
Templates, message 54
Text input modes 31
Text messages 50
Text, enter 31
Time, set 83
Today schedule 71
Tone
 connect 66
 disconnect 66
 key 66
 power on/off 67
 ringer 64
Travel adapter 14

U

Unpacking 7






V

Version 83
Vibrate mode 20
Voice mail 57
Voice privacy 29, 86

 



 






W

Wallpaper 68
World time 79
Writing a message 50

Basic Operation

Make a call	Phone number + 
End a call	
Answer a call	
Redial the last outgoing call	 twice or press and hold 
Switch to Vibrate mode	(in Standby mode) Hold #
Switch to 1-Beep mode	(in Standby mode) Hold 0
Lock the keypad	(in Standby mode) Hold *
Unlock the keypad	C + *
Enter Lock Mode	Menu 7-3-1 + Select Lock type + Select

Internal Phone Book

Save a number	Enter number + Save + Enter name + Next +  /  (Label) + Select +  /  (Entry options) +  /  to change the settings or Edit enter information + Save
Speed dial	<ul style="list-style-type: none"> For the entry numbers of one digit, press and hold the corresponding digit key. For the other entry numbers, press the first digit key(s) briefly, and hold down the last digit key.
Phone Book Search	Press the Find soft key +  /  +  /  + Select or 

Main Menu (To access, press the Menu soft key.)

1: Phone Book	1: Find 2: Add Entry 3: Groups 4: Memory Status	6: Organiser	1: Scheduler 2: Task List 3: Memo Pad 4: Alarm 5: Calculator 6: World Time 7: Count Down
2: Messages	1: Write 2: Inbox 3: Outbox 4: Drafts 5: Templates 6: Erase Messages 7: Settings 8: Voice Mail 9: SMS Groups 0: One Touch Paging	7: Setting	1: Call 1: Answer Mode 2: Auto Redial 2: Phone/System 1: Dial Short Cut 2: Key Guard 3: Set Time 4: Version 3: Security 1: Lock Mode 2: Change Code 3: Emergency Numbers 4: Voice Privacy 5: Clear Phone Book 6: Reset Phone 7: Clear SMS Groups
3: Call History	1: Missed 2: Received 3: Dialed 4: Erase History 5: Call Duration		
4: Sound	1: Ring Tones 2: Ringer Volume 3: Alerts 4: Key Tone 5: Power On/Off Melody		
5: Display	1: Bahasa 2: Wallpaper 3: Banner 4: Backlight 5: LCD Contrast 6: Shortcut Indicator	8: Games	1: Child Monk Adventure 2: Black Planet 3: Hello Monkey 4: Bowling 5: Othello 6: Settings

Licensed by QUALCOMM Incorporated under one or more
of the following Patents.

U.S Patent No. 4,901,307 5,056,109 5,099,204
5,101,501 5,103,459 5,107,225
5,109,390