


LAVAMAT 50700

Washing machine

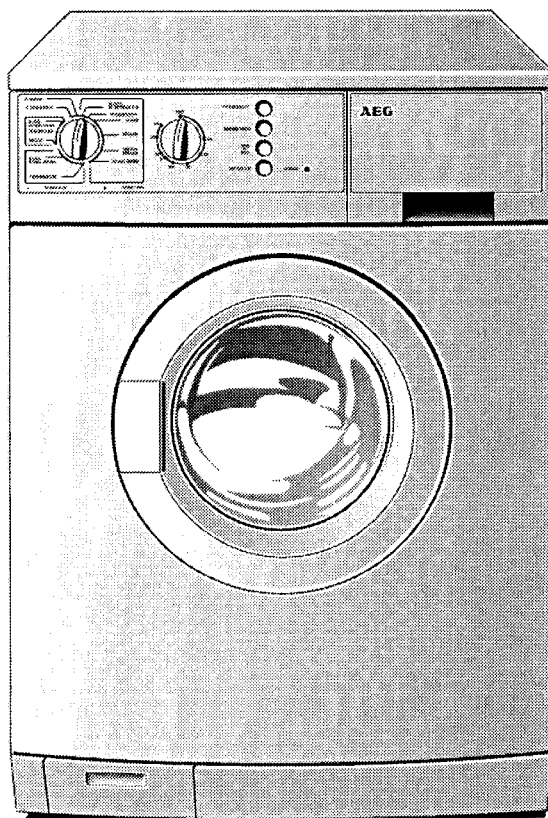

Operating Instructions

Dear customer,

Please read these operating instructions through carefully, before using the appliance.

Please ensure you fully understand the safety instructions on the first pages of these operating instructions! Retain the operating instructions for future reference, and pass them on to any future owners.



The warning triangle and/or the key words (**Warning!**, **Caution!**, **Attention!**), emphasizes information which is important for your safety or the correct functioning of the appliance. It is essential that this information is observed.



This symbol guides you step by step when operating the appliance.



This symbol gives you additional information and practical tips on using the appliance.



Tips and information about the economical and environmentally friendly use of the machine are marked with the clover symbol.

If you require assistance or advice on your appliance, please contact our customer care department by letter or telephone:

Customer Care Department
AEG Domestic Appliances Limited
P.O. Box 47
Newbury
Berkshire RG 14 5XL
Tel: 01635 572700
Fax: 01635 42970

Printed on environmentally friendly paper.
Whoever thinks ecologically also acts ecologically

Content

Safety instructions	5
Disposal	7
Environmental tips	7
Important features of your appliance	8
Description of the appliance	9
Front view	9
Control panel	10
Program selector	10
Program selector as progress indicator	12
Temperature selector	12
EASY-CARES button	12
SOAKING button	12
Final spin speed	12
RINSE HOLD button	12
Indication lamp ON	12
Compartment for washing detergent and conditioner	13
Consumption values and time requirement for selected programs	14
Before using your machine for the first time	14
Preparing the washing cycle	15
Sorting out and preparing washing	15
Types of washing and care symbols	16
Washing powders and conditioners	17
Which washing powder and conditioner?	17
How much washing powder and fabric softener?	17
Using a water softening agent	17
Run wash cycle	18
Brief instructions	18
Loading the washing	18
Add detergent/conditioner	19
Selecting the washing program	20
Start the washing program, set the final spin speed or select RINSE HOLD	21
During the washing program	21
End of wash cycle/removing the washing	21

Program tables	23
Washing	23
Separate rinsing	24
Separate fabric softening/starching	24
Separate spinning	24
Separate prewash	25
Separate soaking	25
Maintenance and Cleaning	26
In daily use	26
Control panel	26
Detergent compartment	26
Washing machine drum	27
Door	27
Precautionary measures in the event of a risk of frost	27
Troubleshooting	28
Certain problems etc.	28
If the washing results are not satisfactory	30
Carrying out an emergency emptying	31
Cleaning the drain pump	32
Technical data	33
Power supply	33
Information for the electrician	33
Service & Spare Parts	34
Index	35



Safety instructions

The safety standards of AEG electric appliances are in keeping with the recognised rules of technology and the law governing the safety of appliances. Nevertheless as a manufacturer we are committed to familiarise you with the following safety instructions:

General safety

- Repairs to the washing machine may only be carried out by qualified personnel. As a result of incorrect repairs considerable dangers for the user may result. Please contact our customer service department or an authorised AEG dealer in the event of repairs being necessary.
- Never start the washing machine if the mains flex is damaged or the control panel, work top or base area are so damaged, allowing internal components of the washing machine to be accessible.
- Switch off the washing machine before carrying out any cleaning, care and maintenance work! You can make totally sure by pulling the mains plug out of the socket or by switching off the fuse switch in the fuse box.
- Never use the flex to pull the plug out of the socket but pull the actual plug.
- Do not spray the washing machine with water.
- During washing programs at a high temperature, the glass of the door heats up. Do not touch!
- Allow the water to cool down before cleaning the drain pump, or before carrying out an emergency emptying.
- Small animals can nibble at power cables and water hoses causing electric shock hazard and danger of damages from water!

Installation

- Please follow the separate **Installation and connection instructions**.
- Installation must comply with local water authority and building regulations requirements.
- Run the first washing cycle without washing (COTTONS 95, with half the amount of washing powder) to remove residues from the drum which may have been left during manufacture.

Child Safety

- Often children are not aware of the dangers involved in handling electrical equipment. Therefore please ensure they are adequately supervised whilst the appliance is on and do not allow children to play with the washing machine – there is a risk that the children may lock themselves in the appliance.
- Packaging (e.g. plastic films, polystyrene) could be dangerous for children – danger of suffocation! Keep packaging away from children.
- Please make sure that children or small animals do not climb into the drum of the washing machine.
- When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door catch to prevent young children being trapped inside.

Intended use

- Only use the washing machine to wash normal domestic washing. If the washing machine is used for any other purpose or is incorrectly used, the manufacturer adopts no liability for any damages which may result.
- Conversions or changes to washing machines are not permitted due to safety reasons.
- Only use washing powder which is suitable for washing machines. Please follow the instructions of the washing powder manufacturers.
- The washing must not contain any flammable solvents.
- Do not use your washing machine for dry cleaning.
- Dyes and bleaching agents may only be used if specifically permitted by the manufacturer of these products. We cannot be held liable for any damages.

Disposal

Dispose of the packaging!

Dispose of the packaging material of your washing machine correctly. All packaging materials are environmentally friendly and can be disposed of without any danger or burnt in the refuse incinerator.

The plastic parts can be reused:

- The external plastic cover and the bags inside are made of polyethylene (marking >PE<).
- The padding is made of CFC free expanded polystyrene (marking >PS<).

When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door catch to prevent young children being trapped inside.

Use an authorised disposal site.

Environmental tips


- For normally soiled washing you do not need a prewash. In this way you can save washing powder, water and time (and not pollute the environment!).
- It is more economical to wash full loads.
- For small quantities of washing use half to two thirds of the recommended washing powder quantity.
- By suitable pretreatment stains and a certain amount of dirt can be removed. Then you can wash at a low temperature.
- Wash slightly soiled to normally soiled cottons with the energy saving program.
- Often you do not need a fabric softener. Just try it! If you use a tumble dryer your washing will become soft and fluffy without softener.

Important features of your appliance


- Setting the program using the program selector and temperature selector.
- **Stain program** for effectively treating stained washing.
- Button **EASY-CARES** for careful treatment of easy-care fabrics.
- Button **SOAKING**, in order to separately soak washing with dried on dirt.
- **Energy saving program** for slightly soiled to normally soiled cottons.
- Maximum **Spin speed 1000 revolutions per minute**.
- Speed for the final spin can be reduced to 700 revolutions per minute.
- **Rinse hold** can be added: the washing remains in the final rinse water, it is not spun.
- **Automatic load adaptation** with fuzzy logic: sensor controlled washing process with variable number of rinse cycles, water quantity dependent on foam and load, controlled spin etc, ensuring best washing and rinsing results with the most economical water consumption.
- **3-chamber detergent compartment** for washing powder and fabric softener: stain remover in prewash chamber
- **ÖKO lock**: The Öko lock ensures effective detergent usage. The Öko valve closes off the wash tub from the drainage system during all wash programmes.
- **Scoop ribs** in the washing machine drum: ensure washing is wet fast and equally.
- **Anti-unbalance control system**: for stability and smooth running.
- Connection for **hot and cold water or only cold water**

Description of the appliance

Front view

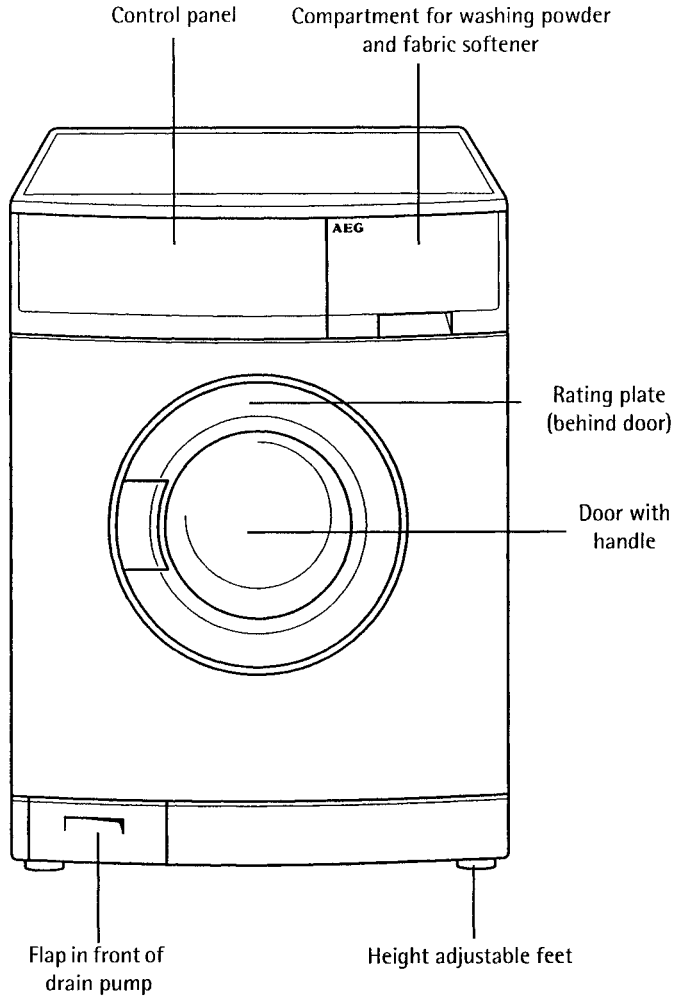

Control panel

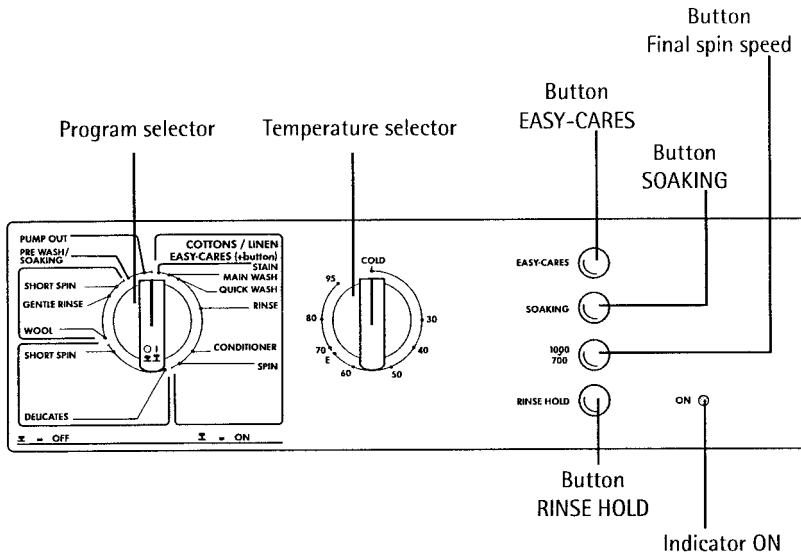


Program selector

By means of program selector you switch the washing machine on and off.

- Switching on: Pull out program selector.
- Switching off: Push in program selector.

Furthermore, you determine the washing cycle via the program selector. Different setting positions have the following effect:

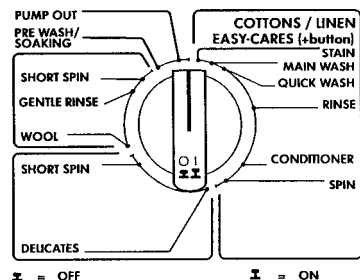

Program group COTTONS/LINEN, EASY-CARES (+button)

- STAIN

For treating very dirty or stained washing using stain remover (extended main wash with stain remover phase, not selectable for woollens setting).

- MAIN WASH

Main-wash cycle for normal dirt (wash – rinse/soft-rinse – spin)


- QUICK WASH

Shortened main-wash cycle for lightly soiled washing.

- RINSE

Separate rinse, e.g. for rinsing hand-washed fabrics (spin according to the selected washing cycle).

- CONDITIONER

Conditioner rinse (or starching): Liquid conditioner or starch is added from the  compartment during the rinse.

- SPIN

Spin after RINSE HOLD, or separate spin for hand-washed fabrics.

Program group DELICATES

- DELICATES

Main wash cycle for delicates
(Wash rinse/conditioner – short spin).

- SHORT SPIN

Spin after RINSE HOLD or separate gentle spin of hand-washed delicates

Program group WOOL

- WOOL

Main wash cycle for wool and especially sensitive fabrics.
(Wash – conditioner – short spin).

- GENTLE RINSE

Separate protective rinse, e.g. for rinsing hand-washed fabrics
(1 Rinse cycle and subsequent short spin).


- SHORT SPIN

Spin after Rinse Holds or separate short spin of hand-washed woollen and especially sensitive fabrics.

PRE WASH/SOAKING

- PRE WASH

Separate PRE WASH (approx. 20 minutes, maximum 40° C) and subsequent pumping out.

 After PRE WASH, the main wash cycle must be set as desired, the program does not continue automatically.

- SOAKING

Separate Soaking, when PRE WASH/SOAKING is set via program selector and the SOAKING button is pressed.

Soaking duration approx. 20 minutes, maximum 40 °C (approx. 15 minutes when EASY-CARES button was additionally pressed).

Afterwards the washing remains in the water until the water has been pumped out.

PUMP OUT

Pumping out of water after RINSE HOLD (without spin) or after separate soaking.

Program selector as progress indicator

The program selector serves as a progress indicator by moving clockwise until the end of the program is reached.


Temperature selector

You can set the following temperature steps via temperature selector:

Cold, 30, 40, 50, 60, E, 70, 80, 95



Position E (energy-saving program) is suitable for boiled washing of light up to normal dirt; reduced temperature to approx. 67°C.

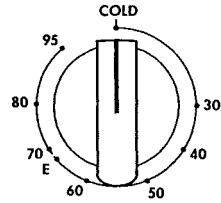


EASY-CARES button

For easy-care washing. This button is active when using the program selector, a program is selected from the group of COTTONS/LINEN, EASY-CARES (+button) or by separate SOAKING.




SOAKING button

 This button is active when using the program selector PRE WASH/SOAKING is selected.



Final spin speed

 With this button you reduce the spin speed for the final spin process.



RINSE HOLD button

If RINSE HOLD is selected the washing remains in the last rinsing water, it will not be spun.







Indication lamp ON

The indication lamp ON illuminates, as soon as the washing machine is switched on.

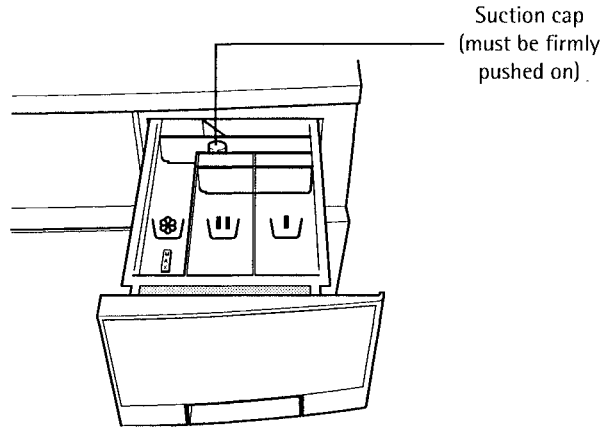

Compartment for washing detergent and conditioner



-  Compartment for pre-wash detergent/soaking agent or stain remover.
They are added for PRE WASH and SOAKING right at the beginning of the washing program or for STAIN at the optimum time during the main wash.
-  Detergent compartment for main wash (and water softening agent if used).
-  Compartment for liquid conditioners (fabric softener, starch).
They are added to the final rinse water.

Consumption values and time requirement for selected programs




The values in the following table were determined under standard conditions. They provide a useful guide for household use.

Program selector	Temperature selector	Type of washing	Filling quantity in kg	Water in litre	Energy ¹ in kWh	Time ² in minutes
MAIN WASH	95	Cottons/Linen	5	59	1.80	119
	60	Cottons/Linen	5	59	1.10	119
	40	Cottons/Linen	5	59	0.60	119
	40	Easy-Cares	2.5	48	0.40	86
	30	Delicates	2.5	57	0.45	67
	30	Wool	1	52	0.35	67

1) The energy consumption will be lower on a hot and cold fill connection.

2) These times are approximate.

Before using your machine for the first time

-  Slightly pull the detergent compartment out of the control panel.
-  Pour about 1 litre of water through the detergent compartment into the washing machine.
When this has been done the ÖKO lock can function correctly.
-  Run a wash cycle without laundry (COTTONS 95, with half the amount of washing powder).
This removes any residues from the drum which may have been left during manufacture.

Preparing the washing cycle

Sorting out and preparing washing

- Sort out washing according to the type and care symbol (see "Types of washing and care symbols").
- Empty the pockets.
- Remove any metal parts (safety pins, badges).
- To prevent washing from getting damaged and forming bundles: close zips, button up duvet covers and pillow cases, tie up loose straps such as on aprons.
- Turn clothes made from double layer fabric inside out (e.g. anoraks, sleeping bags).
- For knitted coloured fabrics as well as woollens and fabrics with appliqué: turn inside out.
- Put small and delicate items (baby socks, tights) in a washing net or a pillow case with a zip.
- Handle curtains with special care. Remove metal strips or plastic hooks.
- Keep coloureds and whites separately in different washing cycles.
- When washing fabrics requiring different wash temperatures always select the lowest temperature.
- New coloured fabric often contains excess dyes. Wash this laundry separately for the first time.
- Mix small and large pieces of washing! This improves the effectiveness of the wash and the washing is distributed better when spinning.
- Shake out washing before putting it into the machine.
- Unfold the washing before putting it into the drum.

Types of washing and care symbols

The care symbols assist you in selecting the correct washing program. The washing should be sorted according to the type and care symbol. The temperature specifications in the care symbols are always maximum specifications.

Cottons

Fabrics made of cotton and linen with this care symbol will withstand maximum wash actions and high temperatures. The COTTONS/LINEN program is suitable for this type of washing.

Linens

Fabrics made of cotton and linen with this care symbol will withstand maximum wash actions and are colourfast at 40°C or 60°C. The COTTONS/LINEN program is suitable for this type of washing.

Easy care washing


Fabrics such as finished cottons, cotton mixtures and synthetics with this care symbol require a gentler washing action. The EASY CARES program is suitable for this type of washing.



Delicates

Fabrics such as layered fabrics, microfibres, synthetics or curtains with this care symbol require a very gentle treatment. The DELICATES program is suitable for this type of washing.

Woollens and very delicate types of washing

Fabrics such as wool, wool mixtures or silk with this care symbol require a very gentle wash cycle. The WOOLLENS program is suitable for this type of washing.

Woollens with  (wool mark) may only be washed in the washing machine if they bear the addition "does not felt" or "suitable for machine washing".

Fabrics with the care symbol  (Hand washing) or  (Do not wash!) may not be washed in the washing machine!

Please follow care instructions "wash separately" and "wash separately several times"!

Washing powders and conditioners

Which washing powder and conditioner?

Only use washing powders and fabric softeners suitable for automatic washing machines. As a general rule follow the instructions of the manufacturers.

How much washing powder and fabric softener?

The amount to be used depends on

- the load:
If the detergent manufacturer does not make any specifications for small loads, use a third less for half loads, and for very small loads only use half of the amount of washing powder recommended for a full load.
- the degree of soiling of the washing:
For only slightly soiled washing use less washing powder. Follow the instructions of the detergent manufacturers and load.
- on the degree of hardness of the tap water:
The harder the water, the higher the dosage! You will find the quantities to use according to water hardness on the washing powder packet.

Liquid detergent

Add liquid detergent using the dispenser provided by the detergent manufacturer. Please follow the instructions on the packet.

Using a water softening agent

In areas of hard water, the use of a water softening agent can reduce the amount of detergent necessary. See manufacturers recommendations.

Run wash cycle

Brief instructions

A washing cycle proceeds in the following steps:

- ☞ Open the door, load the washing.
- ☞ Shut the door.
- ☞ Add washing powder/conditioner.
- ☞ Set the correct washing program and temperature.
- ☞ Press EASY-CARES button if required.
- ☞ Pull out program selector.
Washing program starts automatically after six seconds.
- ☞ Alter the final spin speed or select RINSE HOLD if required.
You can alter this setting and the temperature during the entire washing cycle.


After the washing program runs out:

Important! If the washing cycle ended with Rinse Hold, before opening the door, carry out a PUMP OUT, SPIN or SHORT SPIN.

- ☞ Open the door, remove the washing.
- ☞ Push in program selector.
The washing machine is then switched off.
- ☞ We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Loading the washing


- ☞ Sort and prepare washing according to type.
- 📘 For instructions or correct preparation of the washing, see "Washing types and treatment symbols."
- ☞ Open door: pull the handle of the door.
- ☞ Load the washing.
- 📘 Maximum filling quantity see "Program tables" in the following chapter.
- ☞ Firmly shut the door.

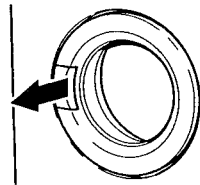

Caution! When closing the door do not catch any pieces of laundry! Textiles and appliance could be damaged.

Add detergent/conditioner

- ☞ Pull out the compartment as far as it will go.
- ☞ Add detergent/conditioner.
- (i) For instructions on detergent and conditioners, see "Washing powders and conditioners".

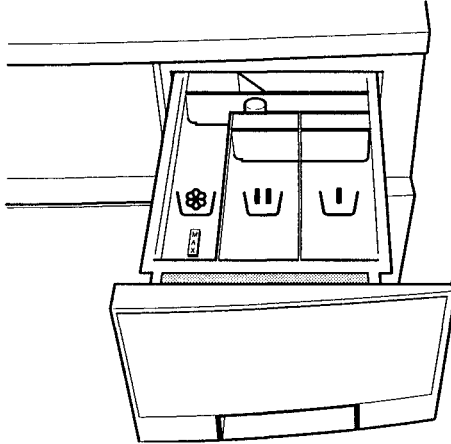

- ☞ Prewash agent/soaking agent or stain remover (for extra programs PRE WASH/SOAKING or STAIN)
- ☞ Main detergent in powder form (and water softening agent if used)
- ☞ Liquid conditioners (fabric softener, starch).

Important: Do not fill above the MAX mark. When using thick concentrated fabric conditioners and starches we recommend you dilute the concentrate with water to ensure trouble-free dispensing.
If using starch powder dissolve according to manufacturers instructions.


- ☞ Push the compartment in completely.


Selecting the washing program

- i** Suitable program and correct temperature for the respective type of washing, see "Program Tables."


Set the washing program


Attention! Program selector may only be rotated clockwise!

-  Set the program selector to the desired washing program

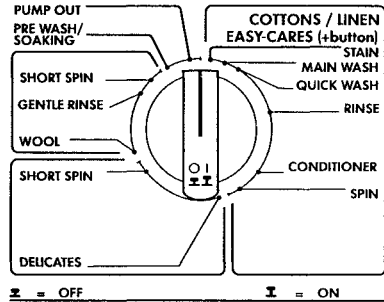

Set the temperature

-  Set the temperature selector to the desired temperature.

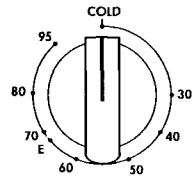


 
For easy-cares washing:

-  Press the EASY-CARES button.

- i** The EASY-CARES button can only be used with the COTTONS/LINEN and SOAKING programs. If used with any other program it will have no effect.

 
For PRE WASH/SOAKING:

-  If separate soaking is desired, press the SOAKING button.



Start the washing program, set the final spin speed or select RINSE HOLD

- ☞ Check whether the water tap is opened.
- ☞ Activate the washing machine: Pull program selector.
The indicator ON is illuminated, washing program starts automatically after six seconds.
- ☞ Set the spin speed for the final spin or select RINSE HOLD if required:
 - Press the button final spin speed or
 - press the RINSE HOLD button.



If RINSE HOLD was selected, the washing is not rinsed in the last rinsing water, it will not be spun.

During the washing program

you can at any time

- alter the setting of the final spin speed,
- select RINSE HOLD,
- alter the temperature setting;
- press the EASY-CARES button

Other settings cannot be altered.

To interrupt the washing program prematurely:

- ☞ Push in program selector.
- ☞ Rotate the program selector clockwise to PUMP OUT.
- ☞ Pull out program selector.

End of wash cycle/removing the washing


The washing program normally ends with the final spin.


After PRE WASH/SOAKING:


- PRE WASH

- (i) After PRE WASH, the main wash cycle must be set as desired, the program does not continue automatically.
- ☞ Set the main wash cycle desired.

- SOAKING

 After soaking separately, the water must be pumped out first and then the main wash cycle can be set as desired:


 Release the SOAKING button,
or
rotate the program selector clockwise to PUMP OUT (water is pumped out).

 Subsequently set the main wash cycle as desired.


After Rinse Hold:


After a Rinse Hold the water must be pumped out first or the washing spun:


 Release RINSE HOLD button.


 Rotate the program selector clockwise to SPIN or SHORT SPIN (washing becomes spun according to the program group selected and the final spin speed set),
or
rotate program selector clockwise to PUMP OUT (Water is pumped out).


After the program is completed:


 Open the door.

 Remove the washing.

 Push in the program selector.
Operation indicator is extinguished. Washing machine is deactivated.

 After the program has finished, pull the washing powder compartment out a little so that it can dry. Leave the door ajar for a while. This helps to prevent stagnant smells and helps to preserve the door seal.


 







 Close the water tap.

 We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Program tables

Washing

The following tables list the most commonly used and most useful programs.

Type of washing, care label	max. filling quantity (dry weight) ¹	Program selector	Temperature selector	Additional button
Cottons 	5kg	STAIN	95	
		MAIN WASH	95	
		QUICK WASH	95	
		Energy-saving program: STAIN	E	
Linen  	5kg	STAIN	30, 40, 50, 60	
		MAIN WASH		
		QUICK WASH		
Easy-cares  	2,5kg	STAIN	30, 40, 50, 60	EASY-CARES
		MAIN WASH		
		QUICK WASH		
Delicates 	2,5kg (or 15-20m ² curtains)	DELICATES	COLD, 30, 40	
Wool ²   	1kg	WOOL	COLD, 30, 40	

1) A 10-litre bucket contains about 2,5kg of dry washing (cotton).

2) Woollen clothing with woollen symbol may only be washed in the machine if they bear the addition "does not felt," "non-felting" or "washing machine resistant".

Separate rinsing

Type of washing	Max. filling quantity (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	RINSE	
Easy-cares	2,5kg		EASY-CARES
Delicates	2,5kg	GENTLE RINSE	
Wool	1 kg		

Separate fabric softening/starching

Type of washing	Max. filling quantity (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	CONDITIONER	
Easy-cares	2,5kg		EASY-CARES
Delicates	2,5kg	GENTLE RINSE	
Wool	1 kg		

Separate spinning

Type of washing	Max. filling quantity (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	SPIN	
Easy-cares	2,5kg		EASY-CARES
Delicates	2,5kg	SHORT SPIN	
Wool	1 kg	SHORT SPIN	

Separate prewash

Type of washing	Max. filling quantity (dry weight)	Program selector	Temperature selector	Additional button
Cottons/ Linen	5kg	PRE WASH/ SOAKING	COLD, 30, 40	
Easy-cares	2,5kg			EASY-CARES
Delicates	2,5kg			

Separate soaking

Type of washing	Max. filling quantity (dry weight)	Program selector	Temperature selector	Additional button
Cottons/ Linen	5kg	PRE WASH/ SOAKING	COLD, 30, 40	SOAKING
Easy-cares	2,5kg			SOAKING EASY-CARES
Delicates	2,5kg			SOAKING

Maintenance and Cleaning

In daily use

- ☞ After the program has finished pull out the detergent compartment a little so that it can dry out.
- ☞ Leave the door ajar for a while. This helps to prevent stagnant smells, and helps to preserve the door seal.
- ☞ Close the water tap.
- ☞ We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Control panel


Attention! Do not use household furniture polish or abrasive cleaners to clean the panel and operating parts.

- ☞ Wipe over the operating panel with a damp cloth. Only use warm water.

Detergent compartment

Now and again the detergent compartment should be cleaned.


- ☞ Pull out the detergent compartment as far as it will go.
- ☞ Remove the detergent compartment by pulling firmly.
- ☞ Remove the suction cap.
- ☞ Clean the suction cap under running water.
- ☞ Clean the separate compartments with warm water. A bottle brush is a useful aid.
- ☞ Push on the suction cap firmly so that it is sitting tightly.
- ☞ Clean the entire detergent compartment inside area with a brush.
- ☞ Insert the detergent compartment into the guides and push it in.

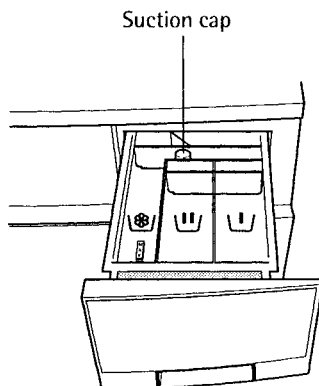


Washing machine drum

The washing machine drum is made from rust-free stainless steel. Any objects left in the laundry which are likely to rust can stain the drum.





Attention! Do not clean the stainless steel drum with descaling agents containing acids, scouring agents containing chlorine or iron or steel wool.

-  Remove rust stains on the drum with a stainless steel cleaning agent.

Door

-  Regularly check if there are deposits or foreign bodies in the rubber seal behind the door and remove them.

Precautionary measures in the event of a risk of frost

-  If the washing machine is located where temperatures may fall below 0 °C the following precautions must be taken:
 -  Turn off water tap.
 -  Empty the appliance (see "Carrying out an emergency emptying")
 -  Disconnect the inlet hose.

Troubleshooting

i The whistling noise when spinning may be different to your previous washing machine which is due to the modern drive system.



Certain problems etc.

If you call out an engineer and the fault is listed here, a charge is levied even if the appliance is in guarantee.

Fault	Possible cause	Remedy
Washing machine does not work.	The mains plug is not connected.	Plug in the mains plug.
	The fuse of the household electrical system is faulty.	Replace the fuse.
	Appliance is not switched on.	Switch on the appliance (pull out program selector).
No water flows in.	The door is not correctly closed.	Close the door; you must hear a click as it locks.
	The water tap is closed.	Open the water tap.
	The inlet hose is blocked.	Unscrew the hose from the tap, remove the filter and clean it under flowing water.
Washing machine vibrates during operation or is unsteady.	The machine is not level.	Adjust the feet according to the installation and connection instruction.
	There is very little washing in the machine (e.g. only a bath robe).	This does not hinder the machine from functioning correctly.
	Water could not be completely pumped out before the spin – because there is a kink in the outlet hose or – the drain pump is blocked.	Check that the outlet hose is correctly laid and if applicable eliminate the kink or clean the drain pump and if necessary remove any foreign bodies from the pump housing.
The suds in the main wash cycle create too much foam.	Probably too much washing powder was used.	Only use as much as the washing powder manufacturer recommends.

Fault	Possible cause	Remedy
Water is leaking out from under the washing machine.	The inlet hose connection is not tight.	Tighten the inlet hose connection.
	The inlet hose has a leak.	Check the inlet hose and if necessary replace it.
	The drain pump cover is not tight.	Tighten cover by turning clockwise.
	Washing is caught in the door.	Abort the program, remove the washing caught in the door, start a new program.
Fabric softener is not added, compartment  for fabricsoftener is filled with water.	Suction cap in the fabric softener compartment is not correctly fitted or is blocked.	Clean the detergent compartment, fit the suction cap on firmly.
Appliance does not spin, water in the drum.	RINSE HOLD selected.	Deselect RINSE HOLD.
	SOAKING program is terminated.	Pump out water and set the main wash cycle as desired.
Washing has not been spun sufficiently, there is water left in the drum.	There is a kink in the outlet hose.	Eliminate the kink.
	Maximum pumping height (drain height 1 m from the position of the machine) is exceeded.	Please contact AEG Service Force Centre, it has a retrofit available for pump heights above 1 m.
	Drain pump is blocked.	Switch off the machine and pull the plug out of the socket, clean the drain pump.
	The water drainage system is blocked.	Clean the blockage.
Door cannot be opened.	The door is locked due to safety reasons	After programm termination wait for 2-3 minutes.
The rinse water is cloudy.	Probably caused by a washing powder with a high silicate content.	This does not affect the rinse results. If necessary use liquid detergent.

Fault	Possible cause	Remedy
Washing powder residues are left in the washing powder compartment.	The water tap is not fully open.	Open the water tap fully.
	The inlet hose filter is blocked.	Clean the filter.
	The filter at the clamp connection of the inlet hose on the machine is blocked.	Clean the filter.

If the washing results are not satisfactory

If the washing turns greyish and limescale deposits are present in the drum

- Insufficient washing powder has been added.
- Incorrect washing powder was used.
- Special stains were not pretreated.
- Program or temperature was not set correctly.
- When using modular washing powders the individual components were not used in the correct ratio.

If there are still grey stains on the washing

- Washing soiled with ointments, grease or oils was washed with insufficient washing powder.
- The temperature selected for the wash was too low.
- A frequent cause is that fabric softener especially a concentrated one has come into contact with the washing. Wash out these types of stains as fast as possible and use the fabric softener carefully.

If after the final rinse foam is still visible

- Modern washing powders can still cause foam in the final rinse cycle. The washing is nevertheless sufficiently rinsed.

If there are white residues on the washing



- These are insoluble contents of modern washing powders. They are not the result of an insufficient rinse. Shake out the washing or brush it off. Turn the washing inside out before washing it. Review your choice of powder, possibly use liquid detergents.


Carrying out an emergency emptying




! **Warning!** Isolate the washing machine from the mains supply before the emergency emptying!


If the washing machine no longer pumps out the water an emergency emptying must be carried out.


Warning! The water, which flows out of the emergency emptying hose can be hot. First allow the water to cool down before emergency emptying!

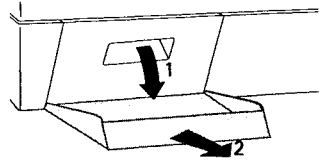
-  Put down a flat container to catch the water draining out.
-  Pull down the flap in the left corner of the base strip and remove it.



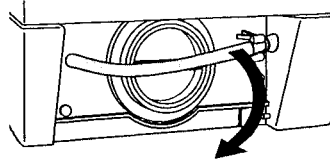


-  Release the emergency emptying hose from its holder.
-  Pull the emergency emptying hose out a little.
-  Place a container underneath to catch the water.

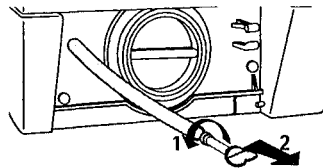

-  Release the plug of the emergency emptying hose by turning it anti-clockwise and pull it out. The water will drain out. Depending on the amount of water, it may be necessary to empty the container catching the water several times. To do this, temporarily close the emergency emptying hose again with the plug.



When the water has drained out completely:

-  Push and twist the plug firmly back into the emergency emptying hose.
-  Push the emergency emptying hose back in a little and let it catch on to the holder.
-  Replace the flap in the base plate and close it.

i When the washing machine is completely empty, the ÖKO lock can no longer function correctly. Therefore before the next wash pour in approx 1 litre of water (pour it in through the washing powder compartment).


Cleaning the drain pump

! **Warning!** Switch off the washing machine and pull the plug out of the socket before cleaning the drain pump!

☞ First carry out an emergency emptying (see section "Carrying out an emergency emptying").


☞ Place a towel on the floor in front of the cover of the drain pump. Surplus water may flow out.

☞ Unscrew the cover of the drain pump by twisting it anti-clockwise and pull it out.

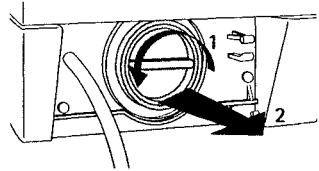


☞ Remove any foreign bodies which may be in the pump housing.

☞ Check whether the impeller of the pump can be turned. (It is normal for the pump to turn in steps.) If the impeller cannot be turned at all please contact your local AEG Service Force Centre.

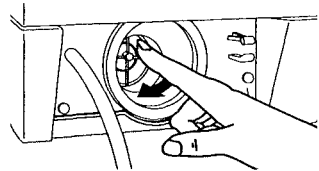

☞ Replace the cover (insert the ridges on the cover into the guiding slots) and screw on tightly in a clockwise direction.

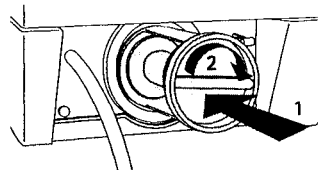

☞ Close the emergency emptying hose, push it in and twist.

☞ Close the flap.

Technical data

Height x width x depth	85x60x60cm
Depth with the door opened	95cm
Height adjustability	approx. +10/-5mm
Empty weight	approx. 85kg
Full load (depending on the program)	max. 5kg
Area of application	household
Drum speed when washing	max. 53rpm ⁻¹
Drum speed when spinning	see type plate
Water pressure	1-10bar (=10100N/cm ² = 0.11,0MPa)

CE This appliance complies with the following EC directives:

- 73/23/EEC of 19/2/1973 'Low voltage directive'
- 89/336/EEC of 3/5/1989 'EMC directive' including the Modification directive 92/31/EEC

Power supply

Please refer to the rating plate for specifications about the power supply. The nominal voltage stated on the type plate and type of current must be identical with the nominal voltage and type of current at the point of installation. Also refer to the type plate for the fuse required.

Information for the electrician

When connecting the appliance without a plug, care must be taken that this is done correctly. Please follow the relevant information in the "Installation and connection instructions" section.

Service & Spare Parts

If after carrying out the necessary checks there is still a fault with your appliance please contact your local AEG Service Force Centre.

In guarantee customers should ensure that the suggested checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

Service & Spare Parts

If you require a service engineer or wish to purchase spare parts, contact your local AEG Service Force Centre, by telephoning

0990 234 234

Help us to help you


Please determine your type of enquiry before telephoning. When you contact us we need to know.

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
 - What is the fault?
 - When does the fault occur?
4. The model, production number and product identification number.
5. Date of purchase.

This information can be found on the rating plate, so you have these numbers to hand we recommend you write them below.

E/PNC no.

F no.

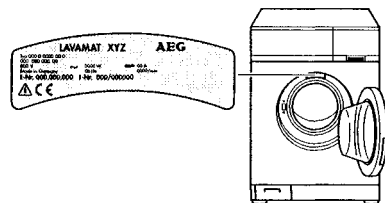

Customer care

For general enquiries regarding your AEG appliance, or for further information on AEG products please contact our

Customer Care Department
AEG Domestic Appliances Limited
PO Box 47
Newbury
Berkshire RG 14 5XL
Tel: 01635 572700
Fax: 01635 42970

Index

A

Automatic load adaptation 8

C

Conditioner 11, 13, 17

liquid 13, 19

Connection hot/cold 8

Cotton mixtures 16

Cottons 14, 16

Curtains 15, 16

Customer care 34

D

Delicates 14, 16

Detergent 13

Drain pump 9, 32

E

Easy cares 12, 14, 16, 20

Emergency emptying 31

Energy saving 8, 12

F

Fabric softener 7, 9, 13, 18, 19

H

Hand washing 16

L

Limescale 30

Linen 14, 16

Liquid detergent 17

M

Main Wash 10

Main washing detergent 13, 19

Microfibres 16

O

ÖKO lock 8, 14, 31

P

Pre-wash 11, 25

detergent 13, 19

Program interruption 21

Pump out 12

Q

Quick wash 10

R

Rating plate 9, 34

Rinse 11

Rinse hold 8, 22

S

Service & Spare Parts 34

Silk 16

Soaking 11, 25

Soaking agent 19

Spin 8, 11, 24

Stain 7, 8, 10, 30

Stain remover 19

Synthetics 16

W

Washing

coloured 15

delicate 15, 16

double layers 15

easy care 12, 16

fabric softening 24

insufficiently clean 30

linen 10

normally soiled 7

powder residues 30

slightly soiled 7, 8, 17

starching 19, 24

Washing powders 9, 17, 18, 19

Water

hardness 17

softening agent 13, 17, 19

Wool 14, 16

AEG Hausgeräte AG
Postfach 1036
D-90327 Nürnberg 1

© Copyright by AEG

H 243 268 140 - 02 - 0198

AEG Domestic Appliances Ltd

Customer Care Department

55-77 High Street

Slough

Berkshire SL1 1DZ

Telephone: 08705 350350