

LAVAMAT 935 i

The Environment - Friendly
Washing Machine

Operating Instructions

Hello

Allow me to introduce myself: I am your AEG ÖKO-LAVAMAT environment-friendly automatic washing machine. From now on, I should like to make washing easier for you, not simply because of my attractive appearance, but also thanks to my "intrinsic qualities". I am economical in terms of energy, water, and detergent consumption, especially quiet in operation, easy to operate, and simple to care for.

If you carefully read and follow my operating instructions before first use and familiarise yourself with my installation and connection instructions, you are sure to experience a good deal of joy when using me to wash your laundry!

You must read these instructions prior to using the appliance and retain them for future reference.



Contents

| | |
|--|-------|
| Safety instructions | |
| Before first use | 4 |
| For the user | 4/5 |
| You should also note the following | 5 |
| The ÖKO system | 6/7 |
| Out of concern for the environment . . . | |
| ÖKO tips for economical washing | 8 |
| The economy programmes | 8 |
| Appliance description | |
| Features | 9-11 |
| Brief instructions on machine washing | 12 |
| Before starting to wash | |
| Sorting your laundry | 13 |
| Pretreating your laundry | 14 |
| Care needed for certain fabrics | 14 |
| Loading the laundry | |
| Recommended wash loads | 15 |
| Open loading doors | 16 |
| Loading laundry | 16 |
| Close loading doors | 16 |
| Detergents | |
| Select detergent | 17 |
| Amount of detergent | 17 |
| Adding detergent | 18 |
| Selecting the wash programme | |
| Programme selector/programme cycle indicator/ | |
| Temperature selector | 19/20 |
| The buttons and their functions | 21/22 |
| Programme tables | 24/25 |
| Consumption values | 26 |
| Programme end | 27 |
| Cleaning, maintenance, care | 28/29 |
| If you think your washing machine is not working properly . . . | 30-33 |
| Customer service | 34 |
| Technical data | 35 |

Safety instructions

Before first use . . .

- Please note my installation and connection instructions.
- Please ensure you have removed all my transport packing. Unless removed, transport packing will cause damage to the appliance and adjacent furniture during spinning.
- You should run an initial wash cycle without laundry to remove residues of factory-applied grease from the drum and tub. Programme: 60 °C cotton programme with half a beaker of detergent.

You may find small water residues in my tub, these are due to the thorough testing which your machine was subjected to in the factory.

Safety instructions for the user

AEG electrical appliances conform to the recognised safety regulations governing electrical domestic appliances. As manufacturers, we nonetheless feel obliged to familiarise you and any other persons using the machine with the following instructions:

- Please make sure before using your machine for the first time that the mains voltage and supply indicated on my rating plate agree with the mains voltage where the machine is to be used. The fuse required is indicated on the rating plate.
- Before cleaning, care and maintenance work, make sure that the appliance is switched off. We advise for safety reasons that you pull the mains plug out of the socket, switch off at the power point or completely remove the fuse in the fuse box servicing this circuit. (See installation and connection instructions.)
- Never direct a water jet onto my outer casing!
- Never use my supply lead to pull the mains plug out of the socket!
- Never operate me if:
 - my mains supply lead is damaged, or
 - the appliance shows visible damage to the control panel, worktop, or plinth.
- **Repairs to electrical appliances should only be performed by a trained electrician. Improper repairs may place the user at serious risk.**

If any other maintenance needs to be carried out, you are recommended to contact our service centre or AEG authorised service agents. Only original AEG spare parts fulfill all requirements!

- Children may not recognise the dangers of improper use of electrical appliances. Therefore, please ensure proper supervision during use.
- When the day finally comes to withdraw me from service and to replace me with another machine, please make sure that you inactivate my door lock and cut my electrical supply lead, disposing of lead and plug safely. This will prevent children from locking themselves in, thus endangering their lives. Ensure safe disposal of the appliance.

- If I am incorrectly operated or used for any purpose other than that for which I am intended, AEG cannot assume liability for any possible damage.
 - Do not climb on the appliance.
 - Keep small children from climbing into the machine to play hide and seek.
 - Do not reach into the moving drum.
 - When you wash with high temperatures, the glass of the loading door will become hot. Do not touch!
 - If appliance is opened by force or through the emergency drain during operation very hot water can result in scalding.
 - In case of faults, switch the appliance off, remove the plug from the socket and turn the water supply to the machine off.
-
- Please keep my packaging away from children. The foil represents a particular danger. The packaging material meets ecological requirements and can be easily disposed of. You are advised to do this as quickly as possible.
 - If the machine is not permanently connected: hook my drain hose securely over the edge of the sink using the hose holder provided. (See section on "Water drainage" in the installation and connection instructions.)
 - If your laundry has been pre-cleaned with flammable solvents, these solvents must have fully evaporated before placing the laundry in the machine.
 - Never use me for chemical cleaning!
 - Dyes/dye removal agents may only be used if the manufacturer of these products expressly allows them to be used in automatic washing machines. Please see their instructions for use. No liability can be assumed for any consequential damage.
 - When cleaning my stainless steel drum, never use any iron-containing scouring agents or steel wool!
- Keep furniture polishes or abrasive cleaners away from my control panel and my controls.
- Only use tap water. Never use any other liquids. You may use rainwater only if it is completely clean, otherwise operation of my electrical solenoid valves could be impaired.

You should also note the following . . .

My ÖKO System



Your new ÖKO-LAVAMAT meets all laundry care requirements and allows individual and versatile programme selection.

It is highly economical in water, energy and detergent consumption, which not only contributes to protection of our environment, but also saves you money.

My Special Spin System

My electronically controlled spin with intermediate spins after the main wash and the 4 rinse sequences on the cotton and linen programmes guarantees very low water consumption:

For cotton/linens without pre-wash only 88 litres of water

The ÖKO Lock

My ÖKO lock ensures 100% effective detergent utilisation. The ÖKO valve closes off the wash tub from the drainage system during all wash programmes. This not only reinforces the cleaning effect but also saves detergent – a saving of 20% in comparison with machines without such a device.

The Stream Clean

The special AEG wash paddles carefully scoop up the wash solution, and on reaching the top of the drum, gently spray streams of water through your wash load. This system ensures that your laundry is at all times soaked in the wash solution.

The Automatic Flowrate Feature

The automatic flowrate feature automatically adjusts the water consumption to the wash load and fabric type concerned. By additionally pressing the 1/2 load button for small wash loads, you can save even more water.

The Short Programmes

For lightly soiled and small wash loads, eg in the case of sports and leisure clothing, use the short programmes.

My wool cradle takes special care of your woollens: with a very gentle washing action, these especially sensitive garments are gently "rocked" to and fro in the drum.

The packaging material meets ecological requirements and can be easily disposed of or can be burned safely in the municipal incinerators.

To the materials: the plastics can be recycled and are marked as follows:

> **PE** < for Polyethylene, e.g. the outer wrapping and the bags inside.

> **PS** < for blown (CFC free) Polystyrene, e.g. the fillers

The cardboard parts have been manufactured from recycled material and should be taken for recycling again.


The Wool Cradle

Information on the packaging material of the appliance

Out of concern for the environment . . .



ÖKO Tips for Economical Washing

These hints are intended to help you act in an environmentally conscious manner.


- For normally soiled laundry, the programmes are intended for use without prewash. Compared to a programme with prewash, you save detergent and water.
- It is more economical to wash full loads. If you find it necessary to wash small loads, you should use my  button. Add only $\frac{2}{3}$ to $\frac{1}{2}$ of the amount of detergent for a full load. This will result in consumption of less water, energy and detergent.
- For light to normally soiled laundry, it is often sufficient to use my economy programme, ie at a lower temperature for a longer time.
- With suitable pretreatment, stains and limited soiling can be removed. This saves a programme being used for heavily soiled laundry.
- Dose your detergent exactly as instructed by the detergent manufacturer, bearing in mind that because of the ÖKO lock you can use 20% less. Overdosage wastes money and burdens the environment. You should also note the instructions for lightly soiled laundry.
- Detergent savings and care for the environment can also be achieved by dosing the detergent as for soft water although you have medium to high water hardnesses, and additionally adding a water softener. This reduces the amount of "chemicals" entering our water ways.
- Use fabric softeners only where necessary, eg for synthetic or mixed fabrics, to avoid static. If you use a tumble dryer, your laundry will be soft and fluffy without a fabric softener.

Economy Programmes

Here are my economy programmes:

-  - Programmes for half and small wash loads
-  - Programmes for fabrics where soiling does not require the full programme at a high temperature

Appliance description

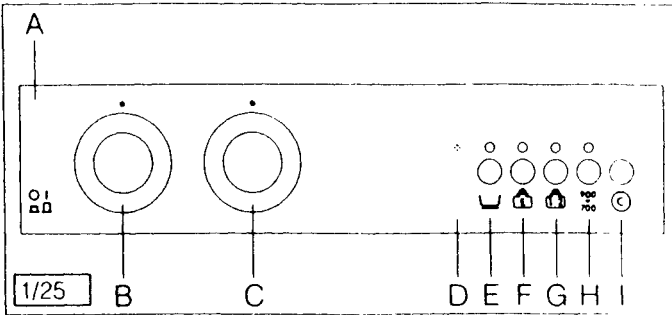

A Control panel

B 11-setting programme selector with programme cycle indicator

C Temperature selector

D Pilot lamp

E Easy-care fabrics/woollens button


F Energy-saving or intensive washing button

G Small wash load button


H Spin speed selector button

I Cancel button

Features

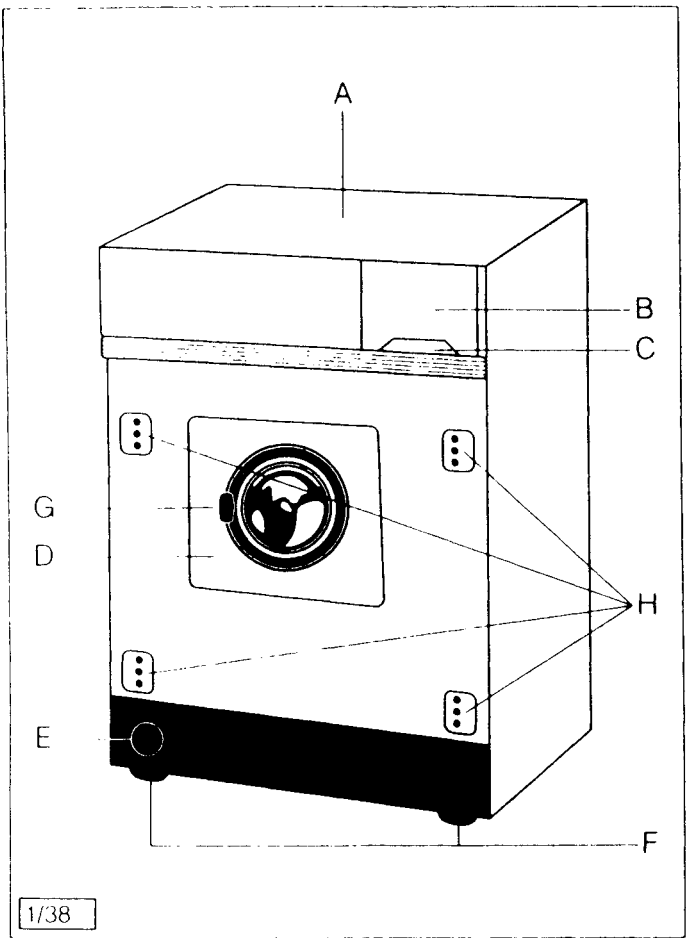

1/38

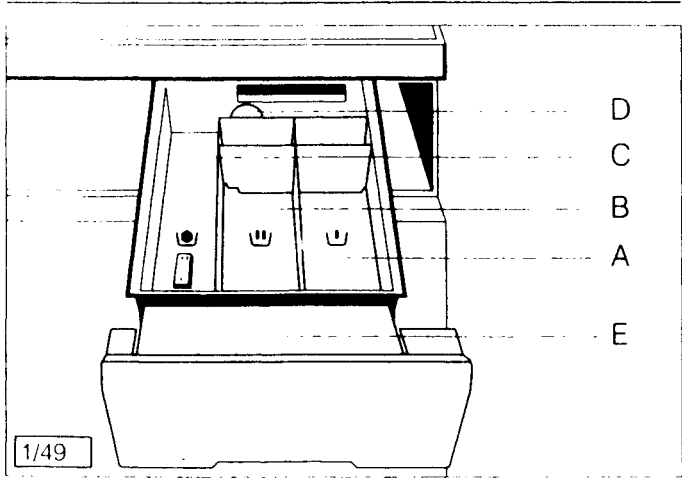

1/49

- A** Removable worktop
- B** Dispenser with compartments for detergent and fabric conditioner and with removable programme card printed on both sides
- C** Detergent dispenser handle
- D** Laundry loading door (inner door), opened via door release handle
- E** Drain pump (cover with debris trap opens for cleaning) – on LH side of pump cover, emergency drain hose
- F** 4 height-adjustable screw-in feet (front and rear)
- G** Door handle
- H** Holes for attaching cabinet door hinges

-
- A** Prewash detergent compartment
 - B** Detergent compartment for main wash
 - C** Liquid conditioner compartment (fabric softener, liquid conditioner, starch)
 - D** Siphon (must be securely inserted)
 - E** Programme card*)

*) You can re-order my programme card from your service centre if it ever gets lost.

Features

The dispenser for detergent and fabric conditioner

Brief instructions on machine washing

Preparing the laundry

Sorting
Pretreatment
Care needed for certain fabrics

Loading the laundry

Open outer and loading doors
Distribute laundry in the drum
Close doors


Detergent dosage

Select detergent
Measure amount of detergent
Add detergent/fabric conditioner
Close dispenser


Selecting the wash programme

Set programme selector
Set temperature selector
Press option buttons
(see programme table or programme card in dispenser)
Pull out programme selector switch. The programme starts.
The pilot lamp lights up as soon as the loading door is locked.

Continuing the programme

On programmes with rinse-hold , to drain the water from laundry:
Set programme selector to 9 or 10 – see programme tables.

When the programme has finished

The programme has ended when the pilot lamp goes out.
Push in programme selector
Release depressed buttons with cancel button .
Open outer and loading doors.
Take out the laundry.
If no more laundry is to be washed:
Turn the programme and temperature selectors to the OFF position.

 
Before starting to wash

- Check that the fabrics are machine-washable. The international care labels will give you guidance.

Cotton/linen – Whites



Cotton/linen – Coloureds



Easy-care fabrics




Delicates



Woolens



- Woolens labelled only with the woolmark  are **not** suitable for machine-washing. Woolens must be labelled with the woolmark and additionally marked "will not felt", "non-felting", or "machine-washable".
- Garments marked with the following symbols must not be washed in a washing machine:

Hand wash



Do not wash



- Note care instruction "Wash separately".
- Coloureds and whites should never be washed together, whites will turn grey.
New dark coloured laundry will often state "wash separately"
This type of garment will often have surplus colour which may be transferred to lighter fabrics during washing. Always wash such items on their own for the first few washes.

Sorting your laundry

Before starting to wash

Pretreating your laundry

- Wherever possible remove **stains** immediately, before they have set, with water and soap or with a special pretreatment agent (spray, liquid detergent).

Care needed for Certain Fabrics

■ Empty pockets

Please make sure that no metal objects (eg paper clips, staples, coins, safety pins, or the like) remain in the laundry.

Button up pillow cases, close zip-fasteners, hooks and eyes. Tie together loose belts and long apron strings.

Turn coloured knitted garments, woolens, or bejewelled textiles inside out.

- **Particularly small or sensitive garments** (eg baby socks, ladies tights, etc) should be washed in a launder net bag or pillowcase.

■ Handle curtains especially carefully

Remove rings and hooks from your curtains, to avoid damage or tearing. Synthetic curtains should be handled carefully as they snag easily. Place net curtains in a pillowcase or wash bag.

Under no circumstances can we accept liability for damage to curtains through incorrect handling.

Spin curtains only when permitted by the manufacturer.

Loading your laundry

| | Full load | Small loads |
|---|-----------|-------------|
| Cotton/linen – Whites/coloureds normally soiled | 5.0 kg | 2.5 kg |
| heavily soiled | 3.5 kg | 1.8 kg |
| Easy-care fabrics and delicates | 2.0 kg | 1.0 kg |
| Woollens | 1.0 kg | – |
| Short programme for whites/coloureds | 2.5 kg | 1.3 kg |
| Short programme for easy-care fabrics | 2.0 kg | 1.0 kg |

**Wash loads
(maximum dry
loads)**

Use the recommended full load wherever possible, as this is the most economical way to wash.

But do not overload!

This will adversely affect the wash result. When washing easy-care fabrics susceptible to creasing, reduce the load.

Opening and closing the loading door
To open the outer door:

Press the outer door on the top LH corner (on the top RH corner when the door is hinged at the left). The door springs open.

To open the loading door

Slide the sliding switch on the door handle to the right (towards the door glass centre) and then pull the door handle forward.

The loading door can be opened

- when the programme has ended, as soon as the pilot lamp has gone out.
- during the programme when my programme selector switch is pushed in and the locking time of 1-2 minutes has elapsed. When opening the door, **note the water level in the drum.**

Loading

Loosely load your unfolded laundry in to the drum, mixing small and large items as much as possible. This reinforces the washing action and promotes even distribution of the laundry during spinning.

To close:

Press the door closed so that the catch clicks into position.

Safety lock

For your safety, my loading door is locked throughout the programme cycle. So long as my pilot lamp is on when the machine is connected, the loading door cannot be opened.

Detergents

Use only detergents that are suitable* for automatic washing machines.

You will achieve the best cleaning results with minimum harm to the environment by also considering the type of laundry soiling when selecting a suitable detergent.

Machine-washable soiling is basically classified as:

- **Dirt**, e. g. dust, soot, sweat, grease, etc.
- **Stains**, e. g. tea, red wine, fruit, blood

You will find BIO and NONBIOLOGICAL detergents in powder or liquid forms. Check with the detergent manufacturers information as to which detergent suits your purposes best bearing in mind that the detergent must be a low lather one suitable for automatic washing machines! **We recommend ARIEL (in the various different forms) and Dreft automatic for woollens.**

- **Water softeners** allow the use of smaller amounts of detergents in households having medium-hard to very hard tap water
- **Fabric softeners** prevent the static charging of synthetic fabrics and make your laundry soft to the touch. If you use a tumble dryer, your laundry will be soft and fluffy without a fabric conditioner. We recommend LENOR fabric conditioner.
- **Starches, conditioning rinses**, ensure that your laundry keeps its shape.

The amount of detergent used depends on the hardness range of your tap water. With an increasing water hardness, more detergent must be dosed to bind the lime contained in the water. You will find dosage indications for soft or hard water on the detergent pack.

For lightly soiled laundry, use less detergent. Follow the detergent manufacturers instructions. If the latter gives no dosage indications for small loads, you should reduce by $\frac{1}{3}$ for half wash loads and for even smaller loads use $\frac{1}{2}$ the amount recommended for a full load. You can save detergent and prevent unnecessary amounts of detergent from entering our waterways by using a special water softener in areas with hard water.

You should dose the special softener depending on the water hardness as instructed on the softener package. In this case, you should **always dose the detergent for "soft" water** as instructed on the detergent packages.

In this case, add the detergent and softener **together** in the main wash compartment. When using programmes with prewash, add it to the respective compartments for prewash and main wash.

Selecting your detergent

Detergents


Washing aids


Amount of detergent

Dosing the detergent

The detergent dispenser¹ has three compartments:

Compartment (right)  = washing powder for programmes **with prewash**

Compartment (centre)  = washing powder for main wash

Compartment (left)  = liquid conditioner (conditioning rinse, starch)

Please also note the following:


Dosing powders

- When adding detergent and water softener, fill **first detergent and then softener** in the same compartments.
- Stain salts/bleaching agents are always filled on the detergent.

Dosing liquids


- If you prefer **liquid detergents**, dose these agents as instructed by the detergent manufacturer, using the "balls" supplied or offered by the detergent manufacturer.
- When using liquid, follow the manufacturers's instructions.

Dosing fabric conditioners

 
- **Do not fill above "MAX"** indicator level as otherwise the liquid may drain immediately.
- **When using thick concentrated fabric conditioner and starches**, you are recommended to mix the concentrate with water to ensure troublefree dispensing.
- If you want to use **starch powder**, dissolve according to the manufacturers's instructions and place in compartment , selecting the "Fabric conditioning – Starching" programme.

Selecting the wash programme


Select my wash programmes with the programme selector (fig. 1/25 B), temperature selector (fig. 1/25 C), and buttons (fig. 1/25 E to I).

For normally soiled laundry, select a programme without prewash. For heavier soiling, select programme  with prewash or for delicates, programme 6.

For fabrics where soiling is of a protein nature (e.g. blood, milk), select a programme with prewash to prevent these stains from setting.

My programme selector has 11 settings for the main and additional programmes. The programme with prewash is marked by the symbol  for cotton/linens and easy-care laundry, the other programmes by the numbers 1-10. (See programme table.)

In position "1", the length of time taken for the main wash is prolonged.

■ **When washing light to normally soiled laundry, you can save up to 30% energy** by using button  and the laundry is then washed at approx. 65 °C but for longer to keep the whites from going grey.

■ **When washing heavily soiled laundry** (without button ) **you achieve a more intensive washing effect.**

The programme selector must only be turned **clockwise** and only **when the machine is switched off.**

The programme selector is also used to switch your machine on and off.


To switch on: Pull out the programme selector

To switch off: Push in the programme selector



You will also find the symbols opposite on the control panel

The programme selector

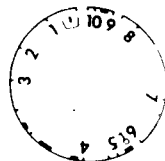


Energy-saving or intensive wash

Switching on and off



The temperature selector

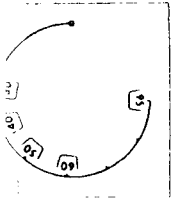


The programme cycle indicator

My temperature selector is continuously variable to all necessary temperatures. On setting 10, you can wash in cold water, e.g. woollens

If you wash at high temperatures, the loading door window gets hot. Do not touch it!

During the programme, the programme cycle indicator rotates step by step below the window indicating which part of the programme has been reached.


At certain stages in the programme – the programme cycle indicator will remain stationary for some time. This is particularly noticeable on the "woollens" programme.

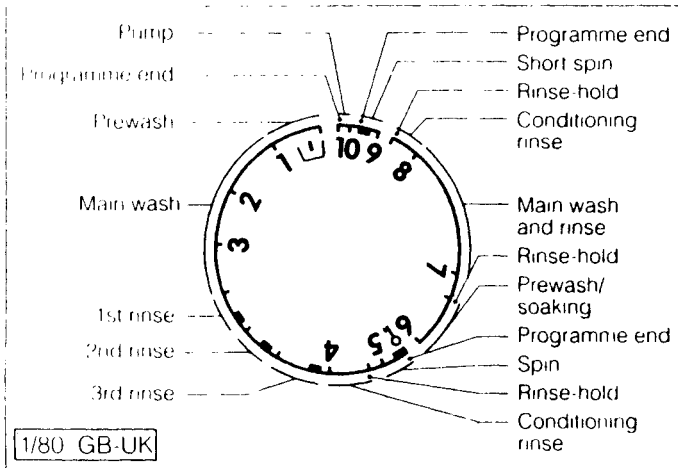

U - 5 Cotton/linens/easy-care fabrics

6 - 8 Delicates/woollens

By combining the main and additional programmes with my buttons, you will have a range of programmes meeting all your laundry requirements.

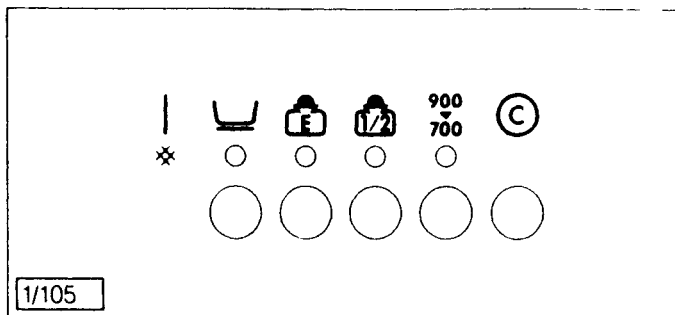

When the buttons are pressed, a red indicator appears in the display above.

Effect:

■ **For easy-care laundry**

No intermediate spin after rinse cycles. The laundry is retained in the last rinse water.

■ **For woollens**

Very gentle drum action. No intermediate spin after rinse cycles. The laundry is retained in the last rinse water.

■ **During soaking** (programme 6)

Your laundry can be soaked for any length of time.

Effect:

The temperature in the main wash is reduced to around 67 °C.

By combining this button with number 1 on the programme selector (the length of the wash time is increased), you can save up to 30% energy.

Effect:

■ **For cotton/linens and easy-care laundry**

Reduced water level during rinsing (water saving).

■ **For delicates**

Reduced water level during washing and rinsing (water and energy saving).

This button has no effect for woollens.

The button functions

Easy-care laundry Woollens Soaking



Energy-saving



Small wash loads



**Energy-saving
washing
of small
wash loads**



It makes sense to press both  and  buttons together when you want to wash small loads saving energy.

**Selecting the
spin speed**

900

700



Using this button, you can determine the spin speed and decide how your laundry should be spun.

If you do not press this button, your laundry is automatically spun at the maximum speed.

Select maximum speed if this sequence is to be followed by drying in a tumble dryer as both time and energy will be saved.

For **easy-care fabrics and delicates**, the spin speed is **limited to max. 850 rpm**. It can be reduced to 700 rpm.

Easy-care fabrics, delicates and woollens are automatically subjected to a **short spin sequence**.























**Releasing
the buttons**






















 


Effect:

Depressed programme buttons are released.

Programme table

| Care label Laundry | Pro- gramme | Wash load | Programme setting Pro- gramme selector | Tempera- ture selector | But- tons |
|---|---|--------------------------|---|--|--|
|  Cotton/linen | Whites/ coloureds | up to 5 kg ¹⁾ | 2 ²⁾ | cold to  | |
|  Cotton/linen | Energy- saving prog- ramme E | up to 5 kg ¹⁾ | 1 ²⁾ |   | |
|  Cotton with special finishes mixed cotton fabrics, i.e. polyester/ cotton, synthetics | Easy-care | up to 2 kg | 2 ²⁾ | up to  |   |
|  Synthetics/curtains | Delicates | up to 2 kg | 7 ²⁾ | up to  | |
|  Woollens/ mixed woollens, silk | Woollens  | up to 1 kg | 7 | up to  |  |
|  Cotton/linen | Short wash Cotton/linen | up to 2.5 kg | 3 | up to  |  |
| Easy-care/delicates Cotton/linen | Short wash Easy-care/ delicates | up to 2 kg | 3 | up to  |  |
| Easy-care/delicates Cotton/linen | Condition- ing-rinse, starching | up to 5 kg up to 2 kg | 4 8 | - |  |
| Easy-care/delicates Woollens | Spin | up to 5 kg up to 2 kg | 5 9 | - | |
| | Extra prewash - soak | up to 3.5 kg | 6 | up to  | |
| | Pumping out | | 10 | - | |

| Programme cycle | Possible additional buttons | Instructions |
|--|--|---|
| Main wash – intermediate spin – 4 rinses with intermediate spinning – final spin |  900  700 | <p>The steps you must take before each programme are given in the "Brief instructions".</p> |
| Main wash – 4 rinses – rinse-hold |  900  700 | <p>1) 3.5 kg for heavily soiled laundry 2) With prewash  on delicates programme 6  = Rinse-hold</p> <p>The laundry remains in the last rinse water or in the soaking solution</p> |
| Main wash at high water level, reduced drum action – 3 rinses – rinse-hold |  900  700 | <p>You must pump out or spin your laundry.</p> |
| Main wash at high water level, gentle drum action – 3 rinses – rinse-hold |  900  700 | |
| Short main wash – 4 rinses – rinse-hold |  900  700 | |
| Short main wash – 4 rinses – rinse-hold |  900  700 | |
| Rinsing – pumping out – final spin |  900  700 | |
| Rinse – rinse-hold |  | |
| Pumping out – final spin |  900  700 | |
| Pumping out – short spin |  900  700 | |
| Extra prewash or soak programme at high water level  The laundry can remain in the detergent solution for any length of time : | | |
| Pumping out, e.g. after rinse-hold | | |

Consumption Values
Energy, water and time for programmes
listed below (cold water connection)

| Programme | Water (litres) | Energy (kWh) | Time (minutes) |
|--|----------------|--------------|----------------|
| Cotton/linen 95 °C, full load | 88 | 2.1 | 130 |
| Cotton/linen 95 °C with half load button, half load | 54 | 1.6 | 115 |
| Energy saving programme, full load | 88 | 1.5 | 150 |
| Cotton/linen 60 °C, full load | 88 | 1.1 | 100 |
| Cotton/linen 40 °C, short, half load | 80 | 0.4 | 55 |
| Easy-care fabrics 50 °C, 2 kg load | 76 | 0.7 | 80 |
| Easy-care fabrics 30 °C, with half load button, short, 1 kg load | 44 | 0.2 | 55 |
| Delicates 40 °C, 2 kg | 64 | 0.7 | 70 |
| Wool 40 °C, 1 kg load | 66 | 0.6 | 70 |

The above values were established with standard test loads. These values can vary up or down with normal household loads. The energy consumption will be lower on a hot and cold fill connection. Programmes with prewash (except for wool) will take approximately 20 minutes longer.

Programme end

As soon as the programme selector switch has been pushed in and the unlocking time of 1-2 minutes has elapsed, the loading door can be opened. Release any depressed buttons with release button C. Push in the programme selector switch. Your washing machine is switched off. Turn the temperature selector to the O position.

Take out the laundry.

Check that my drum is completely empty, otherwise fabrics may be damaged during the next wash (e. g. shrink) or discolour other laundry.


**Open the door –
Switch off
your machine**

Maintenance and care


Detergent dispenser

From time to time, you should clean my detergent dispenser thoroughly.

- To do this, slightly lift the dispenser and withdraw with a short sharp pull. Detach the syphon in my special conditioner compartment.

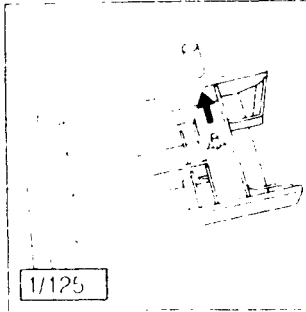

- Clean the dispenser compartments with warm water and a bottle brush

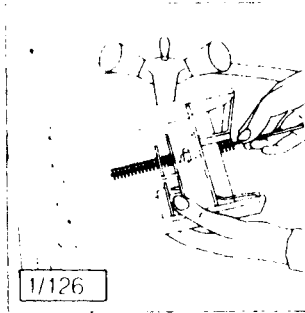

- Clean the syphon under running water. Re-insert the latter fully and check for proper fitting!
- Also clean the roof of the detergent compartments with a brush.
- Re-insert the dispenser in the guides and push it in.
- At the end of the programme, pull the washing powder compartment out a little way so that it dries.

Laundry drum

My laundry drum is made of stainless steel. Any objects left in the laundry and likely to rust (see the section on "Preparing the laundry") may leave rust stains on the drum. These stains can be removed with a stainless steel cleaner.

Remove any deposits or foreign bodies from the rubber sleeve behind my loading door.

The loading door should not be closed after washing, so that the drum can dry out and the machine is thoroughly ventilated.

If you have ensured correct detergent dosage, your machine will scarcely ever need to be descaled. If descaling should be necessary, use only branded descaling agents with corrosion protection for washing machines. Your service centre stocks suitable agents.

My control panel and controls should be cleaned with luke-warm water only. Do not use furniture polish or abrasive cleaning agents

Fros damage does not come under your guarantee!

If you ÖKO-LAVAMAT is installed in room susceptible to frost, your machine must be subjected to emergency emptying as described in the section on "If you think your washing machine is not working properly..." if there is any imminent risk of frost.

Loading door

Descaling

Control panel

Frost protection

**Minor faults
you can rectify
yourself**

If you think your washing machine is not working properly ...

... the laundry loading door will not open immediately when the programme is interrupted?

- The door will open after 1-2 minutes (safety lock).
- A programme with rinse-hold has been selected.

... my washing machine is not working at all?

- Your machine may not be plugged in (the power plug may not be in the plug socket).
- The programme selector switch has not been pulled out.
- The loading door is not properly closed.
- Have you checked the fuses?

... no water enters?

- The water taps may not have been turned on.
- One of the filters in the water supply hoses is blocked.
One filter is located in the end of the hoses connected to the water taps: unscrew the infill hoses and clean the filters under running water.
A second filter is located in the connection between hose and machine. Unscrew the infill hose on the machine and clean the filter.

... there is a delay before the spin sequence starts?

- The electronic out of balance monitoring system of your machine has responded, owing to poor laundry distribution.
Your laundry is loosened and distributed by the tumbling action of the drum and the spin sequence restarted. This may happen several times until the imbalance is corrected and the spin sequence can finally start.

... my washing machine vibrates?

- Very small wash loads (e.g. only one bathrobe) may cause your machine to vibrate. This does not affect operation of your machine in any way.
The appliance feet are not properly adjusted. See Instructions for Installation.

... the machine is oversudsing in the main wash?

- You have added too much detergent. Dose the detergent more accurately!
- Have you used a low lather detergent?

... my washing machine is noisy?

- The drain hose may be kinked, or
- The drain pump is blocked. In both cases, the water has not been pumped away efficiently or not at all.
See also "Cleaning the drain pump".
- There may still be transport packing in your washing machine, or your machine has not been properly installed and rocks from side to side.
See the installation instructions!

... water runs out from under the machine?

- The screw coupling on the supply hose or the hose clip on the drain hose may be loose.
- The drain hose is leaking.

- The cover of the drain pump in the plinth (fig. 1/38 E) is not properly secured after cleaning or emergency emptying. See "Cleaning the drain pump", in this section.

... **my laundry has not turned out as well as it usually does?**

- You have added too little detergent.

Underdosage leads to greying of your laundry and to scaling in your machine.

Ensure more accurate dosage!

- You may not have used the correct detergent.
- Special heavy soiling has not been pretreated.
- Have you correctly selected the programme and temperature?

... **the conditioning rinse was not dispensed and the conditioner compartment is filled with water?**

- The syphon in the compartment is not correctly inserted or is blocked. See "Maintenance and care".
- The washing powder compartment has been pulled out when it should have been dispensing.

... **despite pretreatment, stains are not removed during washing?**

- The stains may possibly not be washable. Consult specialist (dry cleaners).

... **grey spots ("flecks") are found on the finished laundry (so-called grease balls)?**

- Laundry soiled by ointments, fats, oils, or body grease, has been washed in too little detergent, therefore the amount of detergent has been insufficient to dissolve the grease. Use more detergent.
- Your laundry has been washed at too low a temperature.

... **even after the final rinse (rinse-hold), foam is still visible?**

- Modern detergents cause frothing even in the final rinse water, however, this is not a negative reflection on the rinsing result

... **conditioner flecks remain on the finished laundry?**

- This is in most cases likely to be due to the fact that conditioning rinse – especially in concentrated form – has directly affected your laundry.

Wash out these flecks as quickly as possible, and take care when handling these agents!

... **white detergent residues remain on my laundry after the programme has ended?**

- These residues are insoluble constituents of modern, phosphate-free detergents. They are not due to insufficient rinsing. Possible remedies: Brush or shake out, or wash your laundry turned inside out. Check detergent selection.

... **no water can be seen in the port-hole?**

- Modern washing machines work very economically, with such small quantities of water that it is sometimes not visible through the port-hole. Nevertheless, the machine still washes and rinses perfectly.


**Minor faults
you can rectify
yourself**

...my laundry is insufficiently spun or water remains in the drum?


- Owing to a kinked hose, the pump is not pumping away sufficient water from your machine.
- The pump head of max. 1 m is exceeded. For such cases, the service centre stocks a retrofitting kit with a second pump.
- The drain pump is blocked.

Proceed as follows when cleaning the drain pump:

- **Unplug your washing machine or take out the fuse.**
- Drain the water from the machine as described under "Emergency emptying in the event of a power failure" in the next section.
- Unscrew the drain pump cover anticlockwise (see arrow) and remove together with the insert. Place a cloth underneath as residual water may still run out.

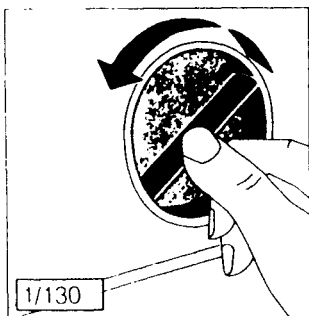

- Remove foreign bodies from the pump housing. Always also check by hand that the pump impeller runs freely.

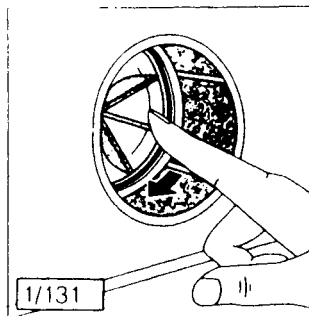


- Replace the cover and close by turning clockwise. Make sure it is closed tightly otherwise water will leak from the pump.
- Close emergency drain hose with plug. Push back into the machine. Secure the plug by rotating it a quarter turn clockwise.


... the washing machine no longer pumps water away and a high water level can be seen in the window?

■ Proceed as follows:

- Turn plug A a quarter turn anticlockwise (in the direction of the arrow).

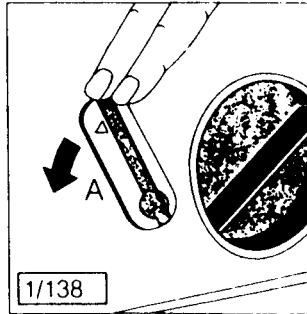

- Pull out hose B and remove plug A.

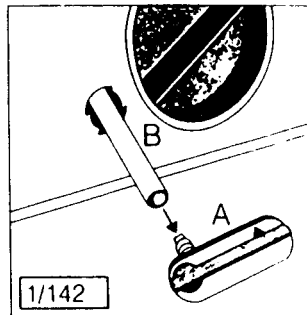

- Allow the residual water to drain into a bowl (place a cloth underneath). Depending on the amount of residual water, it may be necessary, to empty the collecting bowl several times.
Take care when the suds are hot! Where necessary, allow to cool first!
- Replace plug A into the drain hose B.
- Push in emergency drain hose and secure A.

Please note:

After emergency emptying, your washing machine has been emptied completely.


To ensure the function of my ÖKO lock, it is necessary to add around 1/2 l water to my detergent dispenser.

If, you decide to call the service centre to help with any of the stated instructions or on grounds of faulty operation, the service engineer's visit cannot be made free of charge even during the guarantee period.

Customer service

If no reference is made to a particular fault in my Operating Instructions, please contact the service centre.

When doing so, quote the product number (E-No.) and serial number (F-No.) of your machine. You will find these numbers on my rating plate.

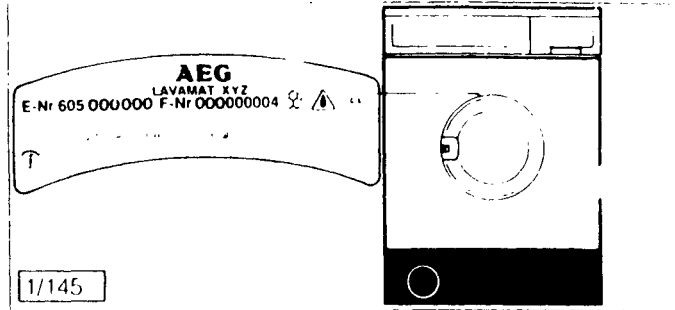

Providing these numbers enables the service centre to make precise identification of the required spare part so that your washing machine can be repaired on the engineer's first visit. You will thus save yourself additional costs due to repeated visits by the service engineer.

To keep these numbers handy, we recommend you to enter them here:

E-No.

F-No.

Technical data

Dimensions:

Height 82.0 cm
Width 59.5 cm
Depth 57.0 cm

Connection

Information relating to electrical connection is given on the rating plate and in the separate installation instruction supplied with the machine.

Please ensure that the voltage and current indicated on the rating plate agrees with the voltage of your electricity supply. 220/240 volts - (i.e., 220/240 V AC).

Drum speeds:

Washing 50 min¹
Spinning max. 900 min⁻¹
Optionally 700 min⁻¹

Water pressure:

1-10 bar (= 10-100 N/cm² = 0.1-1.0 MPa) cold water supply
0.3-10 bar hot water supply

Weight empty:

Around 80 kg

This appliance meets the radio/tv suppression requirements of EN 55014/DIN VDE 0875 Part 1, Directives 82/499 EC, 87/308 EC, and EN 55011, DIN VDE 0871 Part 1, as well as the standard for reciprocal effect on electricity mains EN 60 555 Parts 1-3/VDE 0838 Parts 1-3 of June 1987.

AEG Hausgeräte AG
Postfach 1036
D-8500 Nürnberg 1

© Copyright by AEG

H 244 278 540 - 01921./02 -

AEG Domestic Appliances Ltd

Customer Care Department
55-77 High Street
Slough
Berkshire SL1 1DZ

Telephone: 08705 350350