

ÖKO-LAVAMAT LAVALOGIC 1600 update

The environmentally friendly washing machine

User information



Dear Customer,

Please read this instruction book carefully.

Above all, please observe the "safety" section on the first few pages.

Please retain this instruction book for later reference. Pass them on to any subsequent owners of the appliance.

The following symbols are used in the text:



Safety Instructions

Warning: Information concerning your personal safety.

Important: Information on how to avoid damaging the appliance.



Information and practical tips



Environmental information

1. These numbers indicate step by step how to use the appliance.

2. ...

3. ...

These operating instructions contain information on steps you can take yourself to rectify a possible malfunction. Refer to the section "What to do if...".

Your local AEG Service Force Centre is available to deal with technical problems (addresses and telephone numbers are listed under "Customer Service Centres").

For additional information, also see the section "Service & Spare Parts".

Printed on recycled paper.

Thinking ecologically means acting ecologically ...

Contents

Operating Instructions	6
Safety	6
Disposal	8
Environmental tips	8
Switching on the appliance for the first time – setting the language	9
Description of appliance	10
Front view.....	10
Drawer for detergent and conditioner.....	10
Control panel with display.....	11
Indicators in the display.....	11
Information panel.....	11
Main control features	12
Switching the appliance on and off.....	12
Cancelling settings.....	12
Navigation display.....	13
Control knob and pages.....	13
Buttons and levels.....	14
Setting a programme: an example.....	15
Overview of functions	17
Programmes (Level 1).....	17
Wash programmes.....	17
Special programmes.....	18
Options (level 2).....	19
Extras (level 3).....	20
Preparing for a wash cycle	22
Sorting and preparing the washing.....	22
Types of washing and care symbols.....	23
Detergent and Conditioners.....	24
Which detergent and conditioners?.....	24
Quantities of detergent and conditioners?.....	24
Water softening.....	24
Before the first wash	25
Setting the time.....	25
Carrying out a wash programme prior to first use.....	26

Performing a wash cycle	27
Opening and closing the door	27
Loading the washing.....	27
Adding detergents/conditioners	28
Setting a wash programme.....	29
Set the options, e.g. DELAY START	30
Starting a wash programme.....	31
Wash programme progress	32
When the wash programme is complete.....	33
MEMORY	35
Saving a programme setting.....	35
Cancelling a saved programme setting	36
Changing the language	38
Maintenance and Cleaning	40
Control panel	40
Detergent Dispenser Drawer.....	40
Washing Machine Drum	41
Main door.....	41
What to do if...	42
Remedying a malfunction.....	42
If the washing results are not satisfactory	47
Carrying out an emergency emptying.....	48
Drain pump.....	49
Anti-flood Aqua Control + Aqua Alarm	50
What does "UPDATE" mean?	50
Child Safety Feature	51
Consumption values and load sizes	52

Installation and connection instructions	54
Installation Safety Precautions	54
Installation of the appliance	55
Transporting the appliance.....	55
Remove transport packaging	55
Installation-Site preparation	57
Installation on a concrete base.....	57
Installation on a Suspended Floor	58
Levelling the appliance	58
Electrical Connection	59
Water connection	61
Water pressure	61
Inlet Hose Connection.....	62
Water Drainage	63
Pump head of greater than 1m	64
Technical data	65
Dimensions	65
Warranty conditions	66
Index	70
Service & Spare Parts	71

Operating Instructions



Safety

The safety features of AEG electrical appliances comply with accepted technical standards and the German Appliance Safety Law. However, we also consider it our obligation as a manufacturer to inform you about the following safety information.

Prior to initial start-up

- Observe the "**Installation and Connection Instructions**" in this instruction book.
- If the appliance is delivered in the winter months and temperatures are below freezing: Store the washing machine at room temperature for a few hours before putting it into operation.

Intended Use

- The washing machine is only intended for washing normal domestic washing. If the appliance is used for any other purpose or incorrectly operated, the manufacturer accepts no liability for any damages which may result.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Only use detergents which are suitable for automatic washing machines, and follow the recommendations of the detergent manufacturer.
- Garments which have been in contact with flammable solvents should not be washed. Also bear this in mind when washing pre-cleaned washing.
- Do not use the washing machine for dry-cleaning.
- Dyes and bleaching agents may only be used if specifically permitted by the manufacturer of these products. We cannot be held liable for any damages.
- This appliance must be connected to the cold water supply only.
- Damage due to frost is not covered by the guarantee. If the washing machine is located in a room in which below freezing temperatures may occur, emergency emptying must be carried out (see "carrying out an emergency emptying").

Child Safety

- Packaging materials (e.g. films, styrofoam) can be dangerous for children. There is a risk of suffocation! Keep all packaging well away from children.
- This appliance is designed to be operated by adults. Do not allow children to tamper with the controls or play with the appliance.
- Pets and children have been known to climb into washing machines. Please check the drum before use.
- When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door lock to prevent young children being trapped inside.

General Safety

- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local AEG Service Force Centre.
- Never operate the washing machine if the mains cable is damaged or the control panel, work top or base area are damaged allowing internal components to be accessible.
- Switch off the appliance and isolate from the mains supply before carrying out any cleaning or maintenance work.
- If operation is stopped, disconnect the appliance from the mains supply and shut off the tap.
- Do not use the mains cable to pull the plug out of the socket.
- Adapters and extension cables must not be used. **There is a danger of overheating!**
- Do not clean the washing machine with a water jet. There is a danger of electrical shock!
- During high temperature wash programmes, the glass of the door may become hot. Do not touch!
- Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying or opening the door in an emergency.
- Small animals/pets can chew on power cables and water hoses. This can cause the danger of an electrical shock to the animal and water damage to the appliance and property. Keep small animals away from the appliance.



Disposal

Packaging

Dispose of the packaging material correctly. All packaging materials used are environmentally friendly and can be disposed of without any danger to the environment.

- Plastic parts can be recycled and are identified as follows:
 - >PE< for polyethylene, e.g. the outer covering and the bags in the interior.
 - >PS< for polystyrene, e.g. padding (always CFC-free)
 - >POM< for polyoxymethylene, e.g. plastic clips
- Cardboard packaging is manufactured from recycled paper and should be deposited in the waste paper collection for recycling.

When disposing of the washing machine!

Cut off the mains cable and destroy the plug. Disable the door catch to prevent young children becoming trapped inside. Use an authorised disposal site.



Environmental tips

- It is not usually necessary to Pre-wash or Soak normally soiled washing. This will save you detergent, water and time (and protect the environment as well).
- It is more economical to wash full loads.
- When washing small loads, use half to two thirds the recommended quantity of detergent.
- Pre-treat stains, if necessary, and then wash at a lower temperature.
- It can be possible to wash without fabric softeners, if clothes are dried in a tumble dryer, as this can give soft and fluffy results.
- In hard water areas, the use of a water softening agent can reduce the amount of detergent necessary. See manufacturer's recommendations.

Switching on the appliance for the first time – setting the language

When switching on the appliance for the first time you must set the language in which you want the indicators in the display to appear.

1. Turn the appliance on by pressing the control knob so that it is no longer flush in the control panel.

The display in the middle of the control panel will illuminate, and the appliance is switched on. The selection of possible languages will appear in the right of the display.



Important: If the display is not showing any languages, the appliance has already been switched on once. In such case, go to the chapter "Change languages" if you would like to change the language setting.

2. Turn the knob until the desired language is highlighted by the frame.



3. Press the SELECT button.

A tick will appear next to the highlighted language. All indicators in the display will appear in this language from now on.



4. Press the control knob to switch off the appliance.


When the appliance is switched on again all indicators in the display will appear in this language.




Before starting a wash cycle, please first read the chapter "Before the first wash".

Description of appliance


Front view

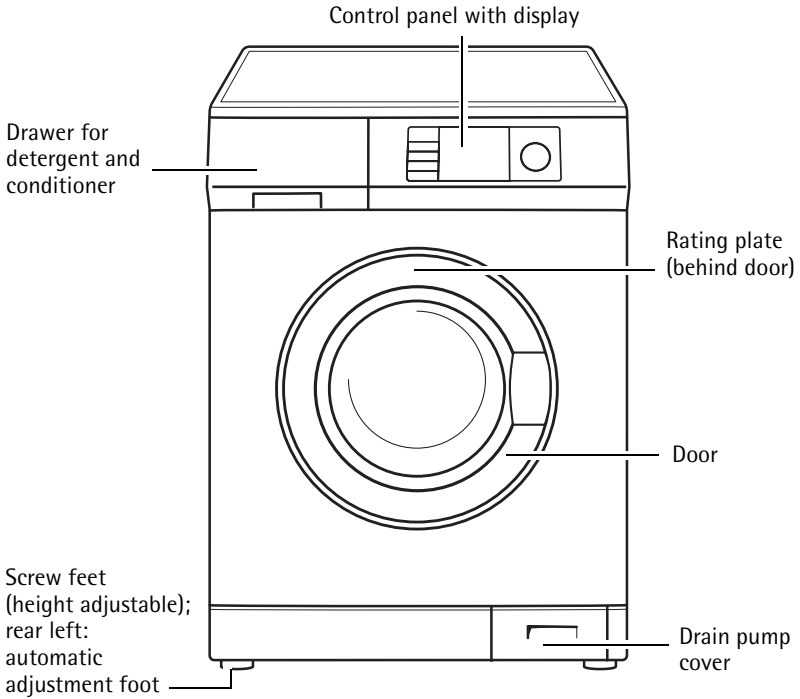

Drawer for detergent and conditioner

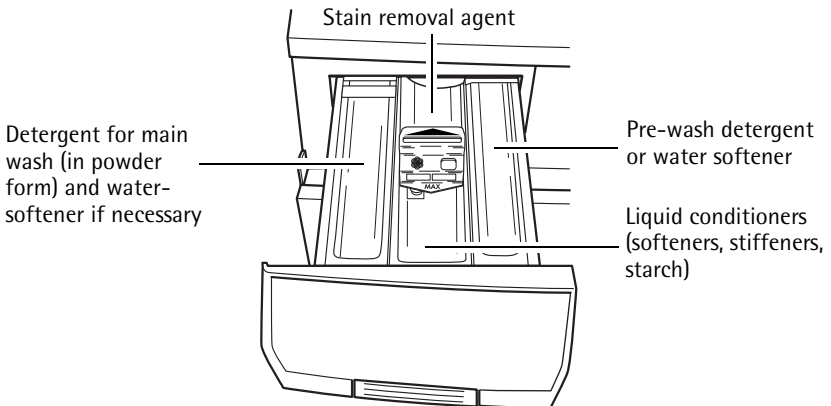

Control panel with display

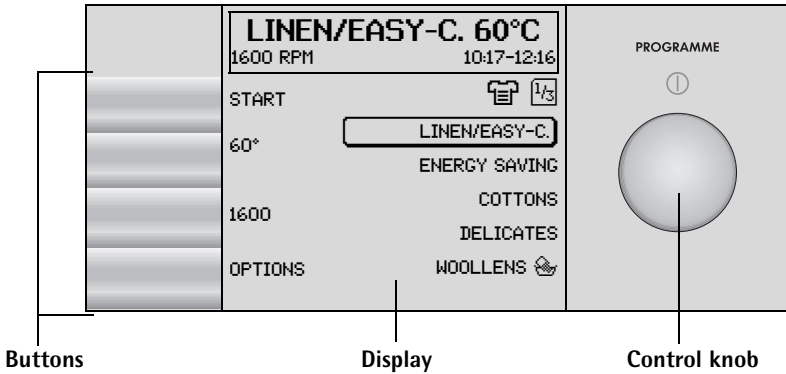


Indicators in the display

Information panel

shows the current settings


Symbol row
shows options selected and extras

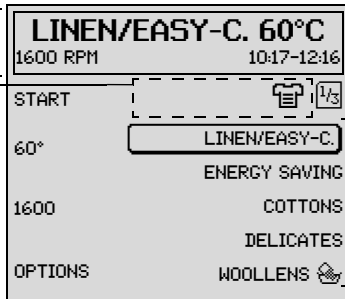

Navigation display

Selection
Wash programme, options, extras

Information panel

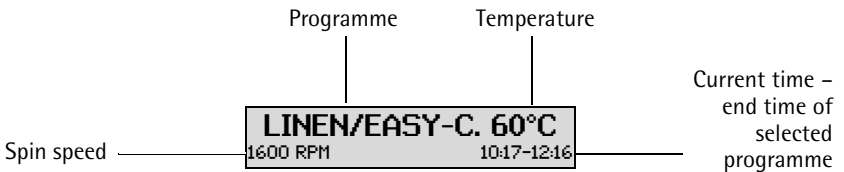

Main control features

This chapter describes how to set a large number of functions and combine them with each other using only a few control elements (1 control knob and 4 buttons). This simple control method is made easy thanks to the interactive display.

Interactive means that the washing machine display changes to reflect each step you have entered. This ensures that only those settings that make sense are made.

You are able to see the current settings at any time in the information panel and in the symbol row.

We recommend that you take particular note of this chapter in order to quickly familiarise yourself with the controls.

Switching the appliance on and off

Press the control knob to switch the appliance on and off.

When the appliance is switched on the control knob will pop up from its flush position.

To turn off the appliance, press the control knob back to its flush position.




To cancel any programme settings that were made previously, please wait approx. 3 seconds after switching off the appliance before you switch it on again.

Cancelling settings


If you would like to cancel settings that were accidentally made previously, switch off the appliance by pressing the control knob and after approx. 3 seconds switch it back on. You are now able to make new settings.

Navigation display

The functions are detailed over levels and pages within the washing machine display.

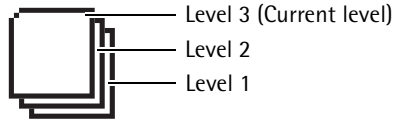

 One level can include a number of pages.




You can see from the navigation display which level and page you are currently on (here: level 3, page 1 of 2).




Control knob and pages

You can highlight the entries on the right of the display by turning the control knob.

Turning the knob anti-clockwise moves the area highlighted down. If the area highlighted is on the last entry of a page (here: WOOLLENS) and you then turn the knob again in an anti-clockwise direction, the display will turn to the next page ($\frac{2}{3}$).

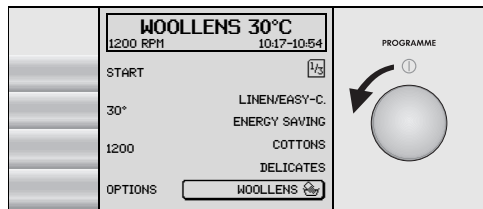


Turning the knob clockwise moves the area highlighted up. If the area highlighted is on the first entry of a page (here: SILK) and you continue to turn the knob in a clockwise direction, the display will turn to the previous page ($\frac{1}{3}$).

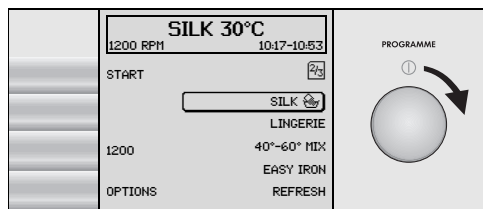

Buttons and levels

Using the buttons you can:

- select the option that is next to the button on the right, e.g. START;
- change settings, e.g. temperature;
- change to another display level, e.g. using the OPTIONS button.

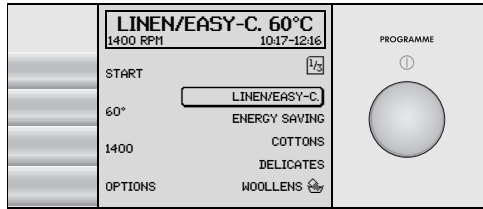


1. Level: Programmes

(1st level, page 1 of 3)

On this level you can:

- set the programme, temperature and spin speed;
- use the OPTIONS button to change to the second level.

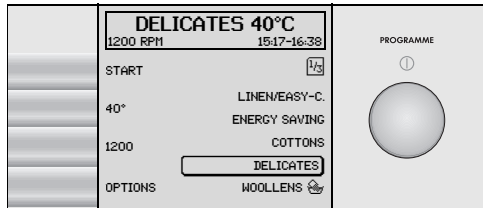


2. Level: OPTIONS

(2nd level, page 1 of 1)

On this level you can set various additional functions.


- Use the SELECT button to directly set some of the options, e.g. STAIN. For other options, (e.g. TIME SAVING) you change to a sub-level where you can select from many possibilities.
- You can return to the previous level by pressing the BACK button.
- Use the EXTRAS button to change to the third level.

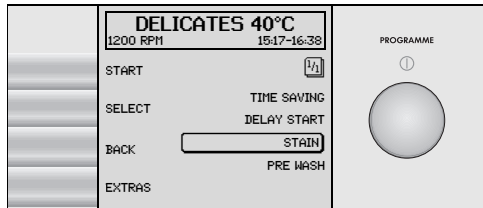

You can set one or more options for each programme. When doing this please note:


First set the programme (level 1), then the option (level 2).

3. Level: EXTRAS

 (3rd level, page 1 of 2)

On this level you can set various basic settings. These basic settings will not be cancelled when you switch off the washing machine. These basic settings will remain active until they are cancelled.

You will find more details about this in the "Extras" chapter.

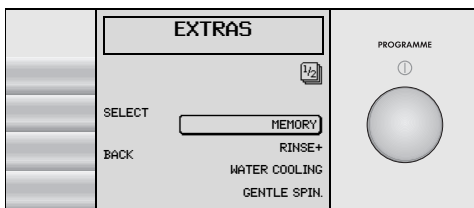


Setting a programme: an example


DELICATES programme, 30 °C, 1,000 RPM spin, with STAIN option.

1. Press the control knob.


The appliance is now on.
The indicators in the display are illuminated.

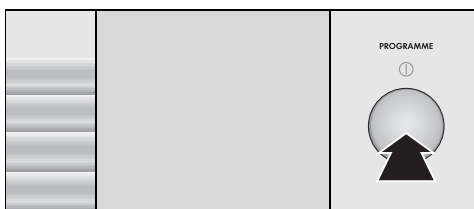


2. Use the control knob to highlight the DELICATES wash programme.

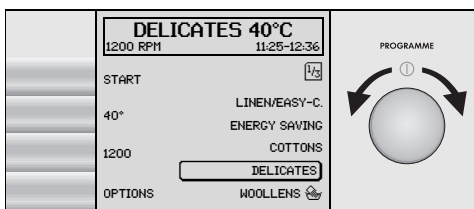


3. Press the wash temperature button a number of times until a temperature of 30° appears.

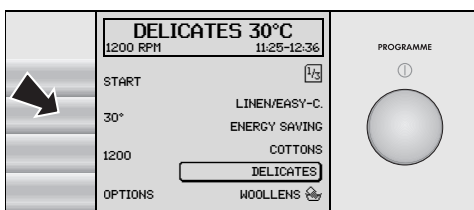


4. Press the button for the spin speed until a spin speed of 1,000 appears.

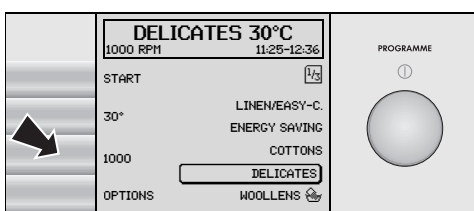


5. Press the OPTIONS button.

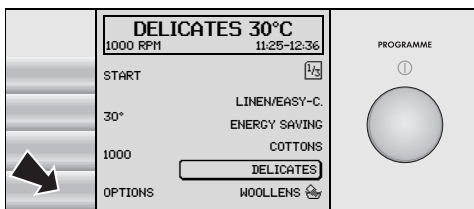


6. Use the control knob to highlight the STAIN option.

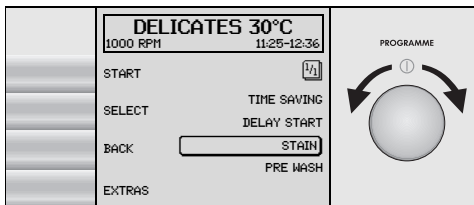

7. Press the SELECT button.


A tick will appear on the right next to STAIN. The option has been activated.  will appear in the symbol row.

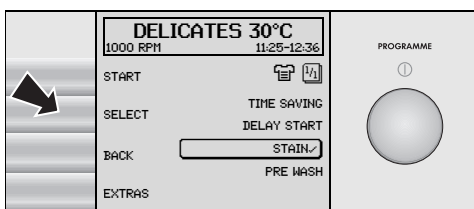

Please refer to the chapter "Adding detergents and conditioners" and "Loading the machine" before you start the wash programme.


8. If you want to start the programme set in this example:

– Press the START button.
The wash programme will start.

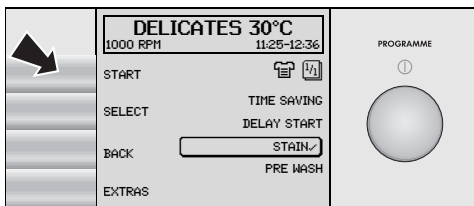

– If not, press the control knob to switch off the appliance.

The indicators in the display will go out. All of the settings described above have now been cancelled.

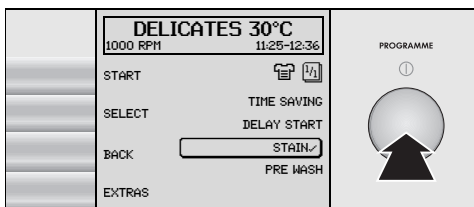

Overview of functions


Programmes (Level 1)

Wash programmes

LINEN/EASY-CARE

Wash programme (20 °C to 60 °C) for cottons/coloureds (cotton/linen), easy-care (mixed fabrics, e.g. cotton/polyester) and synthetics. The appliance adjusts the programme according to the different fabric types and load sizes. If the wash load is predominantly cotton/linen, the programme is set for cottons/coloureds. If it consists mainly of synthetics, the easy-care programme is selected.

If the load to be washed contains easy-care only, do not load more than 3 kg in order to avoid excessive creasing of the laundry.

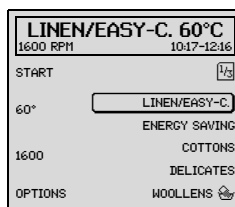

ENERGY SAVING

Special energy-saving and water-saving wash programme which washes at 60 °C for lightly to normally soiled cottons/coloureds (cotton/linen).


COTTONS

Wash programme which washes at 95 °C for cottons/coloureds (cotton/linen).

DELICATES


Wash programme for delicates which washes at 30 °C or 40 °C.

WOOLLENS (handwash)

Wash programme (COLD to 40 °C) for machine-washable wool and handwashable wool fabrics with the  (handwash) care label.

SILK (handwash)

Wash programme which washes at 30 °C for handwashable and machine-washable silk.

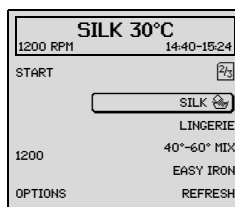

As silk is a very delicate fabric we recommend that, if possible, only one item of clothing be washed at a time and that silk items are never washed together with other rough-textured fabrics. For extremely delicate silk items the TIME SAVING option can be used to ensure that the item is treated even more gently.

LINGERIE

Gentle wash programme which washes at 40 °C for fine and delicate fabrics. **Important:** Place padded lingerie in a washing net or bag.

40°-60° MIX

Programme for coloureds when various wash temperatures are indicated for the items to be washed. Various items which according to the care labels are usually washed separately at 40 °C or 60 °C can be washed together in the 40°-60° MIX programme. In this way the drum capacity is better used and energy is saved as a result. Due to the extended wash time a wash result the same as that as for a normal 60°C programme is achieved.

EASY IRON

Wash programme which washes at 40 °C for easy-care fabrics which after being washed using this programme need to be ironed only lightly or not at all.

REFRESH

An approx. 20-minute-long wash programme which washes at 30 °C for quick washing of items such as lightly soiled sportswear that has been worn only once.

FASHION

An especially gentle wash programme which washes at 40 °C for modern fabrics such as viscose, modal, cupro, lyocell.



Special programmes


SHORT SPIN

Draining of water following a rinse hold and gentle spin, or separate short spin of delicate items (delicates, woollens) with a low spin speed.

SPIN

Draining of water following a rinse hold and spin, or separate spinning of handwashed cottons/coloureds and easy-care items.

STARCH

Separate starching, separate conditioning, separate impregnating of damp washing (1 rinse cycle, liquid conditioner is rinsed in from the  additive compartment, spin).

This programme setting can also be used to carry out a separate rinse cycle. In this case, you do not need to add anything to the additives compartment.

DRAIN

Draining of water following a rinse hold (without spinning).




Rinse hold means: The washing is left to soak in the final rinse water; it is not spun.

Options (level 2)


Use the OPTIONS button to switch to the second level. Here you can select various additional functions for the previously selected wash programme, e.g. to adjust the programme to the type of fabric or degree to which

the items are soiled, or to set the start time and length of a wash programme. Only those options that are able to be combined with the selected wash programme will be displayed. The options will be removed after the wash programme has ended.

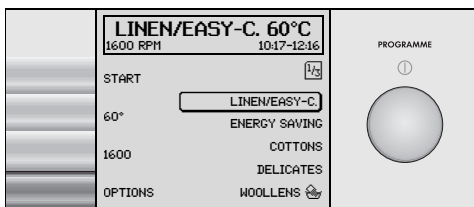

TIME SAVING →


Shortened wash programme for lightly soiled items.

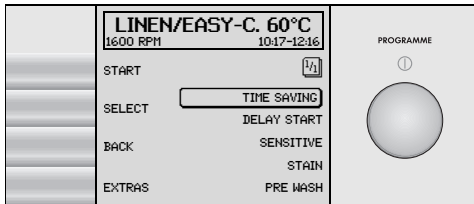


If TIME SAVING has been set, → will appear in the symbol row.

DELAY START


The DELAY START option allows the start of a wash programme to be delayed. The DELAY START option can be set at 30-minute intervals. The current time and the programme end time will be shown in the display (e.g. 14:23 - 20:28).

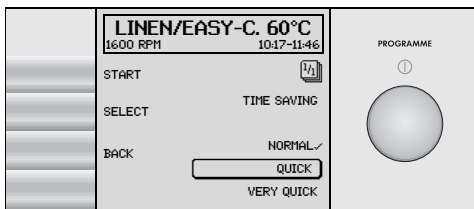


SENSITIVE

A special additional function with considerably more effective rinse function (additional rinse cycle) an improved fabric care at the same time (reduced drum movement). This is ideal when frequent washes are necessary, for example in cases of highly sensitive skin. An additional rinse cycle (RINSE+) is able to be selected in addition (see chapter "Extras"). If SENSITIVE has been set,  is displayed in the symbol row.

STAIN


For heavily soiled or stained washing. (In-wash stain treatment products (salts or tablets) are drawn in at the optimum time during the programme.) If STAIN has been set,  is displayed in the symbol row.

 PRE WASH

A cold pre wash cycle prior to the main wash cycle, which follows automatically. If PRE WASH has been set,  is displayed in the symbol row.

Extras (level 3)

Use the EXTRAS button to change to the third level. Here you can select various basic settings without affecting the particular wash programme. These basic settings will remain active until they are deselected.

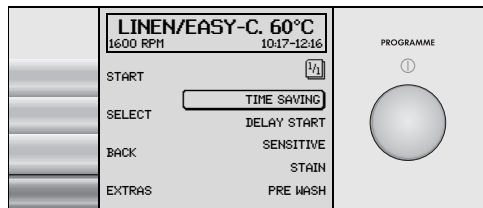



MEMORY


Programme settings that are frequently used can be saved (e.g. LINEN/EASY-C., 40°C, 1200 RPM spin, with TIME SAVING).

There are four memory spaces available for this purpose. The saved programme setting will appear as an entry on the first programme page (e.g. M1:LINEN/EASY-C.) and can be deselected as for a normal wash programme. (See chapter "Memory: Saving a programme setting")

RINSE+

The washing machine is set such that its water consumption is extremely economical. For people with allergies and in areas where the water is very soft, it can however be helpful to use more water when rinsing.

When you select RINSE+ an additional rinse cycle will be carried out, except for the WOOLLENS , SILK  and LINGERIE programmes. If RINSE+ has been selected,  will appear in the symbol row.

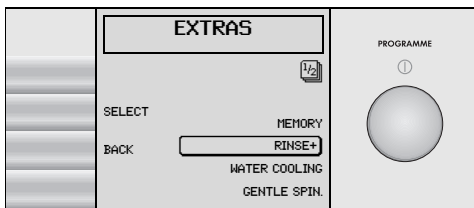

WATER COOLING

Before being drained at the end of the main wash cycle the wash water is cooled by an inflow of cold water in order to prevent the plastic drain pipes from sustaining thermal damage. This basic setting only takes effect with the COTTONS, LINEN/EASY-C. and ENERGY SAVING programmes.

GENTLE SPIN

Adjustable spin cycle, integrated with the final spin cycle. The washing does not cling to the side of the drum as much and can be removed more easily.

LANGUAGE

To set the language in which the indicators are to appear in the display. (See chapter "Changing the language".)

TIMER

To set the current time. This is important as it enables the end of the wash programme to be shown in the display and the DELAY START additional function to be used. (See the chapter "Before washing for the first time: Setting the timer".)

VOLUME

You will hear an acoustic signal when you press the buttons. The volume of this signal can be regulated and/or the signal can be switched off. The volume of the alarm for error messages cannot be altered.

Preparing for a wash cycle

Sorting and preparing the washing

- Sort the washing according to care symbols (see Section "Types of washing and care symbols").
- Empty out the pockets.
- Remove metal objects (such as paper clips, safety pins, etc.).
- To avoid damage and tangling: close zips, button pillow-cases and duvet covers, tie together loose tapes and strings (for example on aprons).
- Turn items with double-layered fabrics inside out (sleeping bags, anoraks, etc.).
- Knitted coloured fabrics such as woollens and other materials with decorations or jewellery should also be turned inside out.
- Wash small, delicate items (such as baby's socks, tights, bras, etc.) in a washing net, cushion cover with a zip or in large socks.
- Special care must be taken with net curtains. Remove metal or plastic rollers liable to snag or tie the curtains up in a net or bag. We cannot accept liability for any damage.
- Coloured and white washing should not be washed together in the same cycle. Otherwise, whites can discolour or turn grey.
- New coloured garments often have excess dye. It is better to wash these items separately for the first time.
- Mix large items with smaller ones. This gives more effective washing and distributes items better during the spin cycle.
- Shake out the washing before loading it into the washing machine.
- Separate items from one another before placing in the drum.
- Pay attention to care advice such as "Wash separately" or "Wash separately several times"!

Types of washing and care symbols

Care symbols help you to choose the correct wash programme. Washing should be sorted by type and according to care symbols. The temperatures indicated on the care symbols are the maximum wash temperatures.

Cottons

Cotton and linen items with this care symbol are not sensitive to machine washing or high temperatures. The COTTONS programme is suitable for such items.

Coloureds

Cotton and linen items with this care symbol are not sensitive to machine washing. The LINEN/EASY-C. programme is suitable for such items.

Easy-care items

Materials such as fine cotton, cotton-blend fabrics and synthetics with these care symbols require a gentler machine wash. The LINEN/EASY-C. and EASY IRON programmes are provided for use with such items.

Delicates

Materials such as layered fibres, micro-fibres, synthetics and curtains with this care symbol require careful handling. The DELICATES programme is suitable for such items.



Viscose


Modern materials such as viscose, cupro, lyocell, modal etc. require especially careful handling. The FASHION programme is suitable for such items.

Lingerie

The LINGERIE programme is suitable for fine and delicate items made of polyester, polyamide and mixed fabrics with these care symbols.

Wool, silk and especially delicate items

Fabrics such as wool, wool blends and silk with these care symbols are particularly sensitive to machine washing. The WOOLLENS  and SILK  programmes are suitable for such items.

Important: Items with care symbols  (Do not wash!) must not be washed in washing machines.

Detergent and Conditioners

Which detergent and conditioners?

Only use detergents and conditioners that are suitable for use in washing machines. Always follow the manufacturer's instructions.

Quantities of detergent and conditioners?

The quantity to be used will depend on:

- degree of soiling of the washing
- degree of hardness of the water supply
- load



If the manufacturer does not indicate the amounts to use for smaller loads, for half-loads use a third less than the amount recommended for a full load, and for smaller loads and EASY IRON use half the amount recommended for a full load.

Please follow the detergent and conditioner manufacturers' instructions for use and dosing recommendations.

Water softening

For medium to high water hardness (hardness class II upwards) a water softening agent can be used. Refer to the manufacturer's instructions. Then always add the appropriate amount of detergent (underdosing) for hardness class I (soft). Your local Water Authority can advise you on the hardness of the water in your area.

Water hardness details


Hardness class	Water hardness in °dH (German hardness scale)	Water hardness in ppm (Parts Per Million)
I - soft	0 - 7	to 125
II - medium hard	7 - 14	125 - 250
III - hard	14 - 21	250 - 375
IV - very hard	greater than 21	greater than 375

Before the first wash


Setting the time

You should set the time prior to the first wash and when changing to and from daylight savings time.


1. Press the control knob.
The appliance is switched on.

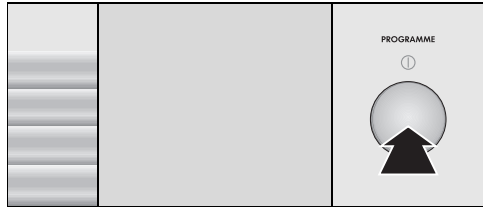


2. Press the OPTIONS button.

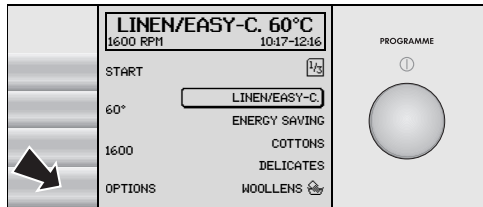


3. Press the EXTRAS button.

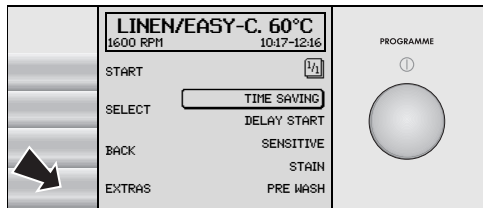

4. Turn the knob to TIMER.
5. Press the SELECT button.

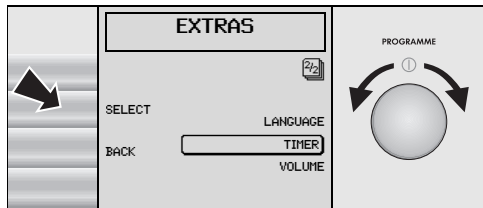

6. Use the control knob to set the current time.
7. Press the SELECT button to save the set time.
8. Press the BACK button three times.


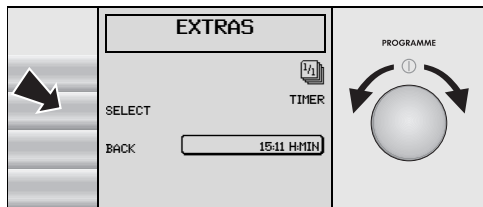


You are now on the first level and can select a wash programme.

Carrying out a wash programme prior to first use

Prior to washing your first load, carry out a wash cycle without washing (LINEN/EASY-C. 60°, with half the amount of detergent). This will remove residues remaining as a result of the production process from the drum and water container.

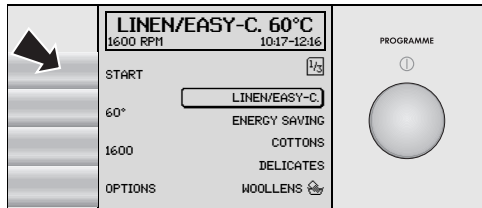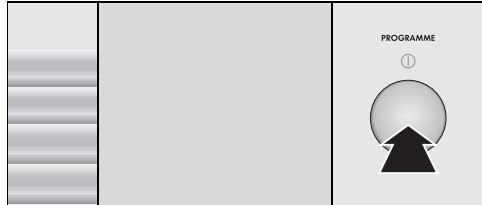

1. Press the control knob.
The appliance is switched on.
2. Place the detergent in the left compartment of the detergent drawer.
3. Press the START button.
The wash programme will start.



Performing a wash cycle

Opening and closing the door

- To open: pull the handle on the door.
- To close: firmly push the door shut

i If the  symbol is showing in the display, the door can be opened. If the  symbol is showing in the display, the door is blocked. If the error message PLEASE CLOSE THE DOOR is showing in the display, you have attempted to start a wash programme without having correctly shut the door. Should this happen, firmly press the door shut and restart the wash programme.


Loading the washing

i For instructions on how to correctly prepare washing, see the "Sorting and preparing the washing".

1. Sort and prepare the washing according to type.
2. Open the door: pull the handle on the door.
3. Load the washing.

Important: When shutting the door, be sure that no items are caught in it. This could result in damage to both machine and clothes.

4. Close the door firmly.

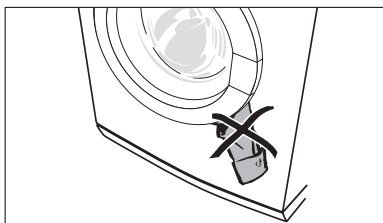


Adding detergents/conditioners



For instructions on the use of detergents and conditioners, please see the section "Detergents and conditioners".

1. Open the detergent drawer: close your fingers around the flap at the bottom of the drawer (1); pull out the drawer as far as it will go (2).

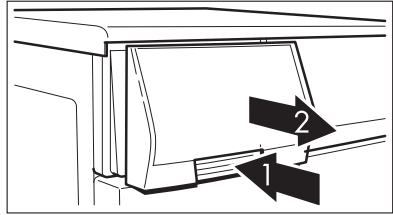

2. Adding detergent/conditioner

Compartment for detergent in powder form/tablets to be used for main wash (left):

If you are using water softener and require the right-hand compartment for the detergent for the pre wash, place the water softener in the left-hand compartment on top of the detergent for the main wash.

Compartment for stain removal agent/stain removal tablets (centre rear):

Only add stain removal agent if the STAIN option has been selected.

Compartment for water softener or for detergent for pre wash (right):

Only add detergent for a pre wash if the PRE WASH option has been selected.


Compartment for liquid conditioners (centre front):

Softener, stiffener, starch

Important: Fill the compartment to no more than the MAX indicator. Viscous liquid can be diluted up to the MAX indicator; dissolve starch in powder form.

Note: It is normal for a small amount of water to remain in the compartment for liquid conditioner, and this does not detract from the final rinse result.

3. Push the detergent drawer in fully.

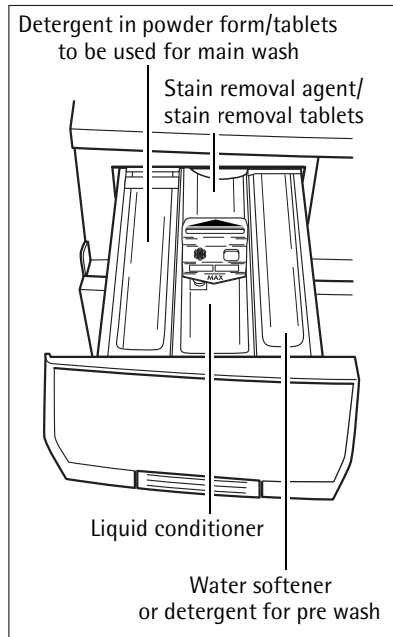



If using liquid detergents/tablets:

Add the liquid detergent or tablets using the measuring container provided by the detergent manufacturer. Follow the instructions on the detergent packaging.


Setting a wash programme

1. Press the control knob.


The appliance is now switched on.




2. Use the control knob to highlight the desired wash programme, e.g. DELICATES.

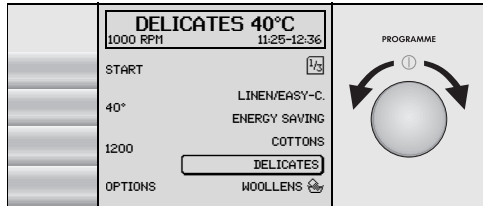

3. Press the button for the wash temperature and continue pressing it until the desired temperature appears (e.g. 30°).

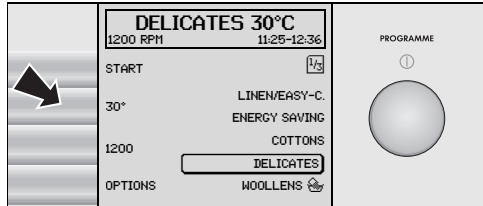


4. Press the button for the spin speed and continue pressing it until the desired spin speed (e.g. 1,000) or the RINSE HOLD indicator appears.

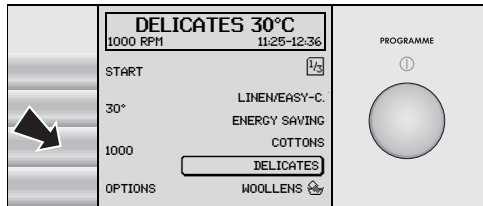

5. If you do not wish to make any further settings, press the START button.

The wash programme will start. (See the chapter "Starting a wash programme".)


If you would like to select options, see the chapter "Set the options".

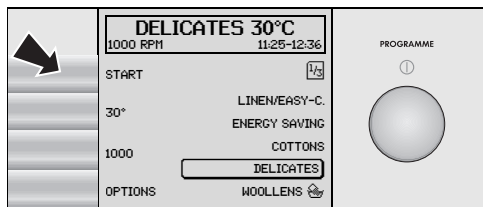


Set the options, e.g. DELAY START

This option allows the start time for a wash programme to be delayed from 30 minutes to a maximum of 23.5 hours.

1. Press the OPTIONS button.

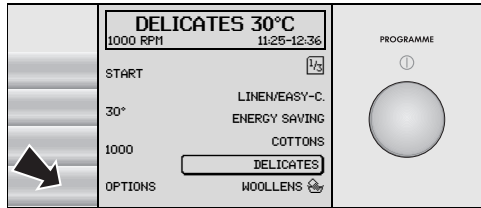


2. Use the control knob to highlight the DELAY START option.

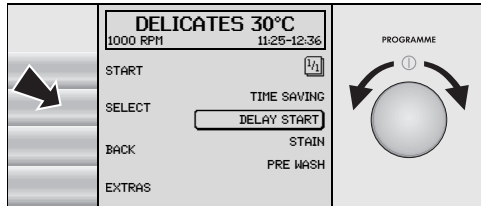

3. Press the SELECT button.

4. Use the control knob to set the time at which you want the wash programme to end.

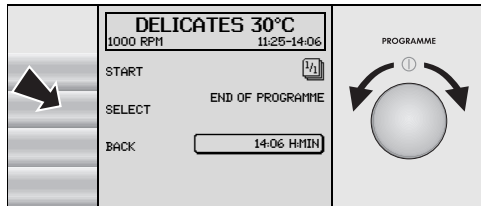

The DELAY START option can be set at 30-minute intervals.

5. Press the SELECT button.

The programme end time will change in the information panel (e.g. 14:06).

6. Press the START button.




While DELAY START is counting down, the washing machine is switched into stand-by mode. The background illumination of the display will go out.

Cancelling DELAY START:

- Press the START button.

The wash programme will start immediately.

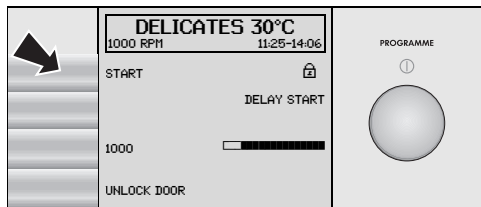

Starting a wash programme

1. Check that the water tap is open.


2. After you have set the wash programme and any options, press the START button.

The wash programme will start.



Approx. 30 seconds after the washing machine is switched


on or after a button or the control knob was last actuated, the START indicator will begin to flash. If you do not wish to make any further settings, press the START button.

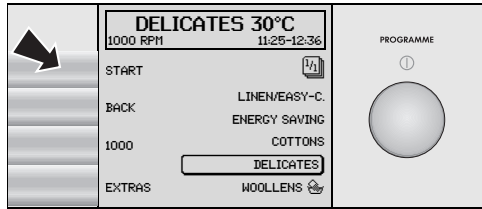


If a delayed start has been set:

If the DELAY START option has been selected, the wash programme will finish at the time shown in the display. If the wash programme has not yet been started, you can still cancel the delay start. The wash programme will start immediately. (See chapter "Set the options, e.g. DELAY START".)

 
If you would like to add washing even after the programme has started.

1. Press the UNLOCK DOOR button. The  symbol will appear.

2. Open the door.
Add the items.

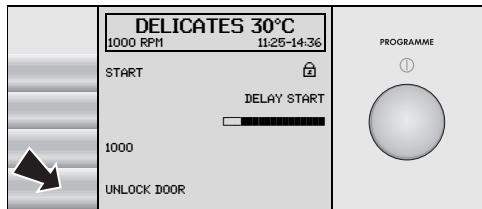



3. Then close the door and press the LOCK DOOR button.

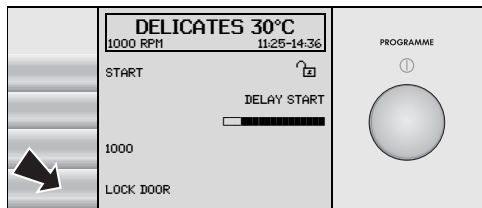

Wash programme progress

 Each current stage of the programme is shown in the display during the wash programme, e.g. main wash, and a bar showing the programme progress.


The  symbol is displayed as the programme progresses: the loading door is locked.

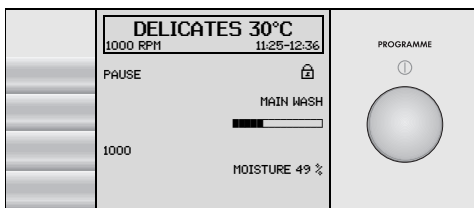

Moisture/Loading

During the wash programme the display additionally indicates:

- the expected residual moisture in the washing at the end of the programme. The value depends on the selected spin speed.

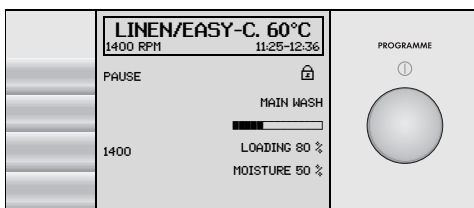

- the loading of the drum (in 10 per cent steps.)

This value is indicated with the LINEN/EASY-CARES and COTTONS programme only. The loading can be estimated by the washing machine about fifteen minutes into the programme.

Changing the spin speed

The spin speed can still be changed and rinse hold still be set during the programme. Other settings cannot be changed.

Cancelling the programme



To cancel the programme before it has finished, switch off the appliance (press the control knob).



The wash programme can be interrupted at any time by pressing the PAUSE button.

When the wash programme is complete

When a wash programme is complete, PLEASE TAKE OUT THE CLOTHES will appear in the display.


-  If you do not press any buttons or press the control knob within three minutes of the programme finishing, the washing machine will switch into standby mode. The stand-by mode is cancelled by pressing one of the buttons or turning the knob.
-  If EASY IRON has been selected, a crease prevention cycle of approx. 30 minutes takes place after the programme has ended. You can remove the washing at any time during the crease prevention cycle. To do this, press the PAUSE button and the door can be opened.

For rinse hold

If the wash cycle was ended with a rinse hold, the water must first be drained and if necessary the washing spun:


Spin:

1. Set the desired spin speed.

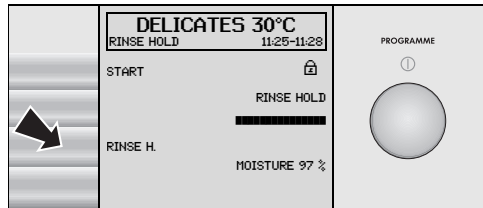


2. Press the START button.
The washing will be spun.

Short spin or drain:

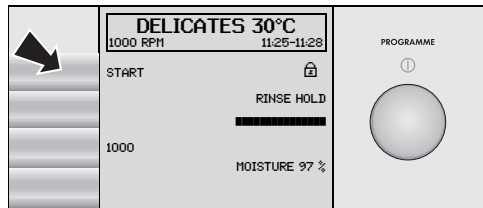


1. Switch the appliance off and then on again.
2. Using the control knob, either
 - highlight SHORT SPIN (reduce spin speed if required) or
 - highlight DRAIN.

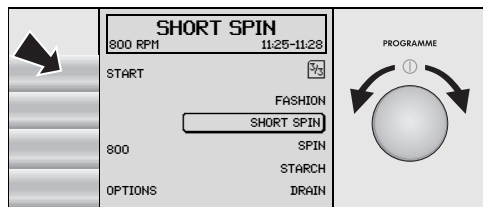


3. Press the START button.

- If short spin is selected the water will be drained and the washing gently spun.
- If drain is selected the water will be drained (without being spun).

Unloading the washing

If the  symbol is shown in the display, the door can be opened.

1. Open the door using the handle.
2. Remove the washing.
3. Press the control knob.

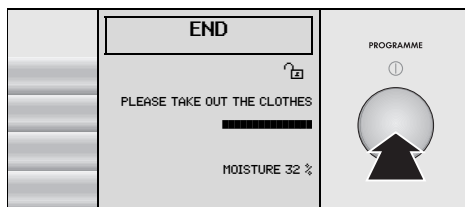

The appliance is now switched off.

Important: If the washing machine will not be used for a longer period of time:


Turn off the tap and remove the plug from the mains. (The Aqua Control water protection system does not function without an electricity supply.)

OVERDOSING indicator

If OVERDOSING is shown in the display at the end of a wash cycle, too much detergent was used in the completed wash programme.

Please take note of the dosage instructions provided by the detergent manufacturer

and the amount of washing loaded the next time you wash.

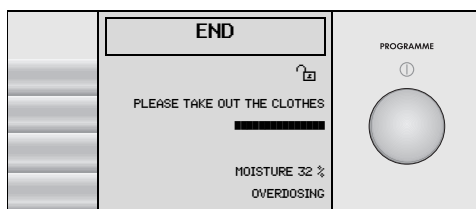

MEMORY

Saving a programme setting





The MEMORY basic setting can be used to save frequently-used programme combinations (wash programme, temperature, spin speed and option/s). There are four memory cells available for this purpose. The saved programme can then be selected in the same way as any other wash programme.




Extras cannot be saved using MEMORY. They must be set separately and remain active until they are cancelled.

Example: LINEN/EASY-C., 40 °C, 1200 RPM spin, with SENSITIVE option.


1. Press the control knob.
The appliance is now on.
2. Turn the knob to the LINEN/
EASY-C. programme.
3. Set the temperature and spin
speed using the relevant
buttons.
4. Press the OPTIONS button.
5. Use the control knob to
highlight the SENSITIVE op-
tion.
6. Press the SELECT button.
The symbol will appear in
the display.
7. Press the EXTRAS button.

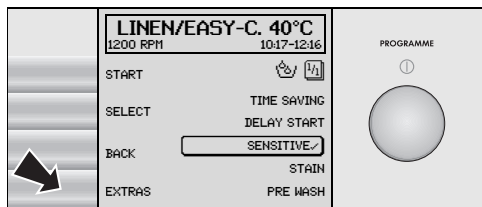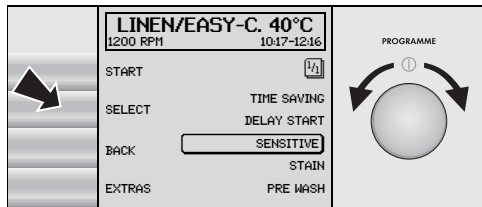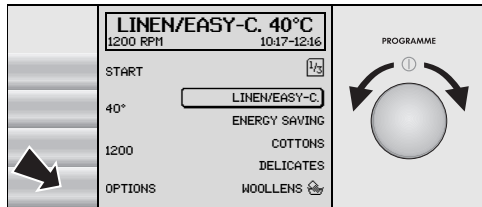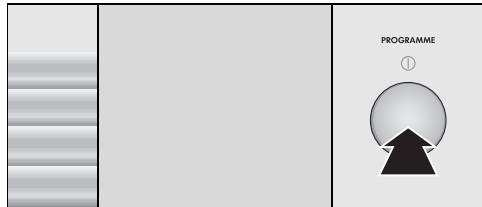


If MEMORY is highlighted:
8. Press the SELECT button.

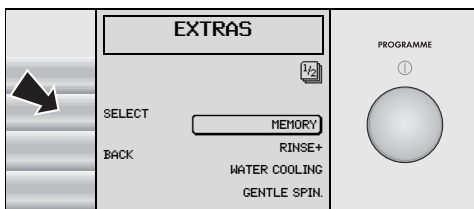

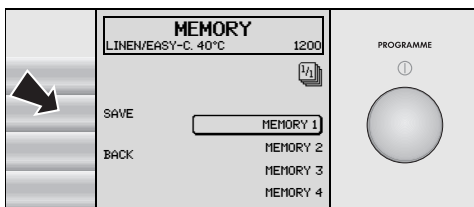


If MEMORY 1 is highlighted:
9. Press the SAVE button.
The programme setting has now been saved.

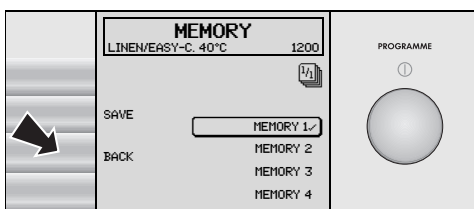

10. Press the BACK button three times. You are now on the first level again.




The saved programme setting will appear as the first entry on the first page (e.g. M1: LINEN/EASY-C. 40°C, with 1,200 RPM spin and SENSITIVE/ option). The saved programme setting can then be selected in the same way as any other wash programme. After this new entry the first level now includes a total of four pages. The navigation symbol will change to .

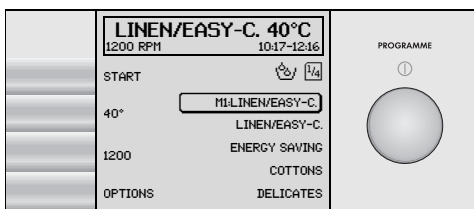


Cancelling a saved programme setting


1. Press the OPTIONS button.

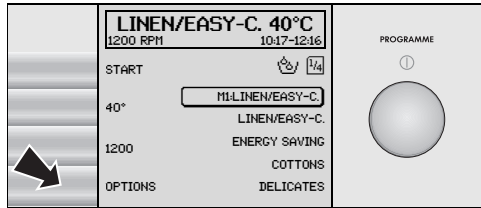

2. Press the EXTRAS button.

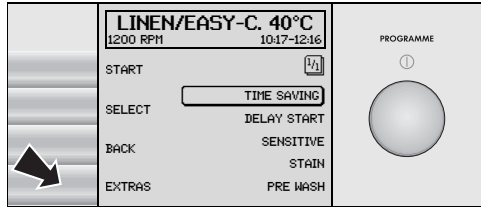

If MEMORY is highlighted:
3. Press the SELECT button.

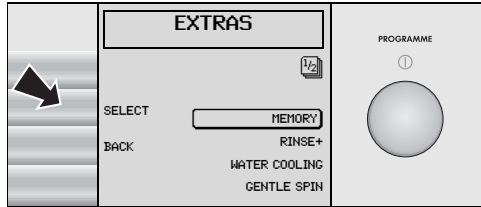


4. Use the control knob to highlight MEMORY 1.

5. Press the CLEAR button.

The saved programme has now been cancelled.

Then press the BACK button three times.

You are now on the first level again.

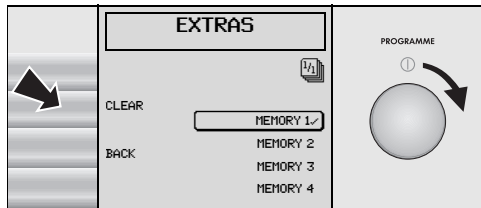

Changing the language


You can change the language setting if you would like the indicators in the display to appear in a different language.

1. Press the control knob.


The appliance is switched on.




2. Press the OPTIONS button.

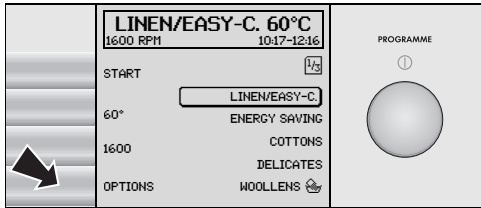


3. Press the EXTRAS button.

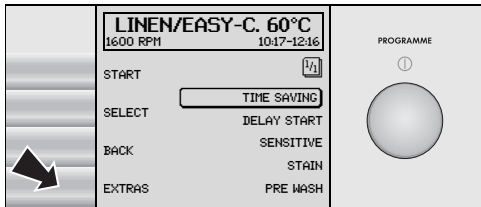


4. Use the control knob to highlight LANGUAGE.

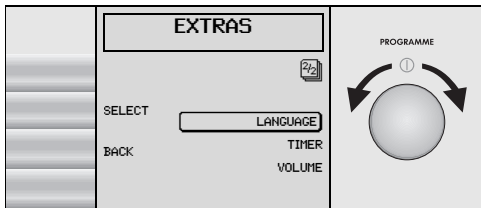

5. Press the SELECT button.

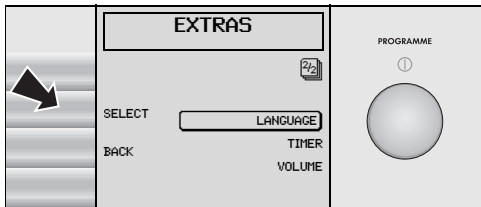

- 6.** Use the control knob to highlight the desired language, e.g. English.
As soon as the language is highlighted, the indicators in the display will change to this language.

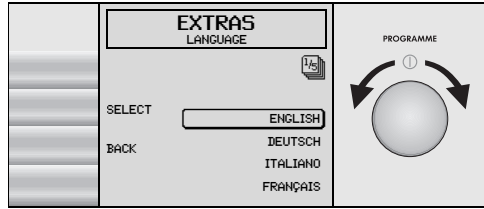

- 7.** Use the SELECT button to save the selected language.
All indicators in the display will immediately appear in this language.



Maintenance and Cleaning

Control panel


Important! Do not use household furniture polish or abrasive cleaners to clean panel and operating parts.

Wipe over the operating panels with a damp cloth. Use warm water.


Detergent Dispenser Drawer

The detergent dispenser drawer should be cleaned from time to time.


1. Pull the detergent dispenser drawer out as far as it will go.
2. Remove the detergent dispenser drawer by pulling sharply.
3. Take the conditioner insert out of the middle compartment.
4. Clean the conditioner insert under running water.

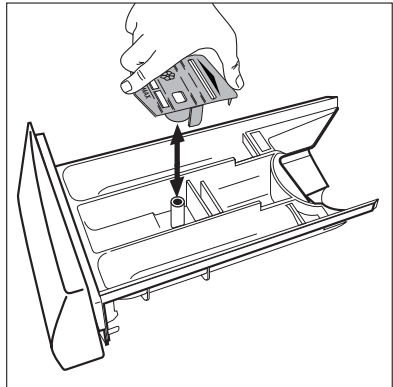

5. Clean the separate compartments with warm water. It is best to use a round brush.
6. Push on the conditioner insert as far as it will go so that it is securely in place.

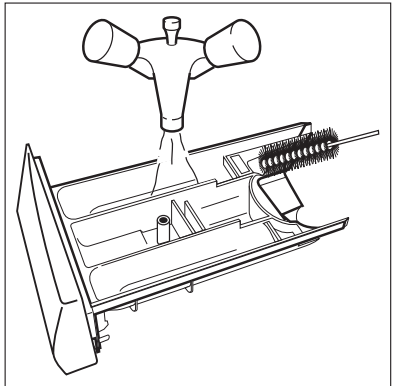

7. Use a brush to clean the entire compartment area of the washing machine, particularly also the nozzles on the top side of the compartment.
8. Set the detergent dispensing drawer into the guide tracks and push it in.

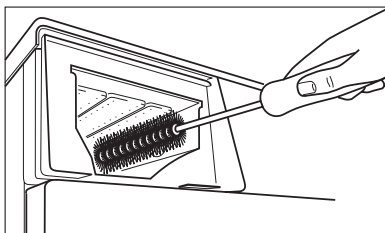

Washing Machine Drum

The washing machine drum is made from rust-free stainless steel. Any objects left in the laundry which are likely to rust can stain the drum.

Important! Do not clean the stainless steel drum with descaling agents containing acids, scouring agents containing chlorine or iron, or steel wool. Your local AEG Service Force Centre has suitable agents available. Remove any rust stains on the drum using a stainless steel cleaning agent.

Maintenance Wash



With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

The drum should be empty of laundry.

1. Select the hottest cotton wash programme.
2. Use a normal measure of detergent, must be a powder.

Main door

Regularly check to see if there are deposits or foreign objects in the rubber seal behind the door, and remove them.

What to do if...

Remedying a malfunction


In the event of a malfunction, try to rectify the problem yourself with the aid of the instructions provided here. If you request a visit from customer service to remedy one of the malfunctions listed here, or to rectify an error made when using the appliance, the customer service engineer's visit will not be free of charge, even during the warranty period.

- If any of the following error messages are shown in the display, you may be able to rectify the malfunction yourself:
 - ATTENTION / PLEASE CLOSE THE DOOR
 - ATTENTION **E d 1** / PLEASE OPEN THE TAP
 - ATTENTION **E d 2** / PLEASE CHECK THE WATER DRAINAGE

(To remedy the error, see the following malfunction chart.)

After you have rectified the error, press the START button. If the error code is displayed again, please contact customer service.

- If ATTENTION / PLEASE CALL YOUR LOCAL SERVICE FORCE! or an error code (e.g. **E d 6**) is shown in the display, please proceed as follows:

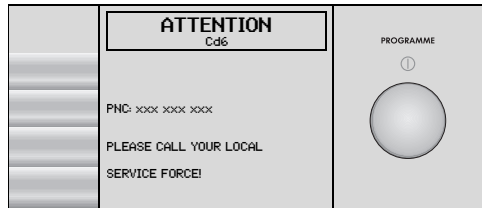


- Switch off the appliance and switch it on again after approx. 3 seconds;
- Reset the wash programme again;
- Press the START button.


If the error code is displayed again, please contact customer service. In such an event, please provide the error code shown in the display and the PNC no. shown.

Problem	Possible cause	Remedy
The washing machine does not work.	The power plug is not connected.	Connect the plug to a power outlet.
	A domestic fuse has tripped.	Replace the fuse.
	The START button has not been pressed.	Press the START button.

Problem	Possible cause	Remedy
The wash programme will not begin after the START button was pressed. ATTENTION / PLEASE CLOSE THE DOOR is showing in the display.	The door is not closed properly.	Close the door - there should be an audible click. Press the START button.
The door cannot be closed.	The child safety device is engaged.	Disengage the child safety device (see section "Child safety device").
The washing machine vibrates when operating or is not stable.	The transport locks have not been removed.	Remove the transport locks as described in the installation and connection instructions.
	The height-adjustable feet have not been set correctly.	Adjust the feet as described in the installation and connection instructions.
	There is very little washing in the drum (e.g. only one bathrobe).	Operation is not affected by this.
	Water was not able to be drained completely before spinning, because the outlet hose has a kink in it or the drain pump is clogged.	Check the positioning of the outlet hose and even out any kinks if necessary or clean the drain pump and remove any foreign matter that may be in the pump housing.
The main water for the main wash is producing too many suds.	Too much detergent was probably used.	Follow the manufacturer's instructions exactly when measuring out detergent.

Problem	Possible cause	Remedy
Water is running out from under the washing machine.	The threaded inlet hose fitting is leaking.	Screw the inlet hose in firmly.
	The outlet hose is leaking.	Check the outlet hose and replace if necessary.
	The drain pump cover is not closed properly.	Close the cover properly.
	Washing has been trapped in the door.	Cancel the programme and free the washing from the door. Restart the programme.
	The emergency emptying hose is not closed properly or is leaking.	Close the emergency emptying hose properly (see section "Carrying out an emergency emptying procedure"). If the emergency emptying hose is leaking, call Service Force.
Conditioner is not being rinsed in, and the  compartment for additives is full of water.	The conditioner insert is not correctly set into the additive compartment or is clogged.	Clean the detergent drawer, insert the conditioner insert firmly.
The washing is badly creased.	Too much washing was probably loaded.	Observe maximum load sizes (see chapter "Consumption values and load sizes"). Select the EASY IRON programme for easy-care items.
The washing has not been spun as dry as usual.	The washing was not able to be distributed evenly in the drum prior to spinning.	Always load the drum as full as possible with a combination of large and small items.
The door cannot be opened when the washing machine is switched on. The  symbol is showing in the display.	The door is locked for reasons related to safety.	Wait until the  symbol appears.
	The washing machine is in stand-by mode.	Press any button.

 Problem	Possible cause	Remedy
The display goes out while a wash programme is running.	A power failure has occurred. For reasons related to safety, the filling door will remain locked for approx. 4 minutes.	As soon as the power failure is over the wash programme will continue.
		If you wish to remove the washing: If water is visible in the viewing window, first carry out an emergency emptying procedure (see section "Carrying out an emergency emptying procedure"). After approx. 4 minutes the door can be opened.
Detergent residues are accumulating in the detergent drawer.	The tap is not fully open.	Turn the tap on fully.
	The filter in the threaded inlet hose fitting is clogged at the tap or at the washing machine.	Close the tap. Unscrew the inlet hose from the tap and from the machine. Clean the filter.
The rinse water is cloudy.	The probable cause is a detergent with a high silicate content.	No negative impact on the rinse result; try using a liquid detergent.
The background illumination of the display has gone out even though the appliance is switched on.	The washing machine is in stand-by mode.	Press any of the buttons.
Water is not entering the appliance. ATTENTION  / PLEASE OPEN THE TAP is showing in the display.	The tap is closed.	Open the tap.
	The filter in the threaded inlet hose fitting is clogged.	Close the tap. Unscrew the hose from the tap, take out the filter and wash it under running water.
	The tap is furred with limescale or faulty.	Check the tap and have it repaired if necessary.
The washing machine drain pump runs continuously - even when the appliance is switched off.	The Aqua Control anti-flood system is in operation.	Close the tap, remove the mains plug from the socket and contact Service Force.

 Problem	Possible cause	Remedy
<p>The washing has not been spun thoroughly and water remains visible in the drum.</p> <p>ATTENTION  / PLEASE CHECK THE WATER DRAINAGE is showing in the display.</p>	The outlet hose is kinked.	Straighten the hose.
	The maximum pump height (outlet height 1 m from the washing machine's installation surface) has been exceeded.	Contact Service Force, who will be able to provide an adaptor kit for pump lifts greater than 1 m as a special accessory.
	The drain pump is clogged.	Switch off the machine and disconnect the mains plug; clean the drain pump.
	For siphon connections: The siphon is blocked.	Clean the siphon.

If the washing results are not satisfactory

If the washing turns greyish and limescale deposits are present in the drum

- Insufficient detergent has been added.
- Incorrect detergent was used.
- Stains were not pre-treated.
- Programme or temperature was not set correctly.
- If using modular detergents, the individual components were not used in the correct ratio.

If there are still grey stains on the washing

- Soiled garments with ointments, grease or oils were washed with insufficient detergent.
- The temperature selected for the wash was too low.
- A frequent cause is that fabric softener - particularly a concentrated one - has come into contact with the washing. Wash out these types of stains as soon as possible and use the fabric softener carefully.

If after the last rinse foam is still visible

- Modern detergents can still cause foam in the final rinse cycle. However, the washing is still sufficiently rinsed.

If there are white residues on the washing

- These are insoluble contents of modern detergents. They are not the result of an insufficient rinse. Shake out the washing or brush it off. Turn the washing inside out before washing it. Review your choice of detergent and if necessary use liquid detergent.

Carrying out an emergency emptying


- If the washing machine no longer pumps out the water, emergency emptying must be carried out.
- If the washing machine is located in a room in which below freezing temperatures might occur, emergency emptying must be carried out. Furthermore: unscrew the inlet hose from the water tap and drain off the water. Empty the drainage hose.




Warning! Switch off the washing machine and pull out the mains plug prior to performing emergency emptying.

Warning! The water, which flows out of the emergency emptying hose can be hot. First allow the water to cool down before you carry out the emergency emptying.


1. Have a flat container on hand to catch the water.
2. Pull down the flap in the right corner of the base strip outwards and pull it off.

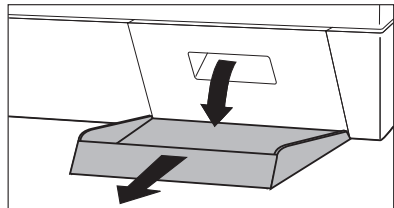

3. Remove the emergency emptying hose from its holder.

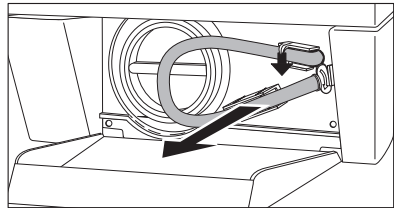

4. Place the container under the hose.
5. Detach the plug of the emergency emptying hose by turning it anti-clockwise and pull it out.

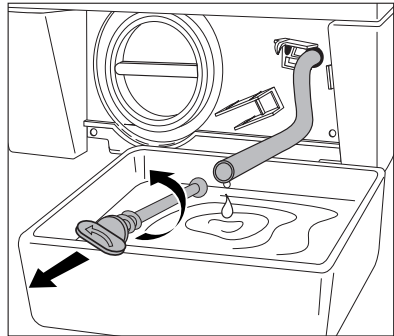

The water runs out. Depending on the amount of water, it may be necessary to empty the collecting vessel several times. To do this, close the emergency emptying hose temporarily with the plug. Discard the water from the container, replace it under the emergency emptying hose and remove the plug from the hose.

When the water is completely drained:

6. Push the plug securely into the emergency emptying hose and turn it clockwise to secure it.
7. Replace the emergency emptying hose in its holder.
8. Put on the flap and close.

Drain pump

The drain pump is maintenance free. The cover of the drain pump must only be opened in the event of a malfunction when no more water is being pumped out, e.g. if the pump is blocked.



Before loading the machine, please always ensure that there are no foreign objects left in the pockets or in between the items to be washed. Paper clips, nails etc. which may find their way into the washing machine along with the washing will remain in the drain pump housing.

To restart the drain pump when it is blocked, please proceed as follows:



Warning! Switch off the washing machine and remove the mains plug before cleaning the drain pump!



1. First carry out an emergency emptying procedure (see section "Carrying out emergency drainage").
2. Place a cloth on the floor in front of the cover of the drain pump. Residual water may run out.
3. Unscrew the drain pump cover in an anti-clockwise direction and pull it out.
4. Remove any foreign objects and fabric lint from the pump housing.

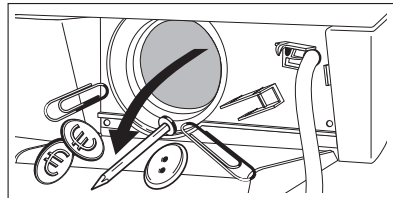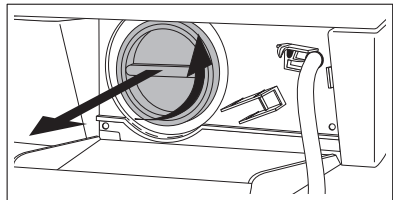

5. Replace the pump cover. Laterally insert the webs on the cover into the guide slots and screw on the cover in a clockwise direction.

6. Close the emergency emptying hose and place it in the holder.

7. Close the flap.

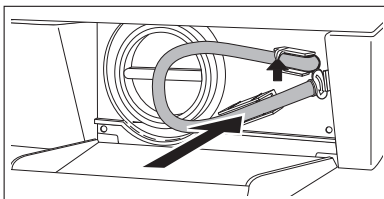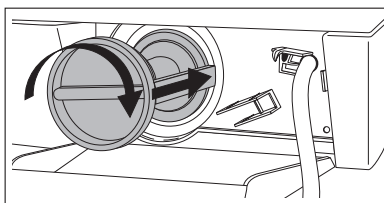

Anti-flood Aqua Control + Aqua Alarm

The inlet hose has a mechanical built in safety device. In the event of the filling hose failing, the safety device will automatically shut off the water supply.

In the event of a leak within the machine the float switch, which is mounted in the base of the appliance, will operate the drain pump and an audible signal will be heard

The system will operate as long as the appliance is connected to the mains electricity supply, even if the programme selector is in the off position.

What does "UPDATE" mean?

The control system of your washing machine is fully electronic. The software which determines this control system can be reprogrammed. If a further improvement to washing technology is introduced by AEG, then your machine can be updated. The cost of the UPDATE will be advised at the time of the request.


For further information regarding this, please contact the AEG Customer Care Department.

Child Safety Feature

If the child safety feature is set, the door cannot be closed and no washing programme can be started.

Setting the child safety feature


Use a coin to turn the rotary knob on the inside of the door clockwise as far as it will go.

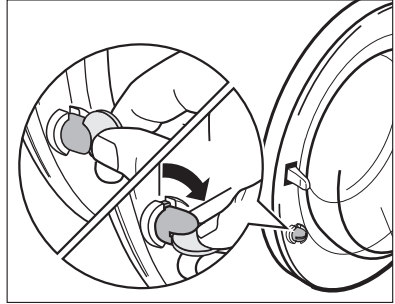

Warning! The rotary knob must not be in a vertical position after adjustment, otherwise the child safety feature is not active. The rotary knob must project as shown in the diagram.

Cancelling the child safety feature


Turn the rotary knob anticlockwise as far as it will go.

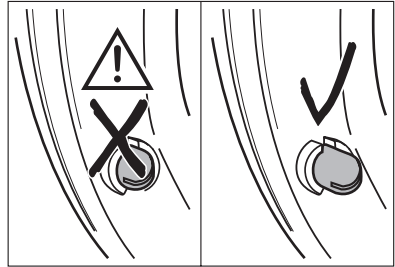

Consumption values and load sizes



Consumption values

The values for selected programmes provided in the following table were determined under normal conditions. As well as being dependent on the settings selected (additional functions), the consumption values are also dependent on external factors such as water temperature or detergent used. Nonetheless, they serve as a helpful guide for normal household use.

Wash programme/ Temperature	Type of fabric	Water in litres	Energy in kWh
ENERGY SAVING ¹⁾	Cotton	39	1,02
COTTONS 95	Cotton	50	2,05
LINEN/EASY-C. 60	Cotton	50	1,08
LINEN/EASY-C. 40	Cotton	58	0,66
LINEN/EASY-C. 60 TIME SAVING (QUICK) ¹⁾	Synthetics	56	0,95
LINEN/EASY-C. 40 TIME SAVING (QUICK) ¹⁾	Synthetics	52	0,55
LINEN/EASY-C. 40 TIME SAVING (VERY QUICK)	Synthetics	50	0,58
DELICATES 30	Synthetics	56	0,36
WOOLLENS  30	Wool	42	0,18

1) **For your information:** Programme setting for testing in accordance with or supporting EN 60 456 and IEC 60 456.

Load sizes

Wash programme	Type of fabric	Load size in kg ¹⁾
LINEN/EASY-C.	Cotton	6
LINEN/EASY-C.	Synthetics	3
ENERGY SAVING	Cotton	6
COTTONS	Cotton	6
DELICATES	Synthetics	3
WOOLLENS 	Wool	2
SILK 	Silk	1
LINGERIE	Synthetics	1
40°-60° MIX	Cotton	6
EASY IRON	Synthetics/Cotton	1
REFRESH	Synthetics/Cotton	3
FASHION	Viscose	3

1) The load size is determined in accordance with EN 60 456 standard load.

Installation and connection instructions

Installation Safety Precautions

- When moving do not tilt the washing machine onto its front or onto its right hand side (viewed from the front). This is to prevent the possibility of the electronic components becoming wet.
- Before installation inspect the machine for transport damage. Do not connect the appliance if it is damaged - contact your retailer.
- Ensure all packaging and transit bolts/bars have been removed, see „Removal of Transit Packaging“. Failure to remove transit bolts/bars may cause serious damage to the appliance or property.
- Always insert the plug into a correctly installed earthed socket.
- Any plumbing work required to install this appliance should be carried out by a plumber or competent person.
- Check that the electricity supply is the same as that indicated on the appliance's rating plate.
- Any electrical work required to install this appliance should be carried out by an electrician or competent person.

Installation of the appliance

Transporting the appliance

- Do not place the washing machine on its front or on its right hand side (viewed from the front). This is to prevent the possibility of the electronic components becoming wet.
- Never transport the unit without the transport packaging and bolts/bars. Do not remove the transport packaging until the appliance is at the installation location. Transporting the unit without the transport packaging can damage it.
- Never lift the appliance by the door.


When transporting the unit with a sack trolley:

- Attach the sack trolley only at the side. The shovel of the sack trolley must not be longer than 24 cm, otherwise the float switch can be destroyed.

Remove transport packaging

Important! It is essential to remove the transport packaging before putting the appliance into operation. Keep all parts of the transport packaging in a safe place for future use.

1. Open both hose holders on the appliance's rear side and remove the hoses and mains cable.

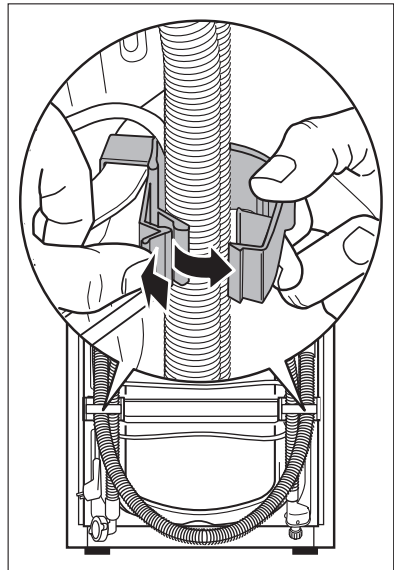




2. Pull both hose holders off the appliance with a strong pull.



The special spanner A and the caps B (2 each) and C (1 each) are supplied with it.

3. Remove the screw D, including the compression spring with the special spanner A.
4. Cover the hole with the cap C.
5. Remove the two screws E with the special spanner A.
6. Remove the 4 screws F.
7. Remove the transit bar G.
8. Screw the 4 screws F back in for safe keeping.
9. Close the 2 large holes with the caps B.

Important! When fitting the plastic caps, press until they snap into the rear panel securely.

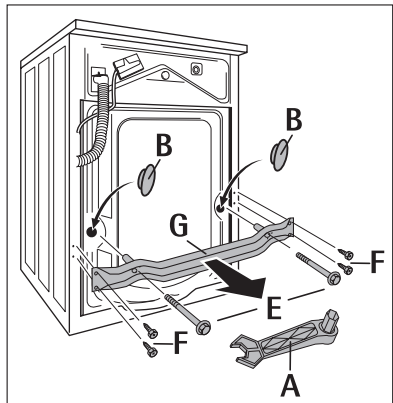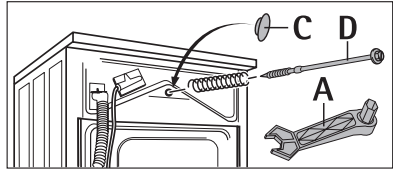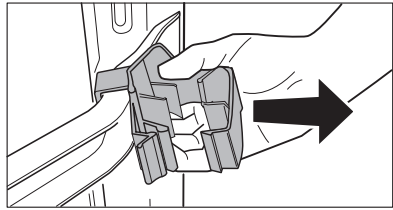


Installation-Site preparation

- The installation surface must be clean, dry and level. Do not install on a deep pile carpet.
- Minor unevenness of the floor surface should never be levelled out by laying pieces of wood, card or similar materials, but should always be compensated for by adjusting the screw feet.
- If the appliance is installed next to a heat source (e.g. cooking appliance), a heat insulating pad (87x57cm) must be placed between the appliance and the heat source.
- Do not install the appliance in locations where the temperature may fall below freezing.
- Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

Installation on a concrete base

If the unit is set up on a concrete base, for safety reasons it is essential to fit stand plates in which the washing machine is adjusted. The stand plates are available from Customer Service under the spare parts number 645425058.

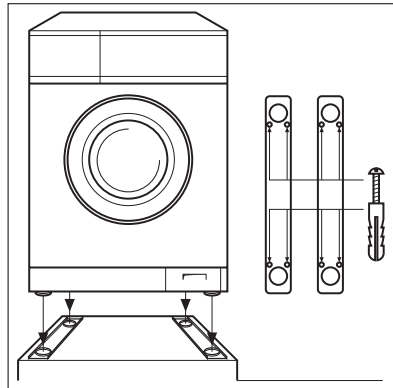

Installation on a Suspended Floor

Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable.


Levelling the appliance

i **Self adjusting foot:** The rear foot of your washing machine is designed like a spring leg. This makes the machine very stable even at high spin speeds.

If the washing machine is still not stable during spinning, proceed as follows:

1. Set the three adjustable feet to the nominal value of 10mm. Use the supplied spanner.
- If the self adjusting foot does not reach the floor:
2. Manually extend the self adjusting foot (rear left) to the required length.
3. Check the appliance is level using a spirit level.

Important! Never use strips or shims of wood or cardboard etc. to compensate for any unevenness in the floor. Always use the adjustable feet.

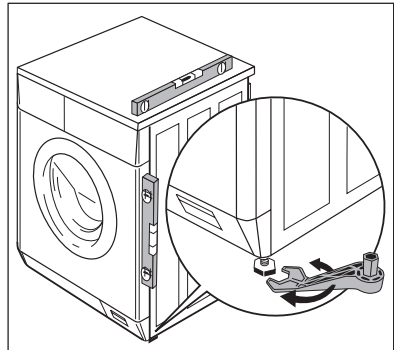

Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



WARNING – THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should these safety measures not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The rating plate is located at the top of the rim of the open door.



The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1362) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol \oplus or coloured green and yellow.
- The wire coloured blue must be connected to the terminal "N" or coloured black.
- The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

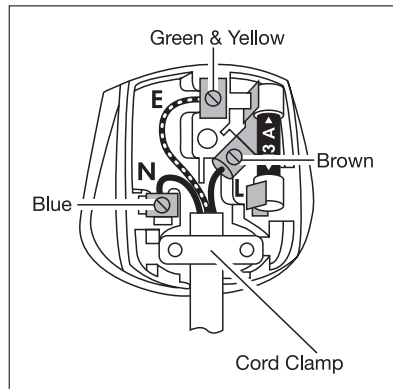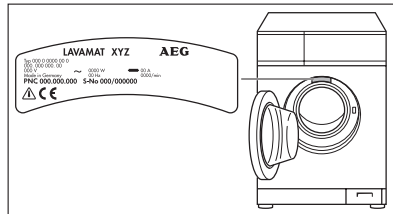

WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Permanent Connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.



This appliance is in accordance with the following EU Guidelines:

- Low Voltage Guidelines 73/23 EEC dated 19 February 1973, include Guideline Change Notice 93/68 EEC
- EMC Guideline 89/336 EEC dated 3 May 1989, including Guideline Change Notice 92/31 EEC.

This appliance complies with the requirements laid out in the EEC Directive 76/899.

Voltage 240 V AC: Fuse rating 13 amps

See rating plate for further information.

This appliance meets VDE requirements.

Particular regulations of local electricity authorities must be observed. This appliance conforms to EEC Directive No. 82/499/EEG on radio interference.



WARNING! Repairs to electrical appliances must only be carried out by trained personnel. Improper repairs may lead to serious risks for the user.

Water connection

i The washing machine is provided with safety devices preventing back-contamination of the water supply and complies with local water authority requirements.

This appliance is designed to be permanently plumbed into your home's water supply.

Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Important!

- Appliances for connecting to cold water must not be connected to hot water.
- Only use new hose sets for the connection.

Water pressure

The appliance is designed to operate within the following water pressure units. Minimum 1 bar (= $10\text{N/cm}^2 = 0.1\text{ Mpa}$), maximum 10 bar (= $100\text{N/cm}^2 = 1\text{ Mpa}$).

- If more than 10 bar: Install a pressure-reduction valve upstream
- If less than 1 bar: Unscrew the inlet hose from the appliance at the inlet solenoid valve and remove the flow regulator (to do this, remove the filter with needle nose pliers and remove the rubber washer behind the filter). Replace the filter.

Inlet Hose Connection

A pressure hose 1.5 m in length is supplied.

If a longer inflow hose is required, only a VDE-approved, complete set of hoses with fitted hose screw connections offered by your local Service Force Centre is permissible.

- Hose sets in lengths of 2.2 m, 3.5 m and 5 m are available for washing machines without Aqua Control.
- Hose sets in lengths of 2.0 m, 2.9 m and 3.9 m are available for washing machines with Aqua Control.

Important! Never cut hoses into pieces in order to extend them!



Sealing rings are supplied either in the plastic nuts of the hose screw connection or in the enclosed pack. Do not use other seals!

1. Connect the hose with the angled connection to the machine.




Important!

- Do not lay the inlet hose vertically downwards. Instead, turn it to the right or left as shown in the diagram.
- Tighten firmly to prevent leakage but do not use excessive force.

2. Connect the hose with a straight connection to a water tap with a screw thread R 3/4 (inches).

Important! Only tighten the screw connection manually.

3. By slowly opening the water tap before putting the washing machine into operation it is possible to check that the connection is free of leaks.

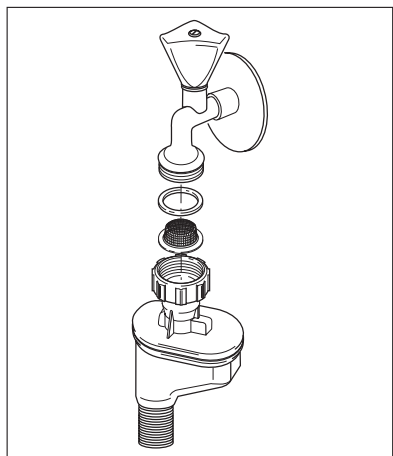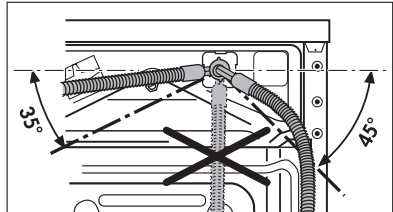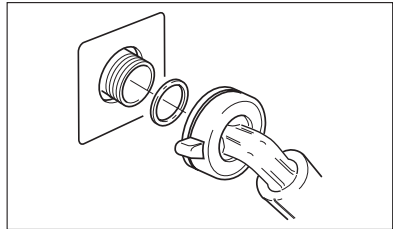

Water Drainage

The appliance drain hose should hook into a standpipe, the hook in the drain hose is formed using the plastic "U-Piece" supplied. The standpipe should have an internal diameter of approximately 38 mm (see diagram) thus ensuring there is an air break between the drain hose and standpipe.

Important! It is essential to lay the drainage hose without kinks.




When discharging into a standpipe ensure that the top of the curve in the hose end is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level.

The upright standpipe should have a minimum, length of 30 cm (12") from the bottom of the elbow to the top of the pipe (see diagram). Make sure that it is designed in such a way that the end of the drain hose cannot be covered with water.

Longer drain hoses are available in lengths of 2.7 and 4 metres from your AEG Service Force Centre.

If you intend the drain hose from the washing machine to empty into a sink, make sure that the sink is empty and the plug hose is not blocked. Use the plastic "U-Piece" supplied.

Important! The end of the drainage hose must not be submerged in the pumped-out water. Otherwise, the water could be sucked back into the appliance.

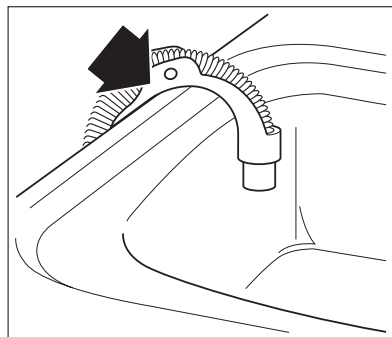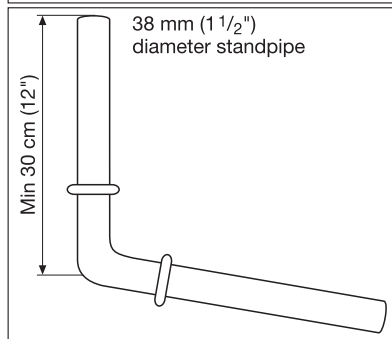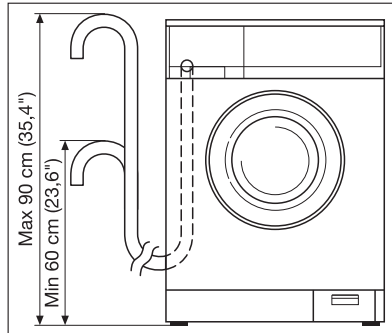

Pump head of greater than 1 m


Every washing machine includes a wash water pump for the removal of wash and rinse water, which can pump fluids through the outlet hose up to a height of 1m, measured from the surface on which the machine stands.

For pump heads of greater than 1m please contact your local AEG Service Force Centre.

Technical data

Height Adjustment	approx. +10 / -5mm
Load (depending on the programme)	max. 6kg
Area of use	Domestic
Drum speed, spinning	see rating plate
Water pressure	1-10 bar (=10-100 N/cm ² = 0.1-1.0 Mpa)

Dimensions

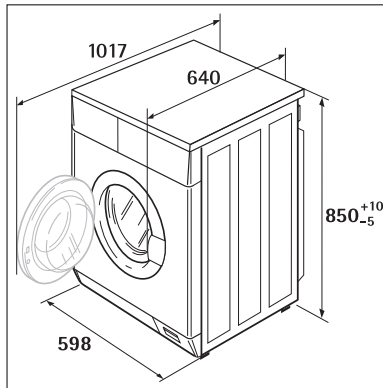

(dimensions in mm)

Warranty conditions

Great Britain

Standard guarantee conditions

We, AEG, undertake that if within 12 months of the date of the purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our discretion repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of AEG manufacture which are not marketed by AEG.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

Index

A

- Aqua Control.....45, 50
- Automatic adjustment foot.....10, 58

C

- Child safety feature.....43, 51
- Coloureds.....17, 23
- Conditioner.....24
- Cottons.....17, 23
- Customer service.....41, 42, 50, 71

D

- Delay start.....19, 30, 31
- Delicates.....17, 23
- Detergent.....10, 24, 29
- Detergent drawer.....10, 28
- Drain.....19, 33
- Drain pump.....10, 49

E

- Easy iron.....18, 23, 33, 44
- Emergency emptying.....48
- Energy saving.....17
- Extras.....20, 35

F

- Fashion.....18, 23

G

- Gentle spin.....21

H

- Handwash.....17

L

- Language.....21, 38
- Linen.....17, 23
- Linen/Easy-care.....17, 23
- Lingerie.....18, 23
- Load size.....53

M

- Memory.....20, 35

N

- Navigation display.....11, 13
- Net curtains.....22

O

- Opening the door.....27, 44
- Options.....19, 30
- Overdosing.....34

P

- Pre wash.....20, 28

R

- Rating plate.....10, 59, 60
- Refresh.....18
- Rinse hold.....19, 29, 33
- Rinse+.....20
- Risk of frost.....6, 48

S

- Sensitive.....20
- Service & Spare Parts.....71
- Short spin.....18, 33
- Silk.....17, 23
- Softener.....8, 10, 28
- Spin.....18, 33
- Stain.....20
- Stain removal agent.....10, 28
- Stand-by mode.....30, 33, 44, 45
- Starch.....18

T

- Time saving.....19
- Timer.....21, 25

U

- Update.....50

V

- Volume.....21

W

- Warranty.....6, 42, 66
- Water
 - hardness.....8, 24
 - softener.....8, 10, 24, 28
- Water cooling.....21
- Woollens.....17, 23

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 943 609-01-310303-01

Subject to change without notice