

MICROMAT - DUO

30 TG - d/w

Microwave Oven

Operating Instructions

Specifications

This book is your guide to the use and care of your AEG Microwave Oven. Please take the time to read it before you operate the oven.

Power Supply		Frequency Voltage Consumption	50 Hz 240 V ~ Microwave (High) 1,350 W Grill 1,350 W Combination Grill 2,650W
Microwave		Output Frequency	High: 850 W (IEC 705)* 2,450 MHz
Dimensions	Outer	Height Width Depth	348 mm 555 mm 432 mm
	Inner (Cavity)	Height Width Depth Usable Volume	245 mm 360 mm 360 mm 30 Lit.
Timer		Microwave Grill Combination Grill	99 min. 99 sec. 45 min. 45 min.
Net Weight	22 kg		

Radio Interference Regulations

This apparatus has been produced to comply with "BS 800: 1988".

NOTE

Microwave Output Power varies according to the method of measurement. Until recently almost all microwave oven manufacturers used the JIS standard but from September 1990 the IEC 705 standard has been adopted in U.K. as this is the common standard used in Europe for measuring microwave output power. The cooking times and power levels in the accompanying AEG cookery book are for microwave ovens with an output power of 850 W (IEC 705). If you use other cookery books or follow instructions on food packs that have cooking times and power levels calculated using the IEC 705 method then use the ones given for 850 W microwave ovens. If you are using recipes that are not calculated using the IEC 705 method or, if you are unsure, carefully check the food at the end of the stated cooking time to verify that it is properly cooked and piping hot all through. The IEC 705 rating will eventually be adopted by all manufacturers and cookery writers. Until this time take care to ensure that all foods are thoroughly cooked.

Caution

1. Please remember that in the microwave mode the oven only heats the liquid in a container rather than the container itself. Therefore, even though the lid of a container is not hot to the touch when removed from the oven, please remember that the food/liquid inside will be hot and will release the same amount of steam and/or spitting when the lid is removed as in conventional cooking.
2. Always test the temperature of cooked food yourself especially if you are heating or cooking food/liquid for babies. It is advisable never to consume food/liquid straight from the oven but allow it to stand for a few minutes and stir food/liquid to distribute heat evenly.
3. Food containing a mixture of fat and water, e.g. stock, should stand for 30 — 60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent bubbling when a spoon is placed in the food/liquid or a stock cube is added.
4. Always follow the cooking instructions detailed in our cookbook when preparing/cooking food/liquid and remember that there are certain foods, e.g. Christmas puddings, jam and mince meat, which heat up very quickly, in the microwave mode. When heating or cooking foods with a high fat or sugar content do not use plastic containers.
5. Cooking utensils may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. Oven gloves may be needed to handle the utensil.
6. Do not use re-cycled paper products in this oven. Impurities in these products can cause arcing.

Installation

1. Make sure all the packing materials are removed from inside the door.
2. Inspect the oven after unpacking for any visual damage such as:
 - Misaligned Oven Door
 - Damaged Oven Door
 - Dents or Holes in Oven Window and Screen
 - Dents in CavityIf any of the above are visible, DO NOT use the oven, and report the damage to your AEG dealer
3. This Microwave Oven weighs 22 kg and must be placed on a horizontal surface that is strong enough to support this weight.
4. The oven must be placed away from high temperatures and steam
5. DO NOT install above a heat source.
6. DO NOT place anything on the oven.
7. Keep the oven at least 5 cm away from hot side-walls, 10 cm away from the underside of an overhead kitchen cupboard, and 10 cm away from rear wall to ensure the correct ventilation.
8. As with any appliance, close supervision is necessary when used by children

WARNING — THIS APPLIANCE MUST BE EARTHED.

1. The power cord is 1.1 m long, the plug socket should be within easy reach of this cord.
2. If the appliance is not connected through a plug and socket, then a double-pole switch must be provided in the installation.
3. If the oven is connected through a plug and socket, the plug must be fitted with a 13 A fuse.
4. If you have any doubt about the connection of your oven, consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	: Earth
Blue	: Neutral
Brown	: Live

As the colours of the wires in the mains leads of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \perp or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.


Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

Do not immerse cord or plug in water.

Keep cord away from heated surfaces.


Do not let cord hang over edge of table or work surface.

Identifying the Oven Parts

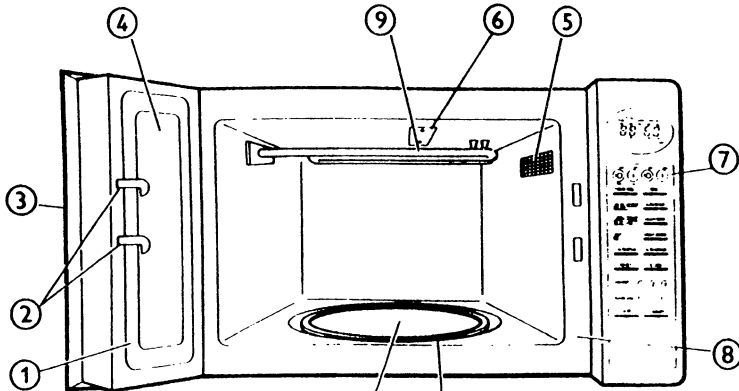

- ① Choke Door Seal
- ② Door Locks
- ③ Oven Door
- ④ Oven Window
- ⑤ Oven Light
- ⑥ Microwave Distributer Cover
- ⑦ Control Panel
- ⑧ Oven Front Plate
- ⑨ Grill Heater
- ⑩ Spindle (Under turntable tray)
- ⑪ Roller Ring (Under turntable tray)


Accessories

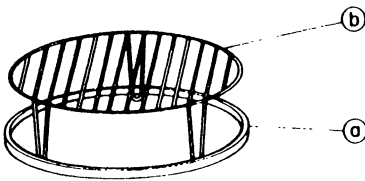

- a. Turntable Tray It rotates clockwise or anti-clockwise during cooking. To remove the turntable, push the rim down at the point between rollers and lift out.


CAUTION

- DO NOT remove the turntable tray when any item of food or any dishes etc. are placed on it.
- Remove with care as the turntable tray can get hot during cooking.

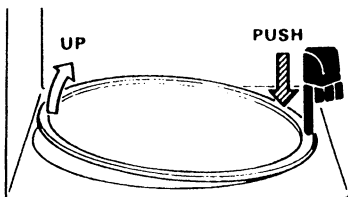

- b Grill Rack Place onto turntable tray for grilling.
Do not use in the microwave mode.

Control Panel

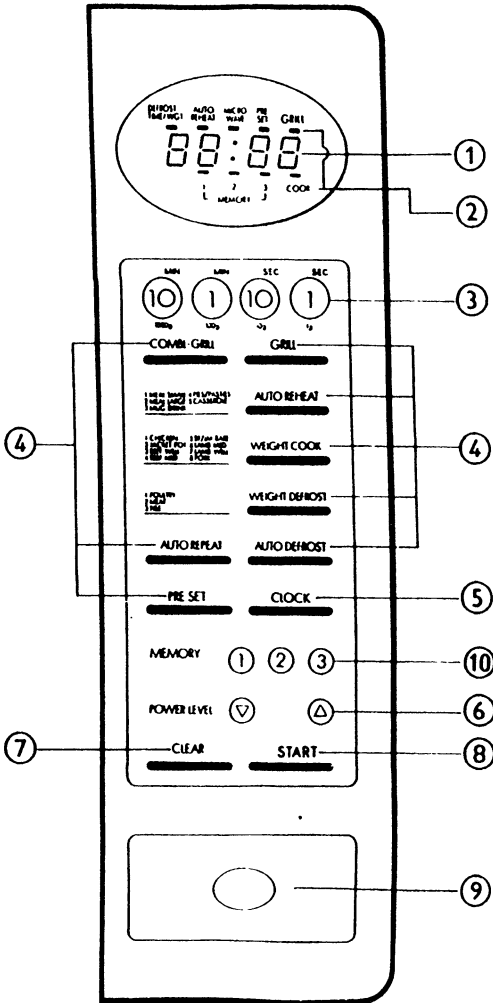

- ① **FLUORESCENT DISPLAY**
Indicates cooking time, power level and other micro wave oven features.
- ② **INDICATOR LIGHT**
Indicates selected operation mode.
- ③ **NUMERAL PADS**
Used to set cooking times, clock time and weight of food.
- ④ **FUNCTION PADS**
Used to select the desired oven operation.
- ⑤ **CLOCK PAD**
Used to set and recall the time of day.
- ⑥ **MICROWAVE POWER LEVEL PADS**
Used to set desired power level.
- ⑦ **CLEAR PAD**
Used to clear all information previously put into oven control panel except the clock and memory.
- ⑧ **START PAD**
Used to start selected operations except the clock.
- ⑨ **DOOR OPENING BUTTON**
Push to open the door.
- ⑩ **MEMORY PADS**

Operation

Your AEG Microwave Oven is easy to operate.

OPERATION	RESULTS
1. Push the "PUSH TO OPEN" button.	
2. Place the food, or food in its container, on the Turntable Tray.	
3. Close the door. The latch will snap shut, automatically locking the door. If the door is not closed properly, the oven will not start.	
4. Set the Oven Control, as instructed on the next pages, "HOW TO SET THE OVEN CONTROL."	
5. Touch the <u>START</u> pad.	The oven will start cooking, and the Cooling Fan, Turntable Tray, Oven Light and Cook Indicator Display will come on.
6. End of Cooking Cycle: <ol style="list-style-type: none"> 1) The Timer switches off. 2) Open the door during cooking. 3) Touch "Clear" pad during cooking. 	<p>The beeper will sound three times. The oven will automatically shut off, and the Cooling Fan, Turntable Tray, Oven Light, the Cook Indicator Display will turn off, and Clock will reappear on the display.</p> <p>The oven will automatically shut off. The Cooling Fan, Turntable Tray and Oven Light will turn off and the Cook Indicator Display will stop at the cooking time remaining. The oven will not restart until the door is closed and the <u>START</u> pad is pushed again.</p> <p>The oven will automatically turn off; the Cooling Fan, Turntable Tray, Oven Light and the Cook Indicator Display will turn off. To resume cooking the Oven must be reset.</p>
4) If the following pads are touched during cooking. <ol style="list-style-type: none"> 1. "POWER LEVEL" pad during cooking. 2. "Auto Defrost" pad during auto defrosting 3. "Grill" pad during grilling. 4. "Combi-Grill" pad during combi-grilling. 	<p>The oven will automatically turn off; The Cooling Fan, Oven Light, Turntable Tray and the Cook Indicator Display will turn off at the cooking time remaining. Touch the start pad to resume cooking.</p>

NOTE

When you place the Turntable Tray into the oven, ensure the roller ring and the spindle are in position.

Always ensure that the roller ring is installed correctly.

Place it in the oven so that the up marking is visible. Do not insert upside down.

Place the tray onto the spindle and roller ring.

DO NOT forcibly rotate the Turntable Tray.

When cooking several individual items, such as potatoes, they can be placed directly on the tray leaving an equal space between them for even cooking

How to Set the Oven Control

Please Note:

1. Each time a pad is touched, a beep will sound to verify the touch.
2. The time of day automatically returns to the display window when the oven turns off.
3. If the clear pad is touched, this erases all the information given to the oven except the clock and memory.

Make sure the oven is properly installed and plugged in.

NOW PLACE A CUP OF WATER IN THE OVEN AND CLOSE THE DOOR. FOLLOW THE OPERATING INSTRUCTIONS BELOW.

DO NOT ALLOW THE CUP OF WATER TO BOIL DRY. -- REFILL, IF NECESSARY.


SETTING THE CLOCK

When the oven is plugged in, "1:01" will appear in the display window. This clock is a twenty-four hour clock, so from 23:59 it will go to 0:00.

TO SET TIME OF DAY


Example. 13:45 24hr clock


- Touch **CLOCK** pad
- Touch **CLEAR** pad within 5 seconds

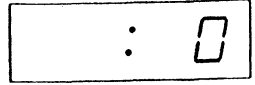



" : 0 " will appear in the display window.

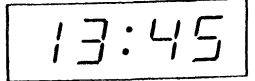
- Touch numeral pads. (For setting the time of day, the MIN pads set the hours and the SEC pads set the minutes.)



 pad once "10:00" will appear

 pad three times ... "13:00" will appear

 pad four times ... "13:40" will appear

 pad five times "13:45" will appear

"13:45" will appear in the display window.

- Touch **CLOCK** pad again.

The two dots between the hour and the minutes will flash every other second.

To reset the time of day, repeat the steps given above.

To check time of day while oven is operating, touch the **CLOCK** pad and the time will be displayed for 5 seconds.

Microwave Cooking

NOTE

- To ensure the best microwave and defrost results, be sure to start with a cool oven. This is important if the grill mode has been used prior to microwave cooking. Let the oven cool for 15 — 20 minutes with the door slightly open.
- Power level can be controlled from PL9 (equivalent to 850 watt IEC) down to PL1 (equivalent to 100 watt IEC) by using the power level pads.

TO SET POWER LEVEL


This oven has 9 power levels.

If **POWER LEVEL** (V) is touched, P9 will appear and will count down from power level 9.

If **POWER LEVEL** (A) is touched, P0 will appear and will count up from power level 0.

Example: Set oven to cook at power level 6.

- Touch **POWER LEVEL** pad.

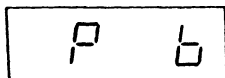

POWER LEVEL (V) pad . Count down from power level "9" (Touch pad 4 times.)

POWER LEVEL (A) pad ... Count up from power level "0" (Touch pad 7 times.)


6 will light up in the Fluorescent Display.

TO SET COOKING TIME

The timer can be set for up to 99 minutes 99 seconds for microwave cooking.

Example: Set oven to cook for 33 minutes 33 seconds.

- Touch **POWER LEVEL** pad. (To set power level)
- Touch numeral pads.

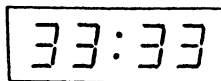

0 pad three times ... "30:00" will appear

1 pad three times .. "33:00" will appear

0 pad three times ... "33:30" will appear


1 pad three times .. "33:33" will appear

33:33 will light up in the Fluorescent Lamp Display.

The oven is now set for 33 minutes 33 seconds at power level 6.

Now touch the **START** pad to commence the cooking operation.

Cook Indicator Light will light up.

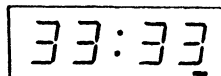

NOTE

Should a mistake have been made in setting the timer or power level, touch the **CLEAR** pad and start again.

Should food be cooked and removed from the oven, before the set time is completed (i.e. 1 min still shows on the display) touch the **CLEAR** pad before cooking a further item.

If a mistake in the power level or time settings is noticed before cooking has started, the values can be reset. If the mistake is noticed after cooking has started, touch the clear pad and reset both the power level and time. Cooking time cannot be set unless power level is set previously.

AUTO REHEAT

This will enable you to reheat a selection of foods by use of the 5 programs.

AUTO REHEAT MENU GUIDE

1. Small Plated Meal
2. Large Plated Meal
3. Mug Drink
4. Pies/Pasties
5. Casserole

NOTE

1. Details of recommended foods for each program are given in the accompanying cookbook.
2. Foods should be covered with pierced microwave cling film or a tight fitting lid.
3. Liquids should be reheated uncovered.
4. Items in foil trays/containers should be transferred to microwave safe dishes.
5. Allow programs 1, 2, 4 to stand for 1 minute before serving.
6. Allow program 3 to stand for 30 seconds before stirring or serving.
7. Allow program 5 to stand for 3 minutes before serving.
8. Ensure all food is thoroughly reheated before serving; continue cooking on variable power and time if foods are not completely heated after the Auto Reheat program.


TO SET AUTO REHEAT

Example: Set AUTO REHEAT program 5.


- Touch AUTO REHEAT pad.

AUTO REHEAT Indicator Light will light up and "1" will appear in the display window.

Example of display
AUTO
REHEAT

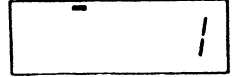


- Touch Auto Reheat pad until the required program is displayed.

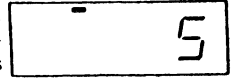

- Touch the START pad.

The oven will count down the time for the program being used.

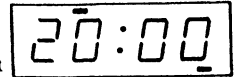

NOTE

The display will be repeated 1 — 2 — 3 — 4 — 5 and back to 1 by touching AUTO REHEAT pad.

WEIGHT COOK

This will enable you to cook a selection of food by weight using the 8 programs.

WEIGHT COOK MENU GUIDE

1. Chicken
2. Jacket Potatoes
3. Beef Well
4. Beef Med
5. Beef/Lamb Rare
6. Lamb Med
7. Lamb Well
8. Pork

NOTE

1. The maximum weights for each program are given in the accompanying cookbook.
2. Cook meat/poultry on a microwave roasting rack (not supplied with oven) or directly on the turntable.
3. Cover all meat/poultry with a split roasting bag.
4. Turn meat/poultry during cooking.
5. For program 2 a) Prick potato skins.
b) Wrap each potato in kitchen paper (not recycled.)
c) Place potatoes on turntable.
d) Do not cook any more than 4 medium sized potatoes at any one time.
6. Allow 20 minutes standing time for meat/poultry over 450 g.
7. Allow 5 minutes standing time for meat/poultry under 450 g.
8. Always ensure that meat/poultry are cooked thoroughly, continue cooking on variable power and time if the desired result is not achieved after the Weight Cook program.

TO SET WEIGHT COOK

Select WEIGHT COOK program from programs C1 ~ C8.


Obtain the weight of the food to be cooked.

Example: Set WEIGHT COOK program C4 with 1,350 g.


- Touch **WEIGHT COOK** pad. **Example of Display**

WEIGHT COOK


(Microwave) Indicator Light will light up and "C1" will appear in the display window.

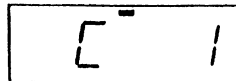

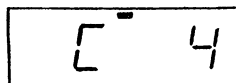

- Touch **WEIGHT COOK** pad to select programs C2 ~ C8 until required number is shown on in the display.

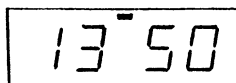


- Touch numeral pads, (to set the weight of the food in grammes.)



 
 pad once "10 00" will appear

 pad three times .. "13 00" will appear

 pad five times "13 50" will appear

"13 50" will appear in the display window. (Weight of food in grammes)


- Touch **START** pad.




The oven will now automatically calculate the cooking time necessary and this will be shown up in the display.

The oven will beep half way through the cooking cycle. The food item should be turned or re-arranged .

(Refer to previous page.)

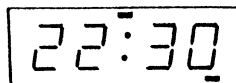


- After turning or re-arranging the food, touch **START** pad again to continue the cooking.

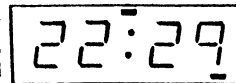

TO SET AUTO DEFROST (DEFROST BY TIME)


NOTE

1. In case the door is not opened to turn or arrange the food half way through the cooking cycle, the oven will stop and count down ten seconds. The oven will restart automatically after ten seconds.
2. The display will be repeated C1, C2, C3, C4, C5, C6, C7, C8 and back to C1 by touching WEIGHT COOK pad.
3. When using WEIGHT COOK, the maximum weight that can be set is 3,999 g. (See information charts in the cookbook for recommended maximum weights for individual food items.) The display will be repeated 1,000 g — 2,000 g — 3,000 g — 0 g and back to 1,000 g by touching  pad.


Example: Set the oven to defrost for 3 minutes 30 seconds.


- Touch AUTO DEFROST pad.
DEFROST Indicator Light will light up.


Example of Display
DEFROST
TIME/WGT

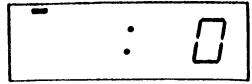


- Touch numeral pads.

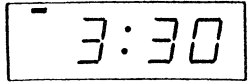

 pad three times ... "3:00" will appear

 pad three times ... "3:30" will appear

- Now touch the START pad

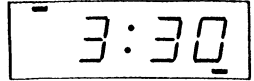

COOK Indicator Light will light up.

The auto-defrost function is designed to defrost by automatically utilizing three different power levels. It begins defrosting on a medium/high power level to quickly activate defrosting. The middle program defrosts on a medium-low power level. The last program of the AUTO-DEFROST is on a low power level to ensure equalization of defrosting action throughout the food. Once the oven is started, it will gradually defrost the food and power level will automatically reduce during the defrosting time. This will eliminate or reduce the normal required standing time.

NOTE

The "Auto Defrost" program can only be used for up to 1 lb/450 g in weight.

WEIGHT DEFROST

This will enable you to defrost by weight selections of food by use of the 3 programs.

WEIGHT DEFROST MENU GUIDE

- d1 Poultry
- d2 Meat
- d3 Fish

NOTE

1. Details of recommended maximum weights for each program are given in the accompanying cookbook
2. Place the item of food on a microwave roasting rack (not supplied with oven) or directly on the turntable.
3. For meat and poultry weighing more than 499 g/1 lb 4 oz (approx.) it is necessary to turn during the defrosting cycle for good results.
4. For meat and poultry weighing more than 499 g/1 lb 4 oz (approx.) allow 20 minutes standing time
5. For meat poultry/fish less than 499 g/1 lb 4 oz (approx.) allow 5 minutes standing time.
6. For fish more than 499 g/1 lb 4 oz (approx.) allow 10 minutes standing time.
7. Always ensure that all meat/fish/poultry is thoroughly defrosted before cooking.


TO SET WEIGHT DEFROST

Select WEIGHT DEFROST program from programs d1 ~ d3.
Obtain the weight of the food to be cooked.


Example: Set WEIGHT DEFROST program d3 to defrost 1,350 g.

- Touch **WEIGHT DEFROST** pad. **Example of Display**


DEFROST Indicator
Light will light up and "d 1" will appear in the display window.

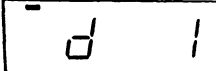

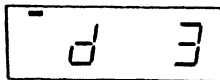

To select programs d2 ~ d3 repeat until required number is shown on in the display.

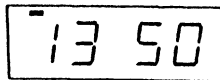


- Touch numeral pads.



 
 pad once "10 00" will appear

 pad three times ... "13 00" will appear

 pad five times "13 50" will appear

"13 50" will appear in the display window.


- Touch **START** pad.



The oven will now automatically calculate the defrosting time necessary and this will be shown up in the display.

One third and two thirds of the way through the defrosting process, the oven will beep at these points, the food item should be turned or rearranged. (Refer to previous page.)

NOTE

 
1. The display will be repeated d1 — d2 — d3 and back to d1 by touching WEIGHT DEFROST pad.
2. When using WEIGHT DEFROST, the maximum weight that can be set is 3,999 g. (See information charts in the cookbook for recommended maximum weights for individual food items.) The display will be repeated 1,000 g — 2,000 g — 3,000 g — 0 g and back to 1,000 g by touching  pad.

GRILLING


The timer can be set up to a maximum of 45 minutes.

Example: Set the oven to grill for 30 minutes.


- Place the food to be grilled on the grill rack on the turn table tray.


- Touch  pad. **Example of Display**


GRILL Indicator Light will light up.

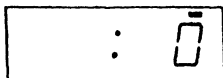


- Touch numeral pad.

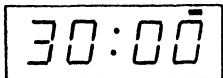

 pad three times .. "30:00" will appear

 - Touch  pad.

COOK Indicator Light will light up.

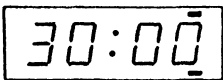

NOTE


The Grill will only operate when the door is closed.

COMBINATION GRILLING


The timer can be set up to a maximum of 45 minutes.

Example: Set the oven to cook on power level 5 and grill mode for 30 minutes.

- Place the food to be grilled on the grill rack on the turn table tray.


- Touch  pad. **Example of Display**


Microwave and Grill Indicator Light will light up.

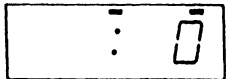

- Touch POWER LEVEL pad.

 


 pad .. Count down from power level "9" (Touch pad 5 times)


 pad .. Count up from power level "0" (Touch pad 6 times)

5 will light up in the Fluorescent Display.


- Touch numeral pad.



 pad 3 times .. "30:00" will appear

- Touch  pad.

Cook Indicator light will light up.

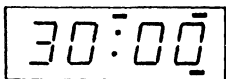

TO SET AUTO REPEAT

To repeat an identical program i.e. Power Level and Time, instead of having to reprogram the instructions manually, select the auto repeat function which will automatically select the last instruction programed into the oven. Touch the "start" pad to commence the cooking process.

Example: The oven had been previously set to cook on Power Level 9 for 6 minutes.


- Touch **AUTO REPEAT** pad.
- Touch **START** pad.

The oven will now cook on Power Level 9 for 6 minutes.


If the **CLEAR** pad was touched during the cooking time or at the end of the program, the oven will still hold the information enabling "Auto Repeat" to be used.

If after selecting "Auto Repeat" any pad other than "START" is touched, the last cooking cycle will be deleted and "Auto Repeat" will not work.

- Touch **POWER LEVEL** pad to set power level.

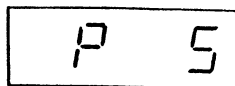


- Touch numeral pad to set cooking time.

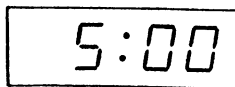


- Touch **START** pad.

The present time will appear in the display window.

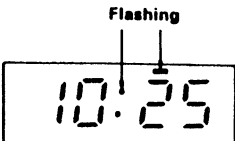

To check pre-set time

- Touch **PRE SET** pad.

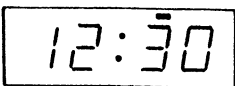

Pre-set time is indicated for 5 seconds.

TO SET THE PRE-SET FUNCTION


This oven has a Pre-Set feature which means the oven can be set to delay the start of the cooking process.

Because the oven is set to start at a specific time of day, the clock must always be correct.


Example: Set Pre-Set time of 12:30 to cook on power level 5 for 5 minutes.

- Touch **PRE SET** pad.

PRE-SET Indicator Light will light up and " : 0 " will appear in the display window.

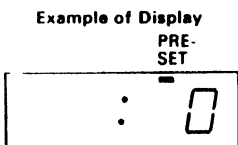

- Touch numeral pads (For setting the Pre-Set time, the MIN pads set the hours and the SEC pads set the minutes.)

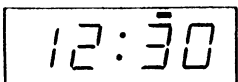


10 pad once "10:00" will appear

1 pad two times "12:00" will appear

10 pad three times .. "12:30" will appear

The oven will commence cooking at 12:30.

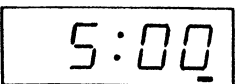

If the oven door is opened, the PRE-SET indicator stops flashing.

AFTER CLOSING THE DOOR, START PAD MUST BE TOUCHED AGAIN SO THAT THE OVEN WILL START AT PRE-SET TIME.

If it is necessary to reset the pre-set time, touch the **CLEAR** pad and start again.

If it is necessary to cancel the pre-set time, touch the **CLEAR** pad

Memory Key


1. This oven has three memory functions.
2. Each of these memory functions ① ② ③ can store up to three separate programs, (e.g. Auto Defrost — Microwave Cooking — Grill) or to store any individual program.
3. The memory functions are designed for convenience when repeating the same program.

TO SET THE MEMORY


Example: Set the following program in MEMORY 1.




- Touch AUTO DEFROST pad to set AUTO DEFROST and touch numeral pad to set defrosting time.

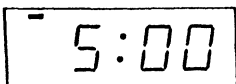

 
- Touch POWER LEVEL pad to set power level.




- Touch numeral pad to set cooking time.

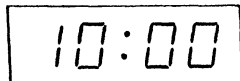

- Touch GRILL pad to set GRILL mode and touch numeral pad to set grilling time.

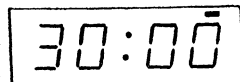

- Touch MEMORY ① pad

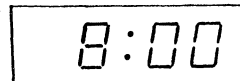

Now the above program is set into MEMORY 1.

And present time will appear in the display window

NOTE

If you want to set the above program into MEMORY 2 or 3, touch MEMORY ② or ③ pad instead of MEMORY ① pad.

When the oven is unplugged or the power supply is switched off, the memory will be erased and will need to be reset.

The memory will not be erased by the clear pad.

To store a new program






1. Set the new program required (e.g. Grill 10 min.).
2. Touch any of the memory pads ① ② ③ and the new program will be retained; whatever was previously stored in that memory will be erased.

TO USE MEMORY KEY

- Touch MEMORY ① pad.

The program which is set into MEMORY 1 will appear in the display automatically

Example of Display

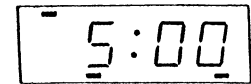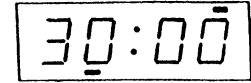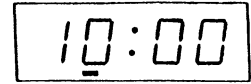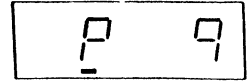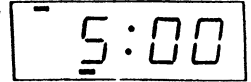


- Touch START pad

The oven will operate using the program set into MEMORY 1.

NOTE:

Each indicator light will illuminate as shown to distinguish which memory is being used.

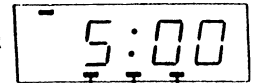


will light up when MEMORY 1 is being used.

will light up when MEMORY 2 is being used.

will light up when MEMORY 3 is being used.

Programing Combinations

This oven has the ability to be programed to do up four consecutive functions. These combinations are given below and either the complete program or part of it can be used.

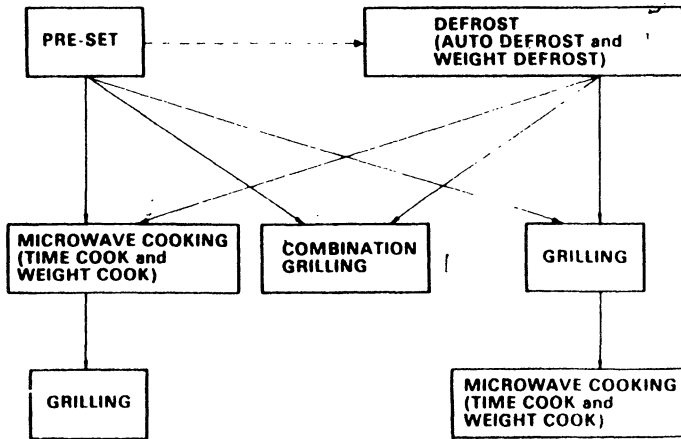

NOTE

In continuous cooking, if DEFROST program is set after the cook program, then DEFROST will always start before cook.

Warning

Please Read Carefully

- (a) DO NOT allow anyone to service the oven other than an Authorized AEG Service Agent. To do so will void the warranty. It is dangerous for anyone other than a service technician trained by AEG to perform repairs on it.
- (b) DO NOT, under any circumstances, remove the outer cover, door or control panel. This too will void the warranty.
- (c) DO NOT place any object between the front plate of the oven and the door.
- (d) DO NOT operate the oven if the door seal is damaged or the door does not close properly. Inspect these areas for damage. If there is any damage, the oven must not be operated until it has been repaired by a service technician trained by AEG.
- (e) DO NOT operate the oven in microwave setting when empty, as this may damage the oven.
- (f) Always keep the door seals (inside of the door and the oven front plate) clean by wiping regularly with a damp cloth and mild detergent, so that any grease, soil or spatters are not allowed to build up.

The AEG Microwave Oven is designed to give long, safe and satisfactory service. With it, as with many electrical appliances, there are some basic rules to follow to assure peak performance.

1. DO NOT use a metal container when using the microwave function as microwaves cannot penetrate metal. DO NOT use utensils with gold or silver trim as these may cause arcing in the microwave oven. Porcelain or glass are suitable as containers.
2. DO NOT cook eggs in their shells. The expansion and build up of pressure could cause the egg to explode. After cracking and removing the egg from the shell always pierce yolk with a fork or skewer before frying or poaching.
3. DO NOT cook food in a bottle or sealed container.
4. DO NOT cook food with a shell such as a chestnut. Make a split in the shell with a kitchen knife.
5. DO NOT use the oven for any other purpose than cooking (e.g. Drying clothes).
6. DO NOT insert any object into the openings on the outer case.
7. DO NOT touch, or allow any object to cover the openings on the top of the outer case during cooking.
8. DO NOT heat oil or fat for deep frying in a microwave oven, it may overheat.
9. When using the grill and combination grill, the glass door and turntable tray will get hot. It is recommended to use oven gloves.
10. Liquids must be briskly stirred or poured (to mix in air) before being heated in a microwave oven. If air is not mixed into a liquid, it can vigorously boil over in the oven, or delayed eruptive boiling of it may occur after removal from the oven.
11. Plastic or paper containers designed for microwave use should only be used for short cooking periods.
12. DO NOT use the oven cavity for any type of storage, such as paper, cookbook, etc.
13. Avoid heating baby foods in their glass jars; transfer to a container suitable for use in a microwave oven.
14. Only use browning dishes or skillets specifically designed for use in a microwave oven. Do not exceed manufacturers recommended pre-heat times.
15. Never lean on the door or allow a child to swing on it when the door is open. Injury could result.
16. To reduce the risk of fire in the cavity:
 - a) Do not overcook food. Carefully attend oven if paper, plastic or other combustible material are placed inside the oven to facilitate cooking.
 - b) Remove wire twist-ties from plastic bags before placing in oven.
 - c) Do not use recycled paper products in this oven. Impurities in these products can cause arcing which may result in fire.
17. If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power.
18. This microwave oven is specifically designed to cook food and for use in homes. It is not designed for industrial laboratory use or commercial use.
19. DO NOT use outdoors.

Cleaning your microwave oven is easy!

After every use just wipe the inside of the oven with a soft damp cloth and mild detergent (washing up liquid). Wipe out well and dry!

This oven is provided with the self-cleaning coat on the top wall of cavity, which serves to clean up the food splatters.

DO NOT use an abrasive powder or pad and cleaners on this self-cleaning coated wall, as they will damage the coat.

FOR MORE STUBBORN STAINS:

1. **Oven Walls and Floor** — To keep the oven in tip-top operating condition, clean the oven with a damp cloth after each use. Always use a soft cloth, never an abrasive powder or pad. If time has elapsed between cleaning and food particles have dried-on, let a cup of water boil for about 3 minutes in the oven. The steam build up will soften the dried-on particles.
2. **Turntable Tray** — This can be removed from the oven and washed either by hand or in the dishwasher. Handle with care — it's glass, therefore breakable!
3. **Inside of Oven Door** — This area is part of the sealing system which prevents microwave leakage. It is extremely important that the door be kept clean at all times.
4. **Oven Front Face** — This is also part of the door seal. It must be kept clean at all times.

to use a more abrasive product, i.e. a special microwave oven cleaner.

6. Do not use any abrasive substances on the door seals, hinges or distribution cover.

Outside the Oven

1. **The Outer Casing** — This is easily cleaned with a damp cloth.
2. **The Door** — This should be cleaned with a damp cloth. **DO NOT** use any abrasives as this may scratch the surface and impair vision into the oven

Ovens with Grills

- When the grill mode is used grease, acids and salts may be deposited on the oven cavity.
- To clean the oven use a special microwave cleaner on the sides of the oven only.
- To clean the roof, set the empty oven on grill for 30 minutes, this will activate the self clean lining. Splatters will be eliminated by decomposition to carbonic acid gas and moisture.

Do Not

USE ANY ABRASIVE SCOURING PRODUCTS
USE ANY COMMERCIAL OVEN CLEANERS.
USE ALKALINE CLEANER ON ANY
PAINTED/COATED AREAS OF THE OVEN
USE ANY CLEANER ON THE SELF-
CLEANING AREA OF ROOF.

NOTE

WHEN CLEANING, THE OVEN MUST BE
SWITCHED OFF.

Before You Call for Service

1. If the oven does not work at all;
Check that the oven is correctly plugged in.
Check that the wall socket is working properly by plugging in another appliance.
2. If the microwave power will not come on;
Check that the door is securely closed and the timer is set.
Unless the door is closed properly engage the safety interlocks, the microwave energy will not operate

If there is still a problem, contact:

AEG Service Locations in the United Kingdom

AEG UK Limited
Head Office
217 Bath Road
Slough, Berks. SL1 4AW
Tel: 07 53 87 25 06
Telox: 8 47 541
Telefax: 07 53 51 22 71

AEG Scottish
Service Centre
Block 11, Unit 1
Dundyvan industria Estate
Coatbridge
Lanarkshire ML5 4AQ
Tel: 02 36 44 03 87
Telefax: 02 36 44 02 56

AEG Northern Service Centre
Unit 20, Haigh Park/
Haigh Avenue
Stockport
Gt. Manchester SK4 1QR
Tel: 0 61 4 87 22 05
Telefax: 0 61 4 74 11 91

Service Appointments
Bristol Tel: 02 72 25 28 80
(call diverted to Slough)
Norfolk Tel: 06 03 76 55 11
(call diverted to Slough)

AEG Domestic Appliances Ltd

Customer Care Department

55-77 High Street

Slough

Berkshire SL1 1DZ

Telephone: 08705 350350