

# TOSHIBA

## OWNER'S MANUAL

900MHz CORDLESS TELEPHONE DIGITAL ANSWERING SYSTEM

# FT-8901A



The **FIRST** thing to do after unpacking your new cordless telephone is:

**CHARGE THE BATTERY !**

Please read and follow the few instructions on

**PAGE 2**

**BEFORE YOU DO ANYTHING ELSE.**

Preparation

Basics

Answering system

Additional Information

# GETTING STARTED: DO THIS FIRST!

**FIRST,** After unpacking your new cordless phone:

## **CHARGE THE HANDSET BATTERY!**


- Set your new phone in an out-of-the-way place near a power outlet but where it will not be disturbed.
- Plug the AC adaptor into the wall power outlet.
- Plug the AC adaptor cord into the power jack on the base unit. The “POWER” LED should light. If not, see “**TROUBLESHOOTING,**” page 31.
- Take the cover off the handset battery compartment; plug the battery connector into the receptacle inside the battery compartment and replace the cover. The connector only goes in one way.
- Place the handset into the base unit’s charging cradle. The “CHARGE” LED should light.
- The battery charging period has now started. From now until the 12 hour period is complete, do not let anything cause the handset to be removed from electrical contact with the base unit’s charging pins or power to be removed from the base unit.

**Now,** set the dial mode to Tone or Pulse for your type of service according to the instructions on Page 14 and your telephone is ready for normal use. Information on the use of other features follows page 15.

# INTRODUCTION

## FEATURES

Toshiba America Consumer Products Inc. takes pride in presenting the cordless telephone and digital answering system. An all digital answering device provides many new conveniences not available on tape machines, such as repeat, skip and individual message delete.

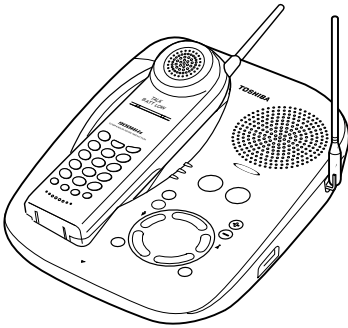

- 900MHz analog transmission with extended talk range
- 40 channel auto scanning
- All digital recording system (approx. 15 min. recording time)
- Advanced compandor noise reduction
- Advanced message management design
- Voice guidance/time stamp
- Long standby battery life (14 days)
- One way page/handset locator
- Last number redial (32 digits)
- 10 speed-dial memories, 16 digits each
- Mute on handset
- Any-key answer
- Reversible charging system
- Hearing aid compatible/HAC volume
- Desk/Wall mountable (bracket included)
- Custom greeting message / pre-recorded greeting message
- Memo recording
- Volume control (3 level)
- Digital security code (65,536 codes)

# TABLE OF CONTENTS

---

## *Preparation*

INTRODUCTION .....	3
Features .....	3
IMPORTANT SAFETY INSTRUCTIONS .....	6
LOCATION OF CONTROLS .....	8
Handset .....	8
Base unit .....	9
INSTALLATION .....	10
Setting up the base unit (Desk top mounting) .....	10
AC adaptor information .....	10
Setting up the base unit (Wall mounting) .....	11
Charging the battery pack .....	12
Setting the dial mode .....	14

## *Basics*

BASIC OPERATION .....	15
Making a call .....	15
Receiving a call .....	15
Redial .....	16
Out of range .....	16
Call waiting .....	16
Handset earpiece volume setting .....	16
Handset ringer volume setting .....	16
Base speaker volume setting .....	17
Mute .....	17
Tone/Entering a pause .....	17
Interference or static .....	17
Paging the handset .....	17
MEMORY DIALING .....	18
Storing numbers .....	18
Inserting a pause in memory .....	19
Dialing a stored number .....	19

# TABLE OF CONTENTS

## *Answering system*

USING THE MENU MODE	.20
Recording the greeting message	.21
Changing the greeting message	.21
Setting the clock	.22
Setting the security code (PIN)	.23
Setting the base ringer volume	.23
Setting the number of rings	.24
Setting the recording time	.24
USING THE ANSWERING MACHINE	.25
Turning the answering machine ON & OFF	.25
Checking and switching greeting message	.25
Checking clock setting	.26
Playing recorded messages	.26
Deleting recorded messages	.27
Screening incoming calls	.27
Leaving a memo message	.28
Recording a phone conversation (2 WAY REC)	.28
Calling in from a remote location	.29
Table of commands	.30

## *Additional information*

TROUBLESHOOTING	.31
WARRANTY/SERVICE	.34
REMOTE OPERATION CARDS	.37

# IMPORTANT SAFETY INSTRUCTIONS

---

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 4 Do not use this product near water sources, such as bath tubs, wash bowls, kitchen sinks, laundry tubs, wet basements, or swimming pools.
- 5 Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 7 Do not allow anything to rest on the power cord. Do not locate this product where the cord can be stepped on or tripped over.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10 Do not disassemble this product. Opening or removing covers puts you at risk of electrical shock, and incorrect reassembly can cause shocks, sparks or other damage during subsequent use.
- 11 Take this product to a qualified service technician under any of the following conditions:
  - A. When the power supply cord is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally according to the operating instructions. Adjust only those controls covered by this manual. Improper adjustment of other controls may result in serious damage to the unit or your home.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance.
- 12 Do not use the telephone in the vicinity of a gas leak.

# IMPORTANT SAFETY INSTRUCTIONS

## The RBRC™ Seal



The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-

cadmium batteries into the trash or municipal waste, which is illegal in some areas.

TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTER for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

**CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY THE BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.**

## BATTERIES

- 1 Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
- 2 Do not dispose of the battery pack in a fire. The cell may explode. Check with State and local codes for possible special disposal instructions.
- 3 Do not open or mutilate the battery pack. Released electrolytes are corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4 Exercise care in handling the batteries. Contact with conductive materials such as rings, bracelets and keys may cause the battery to short out, resulting in overheating which could burn.
- 5 Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
- 6 Observe proper polarity orientation between the battery pack and the battery charger.


**ATTENTION: THE PRODUCT THAT YOU HAVE PURCHASED CONTAINS A RECHARGEABLE BATTERY. UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THIS BATTERY INTO THE MUNICIPAL WASTE STREAM. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT FOR DETAILS IN YOUR AREA REGARDING RECYCLING OPTIONS OR PROPER DISPOSAL.**

## SAVE THESE INSTRUCTIONS


TO HELP PROTECT THE ENVIRONMENT, THIS PRODUCT MAY CONTAIN RECYCLED OR RECONDITIONED PARTS AND MATERIALS.

# LOCATION OF CONTROLS


## HANDSET

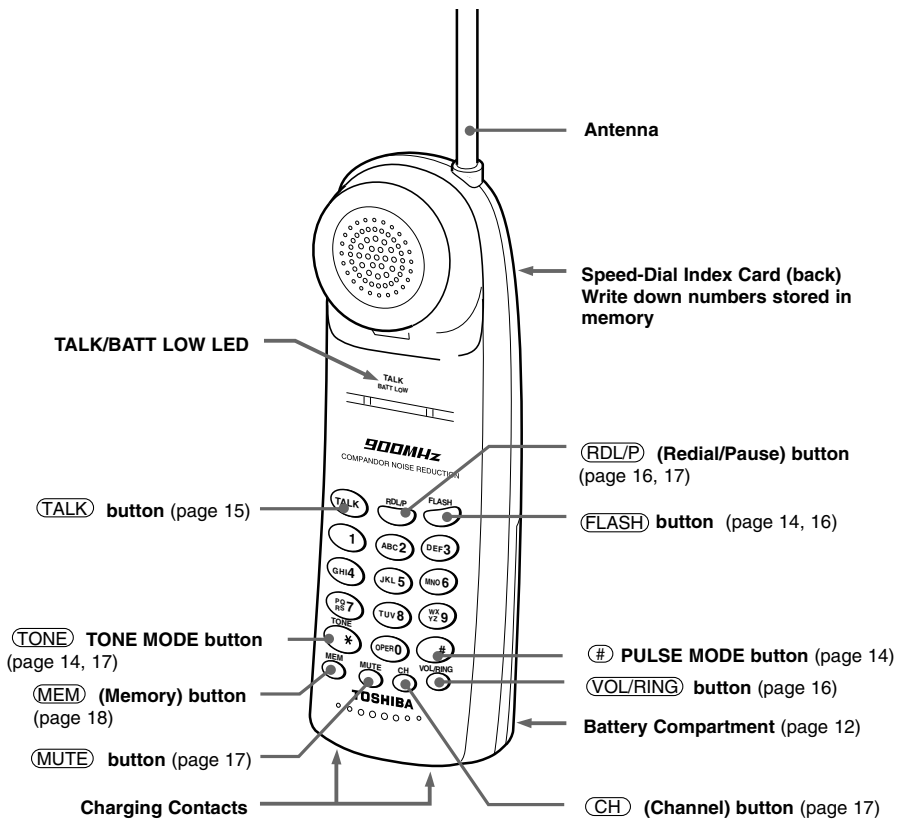


## SUPPLIED ACCESSORIES:



**Modular Line Cord**  
Part # RC008231

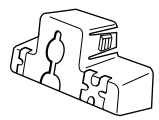

**Wall Mount Bracket**  
Part # RC009245

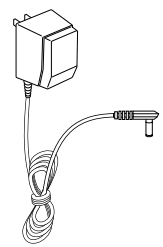


**AC Adaptor**  
TAC-8930  
Part # RC009255




# LOCATION OF CONTROLS

## BASE UNIT

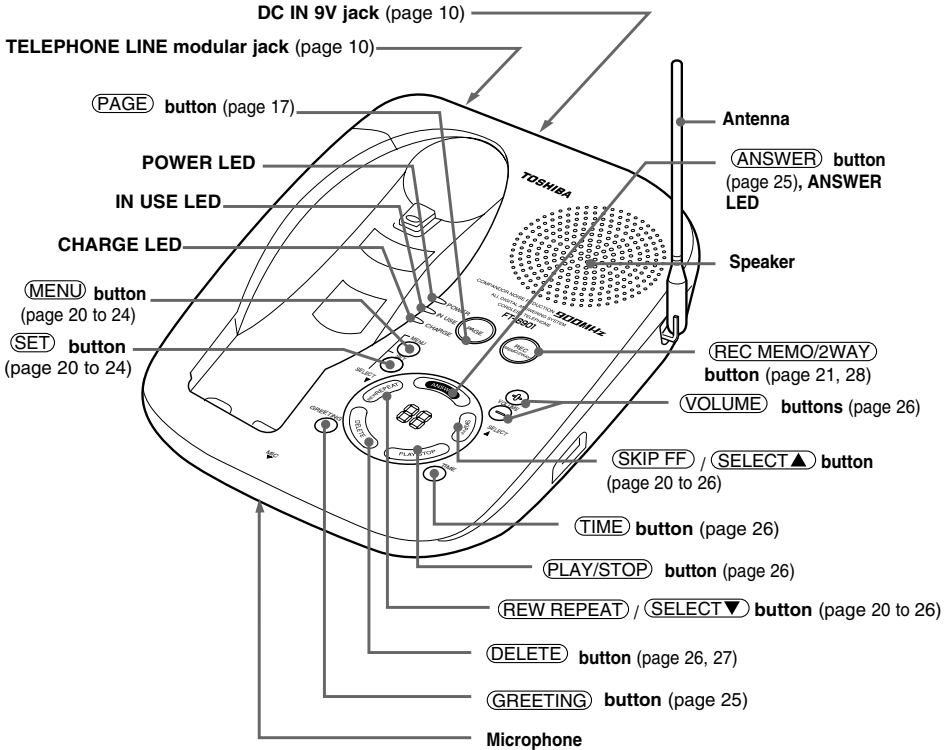

For purchase of accessories, please call 1-877-644-7373.

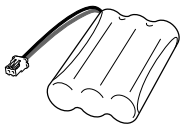

SPEED DIAL INDEX	
1	2
3	4
5	6
7	8
9	0

Owner's manual  
Part # RC012156

Quick Reference Guide  
Part # RC012157


Rechargeable Battery Pack  
Toshiba TRB-8000  
Part # RC004931

Speed Dial Index Card  
Part # RC005157

# INSTALLATION

## SETTING UP THE BASE UNIT (DESK TOP MOUNTING)

For setting up the base unit follow the instructions below.

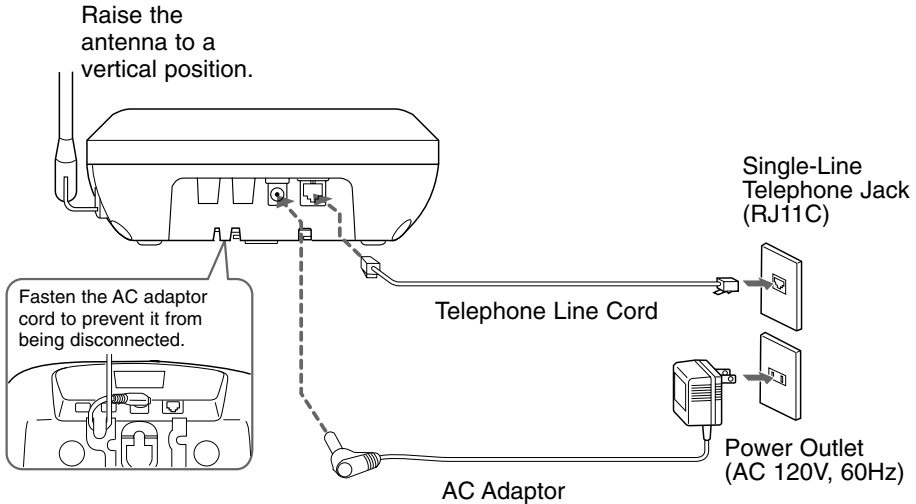

- Plug the AC adaptor firmly into the base unit and the AC 120V outlet.
- **USE ONLY WITH Supplied AC ADAPTOR** (TAC-8930 power source AC 120V 60Hz/DC9V).
- The AC adaptor must remain connected at all times.  
(It is normal for the adaptor to feel warm during use.)

## AC ADAPTOR INFORMATION

Use only the supplied AC adaptor, or one matching its specifications exactly with this product. Incorrect voltage may damage the unit or cause it to function improperly.

### TOSHIBA

AC ADAPTOR  
MODEL NO.: TAC-8930  
INPUT : AC 120V 60Hz 7W  
OUTPUT : DC 9V 350mA





CLASS 2 POWER SUPPLY  
FOR USE WITH TELEPHONES  
TOSHIBA AMERICA  
CONSUMER PRODUCTS, INC.

## SETTING UP THE BASE UNIT (WALL MOUNTING)

### MOUNTING ON A STANDARD WALL PLATE:


Insert the bracket's tabs into the notches on the base.

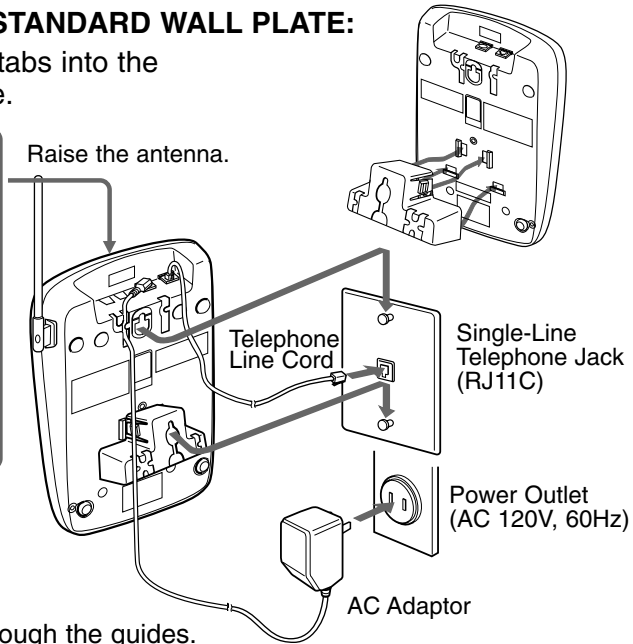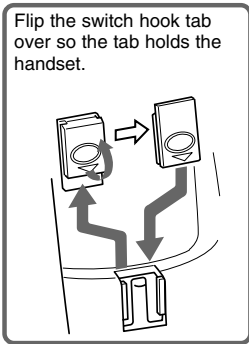

- Route the cords through the guides.
- Place the base unit on the posts of the wall plate and push down until it is firmly seated.
- **USE ONLY WITH Supplied AC ADAPTOR (TAC-8930 power source AC 120V, 60 Hz/DC 9V).**

#### NOTES:


- **Do not use any outlet controlled by a wall switch.**
- **If you don't have a standard wall plate, cut out the template on this page and use it to position two screws (minimum length of  $1\frac{3}{8}$  inches) into the wall with the heads protruding about  $\frac{1}{4}$  inch.**

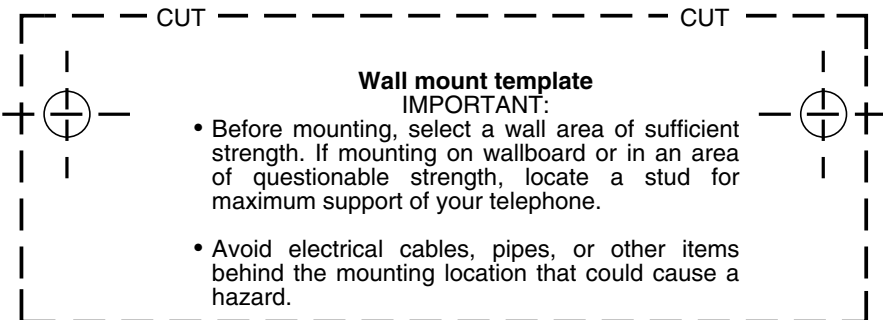


# INSTALLATION

## CHARGING THE BATTERY PACK

It is important to charge the battery for 12 to 16 hours continuously without any interruption before you use the handset for the first time.

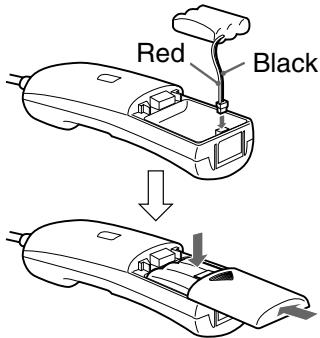

- 1** Remove the battery cover on the back of the handset by sliding it down.
- 2** Plug the battery pack cord into the connector with the correct polarity (black and red wires).
- 3** Place the battery pack in the battery compartment.
- 4** Put the battery cover back by sliding until it snaps into place. Make sure not to get the wires of the battery pack caught in the cover.
- 5** Place the handset on the base unit. Be sure the CHARGE LED lights. If the CHARGE LED does not light, make sure the AC adaptor is plugged in securely.

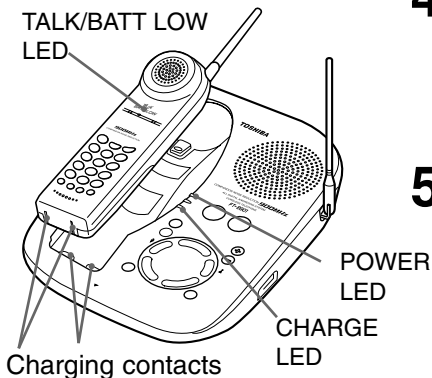

### NOTES:

- Use only the supplied battery pack (TRB-8000 power source 600mAh, 3.6VDC)
- The battery pack is not charged properly if the charging contacts are dirty or tarnished. Clean the contacts occasionally with a dry cloth.

# INSTALLATION

After the battery pack is fully charged;

Operation	Approx. battery life
While in use (Talk mode)	up to 7 hours
While not in use (Standby mode)	up to 14 days


When the TALK/BATT LOW LED blinks, all handset buttons are disabled and the battery needs to be charged. If this occurs during a call, you hear short beeps. Finish the call as soon as possible and place the handset on the base unit.

## NOTES:

- *If a call comes in when the battery is too low to operate properly, you will be unable to answer the call or the call will be disconnected.*
- *The redial number is held in memory for up to one minute while you replace the battery pack.*
- *If you must replace the battery pack during a telephone call, complete the replacement of the battery pack within 30 seconds, and you can return to the original call.*

# INSTALLATION

Before using the handset, make sure to read the following instructions.

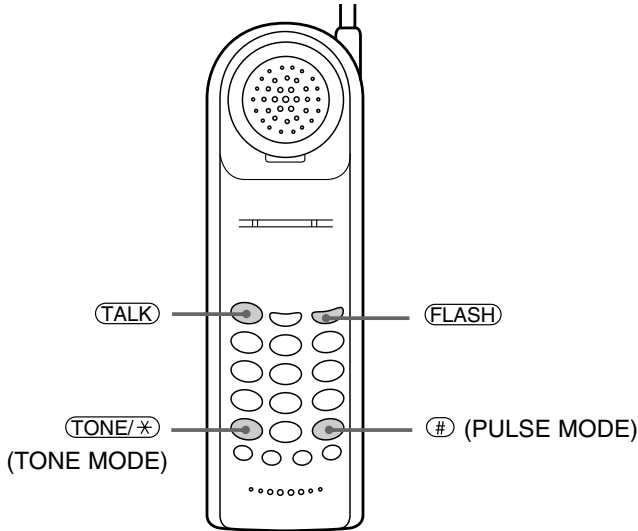


## SETTING THE DIAL MODE

Most phone systems use tone dialing. But, to use tone dialing, you must have a tone service dialing system supplied by your telephone company. Then you must set your telephone dial mode for the type of service you have. If you are not sure which type of service you have, do the following steps.

- 1** With the phone in the Standby mode, press and hold **FLASH** until you hear a confirmation tone.
- 2** Press **TONE/\***.  
You hear a confirmation tone.
- 3** Press **TALK** and listen for a dial tone.
- 4** Press any number other than 0.  
If the dial tone sounds, you have tone service and your setting is complete. If the dial tone continues, you have pulse service and you must perform steps 5 and 6 below.
- 5** With the phone in the Standby mode, press and hold **FLASH** until you hear a confirmation tone.
- 6** Press **#** and hear a confirmation tone. Your setting is complete for pulse service.

# BASIC OPERATION

Before using the handset, make sure to read the following instructions.

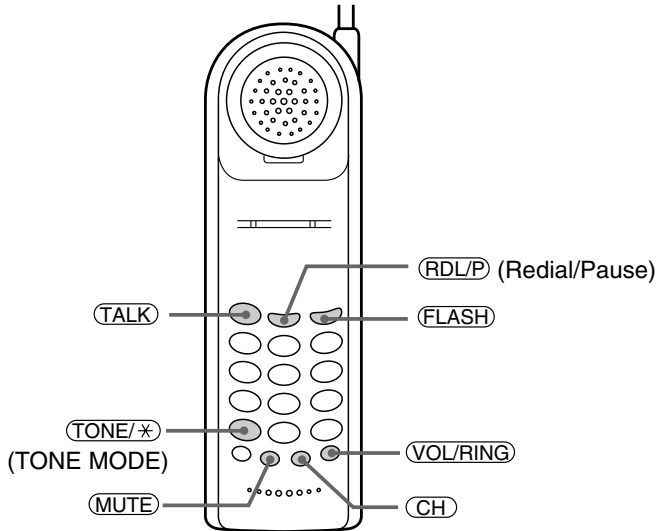

## MAKING A CALL

Handset On The Base	Handset Off The Base
<ol style="list-style-type: none"><li>1) Pick up the handset.</li><li>2) Press <b>TALK</b>.</li><li>3) Listen for the dial tone.</li><li>4) Dial the number.</li></ol>	<ol style="list-style-type: none"><li>1) Press <b>TALK</b>.</li><li>2) Listen for the dial tone.</li><li>3) Dial the number.</li></ol>
To hang up: Press <b>TALK</b> , or return the handset to the base (Auto Standby).	

## RECEIVING A CALL

Handset On The Base	Handset Off The Base
Pick up the handset (Auto Talk).	Press any button (Any-key answer).
To hang up: Press <b>TALK</b> , or return the handset to the base (Auto Standby).	

# BASIC OPERATION

## REDIAL

Handset On The Base	Handset Off The Base
<ol style="list-style-type: none"><li>1) Pick up the handset and press <b>(TALK)</b>.</li><li>2) Listen for the dial tone.</li><li>3) Press <b>(RDL/P)</b>.</li></ol>	<ol style="list-style-type: none"><li>1) Press <b>(TALK)</b>.</li><li>2) Listen for the dial tone.</li><li>3) Press <b>(RDL/P)</b>.</li></ol>

## OUT OF RANGE

During a call, as you begin to move too far from the base unit, the noise increases. Then, you should move closer to the base unit. If you travel out-of-range, your call terminates. (See page 17 “Interference or static”)

## CALL WAITING

To use this feature, you must subscribe to the Call Waiting Service.

**1** When you hear a call-waiting tone during your conversation on the phone, simply press **(FLASH)**.

**2** To return to the first caller, press **(FLASH)** again.

**NOTE:**

**Pressing **(FLASH)** without receiving a Call Waiting signal may disconnect the current caller.**

## HANDSET EARPIECE VOLUME SETTING

To adjust the earpiece volume, press **(VOL/RING)** during a call.

## HANDSET RINGER VOLUME SETTING

To adjust the ringer volume, press **(VOL/RING)** during standby mode.

**NOTE:**

**When the handset is on the base, the handset ringer volume is disabled.**



# BASIC OPERATION

## BASE SPEAKER VOLUME SETTING

To adjust the base unit speaker volume, press **VOLUME+** or **VOLUME-**.

## MUTE

To mute a conversation, press **MUTE** during a conversation.

To resume normal conversation, press **TALK** or **MUTE**.

## TONE/ENTERING A PAUSE

To	Do this
To temporarily switch to tone dial (When the handset is set to pulse mode)	Press <b>TONE/*</b> . The following numbers will be sent as tone dialing (See page 14).
To enter a pause within the dialing sequence	Press <b>RDL/P</b> (See page 19).

## INTERFERENCE OR STATIC

If you hear noise during a call, press **CH** to select another channel. The TALK/BATT LOW LED blinks while changing a channel.


## PAGING THE HANDSET

To locate the handset while it is off the base, press **PAGE**. The handset beeps for 60 seconds.

To stop paging, press **PAGE** or any key at the handset, or return the handset to the base unit.

### NOTE:

*You cannot page the handset during a call.*

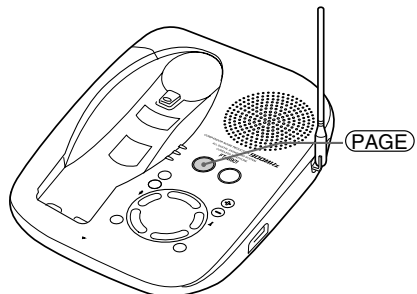


# MEMORY DIALING

You can store up to 10 telephone numbers in the memory.

## NOTES:

- Always press a button within 20 seconds or the phone will return to standby.
- If you press a wrong button, an error tone sounds and the handset returns to standby mode.
- If you receive an incoming call or a pager call from the base unit during the operation, the operation will be cancelled.

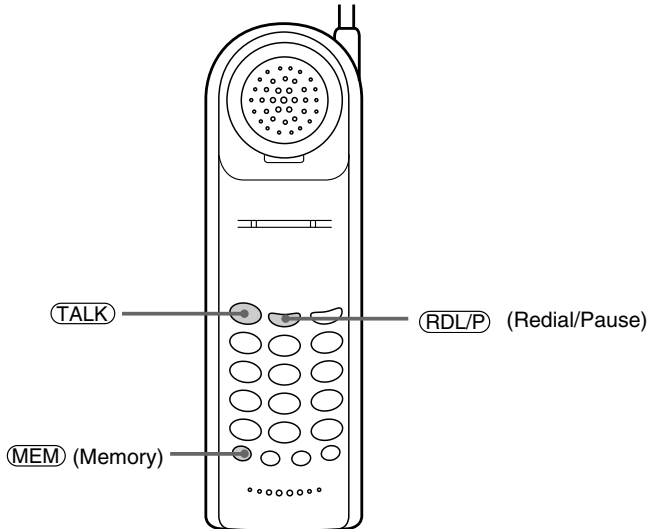

## STORING NUMBERS

You can store up to 16 digits including #, \*, and PAUSE as a telephone number.

- 1** Pick up the handset and press **MEM**.
- 2** Dial the telephone number you wish to store (up to 16 digits).
- 3** Press **MEM**.

# MEMORY DIALING

- 4 Enter the memory address (0 to 9) at which you wish to store the phone number stored in step 3.  
You will hear a long beep when the number is successfully stored.  
To store more telephone numbers, repeat steps 1 to 4.
- 5 Return the handset to the base unit.
- 6 Record the telephone numbers on the SPEED DIAL INDEX CARD, and place it on the back of the handset.

**EXAMPLE:** To store 9012345 in memory address 3

(MEM) (9) (0) (1) (2) (3) (4) (5) (MEM) (3)

## Replacing a telephone number

Just store the new number following the same steps in “STORING NUMBERS.”

The new number will replace the previously stored one.

## INSERTING A PAUSE IN MEMORY

Use (RDL/P) (redial/pause) to make an outgoing call through a PBX or long distance. Each time you press (RDL/P), a pause of about two seconds is inserted during the dialing sequence. If more than two seconds are needed, press (RDL/P) twice.

**EXAMPLE:** To store “0 PAUSE 1234567890” in memory address 4, press:

(MEM) (0) (RDL/P) (1) (2) (3) (4) (5) (6) (7) (8) (9) (0) (MEM) (4)

## DIALING A STORED NUMBER


- 1 Pick up the handset and press (TALK).
- 2 Press the (MEM).
- 3 Press the memory location number (0-9).  
The stored number will be dialed.

### NOTE:

*If you enter a memory address which does not have any stored number, error beeps sound.*

# USING THE MENU MODE

Menu mode allows you to set the following Answering System functions.

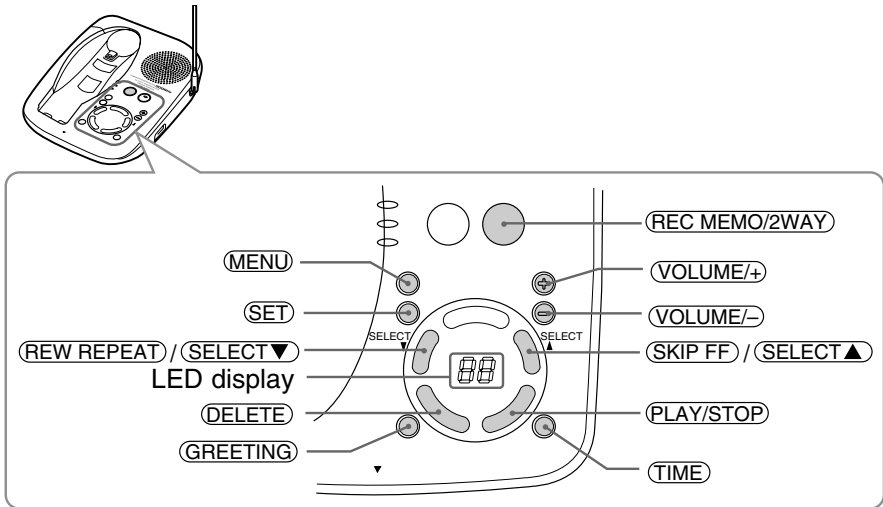

Menu No.	Function	
Menu1	Greeting message	--
Menu2	Clock	[0] - [59], [R], [P]
Menu3	Security code (PIN)	[00] - [99]
Menu4	Ringer volume	[H], [Lo], [OF]
Menu5	Ring time	[2], [4], [6], [t5]
Menu6	Recording time	[1], [4], [R]
Standby	Return to standby	[0] - [59]

## NOTES:

- If you make no entries within 20 seconds, or 20 seconds pass after a voice prompt/guidance or greeting, you will hear a long beep and the answering machine returns to standby. Note that time-out for clock setting is 2 minutes.
- Receiving a call or pressing talk will cancel the setting. If you press **(PLAY/STOP)**, the setting is canceled and returns to standby.
- You can scroll to the next menu option by pressing **(MENU)**.
- You can use **(VOLUME+)** or **(VOLUME-)** to adjust the announcement volume level during voice prompt/guidance.

# USING THE MENU MODE

## RECORDING THE GREETING MESSAGE

You can record a personalized greeting message (up to 30 seconds) or use the pre-recorded message. When a call is received, the answering machine answers the call and plays the greeting message.

- 1** Press **(MENU)** once.  
You hear the pre-recorded message or current greeting message.
- 2** Press **(REC MEMO/2WAY)** and you will hear the guidance.  
Start to record your message.  
  
For example:  
“I can not come to the phone right now. Please leave a message after the tone”.
- 3** To finish recording your message, press **(REC MEMO/2WAY)** or **(PLAY/STOP)**.  
You hear a long beep and your greeting plays back.

### NOTE:

*You can delete your greeting message by pressing **(DELETE)** after step 1.*

## CHANGING THE GREETING MESSAGE

You can change between the pre-recorded greeting message and your own recorded greeting message.

- 1** Press **(GREETING)**.  
The current greeting message will be played.
- 2** Press **(SELECT▲)** or **(SELECT▼)** to change to the other.
- 3** Press **(PLAY/STOP)** to exit the system.

# USING THE MENU MODE

## SETTING THE CLOCK

During play back, the answering machine announces the day and time that each message was recorded.

- 1** Press **(MENU)** twice.  
The system announces the current time.
- 2** Press **(SET)**.  
You hear the current day and the LED display shows the numbers [ 0 ] through [ 6 ].
- 3** Press **(SELECT▲)** or **(SELECT▼)** until the correct day is announced.
- 4** Press **(SET)**.
- 5** Press **(SELECT▲)** or **(SELECT▼)** until you hear the correct hour setting. The LED display shows the numbers [ 1 ] through [ 12 ] as each hour is announced.
- 6** Press **(SET)**.
- 7** Press **(SELECT▲)** or **(SELECT▼)** until you hear the correct minute setting. The LED display shows the numbers [ 00 ] through [ 59 ] as each minute is announced.
- 8** Press **(SET)**.
- 9** Press **(SELECT▲)** or **(SELECT▼)** until you hear AM or PM.  
The LED display shows [ A ] or [ P ].
- 10** Press **(SET)**.  
The answering machine announces the time that you have set.

### NOTE:

- You can hear the time currently set by pressing **(TIME)**.
- If you do not complete the setting procedure within 2 minutes, the setting procedure is cancelled.

# USING THE MENU MODE

## SETTING THE SECURITY CODE (PIN)

To access your answering machine when you are away from home, you need to identify yourself with a security code or Personal Identification Number (PIN). You can select any two digit number between 00 and 99 as your security code (PIN).

- 1** Press **(MENU)** three times.  
You hear the current setting, and the LED display shows the current security code (PIN).
- 2** Press **(SET)** to change the security code (PIN).  
The system announces the current security code (PIN).
- 3** Press **(SELECT▲)** or **(SELECT▼)** until the desired number appears.
- 4** Press **(SET)** to set the security code (PIN).  
The answering machine announces the new security code (PIN).

## SETTING THE BASE RINGER VOLUME

Select one of three ringer volume settings (*H* : High, *L* : Low, *OFF* : off).

- 1** Press **(MENU)** four times.  
You hear the current ringer volume, and the LED display shows the ringer volume.
- 2** Press **(SET)** .
- 3** Press **(SELECT▲)** or **(SELECT▼)** until the desired ringer volume appears (*H* : High, *L* : Low, *OFF* : off).
- 4** Press **(SET)** to set the ringer volume.  
The system announces the ringer volume that you have set.

### NOTE:

*If the base ringer is set to off, and the handset is on the base, both the base and handset ringers are disabled.*

# USING MENU MODE

## SETTING THE NUMBER OF RINGS

Select one of four ring time setting ( 2 : 2rings, 4 : 4rings, 6 :6rings, 5 : Toll Saver).

- 1 Press **MENU** five times.  
The current ring time is displayed on the LED display.
- 2 Press **SET** to change the ring time.
- 3 Press **SELECT▲** or **SELECT▼** or until the desired ring time appears ( 2 : 2rings, 4 : 4rings, 6 :6rings, 5 : Toll Saver).
- 4 Press **SET** to set the new ring time.  
The answering machine announces the ring time that you have set.

TS (TOLL SAVER MODE): The phone answers at the second ring when there are new messages, and the fourth ring when there are no new messages.

When you check the message from the outside phone, hang up if you hear the third ring to save the toll charge.

## SETTING THE RECORDING TIME


Select one of two maximum recording times or Announce Only ( 1 : 1 minute, 4 : 4 minutes, R : Announce only).

- 1 Press **MENU** six times.  
The LED display shows the current recording time.
- 2 Press **SET** to change the recording time.
- 3 Press **SELECT▲** or **SELECT▼** until the desired time appears ( 1 : 1 minute, 4 : 4 minutes, R : Announce only).
- 4 Press **SET** to set the new recording time.  
The system announces the recording time that you have set.

A (Announce Only): If you set the recording time to A, the selected greeting message will be announced and no incoming message will be accepted. The LED display shows " R ".



# USING THE ANSWERING MACHINE

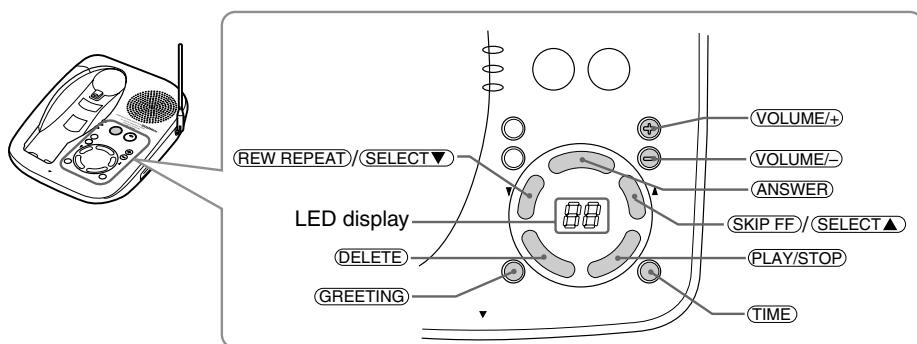

## TURNING THE ANSWERING MACHINE ON & OFF

Press **(ANSWER)** to turn the answering machine on. The ANSWER LED will light, and the number of messages appears on the LED display. The greeting message will be played and you hear a long beep.

To turn the answering machine off, press **(ANSWER)**. The LED display turns off.

### NOTE:

*If the message storage area is full, the LED display shows "FL" and the system announces "No remaining time" after the greeting message. You should delete messages (see page 27). Otherwise, the system cannot record any new messages.*

## CHECKING AND SWITCHING GREETING MESSAGE

You can check the message and switch from the Pre-recorded message to the user greeting message.

- 1** Press **(GREETING)**.  
The current greeting message will be played.
- 2** Press **(SELECT▲)** or **(SELECT▼)** to switch the greeting message, and the greeting message will be announced.
- 3** Press **(PLAY/STOP)** to exit the system.

# USING THE ANSWERING MACHINE

## CHECKING CLOCK SETTING

You can check the time (day, hour, minute, AM, and PM) by using the Time stamp.

To check the time, press **(TIME)**. The time will be announced.

## PLAYING RECORDED MESSAGES

The display shows the total number of recorded messages. If new messages have been recorded, the number blinks.

To listen to the messages, press **(PLAY/STOP)**. Messages will be played in the order they were received. During playback, see the table below for more operation.

To playback the message	Press <b>(PLAY/STOP)</b> .
To repeat the previous message	Press <b>(REW REPEAT)</b> (within 2 seconds after the beginning of message).
To repeat the current message	Press <b>(REW REPEAT)</b> (after 2 seconds after the beginning of message).
To skip the message	Press <b>(SKIP FF)</b> .
To rewind the message in double speed.	Press and hold <b>(REW REPEAT)</b> .
To play back the message in double speed	Press and hold <b>(SKIP FF)</b> .
To delete a message	Press <b>(DELETE)</b> during playback of the message you want to delete.
To stop playback	Press <b>(PLAY/STOP)</b> .
To delete all messages	Finish the playback of all messages. Then, press and hold <b>(DELETE)</b> till a beep sounds.
To adjust the speaker volume (0-9)	Press <b>(VOLUME+)</b> or <b>(VOLUME-)</b> repeatedly.

# USING THE ANSWERING MACHINE

## DELETING RECORDED MESSAGES

### To delete all messages:

Press and hold **(DELETE)** till a beep sounds after playback of all messages.

If there are messages that you have not listened to, an error tone sounds and the messages will not be deleted.

### To delete individual messages:

While playing back the message you want to delete, press **(DELETE)**. The message is deleted and the next message will be played.

**NOTE:** *To maintain maximum record time, it is a good idea to delete the old messages.*

## SCREENING INCOMING CALLS

You can screen calls when the answering machine is on.

- 1** After the answering machine answers, the base speaker lets you hear the caller as the machine records the message.
- 2** To answer the call immediately, simply pick up the handset or press **(TALK)** if the handset is away from the base. The answering machine will disconnect automatically.

**NOTE:** *If the speaker volume is set to 0, you can not use the call screening feature.*

# USING THE ANSWERING MACHINE

## LEAVING A MEMO MESSAGE

You can use the base unit to record a memo (up to 10 minutes), as a reminder to yourself or as a message for someone else in the household. A memo is stored and played back like any other incoming message, and the LED display will blink to indicate that a message has been received.

- 1** Press and hold **(REC MEMO/2WAY)** till a beep sounds. You hear “Record your message after the tone” and a long beep.
- 2** Begin speaking close to the microphone.
- 3** When you finish recording, press **(REC MEMO/2WAY)** or **(PLAY/STOP)**.

## RECORDING A PHONE CONVERSATION (2 WAY REC)

You can record a telephone conversation that is already in progress with the handset (up to 10 minutes). The conversation is stored and played back like an incoming message.

- 1** During a call with the handset, press and hold **(REC MEMO/2WAY)** till a beep sounds. Recording starts and both parties hear the intermittent beeps.
- 2** To stop recording, press **(REC MEMO/2WAY)** or **(PLAY/STOP)**. You hear a long beep.

**NOTE:** When recording a conversation, all handset keys, except **(FLASH)**, are disabled. Stop recording if you need to use any other handset keys.

# USING THE ANSWERING MACHINE

## CALLING IN FROM A REMOTE LOCATION

You can retrieve messages or change answering machine settings by calling your phone from a touch-tone phone. Even if the answering machine has been left off, you can still access it by turning it on first.

- 1 IF THE ANSWERING MACHINE IS OFF:**  
Let the phone ring at least 10 times. The line will connect and you will hear several short beeps. Press **#** and enter your security code (PIN).  
  
IF THE ANSWERING MACHINE IS ON:  
After playing greeting message, press **#** and enter your security code (PIN).
- 2** The answering machine announces the number of new and old messages. The unit automatically starts playing the Help guidance.
- 3** Press **#** and the appropriate number button that corresponds to the operation you want (see TABLE OF COMMANDS on next page).
- 4** When you have finished, press **#** and **5** or hang up to exit the system.

### NOTES:

- *When entering your security code (PIN), the second digit must be entered within 2 seconds after the first one.*
- *If you enter a wrong security code (PIN) 3 times, the line will be disconnected.*
- *Enter the command within 15 seconds while you hear intermittent beeps. Otherwise, the line is disconnected.*
- *When you call your phone while the message storage area is full, you will hear several short beeps after the 10th ring. Enter **#** and your security code (PIN), then you can continue to enter the commands.*
- *During operation from a remote location, [ r ] appears on the LED display.*

# USING THE ANSWERING MACHINE

## TABLE OF COMMANDS

OPERATION	Press	Remarks
To repeat an incoming message; (during playback)	# ①	Enter the command within 4 seconds after the beginning of the message to repeat the previous message, and after 4 seconds to repeat the current message.
To playback an incoming message (up to 4 minutes)	# ②	For longer playback, press # ② at the end of the message.
To skip to the next message (during playback)	# ③	
To delete individual messages (during playback)	# ④	
To stop operation	# ⑤	
To turn the answering system on	# ⑥	
To record a memo message (up to 4 minutes) To stop recording	# ⑦ # ⑤ or # ⑦	After you finish recording a memo message, press # ⑤ or # ⑦.
To record your greeting message To stop recording	# ⑧ # ⑤ or # ⑧	After you finish recording your greeting message, press # ⑤ or # ⑧.
To turn the answering system off	# ⑨	
To play Help Guidance	# ⑩	

For your handy reference guide, cut out the remote operation cards on page 37.

# TROUBLESHOOTING

Should any problem occur with the unit, use the following simple tests to determine whether or not servicing is required.

PROBLEM	SOLUTION
The handset battery pack does not charge.	<ul style="list-style-type: none"> <li>The charging contacts of the handset and base are not clean. → Clean them with a dry cloth.</li> </ul>
	<ul style="list-style-type: none"> <li>The battery is not connected with correct polarity. → Install the battery pack correctly.</li> </ul>
	<ul style="list-style-type: none"> <li>The battery is several years old. → Replace with a new battery.</li> </ul>
Battery pack becomes low quickly.	<ul style="list-style-type: none"> <li>The battery was not fully charged at the initial charging. → Charge the battery for 12 to 16 hours without any interruption.</li> </ul>
	<ul style="list-style-type: none"> <li>The battery is several years old. → Replace with a new battery.</li> </ul>
Can not make or receive calls Can not hear dial tone.	<ul style="list-style-type: none"> <li>The AC adaptor of the base unit is disconnected. → Plug the AC adaptor into the base unit and the AC 120V outlet.</li> </ul>
	<ul style="list-style-type: none"> <li>The battery is low. → Place the handset on the base unit to recharge.</li> </ul>
	<ul style="list-style-type: none"> <li>Telephone line cord is disconnected. → Check both ends of the telephone jack.</li> </ul>
	<ul style="list-style-type: none"> <li>The previous call was not disconnected. → Press <b>(TALK)</b> to disconnect the line.</li> </ul>
	<ul style="list-style-type: none"> <li>Trouble with the telephone line. → Check an extension line.</li> </ul>
	<ul style="list-style-type: none"> <li>Outlet used is controlled by a wall switch in its OFF position. → Relocate it to another outlet.</li> </ul>
	<ul style="list-style-type: none"> <li>The handset is too far from the base unit. → Bring the handset near the base unit.</li> </ul>
	<ul style="list-style-type: none"> <li>Dial setting needs to be changed. → Press and hold <b>(FLASH)</b> then choose the appropriate setting.</li> </ul>
Low battery blinks on the display.	<ul style="list-style-type: none"> <li>The battery is low. → Return the handset to the base.</li> </ul>
The handset does not ring or receive a page.	<ul style="list-style-type: none"> <li>The handset is located away from the base or the battery has been discharged. → Return the handset to charge when finished your call.</li> </ul>
	<ul style="list-style-type: none"> <li>The digital security code is changed. → Remove the handset from the base unit and press and hold <b>(PAGE)</b> . While the handset is emitting, return the handset to the base unit.</li> </ul>
	<ul style="list-style-type: none"> <li>The battery is low. → Place the handset on the base unit to recharge.</li> </ul>

# TROUBLESHOOTING

PROBLEM	SOLUTION
The handset does not ring when it is on the base.	<ul style="list-style-type: none"> <li>• The base Ringer Volume setting is in the OFF position. → Set the Ringer Volume to Hi or Lo.</li> </ul>
	<ul style="list-style-type: none"> <li>• The charging contacts of the handset and the base are not clean. → Clean them with a dry cloth.</li> </ul>
	<ul style="list-style-type: none"> <li>• The battery is several years old. → Replace with a new battery.</li> </ul>
CHARGE LED will not light when the handset is placed on the base.	<ul style="list-style-type: none"> <li>• The charging contacts of the handset and the base are not clean. → Clean them with a dry cloth.</li> </ul>
	<ul style="list-style-type: none"> <li>• The AC adaptor of the base unit is disconnected. → Plug the AC adaptor firmly into the base unit and AC 120V outlet.</li> </ul>
	<ul style="list-style-type: none"> <li>• The handset is not on the base. → Place the handset on the base properly.</li> </ul>
Noise or interference.	<ul style="list-style-type: none"> <li>• The handset is too far from the base unit. → Bring the handset near the base unit.</li> </ul>
	<ul style="list-style-type: none"> <li>• The battery is low. → Place the handset on the base unit to recharge.</li> </ul>
	<ul style="list-style-type: none"> <li>• The base unit is located in a place with high interference. → Relocate to another outlet.</li> </ul>
	<ul style="list-style-type: none"> <li>• Interference from TV, Microwave oven, computer and electrical appliances. → Press <b>CH</b> to select a clearer channel, or relocate the base unit.</li> </ul>
	<ul style="list-style-type: none"> <li>• Excessive line noise. → Check with another telephone.</li> </ul>
	<ul style="list-style-type: none"> <li>• The volume control is set too high. → Reduce volume to a lower setting.</li> </ul>
	<ul style="list-style-type: none"> <li>• The base antenna is not in a vertical position. → Lift the antenna to a vertical position.</li> </ul>
The unit does not operate properly.	<ul style="list-style-type: none"> <li>• The phone needs to be reset. → Disconnect the AC adaptor and reconnect it within few seconds.</li> </ul>
When the handset is returned to the base unit with the volume level set at High, a momentary squeal or howling sound may sometimes be heard.	<ul style="list-style-type: none"> <li>• This is normal. → It may be prevented by changing the volume setting to Medium or Low before returning the handset to the base unit.</li> </ul>



# TROUBLESHOOTING

PROBLEM	SOLUTION
The answering machine does not answer the call.	<ul style="list-style-type: none"> <li>• The recording capacity is full. → Delete some or all of the recorded messages.</li> </ul>
Answering machine does not play.	<ul style="list-style-type: none"> <li>• No message is recorded. → This is normal.</li> </ul>
The messages are not recorded/incomplete.	<ul style="list-style-type: none"> <li>• The message was too long or too short. → The message should not be longer than the recording time (1 or 4 minutes), or shorter than 2 seconds.</li> </ul>
	<ul style="list-style-type: none"> <li>• The recording capacity became full. → Delete recorded messages.</li> </ul>
	<ul style="list-style-type: none"> <li>• The phone was answered during recording.</li> </ul>
	<ul style="list-style-type: none"> <li>• The recording time is set to A (announce only). → Set the REC TIME to 1 or 4 minute setting.</li> </ul>
The answering machine does not respond to remote operation.	<ul style="list-style-type: none"> <li>• You are not calling from a touch tone phone. → Call from a touch tone phone.</li> </ul>
	<ul style="list-style-type: none"> <li>• The security code (PIN) you entered was wrong. → Make sure you entered the correct security code (PIN). → If the answering machine is turned off, let the phone ring at least 10 times. The line will connect and you will hear several short beeps. Press <b>#</b> and enter your security code (PIN).</li> </ul>
The LED display shows "A" (Announce only).	<ul style="list-style-type: none"> <li>• This is normal. The recording time is set to A (announce only). → Set the REC TIME to 1 or 4 minute setting.</li> </ul>
Can not delete messages.	<ul style="list-style-type: none"> <li>• There is a message that has not been played. → Play the new message, then delete messages.</li> </ul>

# WARRANTY/SERVICE

---

## SERVICE REQUIREMENTS

If the cordless telephone should malfunction, or need changes or modifications, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered with the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to units either in or out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.

It is the responsibility of users requiring service to report the need for service to the Toshiba dealer.

## IMPORTANT INSTRUCTIONS TO USERS

Your telephone equipment has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number."

It is most unlikely, but...If your telephone equipment should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your telephone equipment (or require changes in the telephone equipment or its connection), the phone company will notify you in writing, so you have the chance to take whatever action necessary to ensure uninterrupted phone service.

## FCC REQUIREMENTS

You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your telephone equipment to coin telephone services. Check with your local telephone company if you wish to connect your telephone equipment to a party line service. Some party line services require a special adaptor or modification to your telephone.

It should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.


# QUICK REFERENCE GUIDE

**TOSHIBA**

**CORDLESS TELEPHONE  
DIGITAL ANSWERING SYSTEM  
FT-8901A**


Read the Owner's Manual for details.

## SETTING UP THE BASE UNIT

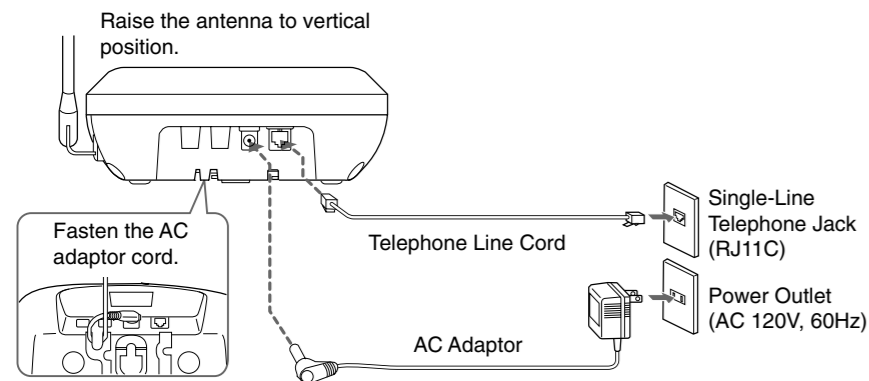

**NOTE:** Plug the AC adaptor firmly into the base unit and the AC 120V outlet.


## CHARGING THE BATTERY PACK

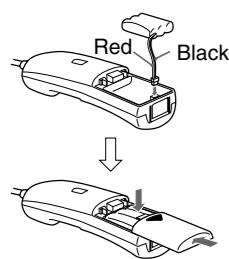

- 1 Remove the battery cover by sliding it down.
- 2 Plug the battery pack cord into its socket, observing the correct polarity.
- 3 Place the battery pack. Then close the battery compartment cover.
- 4 Place the handset on the base unit. You can place the handset with the dialpad facing up or down.

### IMPORTANT

Charge the battery pack for at least 12 to 16 hours.

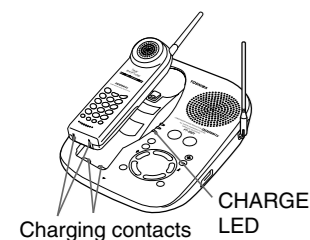

## SETTING / USING THE PHONE

### Setting The Dial Mode

Depending on your dialing system, set the mode as follows:

- 1 With the phone in the Standby mode, press and hold **FLASH** until you hear a confirmation tone.
- 2 To set the dial mode for pulse dialing, press **#**.  
Or to set the dial mode for tone dialing press **TONE/\***.  
A confirmatin tone sounds to indicate the setting is complete.

### Adjusting Volume

#### Handset Earpiece and Ringer Volume

To adjust the earpiece volume, press **VOL/RING** during a call.  
And to adjust the ringer volume, press **VOL/RING** during standby mode.

#### Base Speaker Volume


Press **VOLUME+** or **VOLUME-**.

### Making a Call


- 1 Press **TALK**.
- 2 Dial the phone number.
- 3 Press **TALK** to hang up.

### Answering a Call

- 1 Pick up the handset.  
or  
Press any button.
- 2 Press **TALK**, or return the handset to the base to hang up.

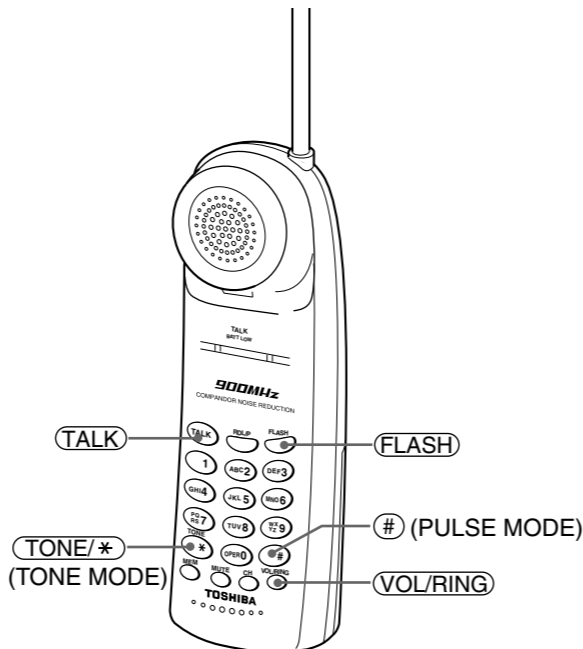

## ANSWERING MACHINE

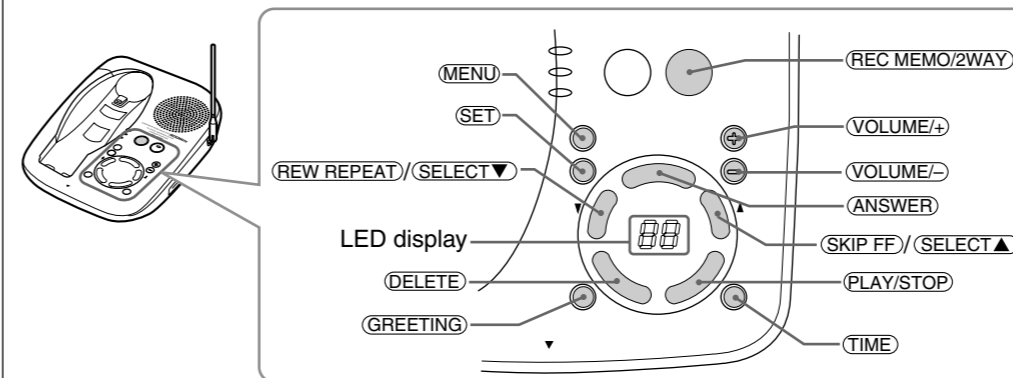

### Turning the Answering Machine ON/OFF

Press **ANSWER** to turn the answering machine on or off.

Every time you press **ANSWER**, the LED display turns on or off.

### Setting the Clock

- 1 Press **MENU** twice, then press **SET**.
- 2 Select the day of the week by pressing **SELECT▲** or **SELECT▼**.  
When the correct day is announced, press **SET**.
- 3 Select the hour by pressing **SELECT▲** or **SELECT▼**.  
When the correct hour is announced, press **SET**.
- 4 Select the minute by pressing **SELECT▲** or **SELECT▼**.  
When the correct minute is announced, press **SET**.
- 5 Select AM/PM by pressing **SELECT▲** or **SELECT▼**.  
When AM or PM is announced, press **SET**.

### Recording and Setting the Greeting Message

**To record the greeting message:**

- 1 Press **MENU** once, then press **REC MEMO/2WAY**.
- 2 Start to record your message after the guidance.
- 3 Press **REC MEMO/2WAY** or **PLAY/STOP** to finish recording.

**To change the greeting message:**

- 1 Press **GREETING**.
- 2 Press **SELECT▲** or **SELECT▼** to change to other.
- 3 Press **PLAY/STOP** to exit the system.

### Setting the Security code (PIN)

- 1 Press **MENU** three times.
- 2 Press **SET** to change the security code (PIN).
- 3 Press **SELECT▲** or **SELECT▼** until the desired number appears.
- 4 Press **SET** to set the security code (PIN).

### Playing Recorded Messages

To playback the message	Press <b>PLAY/STOP</b> .
To repeat the message	Press <b>REW REPEAT</b> .
To skip the message	Press <b>SKIP FF</b> .
To rewind the message in double speed	Press and hold <b>REW REPEAT</b> .
To playback the message in double speed	Press and hold <b>SKIP FF</b> .
To delete a message	Press <b>DELETE</b> during playback of the message you want to delete.
To stop playback	Press <b>PLAY/STOP</b> .
To delete all messages	Finish the playback of all messages. Then, press and hold <b>DELETE</b> till a beep sounds.
To adjust the speaker volume (0-9)	Press <b>VOLUME+</b> or <b>VOLUME-</b> repeatedly.


## REFERENCIA RÁPIDA

**TOSHIBA**

CORDLESS TELEPHONE  
DIGITAL ANSWERING SYSTEM  
FT-8901A


Para los detalles, lea el manual de instrucciones (en inglés).

## INSTALACIÓN DE LA UNIDAD BASE

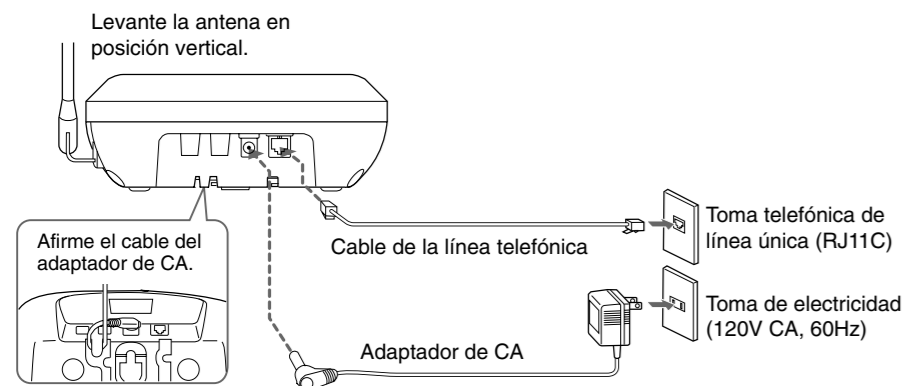

**NOTA:** Enchufe firmemente el adaptador de CA en la unidad base y la toma de 120V CA.

## CARGA DE LA BATERÍA

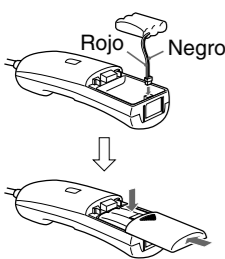

- 1 Quite la tapa del compartimento de la batería deslizándola hacia abajo.
- 2 Conecte el cable de la batería en el enchufe, observando la polaridad correcta.
- 3 Coloque la batería. Luego cierre la tapa del compartimento de la batería.
- 4 Coloque el microteléfono sobre la unidad base. Usted podrá colocar el microteléfono con el teclado de marcación encarado hacia arriba o abajo.

### IMPORTANTE

Cargue la batería durante 12 a 16 horas como mínimo.

CONTACTOS DE CARGA  
LED

## AJUSTE/UTILIZACIÓN DEL TELÉFONO

### Ajuste del modo de marcación

Según su sistema de marcación, ajuste el modo de la manera siguiente:

- 1 Con el teléfono en el modo de espera, presione **FLASH** hasta que se oiga un tono de confirmación.
- 2 Para ajustar el modo de marcación para la marcación por pulso, presione **#**.  
O para ajustar el modo de marcación para la marcación por tono presione **TONE/\***.

Sonará un tono de confirmación para indicar que el ajuste se ha completado.

### Ajuste del volumen

#### Volumen del auricular del microteléfono y el generador de llamada

Para ajustar el volumen del auricular, presione **VOL/RING** durante una llamada. Y para ajustar el volumen del generador de llamada, presione **VOL/RING** durante el modo de espera.

#### Volumen del altavoz de la unidad base


Presione **VOLUME+** o **VOLUME-**.

### Realización de una llamada


- 1 Presione **TALK**.
- 2 Marque el número de teléfono.
- 3 Presione **TALK** para cortar.

### Contestación de una llamada

- 1 Levante el microteléfono.  
o  
Presione cualquier tecla.
- 2 Presione **TALK**, o coloque el microteléfono sobre la unidad base para cortar.

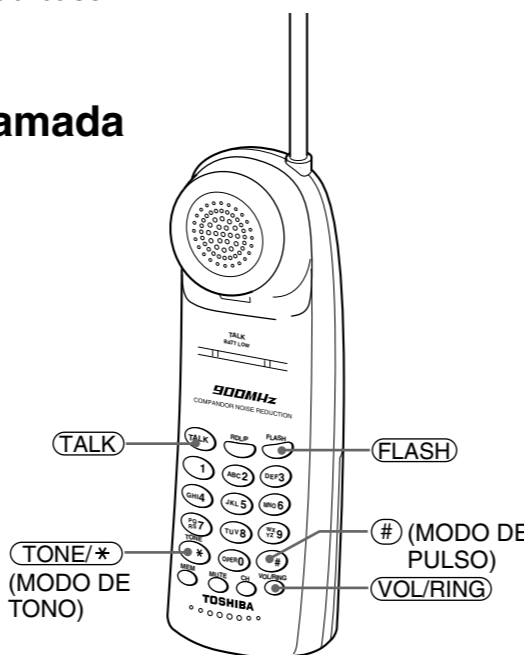

## CONTESTADOR DE LLAMADAS

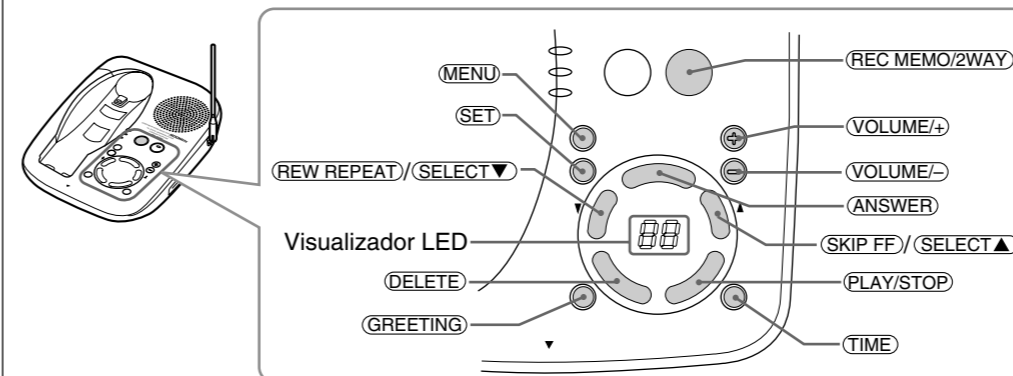

### Activación/desactivación del contestador de llamadas

Presione **ANSWER** para activar o desactivar el contestador de llamadas.

Cada vez que presione **ANSWER**, el visualizador LED se encenderá o apagará.

### Ajuste del reloj

- 1 Presione dos veces **MENU**, después presione **SET**.
- 2 Seleccione el día de la semana presionando **SELECT▲** o **SELECT▼**.  
Cuando se anuncie el día correcto, presione **SET**.
- 3 Seleccione la hora presionando **SELECT▲** o **SELECT▼**.  
Cuando se anuncie la hora correcta, presione **SET**.
- 4 Seleccione los minutos presionando **SELECT▲** o **SELECT▼**.  
Cuando se anuncien los minutos correctos, presione **SET**.
- 5 Seleccione AM/PM presionando **SELECT▲** o **SELECT▼**.  
Cuando se anuncie AM o PM, presione **SET**.

### Grabación y ajuste de un mensaje de contestación

Para grabar un mensaje de contestación:

- 1 Presione una vez **MENU**, después presione **REC MEMO/2WAY**.
- 2 Grabe su mensaje de contestación después de la guía.
- 3 Presione **REC MEMO/2WAY** o **PLAY/STOP** para terminar la grabación.

Para cambiar el mensaje de contestación:

- 1 Presione **GREETING**.
- 2 Presione **SELECT▲** o **SELECT▼** para cambiar a otro mensaje.
- 3 Presione **PLAY/STOP** para salir del sistema.

### Ajuste del código de seguridad (PIN)

- 1 Presione tres veces **MENU**.
- 2 Presione **SET** para cambiar el código de seguridad (PIN).
- 3 Presione **SELECT▲** o **SELECT▼** hasta que aparezca el número deseado.
- 4 Presione **SET** para ajustar el código de seguridad (PIN).

### Reproducción de los mensajes grabados

Para reproducir el mensaje	Presione <b>PLAY/STOP</b> .
Para repetir el mensaje	Presione <b>REW REPEAT</b> .
Para saltar el mensaje	Presione <b>SKIP FF</b> .
Para rebobinar el mensaje a velocidad doble	Mantenga presionada <b>REW REPEAT</b> .
Para reproducir el mensaje a velocidad doble	Mantenga presionada <b>SKIP FF</b> .
Para borrar un mensaje	Presione <b>DELETE</b> durante la reproducción del mensaje que desee borrar.
Para detener la reproducción	Presione <b>PLAY/STOP</b> .
Para borrar todos los mensajes	Termine de reproducir todos los mensajes. Después, mantenga presionada <b>DELETE</b> hasta que suene un pitido.
Para ajustar el volumen del altavoz (0-9)	Presione repetidamente <b>VOLUME+</b> o <b>VOLUME-</b> .

Para más instrucciones y ejemplos detallados, consulte el manual de instrucciones.

# WARRANTY/SERVICE

## TELEPHONE/TELEPHONE ANSWER MACHINE LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii, Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

### Limited One(1) Year Warranty of Labor and parts

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one(1) year after the date of original retail purchase. During this period, TACP/THI will repair or replace your defective product with a new or refurbished unit at our option.

### Owner's Manual

You should read the owner's manual thoroughly before operating this product.

### Your Responsibility

The above warranties are subject to the following conditions.

- (1) You must provide a copy of your bill of sale or other proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated within the USA or Puerto Rico.

(3) Within the continental U.S.A., if you should find a defective product within the warranty period please call 1-877-644-7373.

(4) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you, or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

(5) Physically damaged products are not acceptable for repair or exchange within or after the warranty period expires.

### How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows;

**In The Continental United States contact:**    **In Hawaii contact:**

**[www.toshiba.com/tacp](http://www.toshiba.com/tacp)**

Toshiba Hawaii, Inc.  
327 Kamakee Street,  
Honolulu, HI 96814  
(808)-591-8377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP/THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP/THI arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety(90) days from the date you discover, or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

# REMOTE OPERATION CARDS

CUT

## TOSHIBA

### REMOTE OPERATION OF FT-8901A

- A** Call your machine from touch tone phone. After your machine answers, enter # and security code (PIN) pressing each digit for at least 1 second. If you enter # and PIN correctly, your machine sounds invitation tone after the announcement. Now enter the command (# and number) by pressing the keypad.
- B** To playback incoming and memo messages, press #2. To skip, press #3 during playback. To repeat, press #1 during playback. To delete, press #4 during playback.
- C** To record memo message, press #7. To record greeting message, press #8. To stop recording, press #5. To turn on the answer mode, press #6. To turn off the answer mode, press #9.
- D** To stop operation, press #5.

## TOSHIBA

### OPERACIONES POR CONTROL REMOTO FT-8901A

- A** Llame a su teléfono desde un teléfono de teclado. Después que su teléfono conteste, introduzca # y el código de seguridad (PIN) presionando cada dígito durante 1 segundo como mínimo. Si introduce correctamente # y el PIN, su teléfono emitirá un tono de invitación después del anuncio. Luego introduzca el mandato (# y un número) presionando las teclas.
- B** Para reproducir los mensajes recibidos y los memorandos presione #2. Para saltar presione #3 durante la reproducción. Para repetir presione #1 durante la reproducción. Para borrar presione #4 durante la reproducción.
- C** Para grabar mensajes de memorando presione #7. Para grabar un mensaje de saludo presione #8. Para detener la grabación presione #5. Para activar o desactivar el modo de contestación presione #6. Para desactivar el modo de contestación presione #9.
- D** Para detener la operación presione #5.

# REMOTE OPERATION CARDS

CUT

**WHILE PLAYING THE OGM, KEY-IN (#) AND PIN**

MESSAGE REPEAT (#) 1	MESSAGE PLAYBACK (#) 2	MESSAGE SKIP (#) 3 (during playback)
MESSAGE DELETE (#) 4 (during playback)	RECORD STOP/ OPERATION STOP (#) 5	ANSWER ON (#) 6
MEMO RECORD (#) 7	GREETING RECORD (#) 8	ANSWER OFF (#) 9
	HELP GUIDANCE (#) 0	REMOTE ACCESS (#) PIN

**DURANTE LA REPRODUCCIÓN DEL MENSAJE DE CONTESTACIÓN, PRESIONE (#) Y PIN**

REPETICIÓN DE MENSAJE (#) 1	REPRODUCCIÓN DE MENSAJE (#) 2	SALTO DE MENSAJE (#) 3 (durante la reproducción)
BORRADO DE MENSAJE (#) 4 (durante la reproducción)	DETENCIÓN DE GRABACIÓN/OPERACIÓN (#) 5	ACTIVACIÓN DE CONTESTACIÓN (#) 6
GRABACIÓN DE MENSAJE DE MEMORANDO (#) 7	GRABACIÓN DE MENSAJE DE CONTESTACIÓN (#) 8	DESACTIVACIÓN DE CONTESTACIÓN (#) 9
	ASISTENCIA ANUNCIO (#) 0	ACCESO AL CONTROL REMOTO (#) PIN

**For technical assistance, purchase of accessories or service, please access [www.toshiba.com/tacp](http://www.toshiba.com/tacp).**

**IMPORTANT**

We suggest you record the following information and retain for your records along with your bill of sale or equipment document.

**Model no.** \_\_\_\_\_ **Serial no.** \_\_\_\_\_

**Purchase date** \_\_\_\_\_ **Dealer** \_\_\_\_\_

**Dealer address** \_\_\_\_\_

© 2001 TOSHIBA AMERICA CONSUMER PRODUCTS, INC.