GA-MF3

AMD Socket AM2 Processor Motherboard

User's Manual

Rev. 1001

12ME-MF3-1001R

* The WEEE marking on the product indicates this product must not be disposed of with user's other household waste and must be handed over to a designated collection point for the recycling of waste electrical and electronic equipment!!
* The WEEE marking applies only in European Union's member states.

Declaration of Conformity

We, Manufacturer/Importer
(full address)

G.B.T. Technology Trading GMbH
Ausschlager Weg 41, 1F 20537 Hamburg, Germany

declare that the product
(description of the apparatus, system, installation to which it refers)

Motherboard
GA-MF3

is in conformity with
(reference to the specification under which conformity is declared)
in accordance with 89/336 EEC-EMC Directive

☐ **EN 55011**	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM) high frequency equipment	☒ **EN 61000-3-2**	Disturbances in supply systems caused
		☒ **EN 61000-3-3**	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"
☐ **EN 55013**	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	☒ **EN 55024**	Information Technology equipment-Immunity characteristics-Limits and methods of measurement
☐ **EN 55014-1**	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances, portable tools and similar electrical apparatus	☐ **EN 50082-1**	Generic immunity standard Part 1: Residual, commercial and light industry
		☐ **EN 50082-2**	Generic immunity standard Part 2: Industrial environment
☐ **EN 55015**	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	☐ **EN 55014-2**	Immunity requirements for household appliances tools and similar apparatus
☐ **EN 55020**	Immunity from radio interference of broadcast receivers and associated equipment	☐ **EN 50091- 2**	EMC requirements for uninterruptible power systems (UPS)
☒ **EN 55022**	Limits and methods of measurement of radio disturbance characteristics of information technology equipment		
☐ **DIN VDE 0855** ☐ **part 10** ☐ **part 12**	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals		

☒ **CE marking** (EC conformity marking)

The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 73/23 EEC

☐ **EN 60065**	Safety requirements for mains operated electronic and related apparatus for household and similar general use	☐ **EN 60950**	Safety for information technology equipment including electrical business equipment
☐ **EN 60335**	Safety of household and similar electrical appliances	☐ **EN 50091-1**	General and Safety requirements for uninterruptible power systems (UPS)

Manufacturer/Importer

Signature : Timmy Huang

(Stamp) Date : Nov. 23, 2006 Name : Timmy Huang

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)

Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street
City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard

Model Number: GA-MF3

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109 (a),Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Nov. 23, 2006

Copyright

© 2006 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.
The trademarks mentioned in the manual are legally registered to their respective companies.

Notice

The written content provided with this product is the property of Gigabyte.
No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without Gigabyte's prior written permission. Specifications and features are subject to change without prior notice.

Product Manual Classification

In order to assist in the use of this product, Gigabyte has categorized the user manual in the following:

- For quick installation, please refer to the "Hardware Installation Guide" included with the product.
- For detailed product information and specifications, please carefully read the "Product User Manual".
- For detailed information related to Gigabyte's unique features, please go to the "Technology Guide" section on Gigabyte's website to read or download the information you need.

For more product details, please click onto Gigabyte's website at www.gigabyte.com.tw

Table of Contents

Item Checklist 6
Optional Accessories 6
GA-MF3 Motherboard Layout 7
Block Diagram 8

Chapter 1 Hardware Installation 9
1-1 Considerations Prior to Installation 9
1-2 Feature Summary 10
1-3 Installation of the CPU and CPU Cooler 12
1-3-1 Installation of the CPU 12
1-3-2 Installation of the CPU Cooler 13
1-4 Installation of Memory 14
1-5 Installation of Expansion Cards 16
1-6 I/O Back Panel Introduction 17
1-7 Connectors Introduction 18

Chapter 2 BIOS Setup 29
The Main Menu (For example: BIOS Ver. :D12) 30
2-1 Standard CMOS Features 32
2-2 Advanced BIOS Features 34
2-3 Integrated Peripherals 36
2-4 Power Management Setup 39
2-5 PnP/PCI Configurations 41
2-6 PC Health Status 42
2-7 MB Intelligent Tweaker(M.I.T.) 43
2-8 Load Optimized Defaults 44
2-9 Set Supervisor/User Password 44
2-10 Save & Exit Setup 45
2-11 Exit Without Saving 45

Chapter 3 Drivers Installation 47
3-1 Install Chipset Drivers 47
3-2 Software Application 48
3-3 Software Information 48
3-4 Hardware Information 49
3-5 Contact Us 49

Chapter 4 Appendix 51
4-1 Unique Software Utilities 51
4-1-1 EasyTune 5 Introduction 51
4-1-2 Xpress Recovery2 Introduction 52
4-1-3 Flash BIOS Method Introduction 54
4-1-4 Configuring SATA Hard Drive(s) 63
4-1-5 2 / 4 / 6 Channel Audio Function Introduction 73
4-2 Troubleshooting 79

Item Checklist

- ☑ IDE Cable x 1 & FDD Cable x 1
- ☑ SATA Cable x 1
- ☑ I/O Shield

* The items listed above are for reference only, and are subject to change without notice.

Optional Accessories

- 2 Ports USB 2.0 Cable (Part Number: 12CR1-1UB030-51/R)
- 4 Ports USB 2.0 Cable (Part Number: 12CR1-1UB030-21/R)
- S/PDIF In and Out Cable (Part Number: 12CR1-1SPINO-11/R)
- 6-Channel Audio Combo Kit (Part Number: 12CR1-1SPAUD-12)

GA-MF3 Motherboard Layout

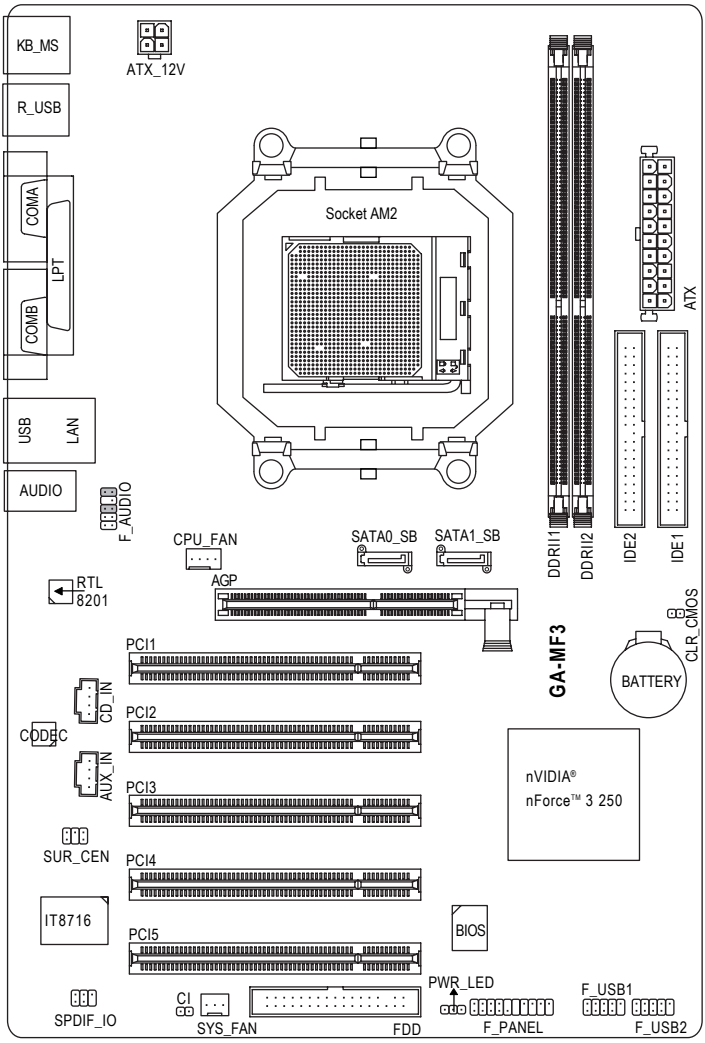

Block Diagram

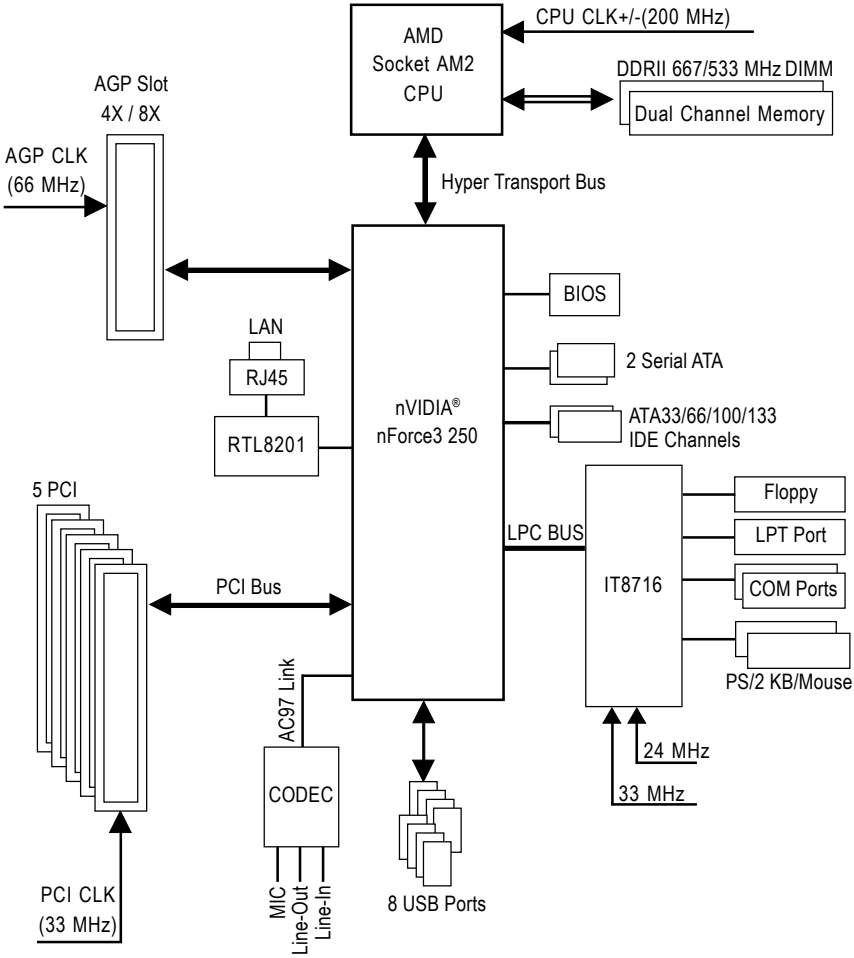

Chapter 1 Hardware Installation

1-1 Considerations Prior to Installation

Preparing Your Computer

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Thus, prior to installation, please follow the instructions below:

1. Please turn off the computer and unplug its power cord.
2. When handling the motherboard, avoid touching any metal leads or connectors.
3. It is best to wear an electrostatic discharge (ESD) cuff when handling electronic components (CPU, RAM).
4. Prior to installing the electronic components, please have these items on top of an antistatic pad or within a electrostatic shielding container.
5. Please verify that the power supply is switched off before unplugging the power supply connector from the motherboard.

Installation Notices

1. Prior to installation, please do not remove the stickers on the motherboard. These stickers are required for warranty validation.
2. Prior to the installation of the motherboard or any hardware, please first carefully read the information in the provided manual.
3. Before using the product, please verify that all cables and power connectors are connected.
4. To prevent damage to the motherboard, please do not allow screws to come in contact with the motherboard circuit or its components.
5. Please make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
6. Please do not place the computer system on an uneven surface.
7. Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
8. If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

Instances of Non-Warranty

1. Damage due to natural disaster, accident or human cause.
2. Damage as a result of violating the conditions recommended in the user manual.
3. Damage due to improper installation.
4. Damage due to use of uncertified components.
5. Damage due to use exceeding the permitted parameters.
6. Product determined to be an unofficial Gigabyte product.

1-2 Feature Summary

CPU	◆	Socket AM2 for AMD Athlon™ 64 FX / Athlon™ 64 X2 Dual-Core / Athlon™ 64 / Sempron™ processor
Front Side Bus	◆	1600 MHz
Chipset	◆	nVIDIA® nForce3 250
LAN	◆	Realtek RTL8201 phy (10/100 Mbit)
Audio	◆	Onboard Realtek ALC655 CODEC chip
	◆	Supports Jack Sensing function
	◆	Supports 2 / 4 / 6 channel audio (Note 1)
	◆	Supports S/PDIF In/Out connection
	◆	Supports CD In connection
	◆	Supports AUX In connection
Storage	◆	nVIDIA® nForce3 250 chipset
		- 1 FDD connector, allowing connection of 2 FDD devices
		- 2 IDE connectors with UDMA 33/ATA 66/ATA 100/ATA 133 support, allowing connection of 4 IDE devices
		- 2 SATA connectors, allowing connection of 2 SATA devices
		- Supports data striping (RAID 0) and mirroring (RAID 1) for Serial ATA
O.S Support	◆	Microsoft Windows® 2000/XP
Memory	◆	2 DDRII DIMM memory slots (supports up to 4 GB memory)
	◆	Supports dual channel DDRII 667/533 DIMMs
	◆	Supports 1.8V DDRII DIMMs
Expanstion Slots	◆	1 AGP slot
	◆	5 PCI slots
Internal Connectors	◆	1 24-pin ATX power connector
	◆	1 4-pin ATX 12V power connector
	◆	1 floppy connector
	◆	2 IDE connectors
	◆	2 SATA 1.5Gb/s connectors
	◆	1 CPU fan connector
	◆	1 system fan connector
	◆	1 front panel connector
	◆	1 front audio connector
	◆	1 CD In connector
	◆	1 S/PDIF In/Out connector
	◆	1 AUX In connector
	◆	1 surround center connector
	◆	2 USB 2.0/1.1 connectors for additional 4 USB 2.0/1.1 ports by cable
	◆	1 power LED connector
	◆	1 Chassis Intrusion connector

Rear Panel I/O	◆	1 PS/2 keyboard port
	◆	1 PS/2 mouse port
	◆	1 parallel port
	◆	2 serial port (COMA&COMB)
	◆	4 USB 2.0/1.1 ports
	◆	1 RJ-45 port
	◆	3 audio jacks (Line In / Line Out / MIC In)
I/O Control	◆	IT8716 chip
Hardware Monitor	◆	System voltage detection
	◆	CPU temperature detection
	◆	CPU / System fan speed detection
	◆	CPU warning temperature
	◆	CPU / System fan failure warning
	◆	Supports CPU Smart Fan function (Note 2)
BIOS	◆	1 4 Mbit flash ROM
	◆	Use of licensed AWARD BIOS
Additional Features	◆	Supports @BIOS
	◆	Supports Download Center
	◆	Supports Q-Flash
	◆	Supports EasyTune (Note 3)
	◆	Supports Xpress Install
	◆	Supports Xpress Recovery2
	◆	Supports Xpress BIOS Rescue
Bundle Software	◆	Norton Internet Security (OEM version)
Form Factor	◆	ATX form factor; 30.5cm x 20.4cm

(Note 1) You can use audio software to configure 2-/4-/6-channel audio functioning.
(Note 2) Whether the CPU Smart FAN Control function is supported will depend on the CPU you install.
(Note 3) EasyTune functions may vary depending on different motherboards.

1-3 Installation of the CPU and CPU Cooler

CAUTION

Before installing the CPU, please comply with the following conditions:

1. Please make sure that the motherboard supports the CPU.
2. Please take note of the pin 1 marking (the small triangle) on the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
3. Please add an even layer of heat paste between the CPU and CPU cooler.
4. Please make sure the CPU cooler is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

1-3-1 Installation of the CPU

Check the CPU pins to see that none are bent. Move the socket lever to the unlocked position as shown in Fig. 1 (90° to the plane of the motherboard) prior to inserting the CPU. The pin 1 location is designated on the CPU by a small triangle that corresponds to a triangle marking on the socket as shown in Fig. 2. Align the CPU to the socket and gently lower it into place. Do not force the CPU into the socket.

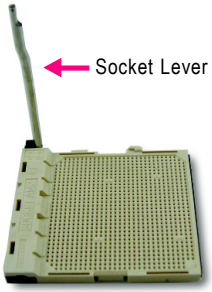

Fig.1
Position lever at a 90 degree angle.

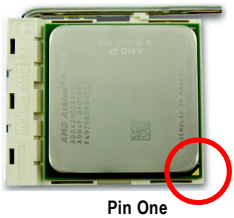

Fig.2
Pin 1 location on the socket and processor.
Gently place the CPU into position making sure that the CPU pins fit perfectly into their holes. Once the CPU is positioned into its socket, place one finger down on the middle of the CPU and gently press the metal lever back into its original position.

CAUTION

Please use extra care when installing the CPU. The CPU will not fit if positioned incorrectly. Rather than applying force, please change the positioning of the CPU.

1-3-2 Installation of the CPU Cooler

Fig.1
Before installing the CPU cooler, please first add an even layer of heat paste on the surface of the CPU. Install all the CPU cooler components (Please refer to the cooler manual for detailed installation instructions).

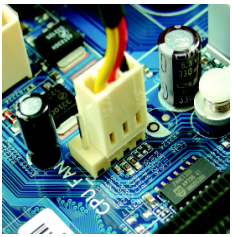

Fig.2
Please connect the CPU cooler power connector to the CPU_FAN connector located on the motherboard so that the CPU cooler can properly function to prevent CPU overheating.

NOTE

The CPU cooler may adhere to the CPU as a result of hardening of the heat paste. To prevent such an occurrence, it is suggested that either thermal tape rather than heat paste be used for heat dissipation or using extreme care when removing the CPU cooler.

1-4 Installation of Memory

CAUTION

Before installing the memory modules, please comply with the following conditions:

1. Please make sure that the memory used is supported by the motherboard. It is recommended that memory of similar capacity, specifications and brand be used.
2. Before installing or removing memory modules, please make sure that the computer power is switched off to prevent hardware damage.
3. Memory modules have a foolproof insertion design. A memory module can be installed in only one direction. If you are unable to insert the module, please switch the direction.

The motherboard supports DDRII memory modules, whereby BIOS will automatically detect memory capacity and specifications. Memory modules are designed so that they can be inserted only in one direction. The memory capacity used can differ with each slot.

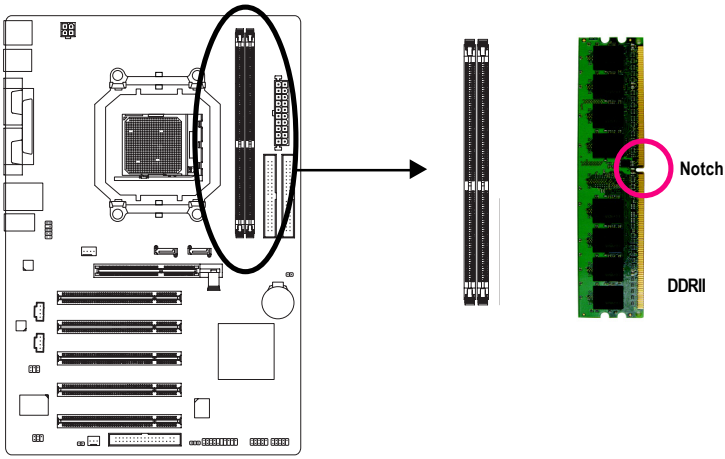

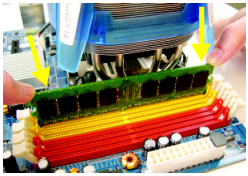

Fig.1
The DIMM socket has a notch, so the DIMM memory module can only fit in one direction. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.

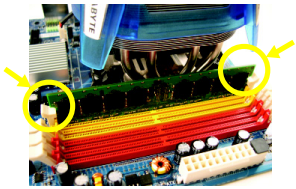

Fig.2
Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.
Reverse the installation steps when you wish to remove the DIMM module.

Dual Channel Memory Configuration

The GA-MF3 supports the Dual Channel Technology. After operating the Dual Channel Technology, the bandwidth of Memory Bus will double.

Due to CPU limitation, if you wish to operate the Dual Channel Technology, follow the guidelines below:

1. Dual Channel mode will not be enabled if only one memory module is installed.
2. To enable Dual Channel mode with two memory modules (it is recommended to use memory modules of identical brand, size, chips, and speed), you must install them into DIMM sockets of the same color.

1-5 Installation of Expansion Cards

You can install your expansion card by following the steps outlined below:

1. Read the related expansion card's instruction document before install the expansion card into the computer.
2. Remove your computer's chassis cover, screws and slot bracket from the computer.
3. Press the expansion card firmly into expansion slot in motherboard.
4. Be sure the metal contacts on the card are indeed seated in the slot.
5. Replace the screw to secure the slot bracket of the expansion card.
6. Replace your computer's chassis cover.
7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
8. Install related driver from the operating system.

Installing a AGP expansion card:

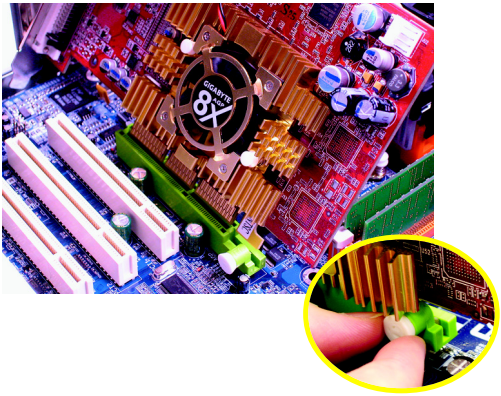

CAUTION

Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install/uninstall the VGA card. Please align the VGA card to the onboard AGP slot and press firmly down on the slot. Make sure your VGA card is locked by the small white-drawable bar.

1-6 I/O Back Panel Introduction

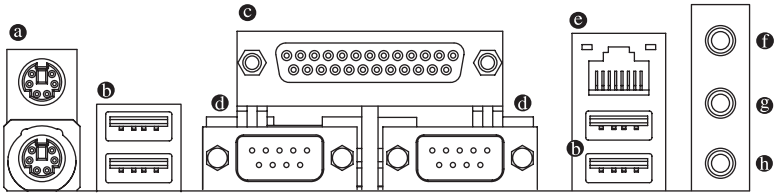

ⓐ PS/2 Keyboard and PS/2 Mouse Connector

To install a PS/2 port keyboard and mouse, plug the mouse to the upper port (green) and the keyboard to the lower port (purple).

ⓑ USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

ⓒ Parallel Port

The parallel port allows connection of a printer, scanner and other peripheral devices.

ⓓ COM A, COMB (Serial Port)

Connects to serial-based mouse or data processing devices.

ⓔ LAN Port

The provided Internet connection is Fast Ethernet, providing data transfer speeds of 10/100 Mbps.

ⓕ Line In

Devices like CD-ROM, walkman etc. can be connected to Line In jack.

ⓖ Line Out

Connect the stereo speakers, earphone or front surround speakers to this connector.

ⓗ MIC In

Microphone can be connected to MIC In jack.

NOTE YYou can use audio software to configure 2-/4-/6-channel audio functioning.

1-7 Connectors Introduction

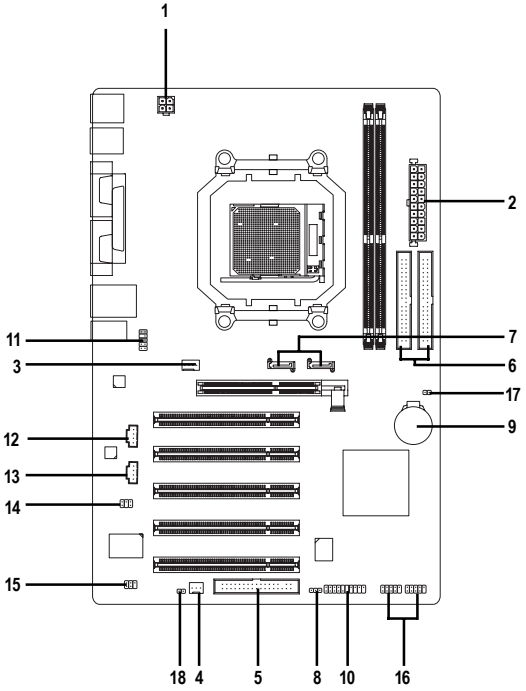

1) ATX_12V	10) F_PANEL
2) ATX (Power Connector)	11) F_AUDIO
3) CPU_FAN	12) CD_IN
4) SYS_FAN	13) AUX_IN
5) FDD	14) SUR_CEN
6) IDE1 / IDE2	15) SPDIF_IO
7) SATA0_SB / SATA1_SB	16) F_USB1 / F_USB2
8) PWR_LED	17) CLR_CMOS
9) BATTERY	18) CI

1/2) ATX_12V/ATX (Power Connector)

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, please make sure that all components and devices are properly installed. Align the power connector with its proper location on the motherboard and connect tightly.

The ATX_12V power connector mainly supplies power to the CPU. If the ATX_12V power connector is not connected, the system will not start.

Caution!

Please use a power supply that is able to handle the system voltage requirements. It is recommended that a power supply that can withstand high power consumption be used (300W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable system or a system that is unable to start.

If you use a 24-pin ATX power supply, please remove the small cover on the power connector on the motherboard before plugging in the power cord; otherwise, please do not remove it.

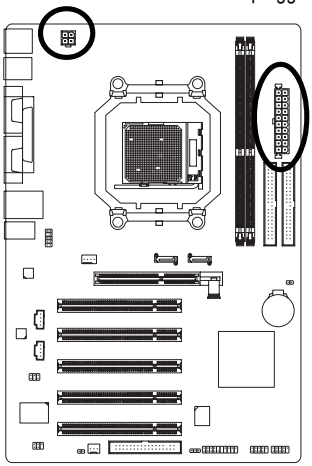



ATX_12V

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

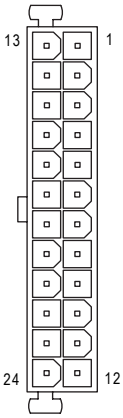

ATX

Pin No.	Definition	Pin No.	Definition
1	3.3V	13	3.3V
2	3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON(soft On/Off)
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power Good	20	-5V
9	5V SB(stand by +5V)	21	+5V
10	+12V	22	+5V
11	+12V(Only for 24-pin ATX)	23	+5V (Only for 24-pin ATX)
12	3.3V(Only for 24-pin ATX)	24	GND(Only for 24-pin ATX)

3/4) CPU_FAN / SYS_FAN (Cooler Fan Power Connector)

The cooler fan power connector supplies a +12V power voltage via a 3-pin/4-pin (only for CPU_FAN) power connector and possesses a foolproof connection design. Most coolers are designed with color-coded power connector wires. A red power connector wire indicates a positive connection and requires a +12V power voltage. The black connector wire is the ground wire (GND).

Please remember to connect the CPU/system fan cable to the CPU_FAN/SYS_FAN connector to prevent the CPU/system from overheating and failure.

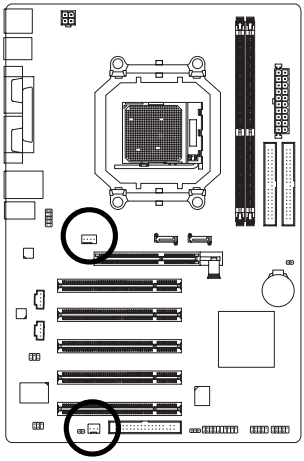

CPU_FAN:

Pin No.	Definition
1	GND
2	+12V/Speed Control
3	Sense
4	Speed Control

SYS_FAN:

Pin No.	Definition
1	GND
2	+12V
3	Sense

5) FDD (Floppy Connector)

The FDD connector is used to connect the FDD cable while the other end of the cable connects to the FDD drive. The types of FDD drives supported are: 360KB, 720KB, 1.2MB, 1.44MB and 2.88MB. Before attaching the FDD cable, please take note of the foolproof groove in the FDD connector.

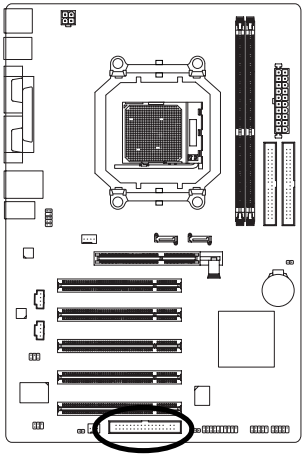



6) IDE1/IDE2 (IDE Connector)

An IDE device connects to the computer via an IDE connector. One IDE connector can connect to one IDE cable, and the single IDE cable can then connect to two IDE devices (hard drive or optical drive). If you wish to connect two IDE devices, please set the jumper on one IDE device as Master and the other as Slave (for information on settings, please refer to the instructions located on the IDE device). Before attaching the IDE cable, please take note of the foolproof groove in the IDE connector.

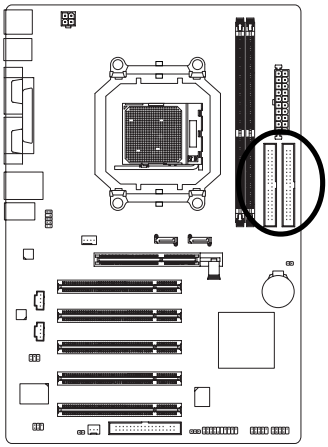

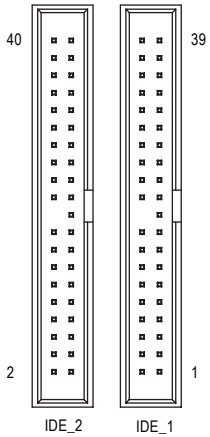

7) SATA0_SB / SATA1_SB (Serial ATA Connector)

Serial ATA can provide up to 150MB/s transfer rate. Please refer to the BIOS setting for the Serial ATA and install the proper driver in order to work properly.

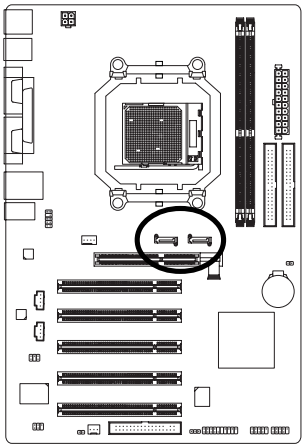



Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

8) PWR_LED

The PWR_LED connector is connected with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode(S1).

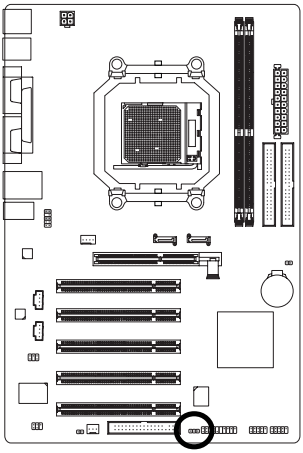

1

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

9) BATTERY

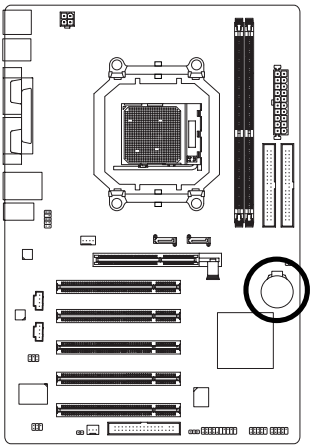

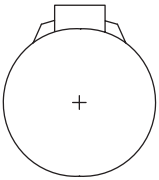

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn off the computer and unplug the power cord.
2. Gently take out the battery and put it aside for about one minute. (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for five seconds.)
3. Re-install the battery.
4. Plug the power cord in and turn on the computer.

10) F_PANEL (Front Panel Jumper)

Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignment below.

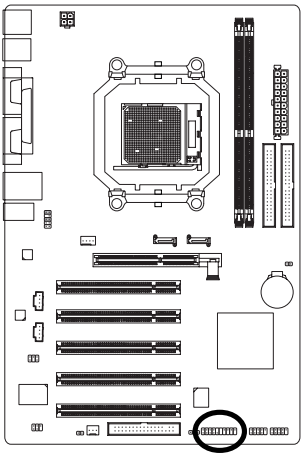

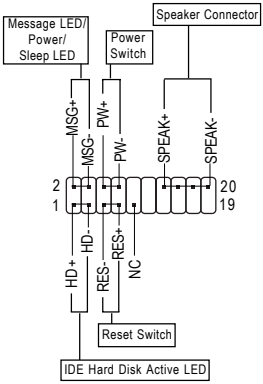

HD (IDE Hard Disk Active LED) (Blue)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPEAK (Speaker Connector) (Amber)	Pin 1: Power Pin 2- Pin 3: NC Pin 4: Data(-)
RES (Reset Switch) (Green)	Open: Normal Close: Reset Hardware System
PW (Power Switch) (Red)	Open: Normal Close: Power On/Off
MSG (Message LED/Power/Sleep LED) (Yellow)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC (Purple)	NC

11) F_AUDIO (Front Audio Panel Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.

In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignments for the cable are the same as the pin assignments for the front audio header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

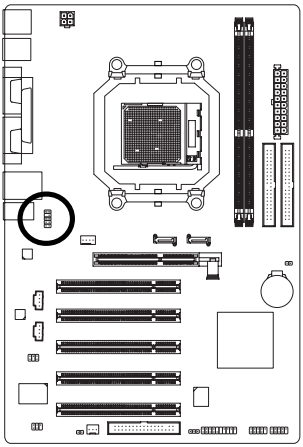

Pin No.	Definition
1	MIC
2	GND
3	MIC_BIAS
4	Power
5	Front Audio(R)
6	Rear Audio(R)/Return R
7	NC
8	No Pin
9	Front Audio(L)
10	Rear Audio(L)/Return L

12) CD_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

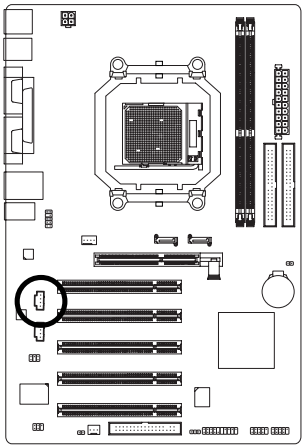

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

13) AUX_IN (AUX In Connector)

Connect other device (such as PCI TV Tunner audio out) to the connector.

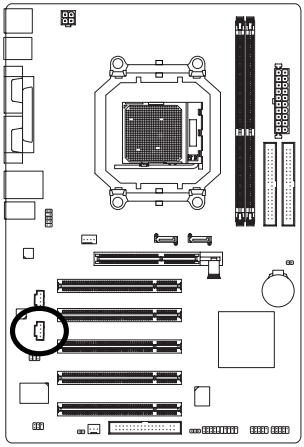

Pin No.	Definition
1	AUX-L
2	GND
3	GND
4	AUX-R

14) SUR_CEN (Surround Center Connector)

Attach the connector of the Channel Audio Combo Kit (optional) to this connector.

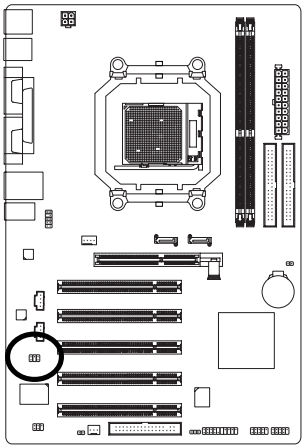

Pin No.	Definition
1	SUR OUTL
2	SUR OUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

15) SPDIF_IO (S/PDIF In/Out Connector)

The S/PDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Use S/PDIF IN feature only when your device has digital output function. Be careful with the polarity of the SPDIF_IO connector. Check the pin assignment carefully while you connect the S/PDIF cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional S/PDIF cable, please contact your local dealer.

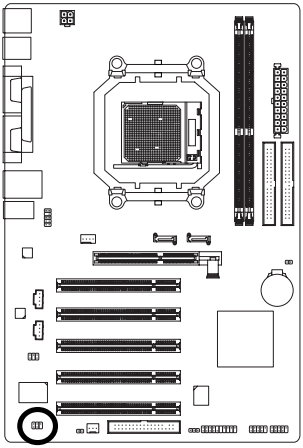

Pin No.	Definition
1	Power
2	No Pin
3	SPDIF
4	SPDIFI
5	GND
6	GND

16) F_ USB1 / F_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

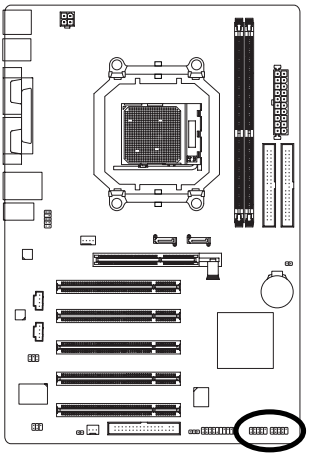

Pin No.	Definition
1	Power (5V)
2	Power (5V)
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

17) CLR_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this header. To clear CMOS, temporarily short the two pins. Default doesn't include the jumper to avoid improper use of this header.

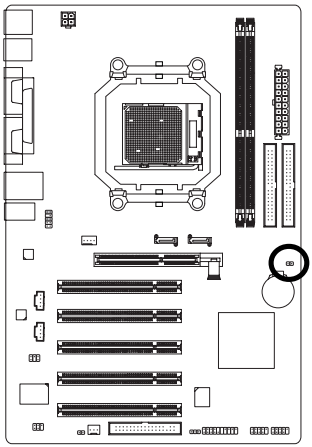

Open: Normal

Short: Clear CMOS

18) CI (Chassis Intrusion, Case Open)

This 2-pin connector allows your system to detect if the chassis cover is removed. You can check the "Case Opened" status in BIOS Setup.

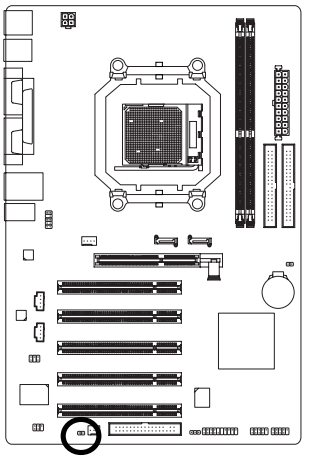

1

Pin No.	Definition
1	Signal
2	GND

Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) includes a CMOS SETUP utility which allows user to configure required settings or to activate certain system features.
The CMOS SETUP saves the configuration in the CMOS SRAM of the motherboard.
When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS SRAM.
When the power is turned on, pressing the <Del> button during the BIOS POST (Power-On Self Test) will take you to the CMOS SETUP screen. You can enter the BIOS setup screen by pressing "Ctrl + F1".
If you wish to upgrade to a new BIOS, either Gigabyte's Q-Flash or @BIOS utility can be used.
Q-Flash allows the user to quickly and easily update or backup BIOS without entering the operating system.
@BIOS is a Windows-based utility that does not require users to boot to DOS before upgrading BIOS but directly download and update BIOS from the Internet.

CONTROL KEYS

< ↑ >< ↓ >< ← >< → >	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<Page Up>	Increase the numeric value or make changes
<Page Down>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F7>	Load the Optimized Defaults
<F8>	Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press <F1> to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

CAUTION

Because BIOS flashing is potentially risky, please do it with caution and avoid inadequate operation that may result in system malfunction.

<F12> : Boot Menu

Select boot sequence for onboard (or add-on cards) device.

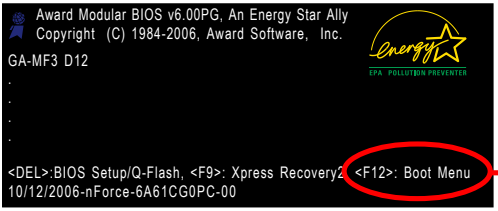

<F12>: Boot Menu

Use <↑> or <↓> to select a device, then press enter to accept . Press <ESC> to exit this menu.

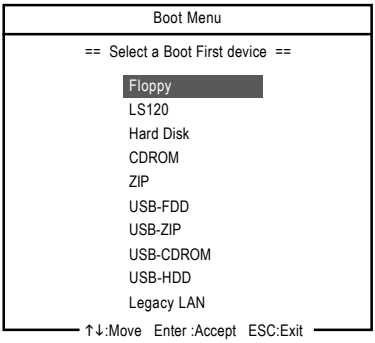

The Main Menu (For example: BIOS Ver. :D12)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

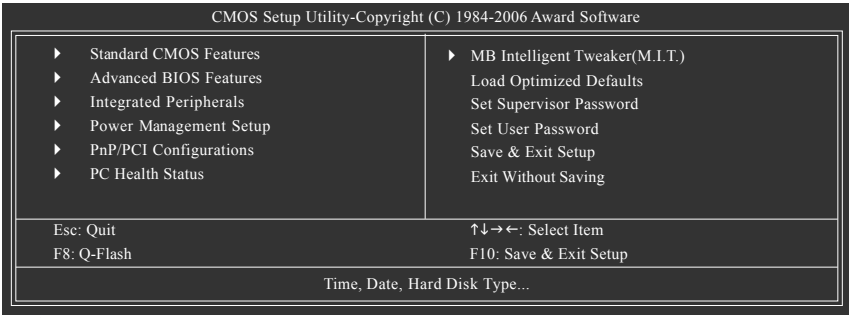

NOTE

1. If you don't find the settings you want, press "Ctrl+F1" to access advanced options.
2. Select the **Load Optimized Defaults** item in the BIOS Setup when somehow the system is not stable as usual. This action makes the system reset to the default settings for stability.
3. The BIOS Setup menus described in this chapter are for reference only and may differ from the exact settings for your motherboard.

- **Standard CMOS Features**

  This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**

  This setup page includes all the items of Award special enhanced features.
- **Integrated Peripherals**

  This setup page includes all onboard peripherals.
- **Power Management Setup**

  This setup page includes all the items of Green function features.
- **PnP/PCI Configurations**

  This setup page includes all the configurations of PCI & PnP ISA resources.
- **PC Health Status**

  This setup page is about system autodetect temperature, voltage, fan speed, etc.
- **MB Intelligent Tweaker (M.I.T.)**

  This setup page is to control CPU clock and frequency ratio.
- **Load Optimized Defaults**

  Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.
- **Set Supervisor Password**

  Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.
- **Set User Password**

  Change, set, or disable password. It allows you to limit access to the system.
- **Save & Exit Setup**

  Save CMOS value settings to CMOS and exit setup.
- **Exit Without Saving**

  Abandon all CMOS value changes and exit setup.

2-1 Standard CMOS Features

```
CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
Standard CMOS Features

Date (mm:dd:yy)                 Sun, Oct 15 2006        Item Help
Time (hh:mm:ss)                 22:31:24                Menu Level▶

▶ IDE Channel 0 Master          [None]
▶ IDE Channel 0 Slave           [None]
▶ IDE Channel 1 Master          [None]
▶ IDE Channel 1 Slave           [None]
▶ IDE Channel 2 Master          [None]
▶ IDE Channel 3 Master          [None]

Drive A                         [1.44M, 3.5"]
Drive B                         [None]

Halt On                         [All, But Keyboard]
Floppy 3 Mode Support           [Disabled]

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
             F5: Previous Values               F7: Optimized Defaults
```

☞ Date

The date format is <week>, <month>, <day>, <year>.

- ▸▸ Week — The week, from Sun to Sat, determined by the BIOS and is display-only
- ▸▸ Month — The month, Jan. Through Dec.
- ▸▸ Day — The day, from 1 to 31 (or the maximum allowed in the month)
- ▸▸ Year — The year, from 1999 through 2098

☞ Time

The times format in <hour> <minute> <second>. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

☞ IDE Channel 0/1 Master/Slave

▸▸ IDE HDD Auto-Detection

Press "Enter" to select this option for automatic device detection.

▸▸ IDE Channel 0/1, Master/Slave IDE/SATA Device Setup. You can use one of three methods:

- Auto — Allows BIOS to automatically detect IDE/SATA devices during POST (default)
- None — Select this if no IDE/SATA devices are used and the system will skip the automatic detection step and allow for faster system start up.
- Manual — User can manually input the correct settings

▸▸ Access Mode — Use this to set the access mode for the hard drive. The four options are: CHS/LBA/Large/Auto. (Default:Auto)

☞ IDE Channel 2, 3 Master

▸▸ IDE Auto-Detection

Press "Enter" to select this option for automatic device detection.

▸▸ Extended IDE Drive. IDE/SATA Device Setup. You can use one of the two methods:

- Auto — Allows BIOS to automatically detect IDE/SATA devices during POST (default)
- None — Select this if no IDE/SATA devices are used and the system will skip the automatic detection step and allow for faster system start up.

- Access Mode — Use this to set the access mode for the hard drive. The two options are: Large/Auto. (Default:Auto)
- Capacity — Capacity of currently installed hard drive.

Hard drive information should be labeled on the outside drive casing. Enter the appropriate option based on this information.

- Cylinder — Number of cylinders
- Head — Number of heads
- Precomp — Write precomp
- Landing Zone — Landing zone
- Sector — Number of sectors

Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- None — No floppy drive installed.
- 360K, 5.25" — 5.25 inch PC-type standard drive; 360K byte capacity.
- 1.2M, 5.25" — 5.25 inch AT-type high-density drive; 1.2M byte capacity. (3.5 inch when 3 Mode is Enabled).
- 720K, 3.5" — 3.5 inch double-sided drive; 720K byte capacity .
- 1.44M, 3.5" — 3.5 inch double-sided drive; 1.44M byte capacity.
- 2.88M, 3.5" — 3.5 inch double-sided drive; 2.88M byte capacity.

Halt on

The category determines whether the computer will stop if an error is detected during power up.

- No Errors — The system boot will not stop for any error that may be detected and you will be prompted.
- All Errors — Whenever the BIOS detects a non-fatal error the system will be stopped.
- All, But Keyboard — The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- All, But Diskette — The system boot will not stop for a disk error; it will stop for all other errors.
- All, But Disk/Key — The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

Floppy 3 Mode Support (for Japan Area)

- Disabled — Normal Floppy Drive. (Default value)
- Drive A — Drive A is 3 mode Floppy Drive.
- Drive B — Drive B is 3 mode Floppy Drive.
- Both — Drive A & B are 3 mode Floppy Drives.

2-2 Advanced BIOS Features

```
CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
Advanced BIOS Features

▶ Hard Disk Boot Priority      [Press Enter]      Item Help
  First Boot Device            [Floppy]           Menu Level▶
  Second Boot Device           [Hard Disk]
  Third Boot Device            [CDROM]
  Boot Up Floppy Seek          [Disabled]
  Password Check               [Setup]
  Init Display First           [PCI Slot]

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
             F5: Previous Values               F7: Optimized Defaults
```

☞ Hard Disk Boot Priority

Select boot sequence for onboard (or add-on cards) SCSI, RAID, etc.

Use <↑> or <↓> to select a device, then press<+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

☞ First / Second / Third Boot Device

- ▸▸ Floppy — Select your boot device priority by Floppy.
- ▸▸ LS120 — Select your boot device priority by LS120.
- ▸▸ Hard Disk — Select your boot device priority by Hard Disk.
- ▸▸ CDROM — Select your boot device priority by CDROM.
- ▸▸ ZIP — Select your boot device priority by ZIP.
- ▸▸ USB-FDD — Select your boot device priority by USB-FDD.
- ▸▸ USB-ZIP — Select your boot device priority by USB-ZIP.
- ▸▸ USB-CDROM — Select your boot device priority by USB-CDROM.
- ▸▸ USB-HDD — Select your boot device priority by USB-HDD.
- ▸▸ Legacy LAN — Select your boot device priority by LAN.
- ▸▸ Disabled — Disable this function.

☞ Boot Up Floppy Seek

During POST, BIOS will determine the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks 720K, 1.2M and 1.44M are all 80 tracks.

- ▸▸ Enabled — BIOS searches for floppy disk drive to determine it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
- ▸▸ Disabled — BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360K. (Default value)

☞ Password Check

- ▸▸ System The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
- ▸▸ Setup The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

☞ Init Display First

This feature allows you to select the first initiation of the monitor display from which card when you install an AGP card and a PCI VGA card on the motherboard.

- ▸▸ AGP Set Init display first to AGP.
- ▸▸ PCI slot Set Init display first to PCI. (Default value)

2-3 Integrated Peripherals

```
CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
Integrated Peripherals

▶ RAID Config                    [Press Enter]      Item Help
  On-Chip Primary PCI IDE        [Enabled]          Menu Level▶
  On-Chip Secondary PCI IDE      [Enabled]
  IDE DMA transfer               [Enabled]
  Serial-ATA 2(Internal PHY)     [Enabled]
  SATA DMA transfer              [Enabled]
  USB Memory Type                [SHADOW]
  AC97 Audio                     [Auto]
  On-Chip LAN(nVIDIA)            [Auto]
  OnBoard LAN Boot ROM           [Disabled]
  Onboard Serial Port 1          [3F8/IRQ4]
  Onboard Serial Port 2          [2F8/IRQ3]
  Onboard Parallel Port          [378/IRQ7]
  Parallel Port Mode             [SPP]
x ECP Mode Use DMA               3
  USB Host Controller            [V1.1+V2.0]
  Legacy USB Keyboard/Storag     [Disabled]
  Legacy (DOS) USB Mouse         [Disabled]
  Legacy USB storage detect      [Enabled]

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
             F5: Previous Values               F7: Optimized Defaults
```

☞ RAID Config

```
CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
RAID Config

  NV SATA RAID function          [Enabled]          Item Help
  SATA Primary Master RAID       [Disabled]         Menu Level▶
  SATA Secndry Master RAID       [Disabled]

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
             F5: Previous Values               F7: Optimized Defaults
```

☞ NV SATA RAID function

- ▸▸ Enabled — Allows users to configure individual SATA channels as RAID or ATA mode. (Default value)
- ▸▸ Disabled — Disable the RAID function for all of the onboard SATA channels.

☞ SATA Primary Master RAID

- ▸▸ Enabled — Enable RAID function for the first channel of the first SATA controller.
- ▸▸ Disabled — Disable the RAID function of this channel. It will operate in ATA mode.(Default value)

☞ SATA Secndry Master RAID

- ▸▸ Enabled — Enable RAID function for the second channel of the first SATA controller.
- ▸▸ Disabled — Disable the RAID function of this channel. It will operate in ATA mode. (Default value)

☞ On-Chip Primary PCI IDE

- ⏩ Enabled — Enable onboard 1st channel IDE port. (Default value)
- ⏩ Disabled — Disable onboard 1st channel IDE port.

☞ On-Chip Secondary PCI IDE

- ⏩ Enabled — Enable onboard 2nd channel IDE port. (Default value)
- ⏩ Disabled — Disable onboard 2nd channel IDE port.

☞ IDE DMA transfer

- ⏩ Enabled — Detect the IDE UDMA automatically. (Default value)
- ⏩ Disabled — Disable this function.

☞ Serial-ATA 2 (Internal PHY)

- ⏩ Enabled — Enable Serial ATA supported. (Default value)
- ⏩ Disabled — Disable Serial ATA supported.

☞ SATA DMA transfer

- ⏩ Enabled — Detect the SATA UDMA automatically. (Default value)
- ⏩ Disabled — Disable this function.

☞ USB Memory Type

- ⏩ SHADOW — Set USB Memory Type to SHADOW. (Default value)
- ⏩ Base Memory (640K)

Set USB Memory Type to Base Memory (640K).

☞ AC97 Audio

- ⏩ Auto — Enable onboard AC'97 audio function. (Default value)
- ⏩ Disabled — Disable this function.

☞ On-Chip LAN (nVIDIA)

- ⏩ Auto — Auto-detect onboard LAN function. (Default value)
- ⏩ Disabled — Disable onboard LAN function.

☞ OnBoard LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- ⏩ Enabled — Enable this function.
- ⏩ Disabled — Disable this function. (Default value)

☞ Onboard Serial Port 1

- ⏩ Auto — BIOS will automatically setup the port 1 address.
- ⏩ 3F8/IRQ4 — Enable onboard Serial port 1 and address is 3F8/IRQ4. (Default value)
- ⏩ 2F8/IRQ3 — Enable onboard Serial port 1 and address is 2F8/IRQ3.
- ⏩ 3E8/IRQ4 — Enable onboard Serial port 1 and address is 3E8/IRQ4.
- ⏩ 2E8/IRQ3 — Enable onboard Serial port 1 and address is 2E8/IRQ3.
- ⏩ Disabled — Disable onboard Serial port 1.

☞ Onboard Serial Port 2

- Auto — BIOS will automatically setup the port 1 address.
- 3F8/IRQ4 — Enable onboard Serial port 2 and address is 3F8/IRQ4.
- 2F8/IRQ3 — Enable onboard Serial port 2 and address is 2F8/IRQ3. (Default value)
- 3E8/IRQ4 — Enable onboard Serial port 2 and address is 3E8/IRQ4.
- 2E8/IRQ3 — Enable onboard Serial port 2 and address is 2E8/IRQ3.
- Disabled — Disable onboard Serial port 2.

☞ Onboard Parallel Port

- Disabled — Disable onboard LPT port.
- 378/IRQ7 — Enable onboard LPT port and address is 378/IRQ7. (Default value)
- 278/IRQ5 — Enable onboard LPT port and address is 278/IRQ5.
- 3BC/IRQ7 — Enable onboard LPT port and address is 3BC/IRQ7.

☞ Parallel Port Mode

- SPP — Using Parallel port as Standard Parallel Port. (Default value)
- EPP — Using Parallel port as Enhanced Parallel Port.
- ECP — Using Parallel port as Extended Capabilities Port.
- ECP+EPP — Using Parallel port as ECP and EPP mode.

☞ ECP Mode Use DMA

- 3 — Set ECP Mode Use DMA to 3. (Default value)
- 1 — Set ECP Mode Use DMA to 1.

☞ USB Host Controller

- Disabled — Disable this function if you are not using onboard USB function.
- V1.1+V2.0 — Enable USB 1.1 and USB 2.0 controller. (Default value)
- V1.1 — Only enable USB 1.1 controller.

☞ Legacy USB Keyboard/storag

Allows USB keyboard to be used in legacy operating systems like MS-DOS.

- Enabled — Enable support for USB keyboard.
- Disabled — Disable support for USB keyboard. (Default value)

☞ Legacy (DOS) USB Mouse

Allows USB mouse to be used in legacy operating systems like MS-DOS.

- Enabled — Enable support for USB mouse.
- Disabled — Disable support for USB mouse. (Default value)

☞ Legacy USB storage detect

This option allows users to decide whether to detect USB storage devices, including USB flash drives and USB hard drives during POST.

- Enabled — BIOS will scan all USB storage devices. (Default value)
- Disabled — Disable this function.

2-4 Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
Power Management Setup

	ACPI Suspend Type	[S1(POS)]	Item Help
	Soft-Off by PWR-BTTN	[Instant-Off]	Menu Level▶
	PME Event Wake Up	[Disabled]	
	Modem Ring On	[Disabled]	
	S3 Resume by USB device	[Disabled]	
	Resume by Alarm	[Disabled]	
x	Day of Month Alarm	Everyday	
x	Time (hh:mm:ss) Alarm	0 : 0 : 0	
	Power On By Mouse	[Disabled]	
	Power On By Keyboard	[Disabled]	
x	KB Power ON Password	Enter	
	AC Back Function	[Soft-Off]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F7: Optimized Defaults

☞ ACPI Suspend Type

- ▸▸ S1(POS) Set ACPI suspend type to S1/POS(Power On Suspend). (Default value)
- ▸▸ S3(STR) Set ACPI suspend type to S3/STR(Suspend To RAM).

☞ Soft-off by PWR-BTTN

- ▸▸ Instant-off Press power button then Power off instantly. (Default value)
- ▸▸ Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

☞ PME Event Wake Up

This feature requires an ATX power supply that provides at least 1A on the 5VSB lead.

- ▸▸ Disabled Disable this function. (Default value)
- ▸▸ Enabled Enable PME as wake up event.

☞ Modem Ring On

An incoming call via modem can awake the system from any suspend state.

- ▸▸ Disabled Disable Modem Ring on function. (Default value)
- ▸▸ Enabled Enable Modem Ring on function.

☞ S3 Resume by USB device

- ▸▸ Disabled Disable this function. (Default value)
- ▸▸ Enable Enable USB device wake up system from S3 suspend type.

☞ Resume by Alarm

You can set "Resume by Alarm" item to Enabled and key in Date/Time to power on system.

- ▸▸ Disabled Disable this function. (Default value)
- ▸▸ Enabled Enable alarm function to POWER ON system.

If Resume by Alarm is Enabled.

- ▸▸ Day of Month Alarm : Everyday, 1~31
- ▸▸ Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

☞ Power On by Mouse

- ▸▸ Disabled — Disable this function. (Default value)
- ▸▸ Double Click — Double click on PS/2 mouse left button to power on the system.

☞ Power On by Keyboard

- ▸▸ Password — Enter from 1 to 5 characters to set the Keyboard Power On Password.
- ▸▸ Disabled — Disable this function. (Default value)
- ▸▸ Any KEY — Press any key to power on the system.
- ▸▸ Keyboard 98 — If your keyboard have "POWER Key" button, you can press the key to power on the system.

☞ KB Power ON Password

When "Power On by Keyboard" set at Password, you can set the password here.

- ▸▸ Enter — Input password (from 1 to 5 characters) and press Enter to set the Keyboard Power On password.

☞ AC BACK Function

- ▸▸ Soft-Off — When AC-power back to the system, the system will be in "Off" state. (Default value)
- ▸▸ Full-On — When AC-power back to the system, the system always in "On" state.

2-5 PnP/PCI Configurations

```
CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
PnP/PCI Configurations

PCI 3 IRQ Assignment        [Auto]        Item Help
PCI 4 IRQ Assignment        [Auto]        Menu Level▶
PCI 1/5 IRQ Assignment      [Auto]
PCI 2 IRQ Assignment        [Auto]

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
             F5: Previous Values             F7: Optimized Defaults
```

☞ PCI 3 IRQ Assignment

- ▸▸ Auto — Auto assign IRQ to PCI 3. (Default value)
- ▸▸ 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

☞ PCI 4 IRQ Assignment

- ▸▸ Auto — Auto assign IRQ to PCI 4. (Default value)
- ▸▸ 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 4.

☞ PCI 1/5 IRQ Assignment

- ▸▸ Auto — Auto assign IRQ to PCI 1/PCI 5. (Default value)
- ▸▸ 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1/PCI 5.

☞ PCI 2 IRQ Assignment

- ▸▸ Auto — Auto assign IRQ to PCI 2. (Default value)
- ▸▸ 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

2-6 PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software
PC Health Status

		Item Help
Vcore	OK	Menu Level▶
DDR2 18V	OK	
+3.3V	OK	
+12V	OK	
Current CPU Temperature	36°C	
Current CPU FAN Speed	3245 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	
CPU Smart FAN Control	[Enabled]	
CPU Smart FAN Mode	[Auto]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F7: Optimized Defaults

☞ Current Voltage(V) Vcore / DDR2 18V / +3.3V / +12V

- Detect system's voltage status automatically.

☞ Current CPU Temperature

- Detect system/CPU temperature automatically.

☞ Current CPU/SYSTEM FAN Speed (RPM)

- Detect CPU/system fan speed status automatically.

☞ CPU Warning Temperature

- 60°C / 140°F Monitor CPU temperature at 60°C / 140°F.
- 70°C / 158°F Monitor CPU temperature at 70°C / 158°F.
- 80°C / 176°F Monitor CPU temperature at 80°C / 176°F.
- 90°C / 194°F Monitor CPU temperature at 90°C / 194°F.
- Disabled Disable this function. (Default value)

☞ CPU/SYSTEM FAN Fail Warning

- Disabled Disable CPU/system fan fail warning function. (Default value)
- Enabled Enable CPU/system fan fail warning function.

☞ CPU Smart FAN Control (Note)

- Disabled Disable this function.
- Enabled When this function is enabled, CPU fan will run at different speed depending on CPU temperature. Users can adjust the fan speed with Easy Tune based on their requirements. (Default value)

☞ CPU Smart FAN Mode

This option is available only when CPU Smart FAN Control is enabled.

- Auto BIOS autodetects the type of CPU fan you installed and sets the optimal CPU Smart FAN control mode for it. (Default value)
- Voltage Set to Voltage when you use a CPU fan with a 3-pin fan power cable.
- PWM Set to PWM when you use a CPU fan with a 4-pin fan power cable.

(Note) Whether the CPU Smart FAN Control function is supported will depend on the CPU you install.

2-7 MB Intelligent Tweaker(M.I.T.)

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software

MB Intelligent Tweaker(M.I.T.)

		Item Help
CPU Frequency (MHz)	[200]	Menu Level▸
AGP Clock (MHz)	[66]	
CPU Clock Ratio	[Auto]	
DDR2 voltage control	[Normal]	
AGP voltage Control	[Normal]	
CPU Voltage Control	[Normal]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F7: Optimized Defaults

CAUTION

Incorrectly using these features may result in system instability or corruption.
Doing a overclock or overvoltage on CPU, chipsets and memory modules may result in damages or shortened life expectancy to these components.
Please be aware that the M.I.T. menu items are for power users only.

☞ CPU Frequency(MHz)

- 200~455 MHz — Set CPU Frequency from 200 MHz to 455 MHz.

☞ AGP Clock(MHz)

- 66MHz ~ 100MHz — Set AGP Frequency from 66 MHz to 100 MHz.

☞ CPU Clock Ratio

The adjustable range is dependent on the CPU you install. (Default: Auto)

☞ DDR2 voltage Control

Please note that by overclocking your system through the increase of the DDR2 voltage, damage to the memory may occur.

- Normal — Supply DDR2 voltage as DDR2 requires. (Default value)
- +0.1V ~ +0.5V — Increase DDR2 voltage by +0.1V to +0.5V.

Incorrect using it may cause your system broken. For power End-User use only!

☞ AGP voltage Control

- Normal — Supply AGP voltage as (G) MCH requires. (Default value)
- +0.1V ~ +0.3V — Increase AGP voltage by +0.1V to +0.3V.

Incorrect using it may cause your system broken. For power End-User use only!

☞ CPU Voltage Control

- Supports adjustable CPU Vcore. The adjustable range is dependent on CPUs. (Default value: Normal)

Please note that by overclocking your system through the increase of the CPU voltage, damage to the CPU or decrease in the CPU life expectancy may occur.

2-8 Load Optimized Defaults

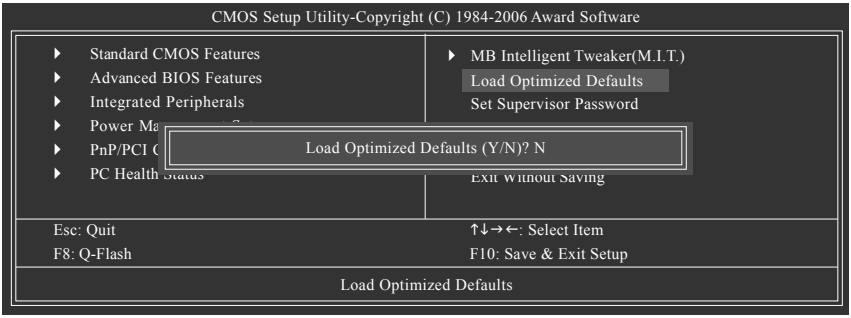

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

2-9 Set Supervisor/User Password

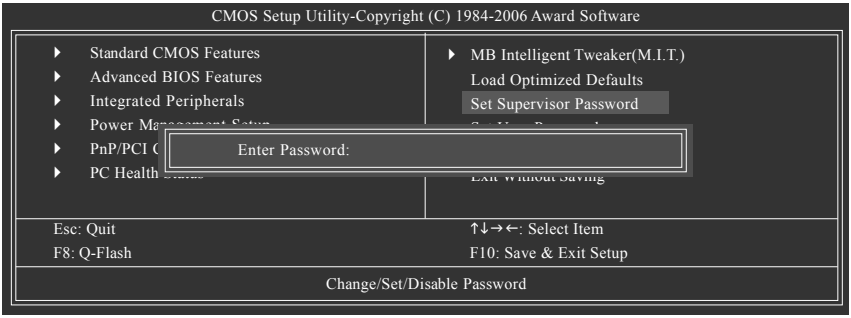

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

2-10 Save & Exit Setup

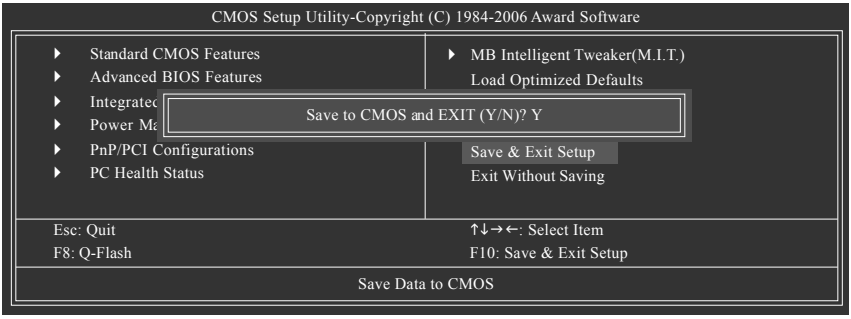

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.
Type "N" will return to Setup Utility.

2-11 Exit Without Saving

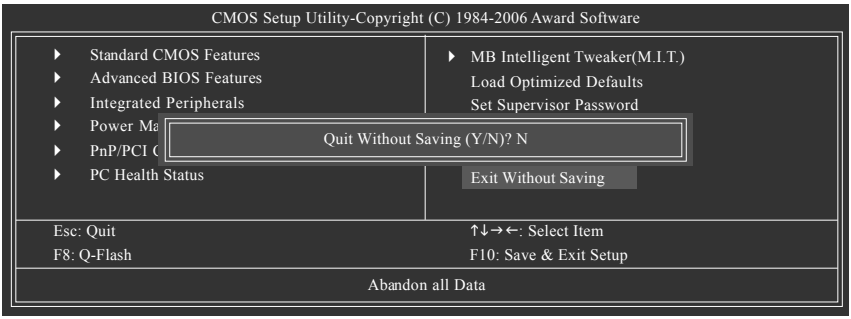

Type "Y" will quit the Setup Utility without saving to RTC CMOS.
Type "N" will return to Setup Utility.

Chapter 3 Drivers Installation

NOTE

Pictures below are shown in Windows XP.
Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the Setup.exe.

3-1 Install Chipset Drivers

After insert the driver CD, "Xpress Install" will scan automatically the system and then list all the drivers that recommended to install. The "Xpress Install" uses the"Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The "Xpress Install" will execute the installation for you automatically.

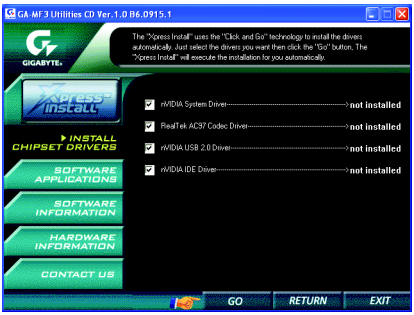

NOTE

Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.
System will reboot automatically after install the drivers, afterward you can install others application.

CAUTION

For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

3-2 Software Application

This page displays all the tools that GIGABYTE developed and some free software. You can click an item to install it.

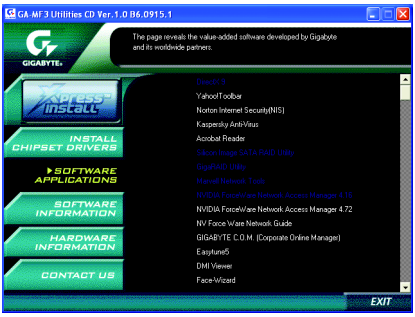

3-3 Software Information

This page lists the contents of software and drivers in this CD-title.

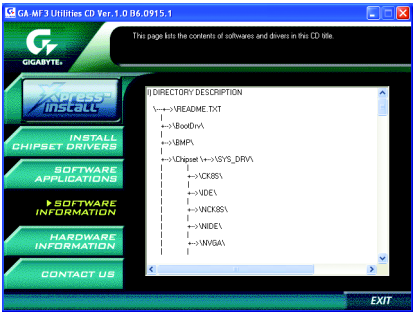

3-4 Hardware Information

This page lists all device you have for this motherboard.

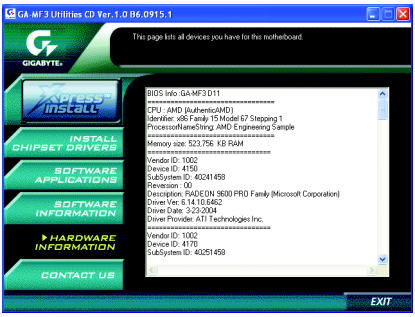

3-5 Contact Us

Please see the last page for details.

Chapter 4 Appendix

4-1 Unique Software Utilities

(Not all model support these Unique Software Utilities, please check your MB features.)

4-1-1 EasyTune 5 Introduction

EasyTune 5 presents the most convenient Windows based system performance enhancement and manageability utility. Featuring several powerful yet easy to use tools such as 1) Overclocking for enhancing system performance, 2) C.I.A. and M.I.B. for special enhancement for CPU and Memory, 3) Smart-Fan control for managing fan speed control of both CPU cooling fan and North-Bridge Chipset cooling fan, 4) PC health for monitoring system status.(Note)

User Interface Overview

	Button / Display	Description
1.	Overclocking	Enters the Overclocking setting page
2.	C.I.A./C.I.A.2 and M.I.B.	Enters the C.I.A./2 and M.I.B. setting page
3.	Smart-Fan	Enters the Smart-Fan setting page
4.	PC Health	Enters the PC Health setting page
5.	GO	Confirmation and Execution button
6.	"Easy Mode" & "Advance Mode"	Toggles between Easy and Advance Mode
7.	Display screen	Display panel of CPU frequency
8.	Function display LEDs	Shows the current functions status
9.	GIGABYTE Logo	Log on to GIGABYTE website
10.	Help button	Display EasyTune™ 5 Help file
11.	Exit or Minimize button	Quit or Minimize EasyTune™ 5 software

(Note) EasyTune 5 functions may vary depending on different motherboards.

4-1-2 Xpress Recovery2 Introduction

Xpress Recovery2 is designed to provide quick backup and restoration of hard disk data. Supporting Microsoft operating systems including Windows XP/2000/NT/98/Me and DOS, and file systems including FAT16, FAT32, and NTFS, Xpress Recovery2 is able to back up data on hard disks on PATA and SATA IDE controllers. After Xpress Recovery2 is executed from CD-ROM for the first time, it will stay permanent in your hard disk. If you wish to run Xpress Recovery2 later, you can simply press F9 during system bootup to enter Xpress Recovery2 without the CD-ROM.

System requirements:

1. Intel x86 platforms
2. At least 64M bytes of system memory
3. VESA-supported VGA cards

How to use the Xpress Recovery2

Initial access by booting from CD-ROM and subsequent access by pressing the F9 key:

Steps: After entering BIOS Setup, go to **Advanced BIOS Feature** and set to boot from CD-ROM. Save the settings and exit the BIOS Setup. Insert the provided driver CD into your CD-ROM drive. Upon system restart, the message which says "Boot from CD/DVD:" will appear in the bottom left corner of the screen. Press any key to enter Xpress Recovery2.

After the steps above are completed, subsequent access to Xpress Recovery2 can be made by simply pressing the <F9> key during system power-on.

Boot from CD/DVD:

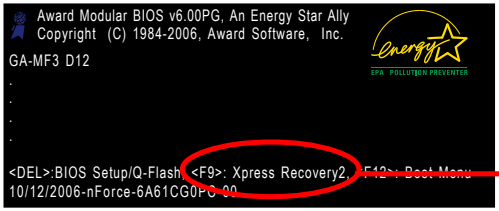

<F9>: Xpress Recovery2

NOTE

1. If you have already entered Xpress Recovery2 by booting from the CD-ROM, you can enter Xpress Recovery2 by pressing the <F9> key in the future.
2. System storage capacity and the reading/writing speed of the hard disk will affect the data backup speed.
3. It is recommended that Xpress Recovery2 be immediately installed once you complete installations of OS and all required drivers as well as software.

The Main Screen of Xpress Recovery2

1. RESTORE:

Restore the backed-up data to your hard disk. (This button will not appear if there is no backup file.)

2. BACKUP:

Back up data from hard disk.

3. REMOVE:

Remove previously-created backup files to release disk space.
(This button will not appear if there is no backup file.)

4. REBOOT:

Exit the main screen and restart the system.

Limitations:

1. Not compatible to Xpress Recovery.
2. For the use of Xpress Recovery2, a primary partition must be reserved.
3. Xpress Recovery2 will store the backup file at the end of the hard disk, so free space available on the hard disk for the backup file must be allocated in advance. (A minimum 4GB is recommended but the actual space is dependent on the size of the data to be backed up)
4. Capable of backing up hard disks installed with Windows operating systems including DOS and Windows XP/2000/NT/9x/Me.
5. USB hard disks are currently not supported.
6. Does not support RAID/AHCI (class code 0104/0106) hard disks.
7. Capable of backing up and restoring only the first physical hard disk.

Hard disks detection sequence is as follows:

a. PATA IDE primary channel
b. PATA IDE secondary channel
c. SATA IDE channel 1
d. SATA IDE channel 2
e. SATA IDE channel 3
f. SATA IDE channel 4

Precautions:

1. When using hard disks with more than 128G under Windows 2000, be sure to execute the EnableBigLba.*exe* program from the driver CD before data backup.
2. It is normal that data backup takes longer time than data restoration.
3. Xpress Recovery2 is compliant with the GPL regulations.
4. On a few motherboards based on Nvidia chipsets, BIOS update is required for Xpress Recovery2 to correctly identify RAID and SATA IDE mode. Please contact your motherboard manufacturer.

4-1-3 Flash BIOS Method Introduction

Method 1 : Q-Flash™ Utility

Q-Flash™ is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash™ allows users to flash BIOS without any utility in DOS or Windows. Using Q-Flash™ indicates no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.

CAUTION

Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

1. Download the latest BIOS for your motherboard from Gigabyte's website.
2. Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 8KNXPU.Fba) to a floppy disk.
3. Reboot your PC and press **Del** to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts.
If your motherboard has dual-BIOS, please refer to **Part One**.
If your motherboard has single-BIOS, please refer to **Part Two**.

Part One:

Updating BIOS with Q-Flash™ Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash and Dual BIOS, the Q-Flash utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash utility.

In the following sections, we take GA-8KNXP Ultra as the example to guide you how to flash BIOS from an older version to the latest version. For example, from Fa3 to Fba.

The BIOS file is Fa3 before updating

Entering the Q-Flash™ utility:

Step1: To use Q-Flash utility, you must press **Del** in the boot screen to enter BIOS menu.

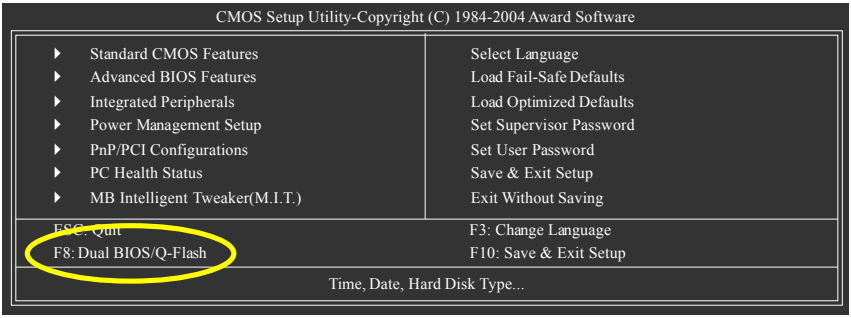

Step 2: Press **F8** button on your keyboard and then **Y** button to enter the Dual BIOS/Q-Flash utility.

Exploring the Q-Flash™ / Dual BIOS utility screen

The Q-Flash / Dual BIOS utility screen consists of the following key components.

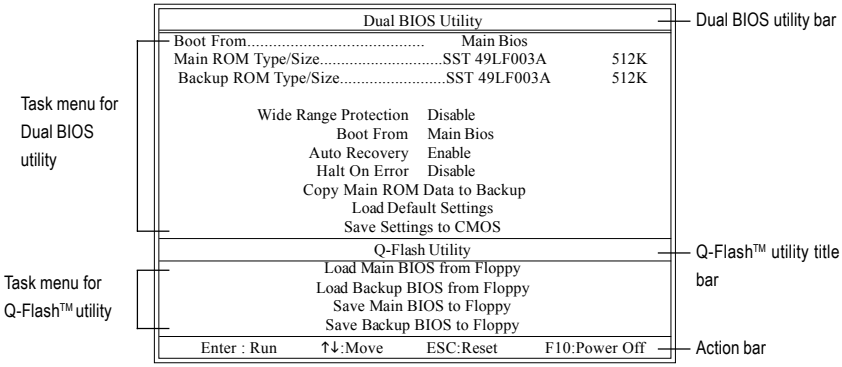

Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Task menu for Q-Flash utility:

Contains the names of four tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash™ utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in the Q-Flash menu and press Enter button.
   Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.

NOTE If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save Main BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press **Enter**.

In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8KNXPU.Fba, is listed.

CAUTION Please confirm again you have the correct BIOS file for your motherboard.

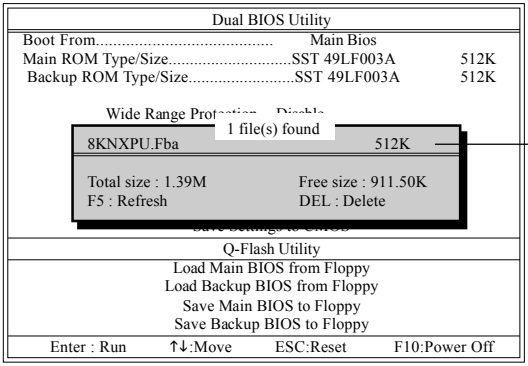

BIOS file in the floppy disk.

After pressing **Enter**, you'll then see the progress of reading the BIOS file from the floppy disk.

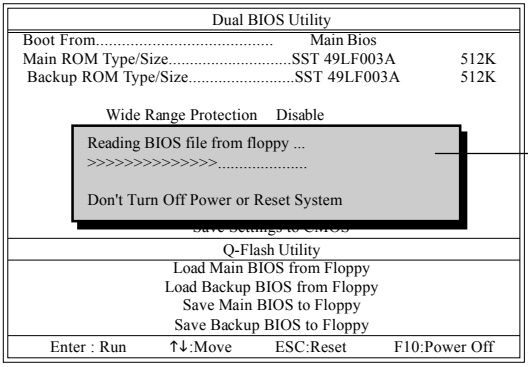

CAUTION Do not turn off power or reset your system at this stage!!

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

3. Press Y button on your keyboard after you are sure to update BIOS.
   Then it will begin to update BIOS. The progress of updating BIOS will be displayed.

CAUTION Please do not take out the floppy disk when it begins flashing BIOS.

4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

```
                    Dual BIOS Utility
Boot From.......................................  Main Bios
Main ROM Type/Size.............................SST 49LF003A      512K
 Backup ROM Type/Size.........................SST 49LF003A      512K

          Wide Range Protection     Disable
          !! Copy BIOS completed - Pass !!

          Please press any key to continue

                    Q-Flash Utility
                Load Main BIOS from Floppy
                Load Backup BIOS from Floppy
                Save Main BIOS to Floppy
                Save Backup BIOS to Floppy
Enter : Run        ↑↓:Move        ESC:Reset        F10:Power Off
```

NOTE You can repeat Step 1 to 4 to flash the backup BIOS, too.

5. Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

```
                    Dual BIOS Utility
Boot From.......................................  Main Bios
Main ROM Type/Size.............................SST 49LF003A      512K
 Backup ROM Type/Size.........................SST 49LF003A      512K

          Wide Range Protection     Disable
          Are you sure to RESET ?

          [Enter] to continure or [Esc] to abort...

                    Q-Flash Utility
                Load Main BIOS from Floppy
                Load Backup BIOS from Floppy
                Save Main BIOS to Floppy
                Save Backup BIOS to Floppy
Enter : Run        ↑↓:Move        ESC:Reset        F10:Power Off
```

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

The BIOS file becomes Fba after updating.

```
Award Modular BIOS v6.00PG, An Energy Star Ally
Copyright (C) 1984-2003, Award Software, Inc.

Intel i875P AGPset BIOS for 8KNXP Ultra Fba
Check System Health OK , VCore = 1.5250
Main Processor : Intel Pentium(R) 4  1.6GHz (133x12)
<CPUID : 0F27 Patch ID  : 0027>
Memory Testing  : 131072K OK

Memory Frequency 266 MHz in Single Channel
Primary Master : FUJITSU MPE3170AT ED-03-08
Primary Slave : None
Secondary Master : CREATIVEDVD-RM DVD1242E BC101
Secondary Slave : None

Press DEL to enter SETUP / Dual BIOS / Q-Flash / F9 For
Xpress Recovery
09/23/2003-i875P-6A79BG03C-00
```

6. Press **Del** to enter BIOS menu after system reboots. When you are in BIOS menu, move to **Load Optimized Defaults** item and press **Enter** to load BIOS Optimized Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

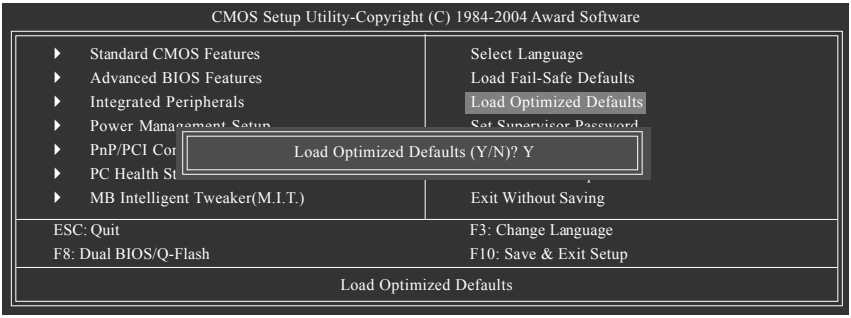

Press **Y** on your keyboard to load defaults.

7. Select **Save & Exit Setup** item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

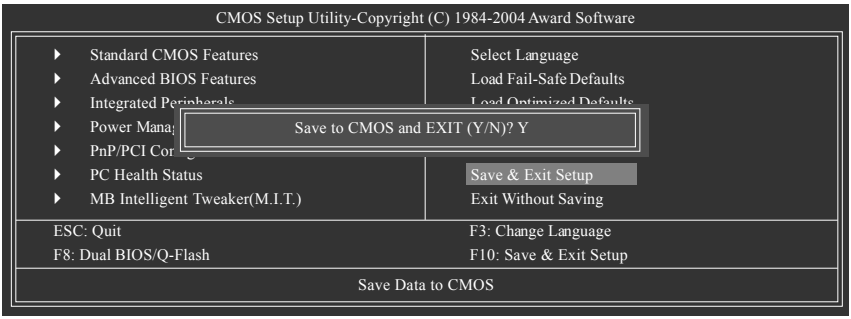

Press **Y** on your keyboard to save and exit.

Part Two:

Updating BIOS with Q-Flash™ Utility on Single-BIOS Motherboards.

This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™ utility.

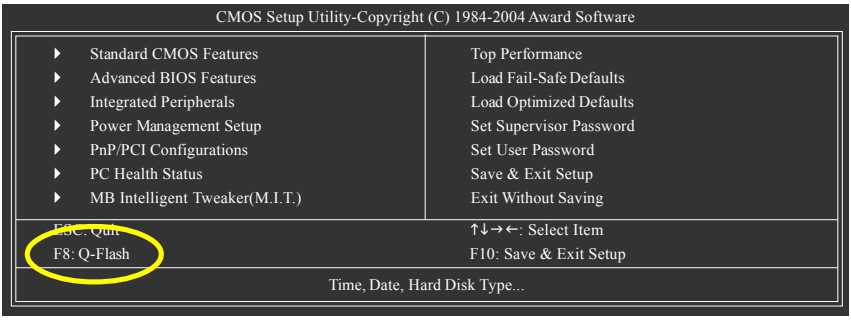

Exploring the Q-Flash™ utility screen

The Q-FlashBIOS utility screen consists of the following key components.

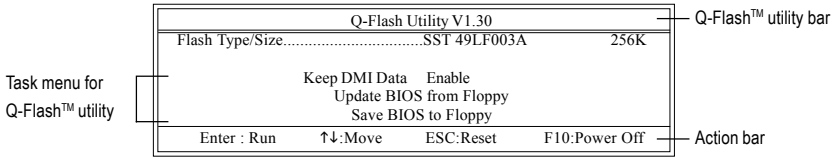

Task menu for Q-Flash utility:

Contains the names of three tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash™ utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Update BIOS from Floppy" item in the Q-Flash menu and press Enter button.
   Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.

   NOTE If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press Enter.
   In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8GE800.F4, is listed.

CAUTION Please confirm again you have the correct BIOS file for your motherboard.

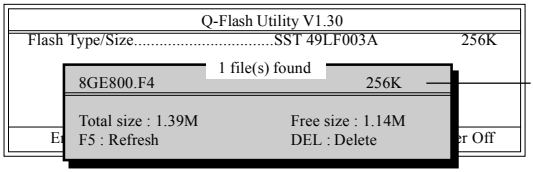

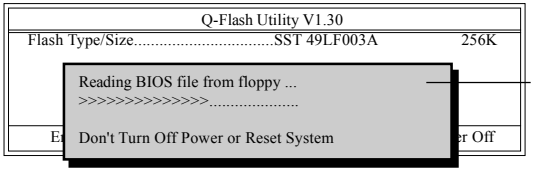

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

CAUTION Please do not take out the floppy disk when it begins flashing BIOS.

3. Press Y button on your keyboard after you are sure to update BIOS.
   Then it will begin to update BIOS. The progress of updating BIOS will be shown at the same time.

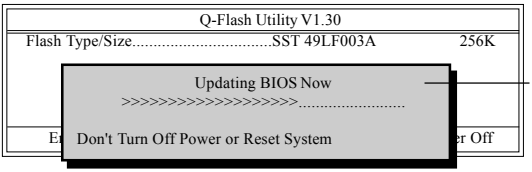

Do not turn off power or reset your system at this stage!!

4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

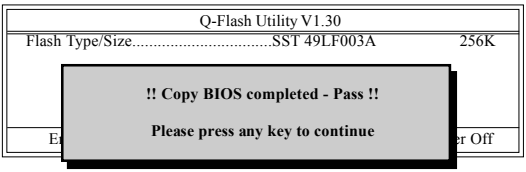

5. Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

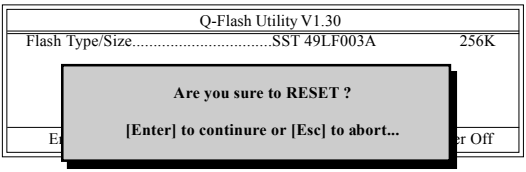

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

The BIOS file becomes F4 after updating

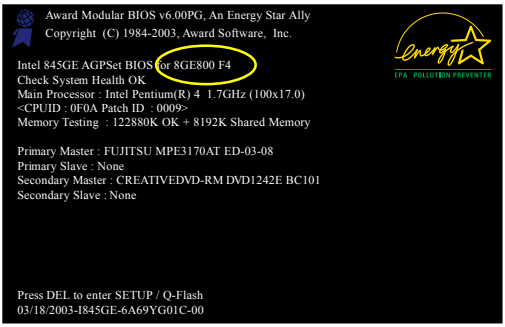

6. Press Del to enter BIOS menu after system reboots and load BIOS optimized defaults. See how to load BIOS optimized defaults, please kindly refer to Step 6 to 7 in **Part One**.

Congratulation!! You have updated BIOS successfully!!

Method 2 : @BIOS™ Utility

If you do not have a DOS startup disk, we recommend that you use the new @BIOS utility. @BIOS allows users to update their BIOS under Windows. Just select the desired @BIOS server to download the latest version of BIOS.

Fig 1. Installing the @BIOS utility

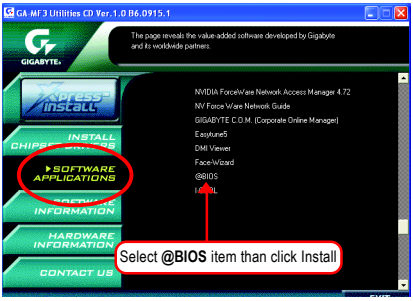

Fig 2. Installation Complete and Run @BIOS

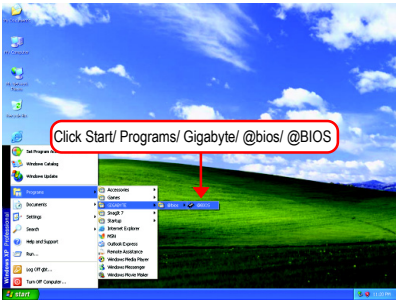

Fig 3. The @BIOS Utility

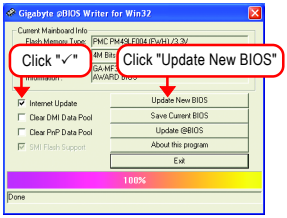

Fig 4. Select the desired @BIOS server

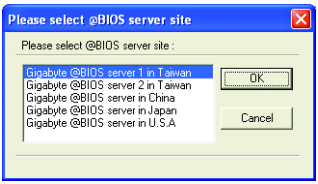

1. Methods and steps:

I. Update BIOS through Internet

a. Click "Internet Update" icon
b. Click "Update New BIOS" icon
c. Select @BIOS™ sever
d. Select the exact model name on your motherboard
e. System will automatically download and update the BIOS.

II. Update BIOS NOT through Internet:

a. Do not click "Internet Update" icon
b. Click "Update New BIOS"
c. Please select "All Files" in dialog box while opening the old file.
d. Please search for BIOS unzip file, downloading from internet or any other methods (such as: MF3.F1).
e. Complete update process following the instruction.

III. Save BIOS
In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:
In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

2. Note:

I. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
II. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
III. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
IV. Please note that any interruption during updating will cause system unbooted.
V. Do not use @BIOS and C.O.M. (Corporate Online Management) at the same time.

4-1-4 Configuring SATA Hard Drive(s)

To configure SATA hard drive(s), follow the steps below:

(1) Install SATA hard drive(s) in your system.
(2) Configure SATA controller mode and boot sequence in BIOS Setup.
(3) Configure RAID set in RAID BIOS. (Note)
(4) Make a floppy disk containing the SATA controller driver. (Note)
(5) Install the SATA controller driver during OS installation. (Note)

Before you begin

Please prepare:

(a) SATA hard drive(s). To ensure optimal performance, it is recommended that you use two hard drives with identical model and capacity for RAID array. If you do not want to create RAID, you may prepare only one hard drive.
(b) An empty formatted floppy disk. (Note)
(c) Windows XP/2000 setup disk.
(d) Driver CD for your motherboard. (Note)

(1) Installing SATA hard drive(s) in your computer

Attach one end of the SATA signal cable to the rear of the SATA hard drive and the other end to available SATA port(s) on the motherboard. Then connect the power connector from your power supply to the hard drive.

(Note) Required for setting up RAID array.

(2) Configuring SATA controller mode and boot sequence in BIOS Setup

Make sure to configure the SATA controller mode correctly in system BIOS Setup and set the first boot device.

Step 1:

Turn on your computer and press Del to enter BIOS Setup during POST (Power-On Self Test). In BIOS Setup, go to **Integrated Periperals --> RAID Config** (Figure 1).

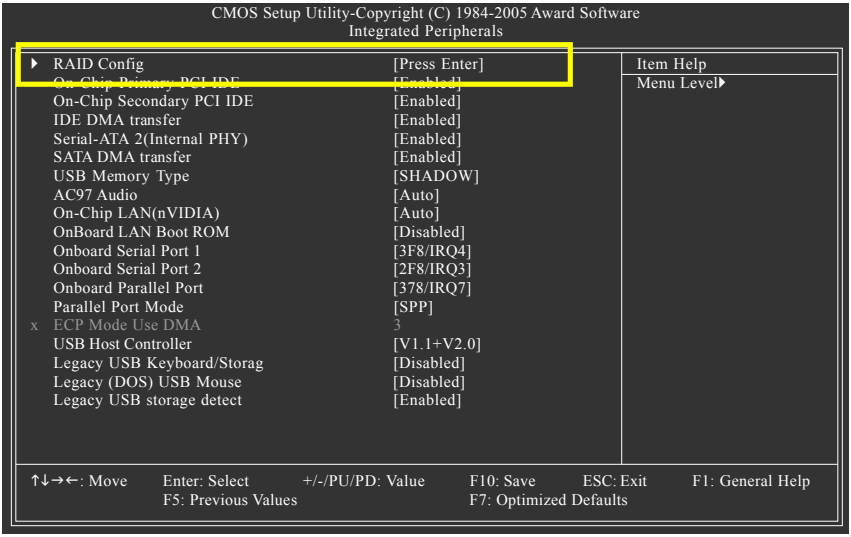

Figure 1

To set up a RAID array, ensure that **NV SATA RAID function, SATA Primary Master RAID** and **SATA Secndry Master RAID** are Enabled (Figure 2), otherwise set them to Disabled.

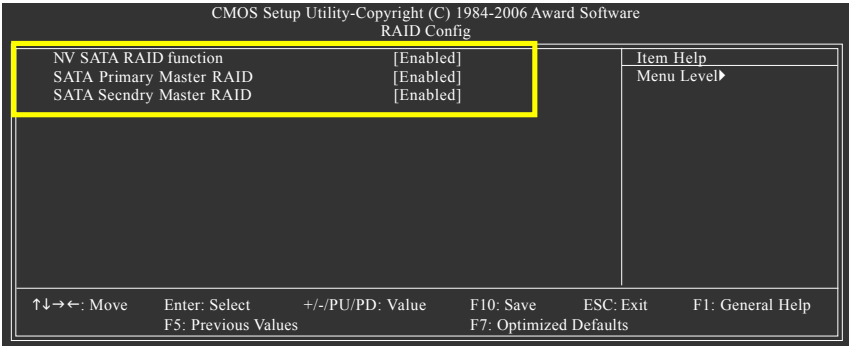

Figure 2

NOTE The BIOS Setup menus described in this section may not show the exact settings for your motherboard. The actual BIOS Setup menu options you will see shall depend on the motherboard you have and the BIOS version.

Step 2:

To boot from Windows installation CD-ROM, set **First Boot Device** under the **Advanced BIOS Features** menu to **CDROM** (Figure 3).

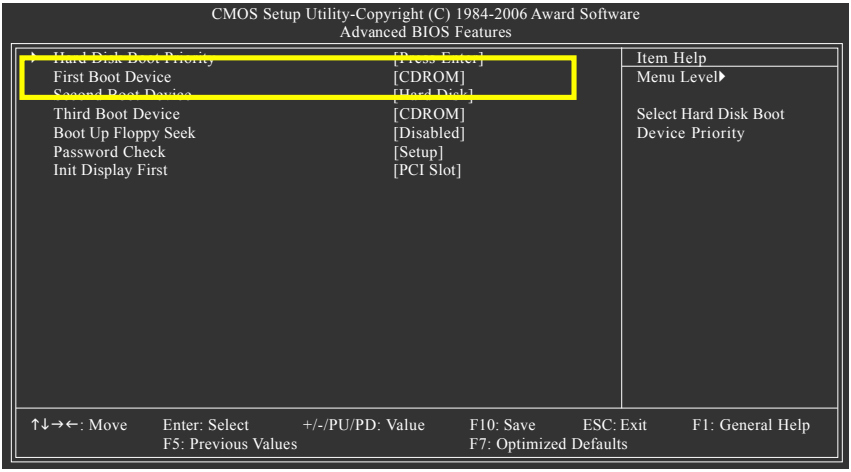

Figure 3

Step 3:

Save and exit BIOS Setup.

(3) Configuring RAID set in RAID BIOS

Enter the RAID BIOS setup utility to configure a RAID array. Skip this step if you do not want to create RAID.

Step 1:

After the POST memory test begins and before the operating system boot begins, look for a message which says "Press F10 to enter RAID setup utility" (Figure 4). Hit the **F10** key to enter the RAID BIOS setup utility.

```
NVIDIA RAID IDE ROM BIOS 4.22
Copyright (C) 2003 NVIDIA Corp.

Detecting array ...

Press F10 to enter RAID setup utility ...
```

Figure 4

Step 2:

The Define a New Array screen is the first option screen when you enter the NVIDIA RAID setup utility. (Figure 5). You can press the TAB key to highlight through options.

Step 3:

In the RAID Mode field, use the UP or DOWN ARROW key to select a RAID mode. The supported RAID modes include Mirroring ¡BStriping and Spanning. The following is an example of RAID 0 array creation.

Step 4:

If RAID 0 (Striping) is selected, you can manually set the striping block size. In the Striping Block field, use the UP or DOWN ARROW key to set the Striping Block size. The *KB* is the standard unit of Striping Block size. We recommend you leaving it to the default setting--Optimal (64K). The size range is from 4K to 128K.

```
NVIDIA RAID Utility   May 10 2004
- Define a New Array -

RAID Mode: Striping                    Striping Block: Optimal

Free Disks                             Array Disks
Loc      Disk Model Name               Loc      Disk Model Name

1.0.M    ST3120026AS
1.1.M    ST3120026AS                   [→] Add

                                       [←] Del

[F6] Back   [F7] Finish   [TAB] Navigate   [↑↓] Select   [ENTER] Popup
```

Figure 5

Step 5:

Next, select the hard drives which you wish to be included in the disk array. The Free Disks section displays the information about the currently installed SATA hard drives. Press the TAB key to move to the Free Disks section. Select the target hard drives using the UP or DOWN ARROW key and use the RIGHT ARROW key to add the hard drives to the Array Disks section (Figure 6).

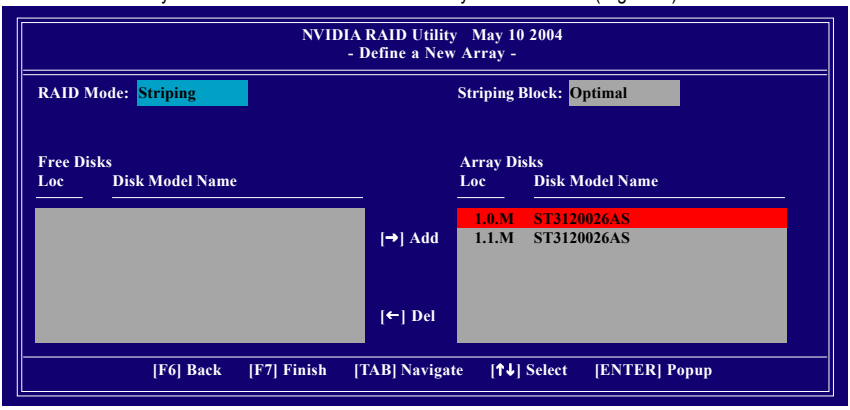

Figure 6

Step 6:

Press F7 after selecting the target hard disks. A message which says "Clear disk data?" will appear (Figure 7). If you are sure to clear the data in the selected hard drives, press Y. (If the hard drives contain previously created RAID array, you need to press Y to clear the data from the hard drives.)

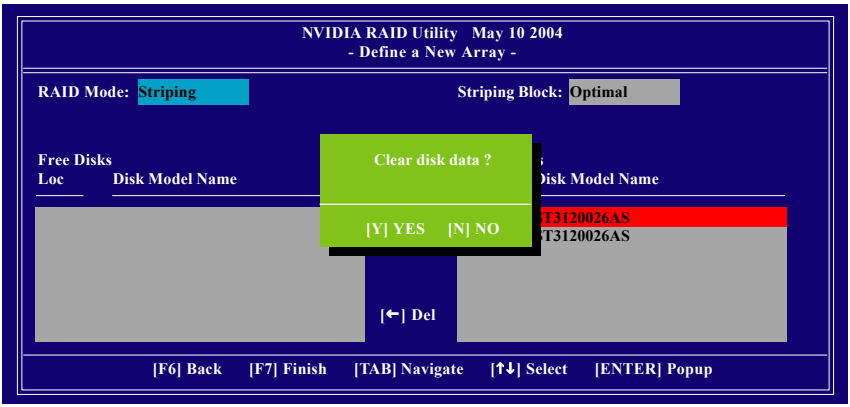

Figure 7

After that, the Array List screen displaying the RAID array you created will appear (Figure 8).
If you want to set the disk array as boot device, use the UP or DOWN ARROW key to select the array and press B. The **Boot** section will show **Yes**.

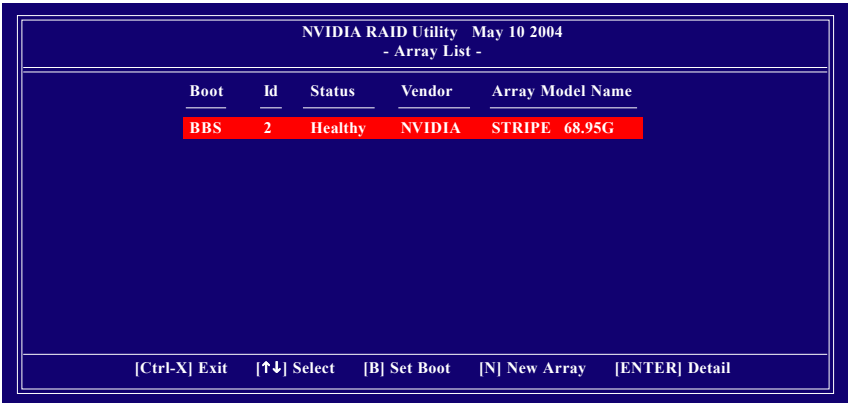

Figure 8

To read more information about the RAID array, press ENTER to enter the Array Detail screen (Figure 9), where you should see detailed information about RAID mode, disk block size, disk model name, and disk capacity, etc.

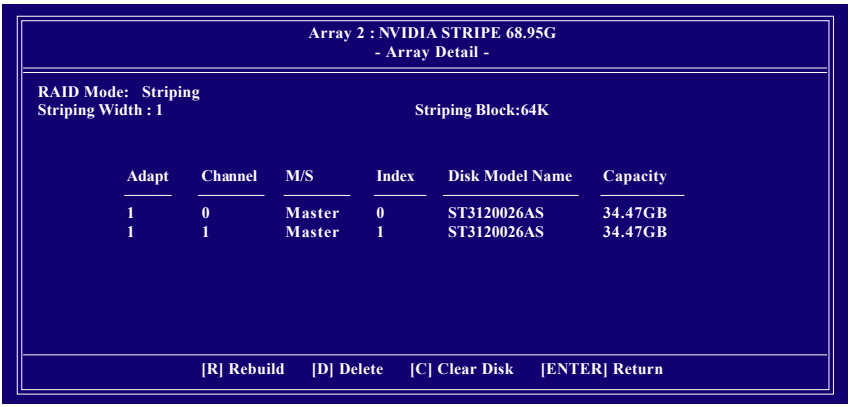

Figure 9

To delete the array, press D in the Array Detail screen. When the "Delete this array?" message appears, press Y to confirm or N to cancel. Press ENTER to return to the Array List screen.

To exit the Nvidia RAID utility, press ESC in the main menu or Ctrl+X in the Array List screen.

Now, you can proceed to install the SATA controller driver and operating system.

(4) Making a SATA Driver Disk

To install operating system onto RAID disks successfully, you need to install the SATA RAID driver during OS installation. Without the driver, the hard disk may not be recognized during the Windows setup process. Skip this step if you do not want to create RAID. First of all, copy the driver for the SATA controller from the motherboard driver CD-ROM to a floppy disk. See the instructions below about how to copy the driver in MS-DOS mode(Note). Prepare a startup disk that has CD-ROM support and a blank formatted floppy disk.

Step 1: Insert the prepared startup disk and motherboard driver CD-ROM in your system. Boot from the startup disk. Once at the A:\> prompt, change to the CD-ROM drive (example: D:\>). At the D:\> prompt, type the following two commands. Press ENTER after each command (Figure 10):

```
cd bootdrv
menu
```

Step 2: When the controller menu (Figure 11) appears, remove the startup disk and insert the blank formatted disk. Select the controller driver by pressing the corresponding letter from the menu.
For example, from the menu in Figure 11, press E to select **(E) nVIDIA nForce3 Series Raid (XP)** if you wish to install Windows XP (32-bit). Your system will then automatically zip and transfer this driver file to the floppy disk. Press 0 to exit when finished.

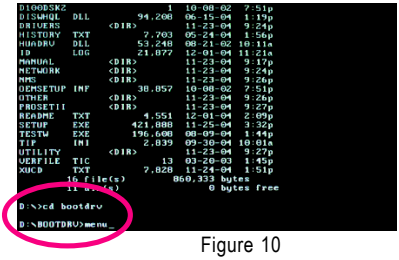

Figure 10

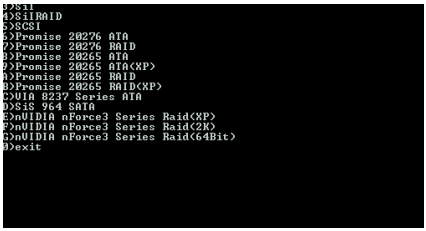

Figure 11

(Note) For users without a startup disk:
Use an alternative system and insert the GIGABYTE motherboard driver CD-ROM. From the CD-ROM drive folder, double click the **MENU.exe** file in the **BootDrv** folder (Figure 12). A command prompt window will open similar to that in Figure 11.

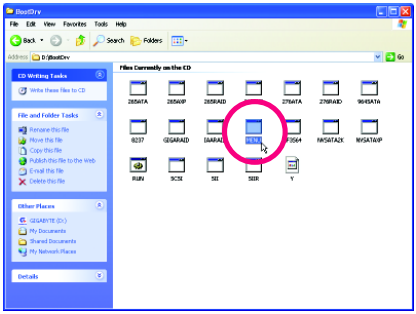

Figure 12

(5) Installing SATA controller driver during OS installation

Now that you have prepared the SATA driver disk and configured BIOS settings, you are ready to install Windows 2000/XP onto your SATA hard drive with the SATA driver. The following is an example of Windows XP installation.

Step 1: Restart your system to boot from the Windows 2000/XP Setup disk and press F6 as soon as you see the "Press F6 if you need to install a third party SCSI or RAID driver" message (Figure 13). After pressing F6, there will be a few moments of some files being loaded before you see the next screen.

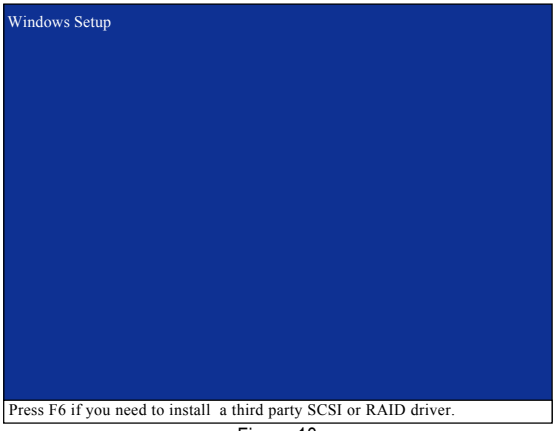

Figure 13

Step 2:
When a screen similar to that below appears, insert the floppy disk containing the SATA driver and press S (Figure 14).

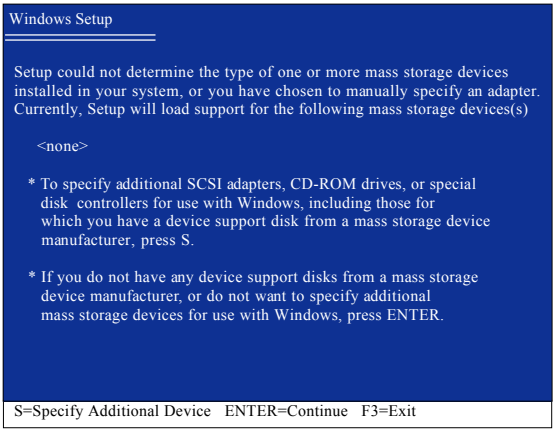

Figure 14

Step 3:

If Setup correctly recognizes the driver in the floppy disk, a controller menu similar to Figure 15 below will appear. Use the ARROW keys to select **NVIDIA RAID CLASS DRIVER** (Figure 15) and press ENTER. Later, when a screen similar to Figure 16 appears, you must press S to select additional driver. The screen will return to previous screen as shown in Figure 15. Select **NVIDIA NForce Storage Controller** and press ENTER.

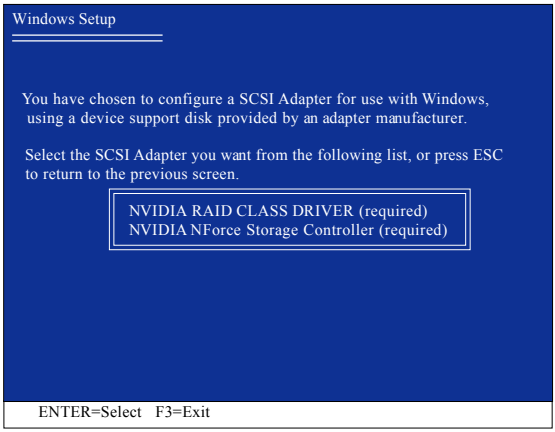

Figure 15

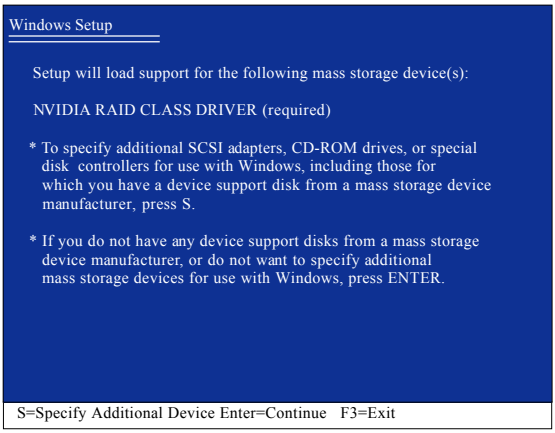

Figure 16

CAUTION If a message appears saying one or some file(s) cannot be found, please check the floppy disk or copy the correct SATA driver again from the motherboard driver CD.

Step 4:
When the next screen (Figure 17) appears, press ENTER to continue the SATA driver installation from the floppy disk.

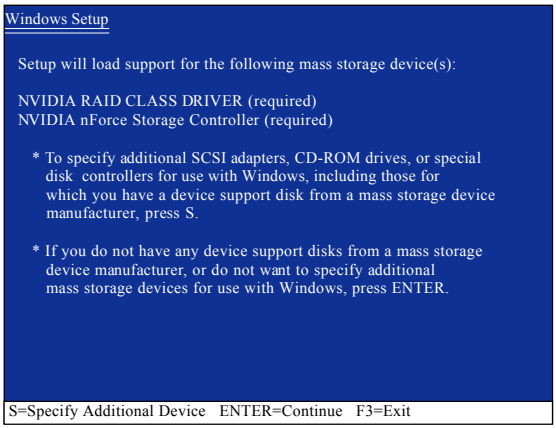

Figure 17

After the SATA controller driver installation is completed, you can proceed with the Windows 2000/XP installation.

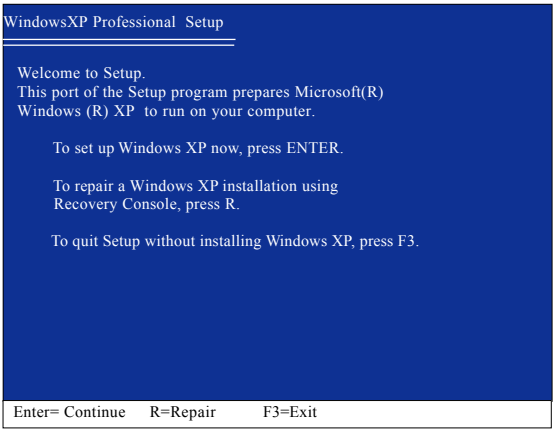

Figure 18

(Note: Each time you add a new hard drive to a RAID array, the RAID driver will have to be installed under Windows once for that hard drive. After that, the driver will not have to be installed.)

4-1-5 2 / 4 / 6 Channel Audio Function Introduction

The installation of audio software is very simple. Please follow the steps to install the function. (Following pictures are in Windows® XP)

2 Channel Audio Setup

We recommend that you use speakers with amplifier to get the best sound effect if the stereo output is applied.

STEP 1:
Connect the stereo speakers or earphone to "Line Out."

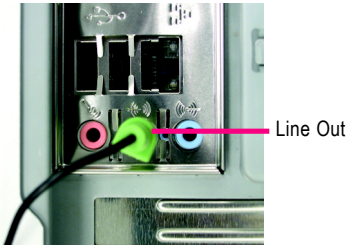

STEP 2:
After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

STEP 3:
On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **2-channel mode for stereo speaker output** check box.

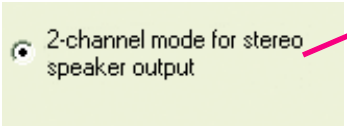

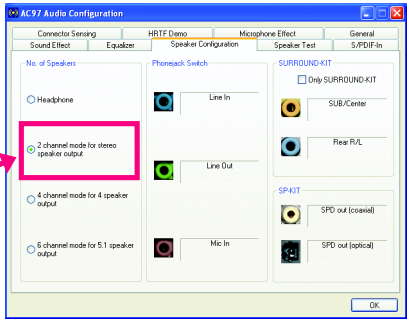

4 Channel Analog Audio Output Mode

STEP 1:
Connect the front channels to "Line Out," the rear channels to "Line In."

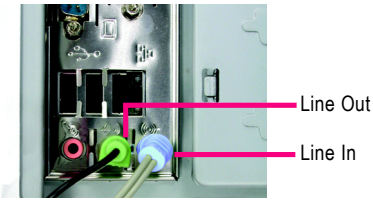

STEP 2:
After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

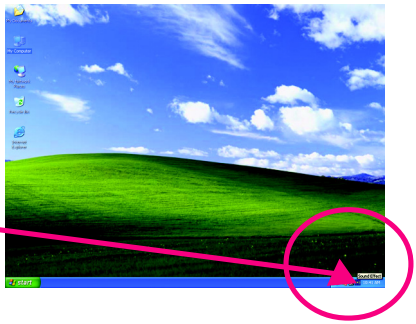

STEP 3:
On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **4-channel mode for 4 speaker output** check box.
Clear the **Only SURROUND-KIT** check box and press **OK.**



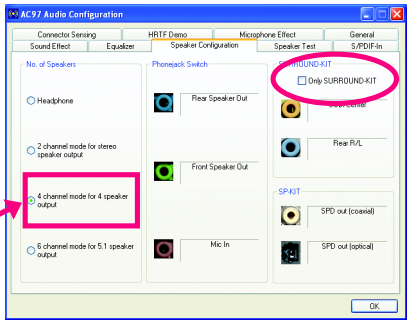

When the **Environment** setting is **None**, the sound would be performed as stereo mode (2-channel output). Please select other settings (ex: **Living Room**) for 4-channel output.

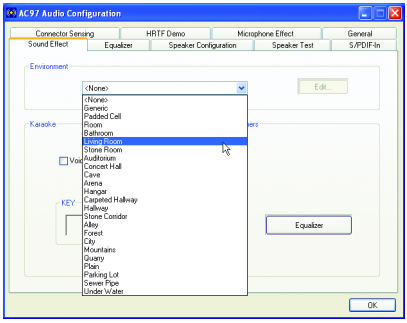

Basic 6 Channel Analog Audio Output Mode

Use the back audio panel to connect the audio output without any additional module.

STEP 1:

Connect the front channels to "Line Out",the rear channels to "Line In", and the Center/Subwoofer channels to "MIC In".

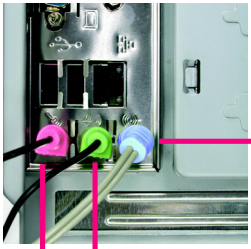

Line In

MIC In Line Out

STEP 2:

After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

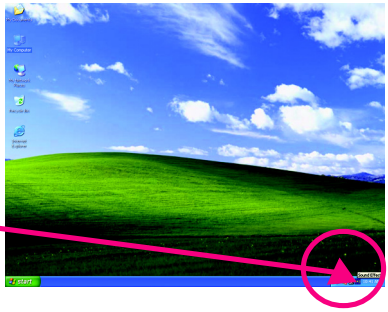

STEP 3:

On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **6-channel mode for 5.1 speaker output** check box. Clear the **Only SURROUND-KIT** check box and press **OK.**



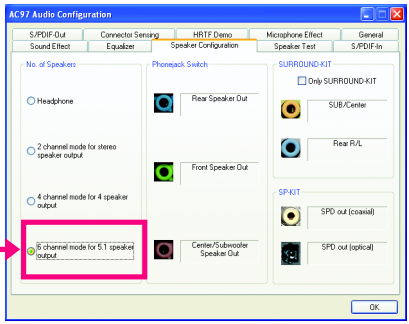

Advanced 6 Channel Analog Audio Output Mode

(using 6-Channel Audio Combo Kit, Optional Device):

(6-Channel Audio Combo Kit offers S/PDIF output, an optical and coaxial cable and a Surround-Kit. The Surround-Kit offers R/L surround, center/subwoofer output and rear surround.)

SURROUND-KIT access analog output to rear channels and Center/Subwoofer channels. It is the best solution if you need 6 channel output, Line In and MIC at the same time. "SURROUND-KIT" is included in the GIGABYTE unique "Audio Combo Kit" as picture.

STEP 1:
Secure the metal bracket of the"Surround Kit" to the chassis back panel with a screw.

STEP 2:
Connect the "SURROUND-KIT" cable to the SUR_CEN connector on the M/B.

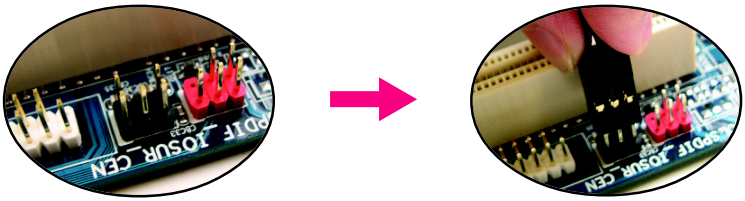

STEP 3:

Connect the front channels to back audio panel's "Line Out", the rear channels to SURROUND-KIT's REAR R/L, and the Center/Subwoofer channels to SURROUND-KIT's SUB CENTER.

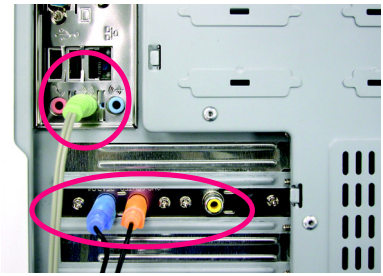

STEP 4:

After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

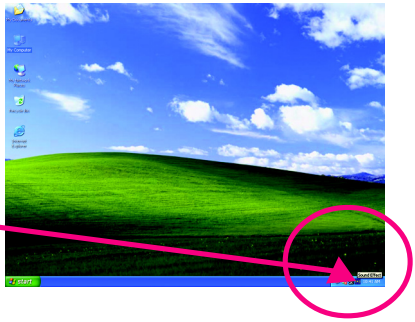

STEP 5:

On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **6-channel mode for 5.1 speaker output** check box. Select the **Only SURROUND-KIT** check box and press **OK.**



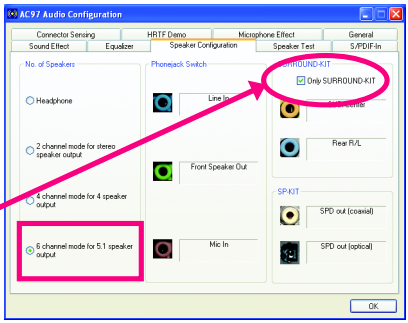

Basic & Advanced 6 Channel Analog Audio Output Mode Notes:

When the **Environment** setting is **None**, the sound would be performed as stereo mode (2-channel output). Please select the other settings for 6 channels output.

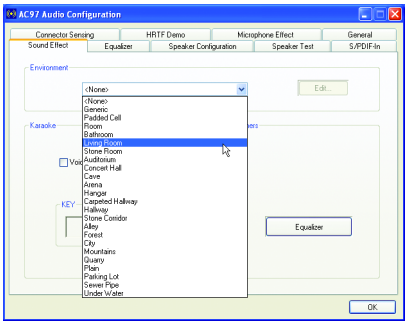

S/PDIF Output Device (Optional Device)

A "S/PDIF output" connector is available on the motherboard. Cable with rear bracket could link to the "S/PDIF output" connector (As picture.) For the further linkage to decoder, rear bracket provides coaxial cable and Fiber connecting port.

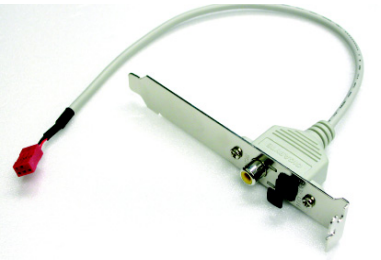

1. Connect the S/PDIF output device to the rear bracket of PC, and fix it with screw.

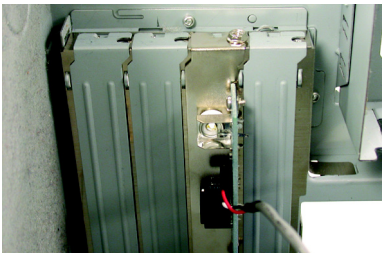

2. Connect S/PDIF device to the motherboard.

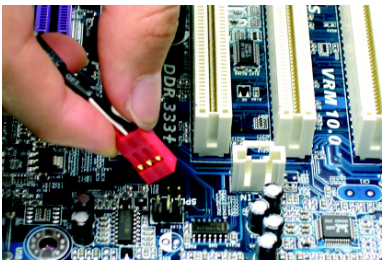

3. Connect S/PDIF to the S/PDIF decoder.

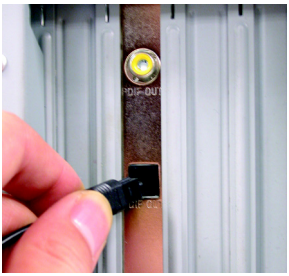

4-2 Troubleshooting

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to GIGABYTE's website.

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why?
Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down?
Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: How do I clear CMOS?
Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

1. Turn off power.
2. Disconnect the power cord from MB.
3. Take out the battery gently and put it aside for about 1 minute (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for 5 seconds).
4. Re-insert the battery to the battery holder.
5. Connect power cord to MB again and turn on power.
6. Press Del to enter BIOS and load Fail-Safe Defaults(or load Optimized Defaults).
7. Save changes and reboot the system.

Question 4: Why do I still get a weak sound after turning up the speaker to the maximum volume?
Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 5: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?
Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

→ AWARD BIOS Beep Codes

1 short: System boots successfully
2 short: CMOS setting error
1 long 1 short: DRAM or M/B error
1 long 2 short: Monitor or display card error
1 long 3 short: Keyboard error
1 long 9 short: BIOS ROM error
Continuous long beeps: DRAM error
Continuous short beeps: Power error

Contact Us

- **Taiwan (Headquarters)**

GIGA-BYTE TECHNOLOGY CO., LTD.
Address: No.6, Bau Chiang Road, Hsin-Tien,
Taipei 231, Taiwan
TEL: +886-2-8912-4888
FAX: +886-2-8912-4003
Tech. and Non-Tech. Support (Sales/Marketing) :
http://ggts.gigabyte.com.tw
WEB address (English): http://www.gigabyte.com.tw
WEB address (Chinese): http://www.gigabyte.tw

- **U.S.A.**

G.B.T. INC.
TEL: +1-626-854-9338
FAX: +1-626-854-9339
Tech. Support:
http://rma.gigabyte-usa.com
Web address: http://www.gigabyte.us

- **Mexico**

G.B.T Inc (USA)
Tel: +1-626-854-9338 x 215 (Soporte de habla hispano)
FAX: +1-626-854-9339
Correo: soporte@gigabyte-usa.com
Tech. Support:
http://rma.gigabyte-usa.com
Web address: http://www.gigabyte-latam.com

- **Japan**

NIPPON GIGA-BYTE CORPORATION
WEB address : http://www.gigabyte.co.jp

- **Singapore**

GIGA-BYTE SINGAPORE PTE. LTD.
WEB address : http://www.gigabyte.com.sg

- **China**

NINGBO G.B.T. TECH. TRADING CO., LTD.
WEB address : http://www.gigabyte.cn

Shanghai
TEL: +86-21-63410999
FAX: +86-21-63410100

Beijing
TEL: +86-10-62102838
FAX: +86-10-62102848

Wuhan
TEL: +86-27-87851061
FAX: +86-27-87851330

GuangZhou
TEL: +86-20-87540700
FAX: +86-20-87544306 ext. 333

Chengdu
TEL: +86-28-85236930
FAX: +86-28-85256822 ext. 814

Xian
TEL: +86-29-85531943
FAX: +86-29-85539821

Shenyang
TEL: +86-24-83992901
FAX: +86-24-83992909

- **India**

GIGABYTE TECHNOLOGY (INDIA) LIMITED
WEB address : http://www.gigabyte.in

- **Australia**

GIGABYTE TECHNOLOGY PTY. LTD.
WEB address : http://www.gigabyte.com.au

- **Germany**

G.B.T. TECHNOLOGY TRADING GMBH

WEB address : http://www.gigabyte.de

- **U.K.**

G.B.T. TECH. CO., LTD.

WEB address : http://www.giga-byte.co.uk

- **The Netherlands**

GIGA-BYTE TECHNOLOGY B.V.

WEB address : http://www.giga-byte.nl

- **France**

GIGABYTE TECHNOLOGY FRANCE

WEB address : http://www.gigabyte.fr

- **Italy**

WEB address : http://www.giga-byte.it

- **Spain**

GIGA-BYTE SPAIN

WEB address : http://www.giga-byte.es

- **Czech Republic**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in CZECH REPUBLIC

WEB address : http://www.gigabyte.cz

- **Turkey**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in TURKEY

WEB address : http://www.gigabyte.com.tr

- **Russia**

Moscow Representative Office Of GIGA-BYTE Technology Co., Ltd.

WEB address : http://www.gigabyte.ru

- **Latvia**

GIGA-BYTE Latvia

WEB address : http://www.gigabyte.com.lv

- **Poland**

Office of GIGA-BYTE TECHNOLOGY Co., Ltd. in POLAND

WEB address : http://www.gigabyte.pl

- **Ukraine**

WEB address : http://www.gigabyte.kiev.ua

- **Romania**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in Romania

WEB address : http://www.gigabyte.com.ro

- **Serbia & Montenegro**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in SERBIA & MONTENEGRO

WEB address : http://www.gigabyte.co.yu

GIGABYTE Global Service System

To submit a technical or non-technical (Sales/ Marketing) question, please link to :

http://ggts.gigabyte.com.tw

Then select your language to enter the system.