



**INSTALLATION MANUAL
MANUAL DE INSTALACIÓN
MANUEL D'INSTALLATION
MANUALE D'INSTALLZIONE
MANUAL DE INSTALAÇÃO
INSTALLATIONS-HANDBUCH
ΕΓΧΕΙΡΙΔΙΟ ΕΓΚΑΤΑΣΤΑΣΗΣ
ИНСТРУКЦИЯ ПО УСТАНОВКЕ**


Heat pump

AVMCH052CA1(4)
AVMCH072CA1(4)
AVMCH105CA1(4)
AVMCH128CA1(4)
AVMCH140CA1(4)
AVMCH052EA(B)1(4)
AVMCH070EA(B)1(4)
AVMCH105EA(B)1(4)
AVMCH128EA(B)1(4)
AVMCH140EA(B)1(4)

Cooling only

AVMCC052CA1(4)
AVMCC072CA1(4)
AVMCC105CA1(4)
AVMCC128CA1(4)
AVMCC140CA1(4)
AVMCC052EA(B)1(4)
AVMCC070EA(B)1(4)
AVMCC105EA(B)1(4)
AVMCC128EA(B)1(4)
AVMCC140EA(B)1(4)

**System Air Conditioner
Aire acondicionado sistemático
Climatiseur numérique multifonctionnel
Sistema Aria Condizionata
Sistema Ar Condicionado
Klimaanlage System
Σύστημα Κλιματισμού
Системный Воздушный Кондиционер**

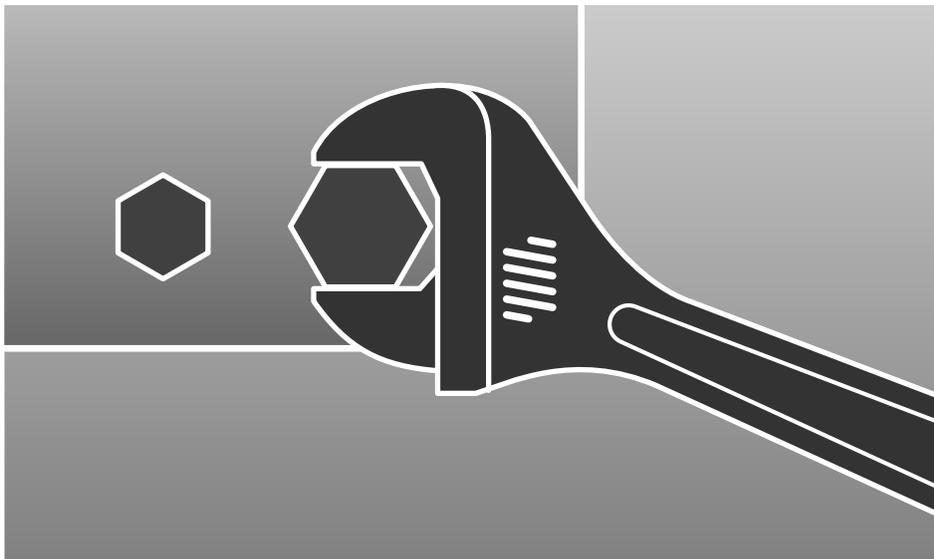

ENGLISH

ESPAÑOL

FRANÇAIS

ITALIANO

PORTUGUÊS

DEUTSCH

ΕΛΛΗΝΙΚΑ

RUSSIAN

Contents



4 WAY CASSETTE INSTALLATION

- Preparation for Installation 4
- Deciding on Where to Install the Indoor Unit 5
- Indoor Unit Installation 8
- Purging the Unit 9
- Connecting the Refrigerant Pipe 10
- Cutting/Flaring the Pipes 11
- Performing Leak Test & Insulation 12
- Drainpipe and Drain Hose Installation 13
- Connecting the Connection Cord 15
- Assigning Address to Indoor Unit 16
- Additional Functions 17
- Bio-pure Filter Installation(Optional) 18
- Troubleshooting 19



OPTIONAL ACCESSORIES

- Parts List 23

4 WAY CASSETTE INSTALLATION

- Preparation for Installation 4
- Deciding on Where to Install the Indoor Unit ... 5
- Indoor Unit Installation 8
- Purging the Unit 9
- Connecting the Refrigerant Pipe 10
- Cutting/Flaring the Pipes 11
- Performing Leak Test & Insulation 12
- Drainpipe and Drain Hose Installation 13
- Connecting the Connection Cord 15
- Assigning Address to Indoor Unit 16
- Additional Functions 17
- Bio-pure Filter Installation(Optional) 18
- Troubleshooting 19

Preparation for Installation

When deciding on the location of the air conditioner with the owner, the following restrictions must be taken into account.

General



Do NOT install the air conditioner in a location where it will come into contact with the following elements:

- ◆ Combustible gases
- ◆ Saline air
- ◆ Machine oil
- ◆ Sulphide gas
- ◆ Special environmental conditions

If you must install the unit in such conditions, first consult your dealer.

Accessories

- ◆ The following accessories are supplied with the indoor unit.
The type and quantity may differ depending on the specifications

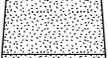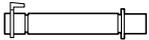
Pattern sheet 	Insulation cover drain 	Insulation 	Insulation cover band 
Insulation pipe 	Insulation drain hose 	Installation manual 	Cable-tie 
Flexible hose 	M4x12 tapped Screw 	Pad stopper 	Insulation drain sub 

Deciding on Where to Install the Indoor Unit

Indoor Unit

- ◆ There must be no obstacles near the air inlet and outlet.
- ◆ Install the indoor unit on a ceiling that can support its weight.
- ◆ Maintain sufficient clearance around the indoor unit.
- ◆ Make sure that the water dripping from the drain hose runs away correctly and safely.
- ◆ The indoor unit must be installed in this way, that they are out of public access. (Not touchable by the users)

Space Requirements for Indoor Unit

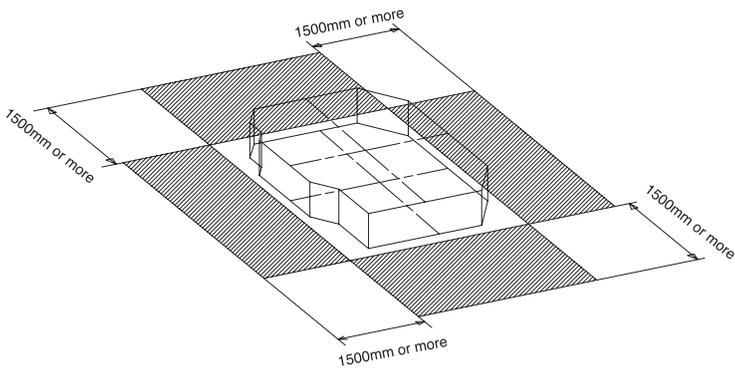


Deciding on Where to Install the Indoor Unit (cont.)

Drawing of the indoor unit

052/070/072


Unit : mm

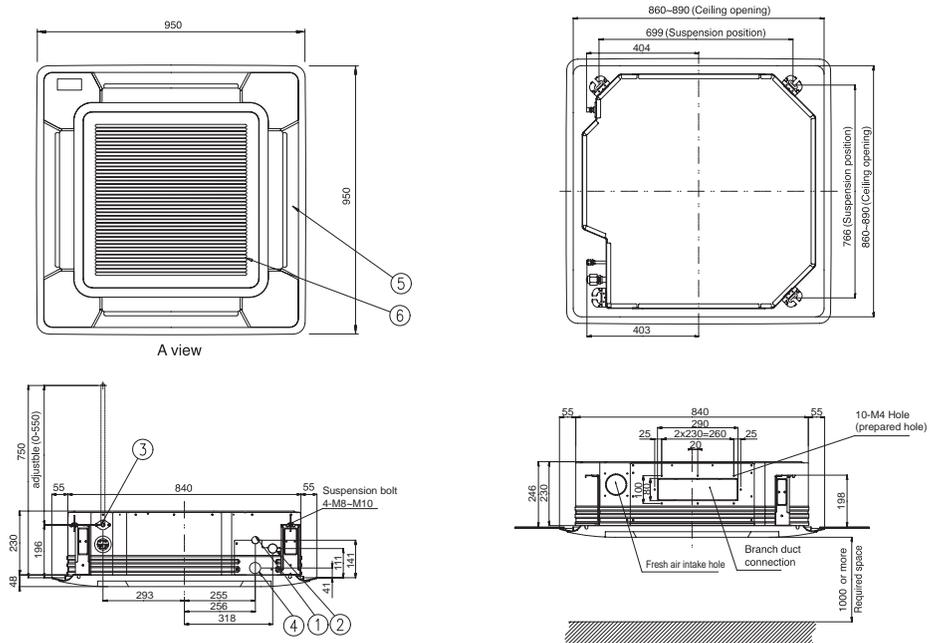

No.	Name	Remark
1	Liquid pipe connection	ø9.52
2	Gas pipe connection	ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge grille	
6	Air suction grille	

105/128/140







Unit : mm

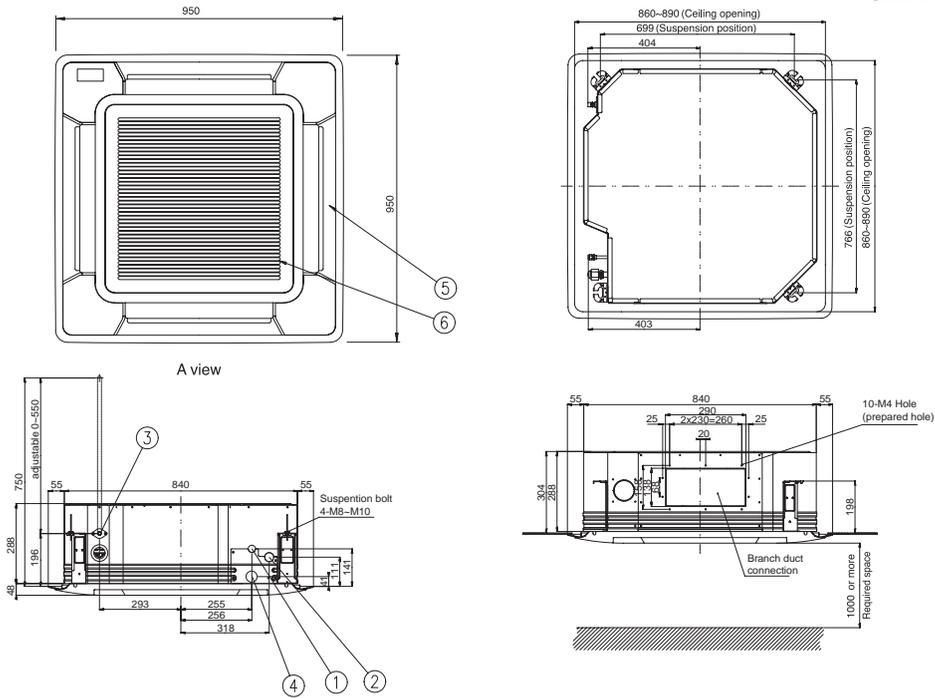

No.	Name	Remark
1	Liquid pipe connection	ø9.52
2	Gas pipe connection	ø19.05
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge grille	
6	Air suction grille	

Indoor Unit Installation

It is recommended to install the refnet joint before installing the indoor unit.

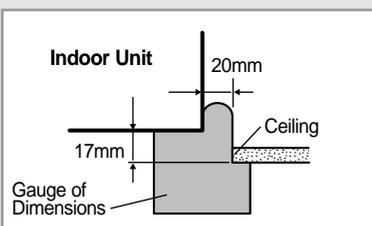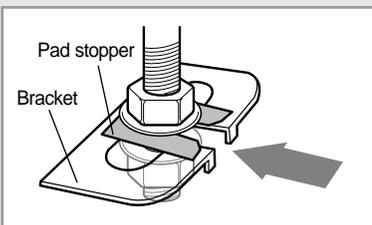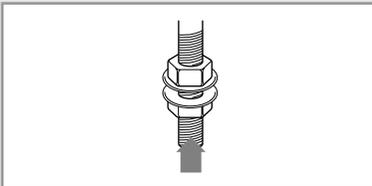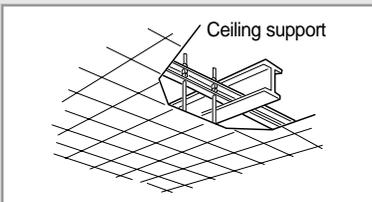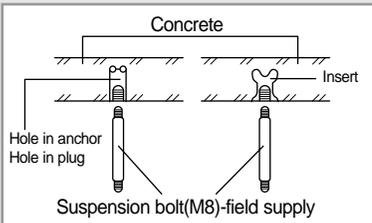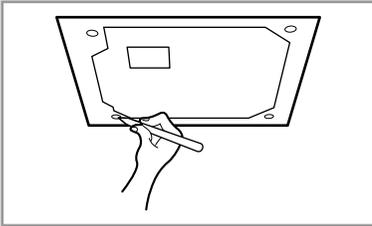

- 1 Place the pattern sheet on the ceiling at the spot where you want to install the indoor unit.

Note ◆ Since the diagram is made of paper, it may shrink or stretch slightly due to temperature or humidity. For this reason, before drilling the holes maintain the correct dimensions between the markings; refer to page 6 or 7.

- 2 Insert bolt anchors, use existing ceiling supports or construct a suitable support as shown in figure.

- 3 Install the suspension bolts depending on the ceiling type.

IMPORTANT ◆ Ensure that the ceiling is strong enough to support the weight of the indoor unit.
Before hanging the unit, test the strength of each attached suspension bolt.
◆ If the length of suspension bolt is more than 1.5m, it is required to prevent vibration.

- 4 Screw eight nuts to the suspension bolts making space for hanging the indoor unit.

IMPORTANT You must install the suspension bolts more than four when installing the indoor unit.

- 5 Hang the indoor unit to the suspension bolts between two nuts.

Note ◆ Piping must be laid and connected inside the ceiling when suspending the unit. If the ceiling is already constructed, lay the piping into position for connection to the unit before placing the unit inside the ceiling.

- 6 Screw the nuts to suspend the unit. Cut a pad stopper and place it on the bracket at this time.

- 7 Adjust the unit to the appropriate position considering the installation area for the front panel.

7-1 Place the pattern sheet on the indoor unit.

7-2 Adjust a space between the ceiling and the indoor unit by using the gauge of dimensions.

7-3 Fix the indoor unit securely after adjusting level of the unit by using a leveler.

7-4 Remove the pattern sheet, connect the other cables and install the front panel.

Purging the unit


On delivery, the indoor unit is loaded with refrigerant gas.

All this gas must therefore be purged before connecting the assembly piping. To purge the inert gas, proceed as follows.

Unscrew the pinch pipe at the end of each refrigerant pipe.

Result: All inert gas escapes from the indoor unit.



Note ◆ To prevent dirt or foreign objects from getting into the pipes during installation, do NOT remove the pinch pipe completely until you are ready to connect the piping.

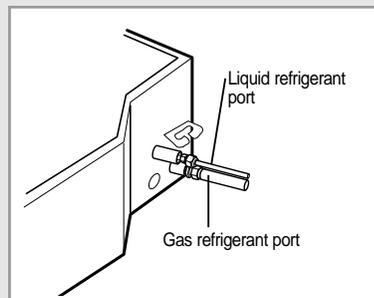

Connecting the Refrigerant Pipe

There are two refrigerant pipes of differing diameters:

- ◆ A smaller one for the liquid refrigerant
- ◆ A larger one for the gas refrigerant
- ◆ The inside of copper pipe must be clean & has no dust.

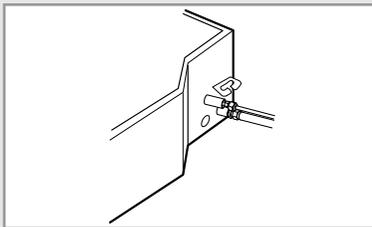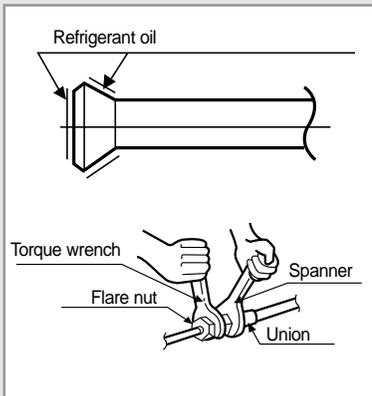

- 1 Remove the pinch pipe on the pipes and connect the assembly pipes to each pipe, tightening the nuts, first manually and then with a torque wrench, a spanner applying the following torque.

Outer Diameter	Torque (kgf·cm)
6.35 mm (1/4")	140~170
9.52 mm (3/8")	250~280
12.70 mm (1/2")	380~420
15.88 mm (5/8")	440~480
19.05 mm (3/4")	990~1210
22.23 mm (7/8")	990~1210



Note ◆ If the pipes must be shortened refer to page 11.

- 2 Must use insulator which is thick enough to cover the refrigerant pipe to protect the condensate water on the outside of pipe falling onto the floor and the efficiency of the unit will be better.
- 3 Cut off any excess foam insulation.
- 4 Be sure that there must be no crack or wave on the bended area.
- 5 It would be necessary to double the insulation thickness(10mm or more) to prevent condensation even on the insulator when if the installed area is warm and humid.

Cutting/Flaring the Pipes

1 Make sure that you have the required tools available (pipe cutter, reamer, flaring tool and pipe holder).


2 If you wish to shorten the pipes, cut it with a pipe cutter, taking care to ensure that the cut edge remains at a 90° angle with the side of the pipe. Refer to the illustrations below for examples of edges cut correctly and incorrectly.

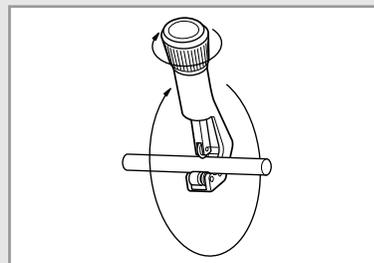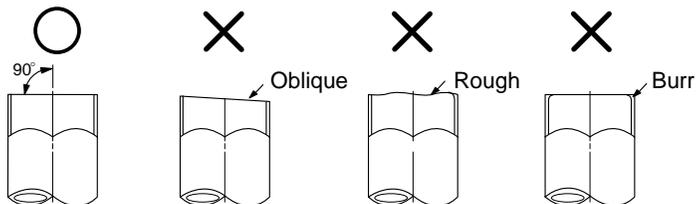


3 To prevent any gas from leaking out, remove all burrs at the cut edge of the pipe, using a reamer.

4 Slide a flare nut on to the pipe and modify the flare.

Outer Diameter (D)	Depth (A)
6.35 mm (1/4")	1.3mm
9.52 mm (3/8")	1.8mm
12.70 mm (1/2")	2.0mm
15.88 mm (5/8")	2.2mm
19.05 mm (3/4")	2.2mm
22.23 mm (7/8")	2.2mm

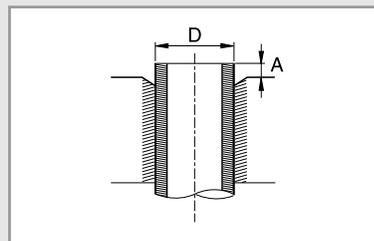


5 Check that the flaring is correct, referring to the illustrations below for examples of incorrect flaring.

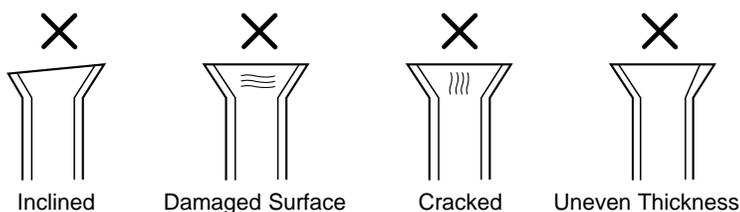

6 Align the pipes and tighten the flare nuts first manually and then with a torque wrench, applying the following torque.

Outer Diameter	Torque (kgf·cm)
6.35 mm (1/4")	140~170
9.52 mm (3/8")	250~280
12.70 mm (1/2")	380~420
15.88 mm (5/8")	440~480
19.05 mm (3/4")	990~1210
22.23 mm (7/8")	990~1210

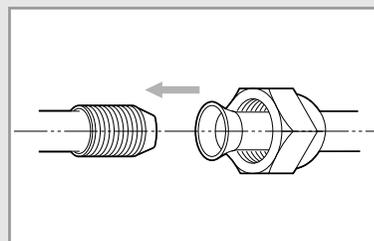


CAUTION

◆ In case of welding the pipe, you must weld with nitrogen gas blowing.

Performing Leak Test & Insulation

Leak Test

To check for gas leaks on the indoor unit, check the connection part of each refrigerant pipe by using a leak detector.

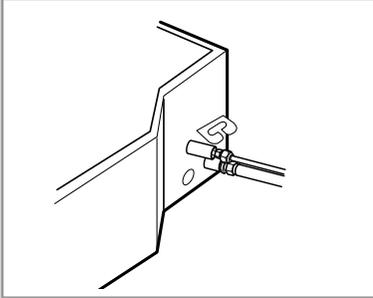


Insulation

Once you have checked that there are no leaks in the system, you can insulate the piping and hose.


- 1 To avoid condensation problems, place **T13.0 or thicker Acrylonitrile Butadien Rubber** around each refrigerant pipe.

Note ♦ Always make the seam of pipes face upwards.

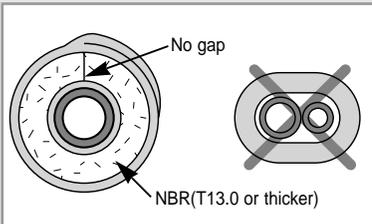

- 2 Wind insulating tape around the pipes and drain hose.

- 3 Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.

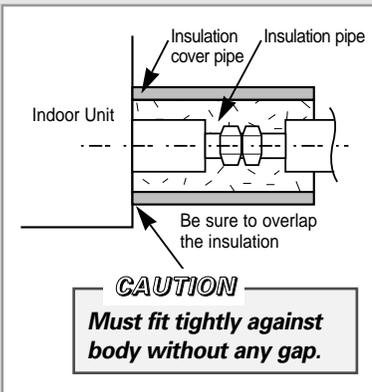

Drainpipe and Drain Hose Installation




Care must be taken when installing the drainpipe and drain hose for the indoor unit so that condensate water is drained correctly outside.

- 1 Fix the flexible hose to the drainpipe.
 - ◆ The connection port of the flexible hose and PVC drainpipe must be fixed with PVC adhesives.
 - ◆ Check out that the connected part doesn't leak.

- 2 Connect the flexible hose to the flexible hose port.
 - ◆ Make sure that a rubber ring is installed on the drain hose port.

- 3 Install the drainpipe as shortly as possible.
 - ◆ Give a slightly slant to the drainpipe for proper drainage of condensate water.
 - ◆ There must be no gap on the connected part so that the drainpipe is not separated from the flexible hose


- 4 Insulate the drainpipe, and then fix it as indicated.

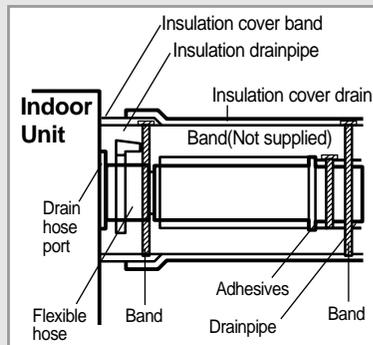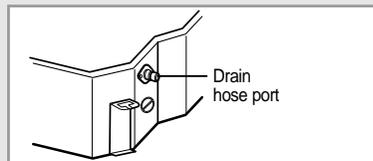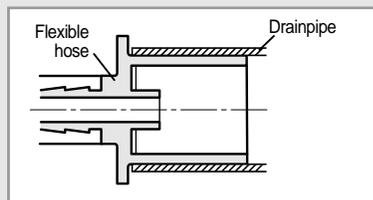


CAUTION

Check that the indoor unit is level with the ceiling by using the leveler.


Install air ventilation to drain condensate water smoothly.

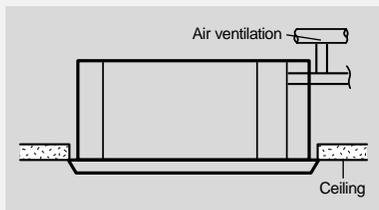


Do not give the hose and upward gradient after the connection port. This will cause water to flow backwards when the unit is stopped, resulting in water leaks.

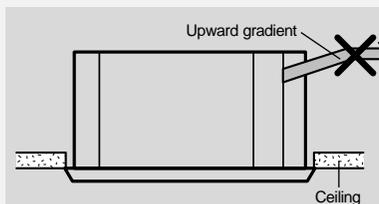

If it is necessary to increase the height of the drainpipe, install the drainpipe straightly within 300 mm from the flexible hose port. If it is raised higher than 550 mm, there can be water leaks.

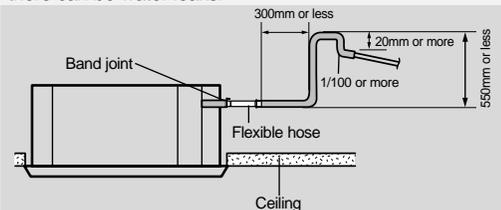


Do not apply force to the piping on the unit side when connecting the drain hose. The hose should not be allowed to hang loose from its connection to the unit. Fasten the hose to a wall, frame or other support as close to the unit as possible.

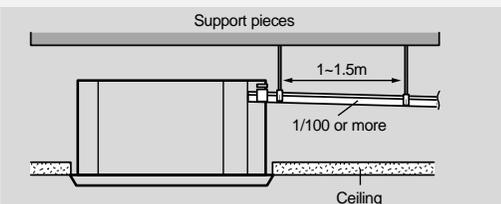

Drain Hose Installation (cont.)

Note ♦ If a concentrated drain hose is installed, refer to the figure below.

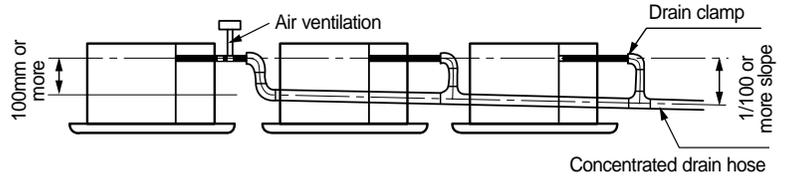


Testing the drainage

You should test the drainage after completing the installation.


Prepare a little water about 2.0 liters.

1 Turn the cover drain pump, then pull it out.

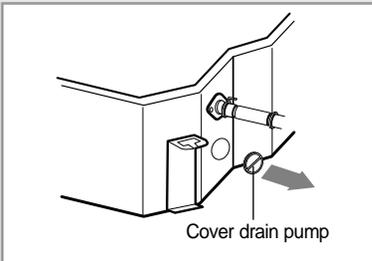

2 Pour water into the indoor unit as shown in figure.

Note ♦ If you do not pour water inside the water supply intake, water may spill from the indoor unit.

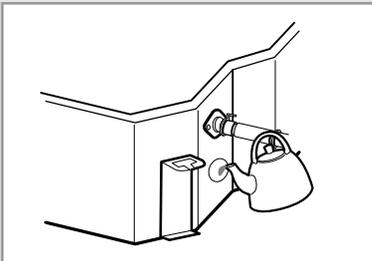

3 Confirm that the water flows out through the drain hose.

Note ♦ You can check the drainage only when the air conditioner is in cool mode.


4 Reassemble the cover drain pump.

Connecting the Connection Cord

The indoor unit is powered from the outdoor unit via the connection cord.


- 1 Remove the screw on the electrical component box and remove the cover plate.
- 2 Route the connection cord through the side of the indoor unit and connect the cable to terminals; refer to the figure below.
- 3 Route the other end of the cable to the outdoor unit through the ceiling & the hole on the wall.
- 4 Reassemble the electrical component box cover, carefully tightening the screw.

Wiring Diagram

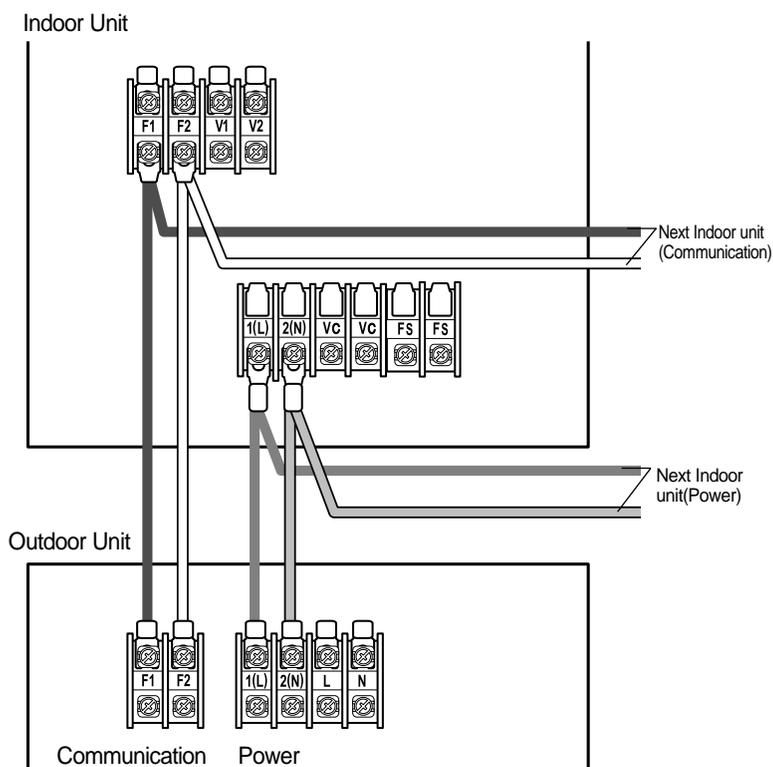

Assigning Address to Indoor Unit

- 1 Before installing the indoor unit, assign an address to the indoor unit according to the air conditioning system plan.
- 2 The address of the indoor unit is assigned by adjusting MAIN(SW01, SW02) and RMC(SW03) rotary switches.

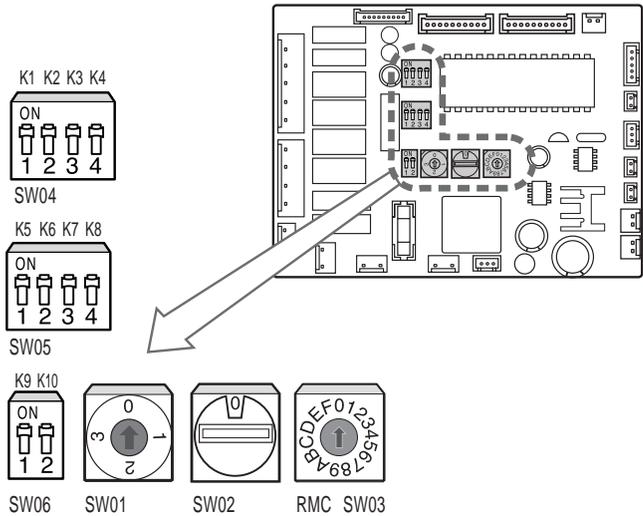

Setting Main Address

- ◆ The MAIN address is for communication between the indoor unit and the outdoor unit. Therefore, you must set it to operate the air conditioner properly.
- ◆ You can set the MAIN address from '00' to '39' by mixing SW01 and SW02. The MAIN address from '00' to '39' should differ from each other.
- ◆ Check the indoor unit address on the plan that you are to install and set the address according to the plan.

SW01	SW02	Indoor unit address	SW01	SW02	Indoor unit address
	0, 1, 2~9	00~09		0, 1, 2~9	20~29
	0, 1, 2~9	10~19		0, 1, 2~9	30~39

Setting RMC Address


- ◆ The SW03 RMC switch is the address setting switch for controlling the indoor unit with the wired remote controller and centralized controller.
- ◆ You must set the SW03, K1 and K2 switch when using the wired remote controller and centralized controller.
- ◆ You don't have to set the SW03 RMC switch when not using the wired remote controller and centralized controller.

Additional Functions

Increasing fan speed

- ◆ If external static pressure is too great, the air flow volume may drop too low at each air outlet. This problem can be solved by increasing the fan speed.


Switch No.	Switch ON	Switch OFF
K3	Normal fan speed	High fan speed

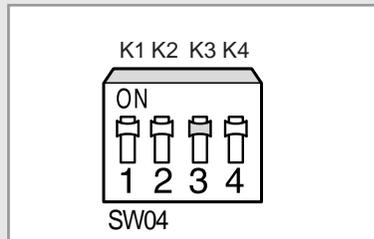

Compensation for lost temperature in heating operation

- ◆ Reduces the difference between an actual room temperature and a sensed temperature by the air conditioner when heating.


Switch No.	Switch ON	Switch OFF
K5	5°C compensation	2°C compensation

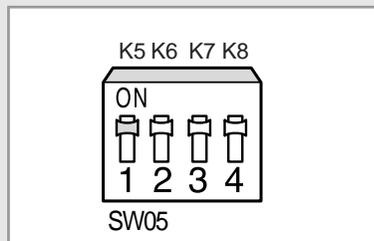

Adjusting filter cleaning cycle

- ◆ You can adjust the cycle for filter sign indicator.


Switch No.	Switch ON	Switch OFF
K6	1000 hours	2000 hours

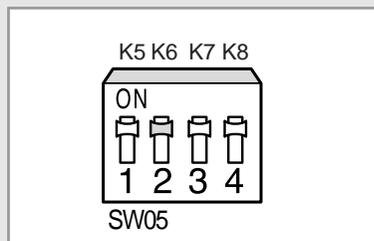

Control of electronic expansion valve at the indoor unit off

- ◆ When an indoor unit off makes refrigerant noise, set K9 to OFF position to reduce the noise. However, if a distributor kit is installed, K9 must be at ON position.


Switch No.	Switch ON	Switch OFF
K9	Electronic expansion valve step 80	Electronic expansion valve step 0 (Sub cool control)

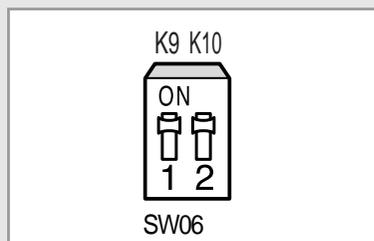

Bio-pure Filter installation (optional)

The air conditioner can be fitted with a Bio-Pure filter to remove minute dust particles. The service life of the filter is approximately three months depending on the time during which the air conditioner is used.

Accessories

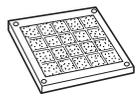Bio-pure filter	M4x10 tapped Screw
1	4
	

- 1 Remove the vinyl packing from the filter.

Note Do not remove the packing from a bio-pure filter until you wish to use the filter, as it will lose its properties.

- 2 Open the front grille by pulling the tabs on the grille.


- 3 Remove the safety clips to open the grille completely.

- 4 Pull out the air filter.

- 5 Locate the bio-pure filter on the center of the air filter.

- 6 Secure the bio-pure filter with four screws.

- 7 Reinstall the filter and the front grille.

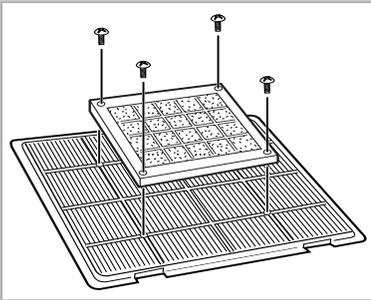

Troubleshooting

Detection of errors

- ◆ If an error occurs during the operation, an LED flickers and the operation is stopped except the LED.
- ◆ If you re-operate the air conditioner, it operates normally at first, then detect an error again.

LED Display on the indoor unit

LED Display

Abnormal conditions	Indicators					Operating
						
Power reset		X	X	X	X	
Error of temperature sensor in indoor unit (OPEN/SHORT)	X	X		X	X	Displayed on appropriate indoor unit which is operating
Error of heat exchanger sensor in indoor unit Error of heat exchanger OUT sensor in indoor unit Error of outlet temperature sensor in indoor unit (OPEN/SHORT): For heat pump models only		X		X	X	Displayed on appropriate indoor unit which is operating
Error of mixed operation	X		X		X	
Error of outdoor temperature sensor Error of COND sensor Error of DISCHARGE sensor		X	X		X	Displayed on appropriate indoor unit which is operating Displayed on outdoor unit
1. No communication for 2 minutes between indoor unit and outdoor unit (communication error for more than 2 minutes) 2. Indoor unit receiving the communication error from outdoor unit 3. Outdoor unit tracking 3 minute error 4. When sending the communication error from outdoor unit the mismatching of the communication numbers and installed numbers after completion of tracking. (communication error for more than 2 minutes)	X	X			X	1. Error of indoor unit: Displayed on the indoor unit regardless of operation 2. Error of outdoor unit: Displayed on the indoor unit which is operating

● On ● Flickering X Off

- ◆ If you turn off the air conditioner when the LED is flickering, the LED is also turned off.
- ◆ If you re-operate the air conditioner, it operates normally at first, then detect an error again.

Troubleshooting (cont.)

LED Display

Abnormal conditions	Indicators					Operating
						
Self-diagnostic error (including the indoor unit not detected) 1. Error of electronic expansion valve close 2. Error of electronic expansion valve open 3. Breakaway of EVA OUT sensor 4. Breakaway of EVA IN sensor	X	X				Displayed on appropriate indoor unit which is operating Displayed on outdoor unit
5. Breakaway of COND MID sensor 6. 2nd detection of refrigerant completely leak 7. 2nd detection of high temperature COND 8. 2nd detection of high temperature DISCHARGE 9. COMP DOWN due to 2nd detection of low pressure switch 10. Error of reverse phase 11. Compressor down due to 6th detection of freezing 12. Self-diagnosis of condensation sensor (G8, G9) 13. Compressor down due to condensation ratio control	X	X				Displayed on appropriate indoor unit which is operating Displayed on outdoor unit
Error of float switch	X	X	X			
Error of setting option switches for optional accessories	X	X		X		
EEPROM error		X			X	
EEPROM option error						

● On ● Flickering X Off

- ◆ If you turn off the air conditioner when the LED is flickering, the LED is also turned off.
- ◆ If you re-operate the air conditioner, it operates normally at first, then detect an error again.

Wired remote controller

- ◆ If an error occurs,  is displayed on the wired remote controller.
If you would like to see an error code, press the Test button.

Display	Explanation	Remark
$E_r \rightarrow EA$	Error of communication between the outdoor unit and the wired remote controller	Communication errors
$E_r \rightarrow Eb$	Error of communication between the indoor unit and the wired remote controller	
$E_r \rightarrow Ax$	Breakaway of indoor unit eva sensor	Displays related to indoor unit (x : 0~F)
$E_r \rightarrow bx$	Breakaway of indoor unit eva out sensor	
$E_r \rightarrow Cx$	Open error of electronic expansion valve	
$E_r \rightarrow dx$	Close error of electronic expansion valve	
$E_r \rightarrow Fx$	Breakaway of eva mid and eva out sensors in indoor unit	
$E_r \rightarrow ox$	Error of float switch	
$E_r \rightarrow 9x$	OPEN/SHORT error of room sensor in indoor unit	
$E_r \rightarrow rx$	OPEN/SHORT error of eva in sensor in indoor unit	
$E_r \rightarrow 4x$	OPEN/SHORT error of eva out sensor in indoor unit	
$E_r \rightarrow tx$	EEPROM error	
$E_r \rightarrow Ux$	EEPROM option error	
$E_r \rightarrow ux$	Error of fan starting	
$E_r \rightarrow Eo$	Error of outdoor unit	For the details, refer to the installation manual of the outdoor unit.

The order of priority : EA → Eb → Cx → dx → bx → Ax → Fx → ox → qx → rx → sx → tx → Ux → vx → Eo
 - In case that the same error displays from multi-indoor units, the one having the faster address has the priority.

option

option

option

Chapter

2

OPTIONAL ACCESSORIES

- Parts List 23

Parts List


Wired Remote Controller Accessories

Wired remote controller	Cable-tie	Cable clamp	M4x16 tapped screw	Indoor unit power drawing cable	Owner's instructions	Installation manual
1	2	6	7	1	1	1
						

Wireless Remote Controller Accessories

Wireless remote controller	Battery	Remote control holder	STS 2S-2x10 tapped screw	Owner's instructions	Installation manual
1	2	1	2	1	1
					

Centralized Controller Accessories

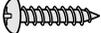Centralized controller	Cable-tie	Cable clamp	M4x16 tapped screw	Owner's instructions	Installation manual
1	2	5	7	1	1
					

Function Controller Accessories

Function controller	Cable-tie	Cable clamp	M4x16 tapped screw	Owner's instructions	Installation manual
1	2	6	7	1	1
					

Transmitter Accessories

Transmitter	Transmitter power cable	Transmitter communication cable	Installation manual
1	1	1	1
			

**THIS AIR CONDITIONER IS MANUFACTURED BY:
ESTE AIRE ACONDICIONADO HA SIDO FABRICADO POR:
CE CLIMATISEUR EST FABRIQUE PAR:
QUESTO CONDIZIONATORE D'ARIA È PRODOTTO DA:
ESTE APARELHO DE AR CONDICIONADO É FABRICADO POR:
DIESE KLIMAANLAGE IST FABRIZIERT VON:
ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΚΑΤΑΣΚΕΥΑΣΤΗΚΕ ΑΠΟ:
ЭТОТ КОНДИЦИОНЕР ИЗГОТОВЛЕН ФИРМОЙ:**



ELECTRONICS